 
**Phoenix** 



# ABIOS for IBM® PS/2® Computers and Compatibles

The Complete Guide to ROM-Based System Software for OS/2®



Phoenix Technologies Ltd.

Thoenik Technical Reference Series

ABIOS for IBM® PS/2® Computers and Compatibles

The Complete
Guide to
ROM-based
System
Software
for OS/2

Phoenix Technologies Ltd.



Addison-Wesley Publishing Company, Inc.
Reading, Massachusetts Menlo Park, California New York
Don Mills, Ontario Wokingham, England Amsterdam Bonn
Sydney Singapore Tokyo Madrid San Juan

Many of the designations used by manufacturers and sellers to distinguish their products are claimed as trademarks. Where those designations appear in this book and Addison-Wesley was aware of a trademark claim, the designations have been printed in initial capital letters.

#### Limitation of Liability

While every reasonable precaution has been taken in the preparation of this book, the author and the publishers assume no responsibility for errors or omissions, or for the uses made of the material contained herein or the decisions based on such use. No warranties are made, express or implied, with regard to the contents of this work, its merchantability, or fitness for a particular purpose. Neither the author nor the publishers shall be liable for direct, special, incidental, or consequential damages arising out of the use or inability to use the contents of this book.

#### Library of Congress Cataloging-in-Publication Data

ABIOS for IBM PS/2 computers and compatibles : the complete guide to ROM-based system software for OS/2 / Phoenix Technologies, Ltd.

p. cm. -- (The Phoenix technical reference series) Includes index. ISBN 0-201-51805-8

1. IBM Personal System/2 (Computer system) 2. Systems software.

- 3. Read-only storage. 4. Computer input-output equipment.
- I. Phoenix Technologies, Ltd. II. Title: ABIOS. III. Series.

QA76.8.125963A25

1989 005.4'469--dc

89-6449

Copyright © 1989, 1988, 1987 by Phoenix Technologies Ltd.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of the publisher. Printed in the United States of America. Published simultaneously in Canada.

Cover design by Hannus Design Associates Text design by Phoenix Technologies Ltd. Set in 10-point Modern by Phoenix Technologies Ltd.

ABCDEFGHIJ-AL-89 First printing, June, 1989

#### **Trademarks**

This manual acknowledges the following trademarks:

Ashton-Tate and Framework are registered trademarks of Ashton-Tate Corporation.

AST is a registered trademark of AST Research, Inc.

AT, IBM, Personal Systems/2, PS/2 and PC/AT are registered trademarks of the International Business Machines Corporation. PC-DOS, PC/XT, VGA, CGA, MCA, EGA, MDA, OS/2 and Micro Channel are trademarks of the International Business Machines Corporation.

Intel is a registered trademark of Intel Corporation.

1–2–3, Lotus, and Symphony are registered trademarks of Lotus Development Corp.

Motorola is a registered trademark of Motorola Semiconductor Products, Inc.

MS, MS-DOS, and Microsoft are registered trademarks of the Microsoft Corporation.

NEC and Multisync are registered trademarks of Nippon Electric Corporation.

Quadram is a registered trademark of Quadram Corporation.



To Eric Enge, Stan Lyness, Paula Bishop, and the rest of the Phoenix Technologies Ltd. BIOS Engineering Department. Their tireless efforts have defined compatibility for the PC industry.



# **Table of Contents**

## **About This Book**

About This Bookxvii
Acronyms and Abbreviations
Acronyms and Abbreviations xx
Chapter 1 — The ABIOS
Overview
Chapter 2 — Hardware Environment
Overview2980286/80386/80386SX Microprocessors31Math Coprocessors32Micro Channel33I/O Devices: Introduction35I/O Devices: Diskette and Disk Hardware35I/O Devices: Video Hardware36I/O Devices: Keyboard Hardware38I/O Devices: Parallel Port Hardware39

# Chapter 2 — Hardware Environment, Continued

I/O Devices: Serial Port Hardware  System Time-Related Devices: Introduction  System Time-Related Devices: 82284 Clock Generator  System Time-Related Devices: 8254A PIT Chip  System Time-Related Devices: MC146818A RTC Chip  CMOS RAM Service  DMA Controller  Programmable Option Select (POS)  Intel 8259A Programmable Interrupt Controllers  System Control Port Definitions  Power-On Password  NMI Mask  Hardware I/O Port List  Chapter 3 — ABIOS Data Structures	2 2 3 5 6 7 5 6 8 0 0
Overview	4 7 9
Overview	3 3 5 5

# Chapter 5 — Request Block Structure

Overview	121 122
Overview  ABIOS Processing Model  Request Block Initialization  A Generalized Look at Control Transfer  ABIOS Transfer Convention  Operating System Transfer Convention  Return Code Handling  Hardware Interrupt Handlers  Default Interrupt Handler  Time-Out Handlers  ABIOS and Program Access  Accessing ABIOS via ABIOSCommonEntry  Accessing ABIOS via ABIOSCall  Chapter 7 — ABIOS Extensions	128 132 134 136 137 139 142 147 149 151 152
Overview  Recommendations for Extending ABIOS  Requirement 1: Create Proper Extension Header  Requirement 2: Build Initialization Table Entry Routine  Requirement 3: Routine to Build Device Blocks and FTT  Requirement 4: ABIOS Service Code  Initialization: ABIOS ROM Extensions  Initialization: ABIOS RAM Extensions  Examples of How to Modify an Existing Service  Example 1: Non-Intrusive Interception  Example 2: Redirection of a Nonstaged Function  Example 3: Redirection of a Staged Function	162 168 171 173 176 176 178 180 181

# Chapter 8 — ABIOS Diskette Service

Overview	93 195 196 197 199 203 206 208 211 218 221 222 223 226 228
Overview Hardware Environment Fixed Disk Service Parameters Table Error Handling Function: 00h — Default Interrupt Handler Function: 01h — Return Logical ID Parameters Function: 03h — Read Device Parameters Function: 05h — Reset/Initialize Fixed Disk Function: 08h — Read Fixed Disk Function: 09h — Write to Fixed Disk Function: 09h — Write and Verify Fixed Disk  Chapter 10 — ABIOS Keyboard Service	235 236 238 239 240 242 244 249 251
Overview	

# Chapter 10 — ABIOS Keyboard Service, Continued

Scan Codes System Scan Codes Error Handling Function: 00h — Default Interrupt Handler Function: 01h — Return Logical ID Parameters Function 03h — Read Keyboard ID Bytes Function: 05h — Reset/Initialize Keyboard Function: 06h — Enable Keyboard Function: 07h — Disable Keyboard Function: 08h — Continuous Keyboard Read Function: 08h — Read Keyboard LED Status Function: 0Ch — Set Keyboard LED Status Function: 0Dh — Set Typematic Rate and Delay Function 0Eh — Read Keyboard Scan Code Mode Function 10h — Write Command(s) to Keyboard Controller Function 11h — Write Command(s) and Data to Keyboard  Chapter 11 — ABIOS Video Service	263 264 268 269 270 272 274 276 280 282 284 286 289 295
Overview  Hardware Environment  Video Modes  Mode/Monitor Support  ROM-Resident Fonts  Error Handling  Function: 00h — Default Interrupt Handler  Function: 01h — Return Logical ID Parameters  Function: 03h — Read Device Parameters  Function: 05h — Set Video Mode  Function: 08h — Return ROM Fonts Information  Function: 0Ch — Save Video Environment  Function: 0Dh — Restore Video Environment  Function: 0Eh — Select Character Generator Block  Function: 0Fh — Load Text Mode Font  Function: 10h — Enhanced Load Text Mode Font  Function: 11h — Read Palette Register  Function: 12h — Write Palette Register	307 309 311 313 315 316 317 319 324 331 333 335 337 339 342 345

# Chapter 11 — ABIOS Video Service, Continued

Function: 13h — Read DAC Color Register	351 354
——————————————————————————————————————	`
Overview  Hardware Environment  Error Handling  Function: 00h — Default Interrupt Handler  Function: 01h — Return Logical ID Parameters  Function: 03h — Read Device Parameters  Function: 05h — Reset/Initialize Serial Port  Function: 08h — Set Modem Control  Function: 0Ch — Set Line Control  Function: 0Dh — Set Baud Rate  Function: 0Eh — Transmit  Function: 0Fh — Receive  Function: 10h — Transmit and Receive  Function: 11h — Modem Status  Function: 12h — Cancel  Function: 13h — Return Line Status  Function: 14h — Return Modem Status  Function: 15h — Enable FIFO Control	361 363 364 365 370 374 375 378 379 404 407 409
Chapter 13 — ABIOS Parallel Port Service	
Overview Hardware Environment Error Handling Function: 00h — Default Interrupt Handler Function: 01h — Return Logical ID Parameters Function: 03h — Read Device Parameters Function: 04h — Set Device Parameters Function: 05h — Reset/Initialize Parallel Port Function: 09h — Print Block	417 418 419 420 421 423 425

# Chapter 13 — ABIOS Parallel Port Service, Continued

Function: 0Bh — Cancel Print Block	
Overview  Hardware Environment  Error Handling  Function: 00h — Default Interrupt Handler  Function: 01h — Return Logical ID Parameters  Chapter 15 — ABIOS Real Time Clock Service	436 437 438
Overview  Hardware Environment  Real Time Clock Data  Error Handling  Function: 00h — Default Interrupt Handler  Function: 01h — Return Logical ID Parameters  Function: 03h — Read Device Parameters  Function: 04h — Set Device Parameters  Function: 08h — Set Alarm Interrupt  Function: 0Ch — Cancel Alarm Interrupt  Function: 0Dh — Set Periodic Interrupt  Function: 0Eh — Cancel Periodic Interrupt  Function: 0Fh — Set Update-Ended Interrupt  Function: 10h — Cancel Update-Ended Interrupt  Function: 11h — Read Time and Date  Chapter 16 — ABIOS System Services	443 444 445 446 447 449 452 454 457 468 461 462 464 465
Overview Error Handling Function: 01h — Return Logical ID Parameters Function: 03h — Read System Configuration	470 471

# Chapter 16 — ABIOS System Services, Continued

Function: 0Bh — Switch to Real Mode	478 481 482
Chapter 17 — ABIOS Nonmaskable Interrupt (NMI) Service	
Overview  Error Handling  Function: 01h — Return Logical ID Parameters  Function: 06h — Enable NMI  Function: 07h — Disable NMI  Function: 08h — NMI Continuous Read	487 488 490 491
Chapter 18 — ABIOS Pointing Device Service	
Overview Hardware Environment Error Handling Function: 00h — Default Interrupt Handler Function: 01h — Return Logical ID Parameters Function: 03h — Read Device Parameters Function: 05h — Reset/Initialize Pointing Device Function: 06h — Enable Pointing Device Function: 07h — Disable Pointing Device Function: 08h — Pointing Device Continuous Read Function: 08h — Set Sample Rate Function: 0Ch — Set Resolution Function: 0Dh — Set Scaling Factor Function: 0Eh — Read Pointing Device Identification Code  Chapter 19 — ABIOS CMOS RAM Service	497 497 498 499 500 503 505 507 509 512 514 516
Overview	
conti	nued

xiv

# Chapter 19 — ABIOS CMOS RAM Service, Continued

CMOS RAM Data       52         Extended CMOS RAM Data       52         Error Handling       53         Function: 01h — Return Logical ID Parameters       53         Function: 03h — Read Device Parameters       53         Function: 08h — Read CMOS RAM       53         Function: 09h — Write to CMOS RAM       53         Function: 08h — Recompute Checksum       54	28 32 33 34 36 38
Chapter 20 — ABIOS Direct Memory Access (DMA) Service	
Overview Hardware Environment  Error Handling Function: 01h — Return Logical ID Parameters Function: 03h — Read Device Parameters Function: 08h — Allocate Arbitration Level Function: 0Ch — Deallocate Arbitration Level Function: 0Dh — Disable Arbitration Level Function: 0Bh — Allocate Arbitration Level Function: 0Dh — Disable Arbitration Level Function: 0Fh — DMA Transfer Status Function: 0Fh — Abort DMA Operation Function: 10h — DMA Transfer from Memory to I/O Function: 11h — Read from I/O and Write to Memory Function: 12h — Load DMA Controller Parameters  54 55 56 57 57 58 58 58 58 58 58 58 58 58 58 58 58 58	45 52 53 55 56 58 59 60 61 63 65
Chapter 21 — ABIOS Programmable Option Select Service	
Overview	71 73 74 75 77

# Chapter 22 — ABIOS Keyboard Security Service

Overview  Hardware Environment  System Scan Codes  Error Handling  Function: 01h — Return Logical ID Parameters  Function: 03h — Read Device Parameters  Function: 06h — Enable Keyboard Security  Function: 08h — Write Password  Function: 0Ch — Write Invocation Byte  Function: 0Dh — Write Match Byte  Function: 0Eh — Write Filter Byte 1  Function: 0Fh — Write Filter Byte 2  Chapter 23 — ABIOS Error Log Service	585 586 589 590 592 593 595 597 599 601
Overview  Extended CMOS RAM  Error Handling  Function: 01h — Return Logical ID Parameters  Function: 08h — Read Error Log  Function: 09h — Write to Error Log	607 609 610 612
Appendix A — ABIOS Return Codes	617
Glossary	627
Additional Resources	639
Index	641

# **About This Book**

#### What this book is about

ABIOS for IBM PS/2 Computers and Compatibles is a detailed technical reference that describes the ABIOS, the portion of the PS/2 ROM BIOS designed to support multitasking operating systems such as OS/2. The information provided in this book is applicable to all Micro Channel Architecture—based IBM PS/2 and compatible computers.

#### Who should read this book

This book can be used by anyone interested in learning more about PS/2 or compatible computers.

Programmers who wish to make direct calls to the ABIOS will find complete instructions for accessing the ABIOS via any version of OS/2 (e.g. IBM OS/2) that supports **DevHip** services **ABIOSCommonEntry** and **ABIOSCall**.

Programmers writing device drivers for new peripheral devices will find the general information on ABIOS services helpful. They will also find, in the chapter on ABIOS extensions, a complete description of how ABIOS services can be added, replaced, or modified.

Implementers of operating systems and other multitasking system software and systems programmers will find all the information they need on ABIOS/ operating system interfaces.

#### What we assume you know

This book assumes a basic knowledge of 80x86 assembly language programming concepts, PC architecture, and operating system concepts. If you are new to these subjects, use this book along with some of the excellent introductory books listed at the end of this book.

#### How to find information

Chapters 1–7 of ABIOS for IBM PS/2 Computers and Compatibles provide a general introduction to ABIOS concepts and describe how to use ABIOS services. Chapters 8–23 describe the individual ABIOS services and serve as a technical reference. The Appendix provides a comprehensive list of potential error messages and Return Codes. Most readers will want to read chapters 1–7 first to get a basic grasp of the ABIOS features before turning to the individual service descriptions.

Each service-specific chapter (8-23) is organized in a similar fashion. There is a description of the service and its hardware environment, a discussion on how errors are handled, and complete descriptions of each service function. The function descriptions include a description of what the function does, a graphic outline of the required Request Block structure and a list of Return Codes.

#### Other volumes in this series

ABIOS for IBM PS/2 Computers and Compatibles is one of several volumes about BIOS software in the Phoenix Technical Reference Series published by Addison-Wesley. Other volumes are:

CBIOS for IBM PS/2 Computers and Compatibles — a complete technical reference describing the portion of a PS/2 BIOS designed to support single-tasking operating systems such as MS-DOS.

System BIOS for IBM PC/XT/AT Computers and Compatibles — a complete technical reference for the BIOS in all standard architecture computers.

The BIOS volumes of the Phoenix Technical Reference Series provide the most comprehensive source of information about IBM and compatible system BIOSs available today. Each volume lists complete I/O port addresses, CMOS RAM, and BIOS data definitions. Every function is described in detail, and complete lists of error messages are provided.

The volumes of this series are a natural companion for anyone who owns and programs an IBM PC, XT, AT, or PS/2 model, or any compatible system.

No writing project as large as this can be completed without significant contributions from many individuals. We would like to acknowledge the Phoenix employees whose time and effort helped make this book possible.

First and foremost, we gratefully acknowledge the vision and technical skill of Neil Colvin, founder, CEO, and Chief Scientist of Phoenix Technologies Ltd. We also gratefully acknowledge the expert guidance of Lance Hansche, President of Phoenix Technologies Ltd. Without Neil and Lance's leadership, Phoenix would not be in the position of technological preeminence it now enjoys.

In the marketing area, Phoenix Vice President Rich Levandov's foresight and support made this book possible. And Product Marketing Manager Henry Suwinsky's tactful and dauntless guidance shepherded this project through all phases of its existence.

On the technical side, we acknowledge the Phoenix engineers who developed the Phoenix PS/2 BIOS. Eric Enge, Director of PC Product Engineering, Paula Bishop, and Stan Lyness have been endlessly patient with us and tireless in their efforts to ensure quality PS/2-compatible BIOS products and documentation. We also must acknowledge the efforts expended by other Phoenix engineers, including Bruce Cairns, Paul Chicoine, Greg Honsa, Suzanne Laferriere, Malcolm Pordes, Debbie Schultz, and Trevor Western.

In the production of this volume, many people contributed significantly. Chief among these were Kathy Schiff, Manager of Technical Communications, who provided editorial guidance and direction. Writers Marianne Adams and Dr. George Elliott Tucker contributed critical and essential writing, editing, and production assistance. And last but not least, a special thanks goes to Sandie Zierak, Chief Production Coordinator, for her invaluable contributions in the fields of graphics, document design, and document production.

The Authors

Mike Boston Paul Narushoff

Phoenix Technologies Ltd. Norwood, MA March, 1989



### **Acronyms and Abbreviations**

The following abbreviations and acronyms are used in this manual:

ASCII American Standard Code for Information Interchange

ASIC Application-Specific Integrated Circuit

b Binary

BIOS Binary coded decimal
BIOS Basic input/output system

bps Bits per second

CDA Common data area

CGA Color graphics adapter
CRC Cyclic redundancy check

CMOS Complementary metal oxide semiconductor

DB Device Block

DMA Direct memory access
DSR Device service routine

ECC Error checking and correction EGA Enhanced graphics adapter

EOI End of interrupt

ESDI Enhanced small device interface

FTT Function transfer table

h Hexadecimal
INT Interrupt
I/O Input/Output

IRQ Interrupt request line
ISR Interrupt service routine

K Kilobytes

Kbs Kilobits per second

LID Logical ID

LSB Least significant byte
LSI Large scale integration

M, MB Megabytes

MDA Monochrome Display Adapter
MFM Modified frequency modulation

MHz Megahertz

# Acronyms and Abbreviations, Continued

MSB	Most significant byte	
NMI	Nonmaskable interrupt	
OS/2	Operating System/2	
PGA	Professional graphics adapter	
POS	Programmable Option Select	
POST	Power-on self test	
PTL	Phoenix Technologies Ltd.	
RAM	Random access memory	
RB	Request block	
RLL	Run length limited	
ROM	Read-only memory	
RTC	Real time clock	
VGA	Video graphics array	
VLSI	Very large scale integration	

# Chapter 1 The ABIOS

#### Overview

#### What is the PS/2 BIOS?

The ROM BIOS contained in Micro Channel Architecture-based IBM PS/2 and compatible computers performs the same function that all basic input/output systems do: it isolates the operating system from direct manipulation of hardware registers, timings, and attachments.

When compared with the ROM BIOS contained in IBM PC XT/AT and compatible computers, however, the PS/2 ROM BIOS has one critical difference — it is designed to support two kinds of operating systems. As such, the PS/2 ROM BIOS is divided into two discrete parts: the ABIOS and the CBIOS.

#### The CBIOS

The CBIOS part of the PS/2 ROM BIOS provides IBM PS/2 and compatible computers backward compatibility with single-tasking, Intel 80x86 real address mode operating systems such as PC-DOS or MS-DOS. As a result, the CBIOS consists of a superset of the services and functions available in the IBM PC/XT/AT ROM BIOS, and it interfaces with the operating system in the same well understood way.

#### The ABIOS

The ABIOS part of the PS/2 ROM BIOS provides IBM PS/2 and compatible computers with forward compatibility with multitasking, bimodal (real mode, protected mode, or both) operating systems, such as IBM OS/2. The ABIOS supports the same hardware devices as the CBIOS, but its interface and data structures are specifically constructed to facilitate the multitasking, bimodal nature of its design.

#### Program accessibility

The program accessibility of any ROM BIOS depends on the architecture of the operating system interfaced with the BIOS.

#### ■ ABIOS Accessibility

Starting with IBM OS/2 Version 1.1, programs have full access to the ABIOS through the operating system via the two IBM OS/2 DevHIp services: ABIOSCommonEntry and ABIOSCall. ABIOS accessibility for versions of OS/2 other than IBM's varies from vendor to vendor. Programmers who are not using IBM OS/2 should refer to their OS/2 documentation to determine if their version of OS/2 supports program access to the ABIOS.

#### **■ CBIOS Accessibility**

Under the totally open architecture of PC-DOS or MS-DOS, application programs interface directly with the CBIOS. In fact, many MS-DOS application programs attempt to improve performance by bypassing MS-DOS system services in favor of the more direct CBIOS services.

#### Scope of this document

This book describes the ABIOS component of the PS/2 BIOS. The information is 100 percent applicable to both the IBM and the Phoenix Technologies Ltd. versions of ABIOS.

#### In this chapter

This chapter outlines the major concepts and design features of the ABIOS. The following topics are discussed:

- ABIOS Device Support
- The ABIOS Processing Model
- ABIOS Data Structures
- ABIOS Initialization Facts
- Request Block Initialization
- Transfer Conventions
- ABIOS and End User Access
- Accessing ABIOS via ABIOSCommonEntry
- Accessing ABIOS via ABIOSCall
- Return Code Handling
- ABIOS Extensions
- Where to Find More Information

#### For more information on the CBIOS

For a complete treatment of the CBIOS, see CBIOS for IBM PS/2 Computers and Compatibles in this series.

The ABIOS 3

#### Introduction

The ABIOS occupies 64K of the 128K PS/2 BIOS. The ABIOS supports 16 kinds of physical devices. There is one ABIOS device service for each physical device.

#### **ABIOS** supported devices

The table below lists the physical devices supported by the ABIOS and the ABIOS device IDs assigned to them.

Device ID	Device Type/Service	Device ID	Device Type/Service
00h	ABIOS Internal Calls	0Bh	Pointing Device
01h	Diskette	0Ch	Reserved
02h	Fixed Disk	0Dh	Reserved
03h	Video	0Eh	CMOS RAM
04h	Keyboard	0Fh	Direct Memory Access
05h	Parallel Port	10h	Programmable Option Select
06h	Serial Port	11h	Error Log
07h	System Timer	12h-15h	Reserved
08h	Real Time Clock Timer	16h	Keyboard Security
09h	System Services	17h-FFFFh	Reserved
0Ah	Nonmaskable Interrupt		

#### Standard ABIOS functions

Functions numbered 00h-09h are standard functions across all ABIOS services. Functions 10h-xxh are tailored to the device being serviced.

Function	Description
00h	Default Interrupt Handler
01h	Return Logical ID Parameters
02h	Reserved
03h	Read Device Parameters
04h	Set Device Parameters
05h	Reset/Initialize
06h	Enable
07h	Disable
08h	Read
09h	Write

#### The ABIOS Processing Model

#### Introduction

In a traditional PC-based ROM BIOS (such as the CBIOS), all functions are processed on the single-staged, call/process/return model. Once a function is invoked, the CPU is prevented from turning to other work until the function completes and returns. If the function called must interface with slower external hardware, the BIOS initiates a Wait and suspends CPU processing until the hardware interrupt occurs. The resulting amount of idle CPU time can be considerable.

#### Single-staged processing/single-tasking operating systems

Although this single-staged call/return method is somewhat inefficient, the fact that the BIOS is interfaced with a single-tasking operating system minimizes the method's impact on system throughput. A BIOS that processes functions exclusively on the single-staged model is therefore best suited for single-tasking operating systems.

#### Multistaged processing/multitasking operating systems

For a multitasking operating system to be interfaced with a BIOS, issues surrounding system throughput have to be handled more carefully than they are with a single-tasking operating system. The CPU must be free to process other tasks while a BIOS function is waiting for a hardware interrupt to occur. In order to do this, the BIOS must process functions in a way that minimizes BIOS control of CPU time. This is accomplished by processing function calls in multiple stages.

#### Where the ABIOS fits in


The ABIOS is written specifically for multitasking operating systems. As such, the ABIOS interface and the methods ABIOS employs to process function calls are specifically designed to minimize ABIOS control of processor time.

continued

The ABIOS 5

#### Processing models

The ABIOS and CBIOS methods of processing function calls are contrasted below:

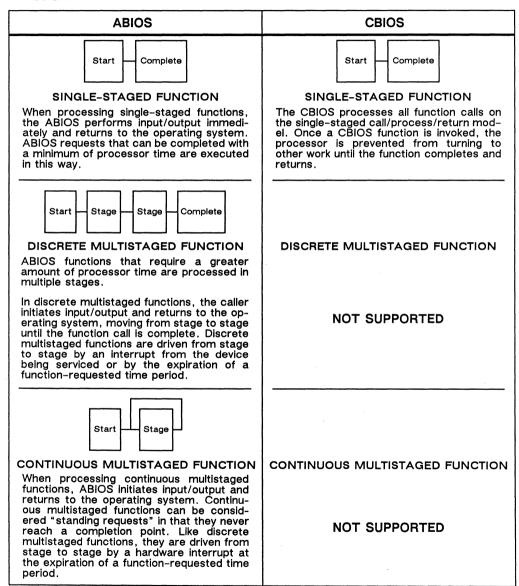

#### The ABIOS Processing Model, Continued

#### What drives multistaged functions

Multistaged functions are driven from stage to stage by either:

- hardware interrupt or
- elapse of a function requested period of time.

Some multistaged functions are driven purely by hardware interrupt. Others are driven purely by time period. Others still are driven by some combination of both hardware interrupt and time period.

#### Interrupt driven stages

Each interrupt-driven ABIOS service is associated with one hardware interrupt level. The ABIOS assumes that all hardware interrupt handlers are under the control of the operating system.

When a hardware interrupt occurs, the operating system must call the function associated with the interrupt so that the interrupting condition can be serviced. The ABIOS resets the interrupting condition at the hardware level. The operating system's hardware interrupt handler must perform end-of-interrupt processing at the interrupt controller level.

A service can have more than one active function request. When this happens, the hardware interrupt handler calls each function until the ABIOS replies that the hardware interrupt has been serviced.

#### Time period driven stages

Some ABIOS functions are driven from stage to stage by the elapse of a function-requested period of time. The ABIOS assumes that time-period stage handlers are under the control of the operating system. When the time period requested by the function expires, the operating system's time period handler must call the given ABIOS function.

continued

The ABIOS 7

#### The ABIOS Processing Model, Continued

#### Hardware interrupt stages and hardware time-out

All hardware interrupt driven stages of a function indicate a maximum time (in seconds) to wait for the hardware interrupt. The ABIOS assumes that all hardware time-out handlers are under the control of the operating system. Should the hardware time-out period associated with a given interrupt driven function elapse, the operating system must call the ABIOS to terminate the function and reset the hardware.

#### Hardware time-out vs. time period stages

The terminology surrounding time-period driven stages and hardware timeout handling is similar. However, it is important not to confuse the processing associated with the hardware time-out handling and time-period stage handling.

Hardware time-out handling is associated exclusively with those stages of a multistaged function that are driven by hardware interrupt and is designed to handle function termination cleanly. Execution of a time-out handling routine is symptomatic of a hardware error.

Time-period handling is associated with those stages of a multistaged function that are driven by time periods. Execution of a time-period handling routine indicates the elapse of a function-requested time delay and should not be associated with a hardware error.

#### How handlers call ABIOS functions: ABIOS Entry Routines

Although we have mentioned that the various handlers under the control of the operating system must call ABIOS functions, we have not mentioned how this is done: Each ABIOS Service is associated with a set of function entry routines. There are three kinds of entry routines:

#### ■ Start Routine

The start routine associated with a service is called when a function is first started.

#### ■ Interrupt Routine

The Interrupt Routine associated with a service is called when the function interrupts or when a time period driven function requires servicing.

#### **■** Time-out Routine

The Time-out Routine associated with a service is called when a interrupt-driven function suffers a hardware time-out.

To reduce caller overhead, the ABIOS also contains a set of Common Entry Routines: Common Start, Interrupt, and Time-out Routines. The Common Entry Routines do some initial processing then transfer control to the entry routine tied to the specific service.

The ABIOS 9

#### Introduction

The ABIOS makes use of four kinds of data structures. Three of the structures — the Function Transfer Table, the Device Block, and the Common Data Area are roughly analogous to the data structures found in the CBIOS.

The fourth structure is a function-specific, parameter block, called the Request Block. The Request Block has no data structure analog in the CBIOS, but it provides the ABIOS with the same parameter passing capability as is provided to the CBIOS by the processor's register set.

Each ABIOS data structure is defined further below.

#### **ABIOS Data Structures**

#### Function Transfer Table

#### **Function Transfer Table**

Each ABIOS Service is associated with one Function Transfer Table. Each Function Transfer Table contains a list of pointers to the Start, Interrupt, and Time-out Routine associated with its ABIOS service, as well as a list of vectors to the start of each function contained in that ABIOS Service.

#### **Device Block**

#### Device Block

An ABIOS Service is usually associated with one Device Block. The Device Block contains the interrupt level, the arbitration level, and other information about the hardware device associated with a ABIOS device service. Some ABIOS services are associated with more than one physical instance of a device. When this is the case, that service is associated with more than one Device Block.

#### Common Data Area

#### Common Data Area

The Common Data Area contains a list of pointers to the Function Transfer Table/Device Block pair associated with each ABIOS Service. Each pair of pointers in the table is identified by a unique Logical ID. Logical IDs are assigned dynamically when the ABIOS is initialized and are used by the caller as an index into the Common Data Area.

#### Request Block

#### Request Block

Each ABIOS function is interfaced with the caller via a function-specific structure called the Request Block. All input and output parameters are passed between the caller and the ABIOS through the Request Block. Offset 0Ch of all Request Blocks is reserved for a function status indicator called the Return Code.

#### **ABIOS** initialization

The Common Data Area, all Function Transfer Tables, and all Device Blocks are initialized (with segment:offset pointers) as part of ABIOS real mode initialization. In bimodal operating environments, the operating system insures bimodal access to the ABIOS by initializing (in selector:offset format) a parallel Common Data Area and a parallel set of Function Transfer Tables.

Once they are initialized, the Common Data Area, the Function Transfer Tables, and the Device Blocks stay resident in system RAM for as long as the ABIOS is in use.

#### Request Block initialization

Before a given ABIOS function can be started, the caller must initialize its Request Block. The Request Block associated with a function call stays resident in system RAM for the life of the call. Request Blocks associated with completed function calls can be reused, or the memory they occupy can be reallocated for some other purpose.

#### Table: CBIOS/ABIOS analogs

End users familiar with CBIOS structures and conventions may find the table of analogies below useful.

Action	CBIOS	ABIOS
Pass Parameters	CPU Registers (bidirectional)	Request Block (bidirectional)
Identify BIOS service	Interrupt number	Logical ID
Locate BIOS service	Interrupt vector table	Logical ID index into Common Data Area
Locate BIOS function	Jump table internal to CBIOS code	Vector in Function Trans- fer Table

#### **ABIOS Initialization Facts**

#### Introduction


Initializing ABIOS is a matter of initializing ABIOS data structures that stay resident in system RAM for as long as the ABIOS is in use: The Common Data Area, the Function Transfer Tables, and the Device Blocks. ABIOS is initialized by the operating system in a five-step process involving both the CBIOS and the ABIOS.

#### Key facts to remember

- Before ABIOS can be initialized, CBIOS must be initialized and the operating system must be booted.
- ABIOS can only be initialized in the microprocessor's real mode.
- Initializing ABIOS means initializing the ABIOS data structures.
- In bimodal environments, the operating system must initialize parallel sets of Common Data Areas and Function Transfer Tables.


#### ABIOS initialization flow

ABIOS initialization flow is illustrated below.

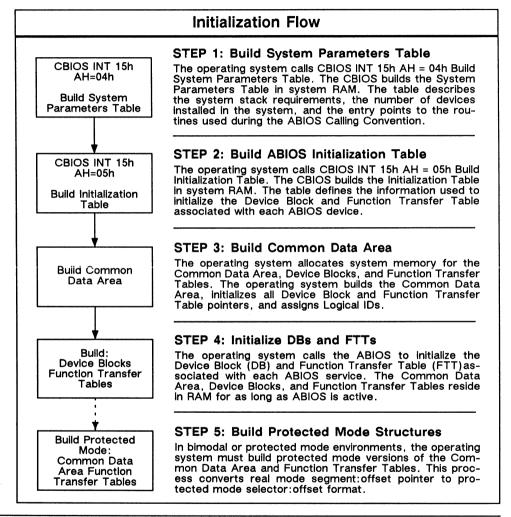

# Data structure relationships

The graphic below shows how the ABIOS Data Structures relate to each other once they have been initialized.

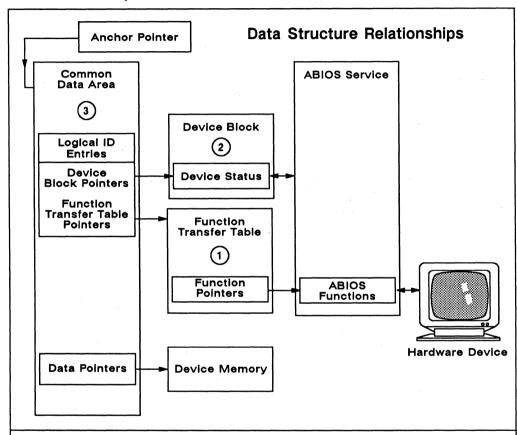

#### Legend

- (1) The Function Transfer Table contains address pointers to each ABIOS function.
- The Device Block is used by the ABIOS to store interrupt levels, device status information, and hardware port addresses.
- The Common Data Area contains a linked list of the Function Transfer Table and Device Block pointer pairs associated with each service, as well as device memory pointers (if any) associated with the given device.

# **Request Block Initialization**

#### Introduction

Each ABIOS function is interfaced with its caller via a function-specific structure called the Request Block. Before starting an ABIOS function the caller must initialize its Request Block.

# Physical device vs. logical device

A hardware device is a device that physically exists in a system configuration. Physical devices are identified by a Device ID; for instance, all hard disks are associated with device ID 02h. Logical IDs, on the other hand, are used to reference individual device services. They are assigned dynamically at initialization, and their assignments will change when system configuration changes. The first device to be initialized will be assigned a Logical ID of 1; the second will be assigned Logical ID 2, and so on.

# Logical IDs are mandatory input

Logical IDs are assigned to each ABIOS service during ABIOS initialization when the operating system builds the Common Data Area. A service's Logical ID is used from then on as an index into the Common Data Area location where the service's Function Transfer Table and Device Block pointers are stored. A service's Logical ID is a mandatory input into each function Request Block calling on that service.

#### Request Block lifespan


Once initialized, Request Blocks stay resident in system RAM for as long as the function call is active. That is to say, those Request Blocks associated with multistaged functions stay resident in system RAM for the life of the function. Request Blocks associated with completed functions may be reused, or the memory they occupy can be deallocated.

continued

The ABIOS 15

# Rules governing Request Block use

The general rules associated with Request Block use are illustrated below.

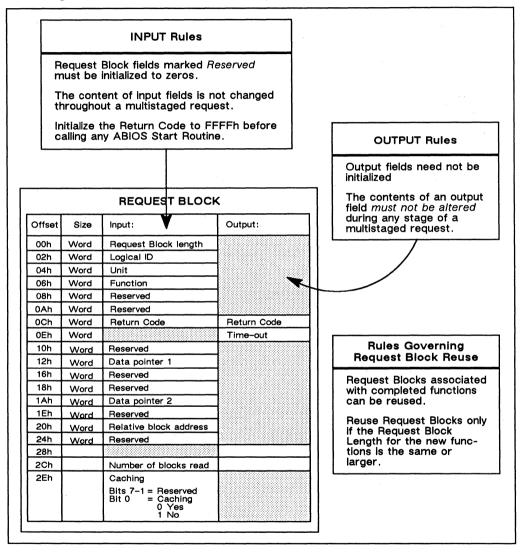

#### **Transfer Conventions**

#### Introduction

Once its Request Block has been initialized, the caller is free to transfer control to the ABIOS function. The process of transferring control to an ABIOS function is divided into two basic tasks:

- 1. PUSH required entry pointers onto stack frame, and
- 2. CALL the function entry routine.

The difference between the two methods of calling ABIOS lies in the process used to locate pointers and load them onto the stack.

 
#### Two tasks


The graphic below details each control transfer task.

# Control Transfer Tasks

#### **PUSH POINTERS ON STACK**

The caller pushes pointers to the Request Block and the Common Data Area onto the stack. Depending on which convention is used to transfer control to ABIOS, the caller may optionally push pointers to the Function Transfer Table and Device Block.



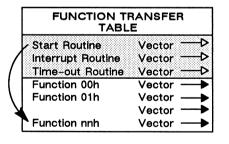

#### TRANSFER CONTROL TO FUNCTION

There are two kinds of function entry routines:

- Service-specific Entry Routines
- Common Entry Routines

By convention, control can be transferred to a given ABIOS function via either set of entry routines. The ABIOS transfer convention indicates that control be transferred to ABIOS functions via the Common Entry Routines. The Operating System Transfer Convention indicates that control be transferred to functions via the Service-Specific Entry Routines.

continued

The ABIOS 17

#### ABIOS transfer convention

In the ABIOS transfer convention, the operating system transfers control to the ABIOS function requested via the ABIOS Common Start Routine. From the caller's point of view, the ABIOS Transfer Convention is the simpler of the two transfer conventions in that it reduces programming overhead when ABIOS functions are called in a bimodal environment.

When using this method, the operating system:

- builds the Request Block,
- pushes pointers to the Common Data Area and Request Block onto the stack.
- pushes place holders for the Function Transfer Table and Device Block onto the stack, and
- calls the ABIOS Common Entry Routine requested. When control is transferred to the Common Entry Routine, the Common Entry Routine loads pointers to the Function Transfer Table and the Device Block onto the stack. The operating system then transfers control to the ABIOS service's Service-Specific Entry Routine.

# Operating system transfer convention

In the operating system transfer convention, the operating system transfers control to the function requested via the ABIOS service-specific routines.

This transfer convention is more direct and may result in slight performance improvements. It is most effective when used to handle interrupts from programmed I/O devices (such as the keyboard) that require repeated access to one function.

When using this method, the operating system:

- builds the Request Block,
- pushes pointers to the Common Data Area, Request Block, Function Transfer Table, and Device Block onto the stack, and
- calls the service-specific entry routine associated with the service/function requested.

# **ABIOS and Program Access**

#### Introduction

For now, OS/2 is the primary operating system using ABIOS. OS/2 itself provides end user programs with powerful functionality which makes bypassing the operating system in favor of the ABIOS or hardware largely unnecessary. However, the need may arise for the greater hardware control provided by direct access to ABIOS Services.

# The Anchor Pointer, OS/2, and program access

When ABIOS is initialized under OS/2, the segment address of the Common Data Areas is stored by the operating system in a nonpublic variable called the Anchor Pointer. Control cannot be transferred to an ABIOS function without first accessing the information contained in the Common Data Area.

Therefore, access to the ABIOS is impossible from a program running under OS/2 unless it is supported by the operating system. Although it does not make the Anchor Pointer public, IBM OS/2 (versions 1.1 and beyond), support program access of the ABIOS via calls to two **DevHip** services: **ABIOS-CommonEntry** and **ABIOSCall**.

Programmers who are not using IBM OS/2 should refer to their OS/2 documentation to determine if their version of OS/2 supports direct access to the ABIOS.

The ABIOS 19

# Accessing ABIOS via ABIOSCommonEntry

# Description

The IBM OS/2 service ABIOSCommonEntry is used to call an ABIOS functions via the ABIOS Transfer Convention, that is to say via the ABIOS Common Entry Routines.

**ABIOSCommonEntry** initializes the stack frame with pointers in the format required by the current processor mode. It then calls the Common Entry Routine specified in DH. On return, **ABIOSCommonEntry** cleans up the stack before returning to the caller.

# Caller must locate Logical ID

Before invoking ABIOSCommonEntry, the caller must first initialize the Request Block associated with the ABIOS function to be called. Since a service's Logical ID is a mandatory input into each function Request Block, the caller is responsible for determining the Logical ID assigned to the service being called.

# Locating Logical ID via function 01h

Because the Anchor Pointer to the Common Data Area is a nonpublic variable, the only way for the caller to determine a service's Logical ID is to invoke function 01h, Return Logical ID Parameters, for each entry in the Common Data Area.

To do this, the caller must use ABIOSCommonEntry to invoke function 01h, "Return Logical ID Parameters" for Logical IDs 03h to nnh. The Request Block associated with function 01h of each ABIOS service is fixed at 20h bytes. When called, function 01h returns to offset 12h the hardware Device ID associated with the service. From this value, the caller can determine which device service is linked to a given Logical ID.

# ABIOS supported devices

The ABIOS supports 16 kinds of physical devices. There is one ABIOS device service for each device. The table below lists the physical device ID and the ABIOS device services tied to those devices.

Device ID	Device Type/Service	Device ID	Device Type/Service
00h	ABIOS Internal Calls	0Bh	Pointing Device
01h	Diskette	0Ch	Reserved
02h	Fixed Disk	0Dh	Reserved
03h	Video	0Eh	CMOS RAM
04h	Keyboard	0Fh	Direct Memory Access
05h	Parallel Port	10h	Programmable Option Select
06h	Serial Port	11h	Error Log
07h	System Timer	12h-15h	Reserved
08h	Real Time Clock Timer	16h	Keyboard Security
09h	System Services	17h-FFFFh	Reserved
0Ah	Nonmaskable Interrupt		

# ABIOSCommonEntry Input/Output

# Input:

MOV SI, Request\_Block\_Offset; Offset in DS of Request Plock MOV DH, Which Com Routine; Indicate in DH which Common

; Routine to call, where:

; 00h = Common Start Routine
; 01h = Common Interrupt Routine

: 02h = Common Time-out Routine

MOV DL, DevHlp\_ABIOSCommonEntry
CALL [Device Help]

#### **Output:**

CF = 0 If call was successful

= 1 If error occurred

AX = Error Code

ABIOS not present.

Unknown ABIOS command.

# To avoid suspension in the background

ABIOS functions can sometimes be suspended if the operating environment is shifted from OS/2 mode to the DOS compatibility box. This can occur when functions executed in the DOS compatibility box put the service's operating environment in a state that is unknown to the function called in OS/2 mode.

**ROMCritSection** sets a flag that prevents entry into the DOS compatibility box until the function called via **ABIOSCommonEntry** has executed to completion. Since there is no way to determine in advance whether or not a given function is susceptible to suspension, the caller has two choices:

- Call OS/2 ROMCritSection before calling ABIOSCommonEntry, or
- Test the function by calling it via ABIOSCommonEntry and switching to the DOS compatibility box.

If **ROMCritSection** is called to prevent entry into the DOS compatibility box, then it must be called again after the ABIOS function completes to re-enable entry.

# ROMCritSection Input/Output

DS must point to the ABIOS Device Driver's data segment. Reset DS if it has been previously used in a **PhysToVirt** call.

```
MOV AL, enter or exit
```

;Critical Section Flag

: = 0 exit

; < > 0 enter

 ${\tt MOV\ DL,DevHlp\_ROMCritSection}$ 

CALL [Device\_Help]

#### For more information

For more information on calling ABIOS functions via **ABIOSCommonEntry**, refer to the IBM document *IBM Operating System/2 Technical Reference Volume 1*.

# Accessing ABIOS via ABIOSCall

# Description

The IBM OS/2 service ABIOSCall is used to call an ABIOS functions via the Operating System Transfer Convention, that is to say via the ABIOS Service—Specific Entry Routines.

**ABIOSCAII** initializes the stack frame with pointers in the format required by the current processor mode. Then, it calls the Service-Specific Entry Routine specified in DH. On return, **ABIOSCAII** cleans up the stack before returning to the caller.

# ABIOSCall Input/Output

# Input:

MOV AX, LID

MOV SI, RB Offset

;Service's Logical ID

;Data Segment DS offset to

;caller's Request Block

MOV DH, Entry\_Point

=

;Service-Specific Routine

;00h = Start Routine ;01h = Interrupt Routine

;Olf = Interrupt Routine ;O2h = Time-out Routine

MOV DL, DevHlp\_ABIOSCall CALL [Device Help]

#### **Output:**

CF

0 Call was successful

= 1 Error occurred

AX

Error Code

ABIOS not present.

Unknown ABIOS command.

# To avoid suspension in the background

ABIOS functions can sometimes be suspended if the operating environment is shifted from OS/2 mode to the DOS compatibility box. To avoid this, the caller may occasionally be advised to call OS/2 ROMCritSection before calling ABIOSCommonEntry, as described on the previous page.

#### Introduction

ABIOS signals the status (successful, unsuccessful, etc.) of a function call by returning a code to the Request Block for the operating system.

The rules that the operating system must follow when handling this field are listed in the illustration below.

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0005h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word	<b>A</b>	Time-out
10h	Word	Reserved (Initialize to 0000h)	

# **Return Code Field Rules**

#### Input

Always initialize the Return Code field to FFFFh before initiating any ABIOS Start Routine.

During hardware interrupts, the operating system should call the interrupt routine for each request on that interrupt level that has bit 0 Resume Stage after Interrupt set in the Return Code field until an interrupt is claimed (bit 2 Not My Interrupt is returned clear).

#### Output

Because both a Start Routine and an Interrupt Routine may be operating on the same Request Block from different stack frames, the operating system should maintain a flag to indicate if a request has executed the Start Routine Return Code Field Bit Determination code. If an interrupt occurs before the operating system determines the Return Code for the Request Block, the flag indicates that the Interrupt Routine cannot be processed yet, since the Start Routine is not completed. If the operating system has determined the Return Code, interrupts can be processed, since the the Start Routine is completed.

If there is an outstanding Request Block at interrupt time, the operating system must first see if the Return Code field is FFFFh. If it is, the operating system must not attempt to resume this request. The ABIOS can process the request and set the Return Code appropriately when the interrupt is executed.

# Return codes

The following table contains a general listing of the ABIOS Return Codes. ABIOS may generate any value that can occur in a 16-bit ABIOS field, so all operating system routines that test ABIOS Return Codes should be prepared for any value (that is, each bit in the Return Code field should be tested).

Code	Description
0000h	Successful
0001h	Resume Stage after Interrupt
0002h	Resume Stage after Time Delay
0005h	Not My Interrupt, Resume Stage after Interrupt
0009h	Attention, Resume Stage after Interrupt
0081h	Unexpected Reset, Resume Stage after Interrupt
8000h	Device in Use, Request Refused
8001h-8FFFh	Service-Specific Unsuccessful Operation
9000h-90FFh	Device Error
9100h-91FFh	Retryable Device Error
9200h-9FFFh	Device Error
A000h-A0FFh	Time-out Error
A100h-A1FFh	Retryable Time-out Error
A200h-AFFFh	Time-out Error
B000h-B0FFh	Device Error With Time-out
B100h-B1FFh	Retryable Device Error With Time-out
B200h-BFFFh	Device Error With Time-out
C000h	Invalid Logical ID
C001h	Invalid Function
C002h	Reserved
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h-C01Fh	Invalid Service-Specific Parameter
C020h-FFFEh	Service-Specific Unsuccessful Operation
FFFFh	Return Code Field Not Valid

The ABIOS 25


#### Introduction

Under OS/2, ABIOS data structure addresses and service/function entry points are only known to the operating system. As such, enhancements to system software or hardware that require ABIOS extensions must insure that:

- The undefined interstage state information and work areas contained in the pre-existing service's Device Block are not overwritten.
- The extension maintains control of all function entry points, and
- The extension will only be initialized if its revision level is greater than the revision level of the pre-existing service.

#### Requirements for ABIOS extensions

In order to satisfy the considerations listed above, all ABIOS extensions must meet the requirements outlined in the illustration below:

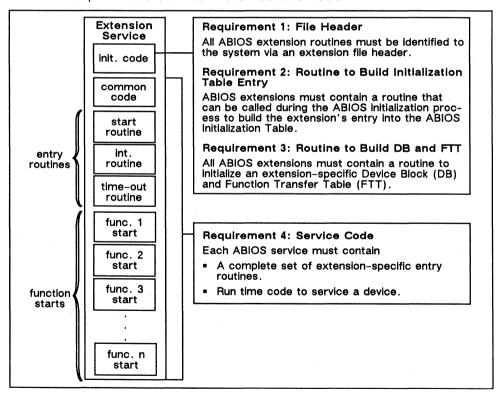

# Two types of ABIOS implementations

As long as it meets the four requirements for creating valid ABIOS extensions, an extension can be implemented either in ROM or in RAM.

The differences between the two types of implementations are described below.

Туре	Description
ROM extension	ABIOS ROM extensions:  Exist in the same peripheral card ROM that contains their CBIOS counterparts.  Contain manufacturer-specific ABIOS device services.  Are located and initialized as part of the overall ABIOS ROM initialization process.
RAM extension	ABIOS RAM extensions exist as files that will be located and initialized into system RAM during the overall ABIOS ROM initialization process. If they are to be implemented under OS/2, extension file names must be listed in the file ABIOS.SYS. The following facts apply:  ABIOS.SYS must contain a list of filespecs separated by either blanks or new lines.  Both ABIOS.SYS and any files listed in ABIOS.SYS must reside in the root directory of the OS/2 IPL volume.  The files listed in ABIOS.SYS are loaded into memory in the order in which they are listed.  The sector size of all RAM extension files must be a multiple of 512K.  All ABIOS RAM extension files must have a .BIO extension.  RAM extensions are loaded after ROM extensions.

# Where to Find More Information

#### Introduction

This chapter outlines the major concepts and design features of the ABIOS. It is intended to leave the reader with a mental model of how the ABIOS works. The details of any concept or feature presented here can be found in subsequent chapters of this book.

# Where to find more information

For more information on	Turn to
ABIOS Services	Chapters 8 through 23
ABIOS Functions	Chapters 8 through 23
ABIOS Request Blocks	Chapters 5 and 6
ABIOS Data Structures	Chapter 3
ABIOS Function Processing	Chapter 6
ABIOS Request Types	Chapter 6
ABIOS Multitasking Provisions	Chapters 6 and 7
ABIOS Initialization	Chapter 4
ABIOS Bimodal Support	Chapters 3 and 4
ABIOS Extensions	Chapter 7

# Chapter 2 Hardware Environment

# Overview

# Introduction

This chapter describes the hardware environment supported by the ABIOS.

**Note:** The hardware environment described here also applies to the CBIOS portion of PS/2-compatible ROM BIOSs.

# Hardware overview only

The hardware contained in IBM PS/2 and compatible systems provides the user with a rich and powerful computing environment. A precise description of each IBM PS/2 hardware component, however, is beyond the scope of this book. The material presented here is intended to give ABIOS users a general survey of the PS/2 hardware and is not intended to substitute for the hardware data sheet or documentation available from individual hardware manufacturers.

#### **ABIOS** benefits

By its very nature, the ABIOS is designed to isolate the user from direct manipulation of hardware I/O ports, registers, and control words. As such, the ABIOS provides a high level interface to hardware that is guaranteed to remain the same when hardware components change.

This has a number of benefits:

- If programs use ABIOS calls instead of reads and writes to hardware, they will be more portable across differing hardware environments.
- Using the ABIOS services spares the programmer from having to master many details about hardware that may change.

# In this chapter

The following hardware information is presented:

- 80286/80386/80386SX Microprocessors
- Math Coprocessors
- Micro Channel
- I/O Devices
- System Time-Related Devices
- CMOS RAM Service
- DMA Controller
- Programmable Option Select (POS)
- Intel 8259A Programmable Interrupt Controllers
- System Control Port Definitions
- Power-On Password
- NMI Mask
- Hardware I/O Port List

#### Introduction

The ABIOS must be implemented in systems that employ the Intel 80286, 80386SX, or 80386 microprocessor, an equivalent, or a superset.

The table below lists the ABIOS microprocessor support.

item	Support
Processor Speeds	6 to 20 MHz (80286); 6 to 33 MHz (80386, 80386SX) Note: Currently verified range of supported
Walt States	speeds. 0 or 1 walt states
Address Modes	Real and protected address modes  Note: See "Address mode support" below.

# Address mode support

The ROM BIOS for IBM PS/2 and compatible systems can be addressed in both the real and the protected address modes of the microprocessor.

This statement holds true for both the ABIOS and the CBIOS portions of the ROM BIOS. The difference between the ABIOS and the CBIOS portions of the ROM BIOS lies not in the modes under which they can be addressed but in the kind of operating systems each is designed to support.

- The ABIOS is designed specifically to support multitasking operating systems (e.g. IBM OS/2) that execute exclusively in the microprocessor's real mode, exclusively in protected mode, or bimodally switching between real and protected modes.
- CBIOS is primarily designed to support single-tasking operating systems (e.g. MS-DOS) that execute exclusively in the microprocessor's real mode.

# **Math Coprocessors**

#### Introduction

The ABIOS can be implemented in systems that include an Intel 80287 or 80387 math coprocessor (80387SX for 80386SX processors) or an equivalent math coprocessor.

# Description

The math coprocessor performs high speed arithmetic, logarithmic, and trigonometric floating point arithmetic calculations, permitting much speedier processing for mathematically intensive processes.

The math coprocessor works in parallel with the microprocessor, allowing both to process instructions separately. See the user manual for the coprocessor for details about the extended data types, registers, and instructions available with this chip.

#### Math coprocessor hardware interface

The coprocessor operates in an asynchronous mode and can use the same clock generator as the microprocessor. It functions as an I/O device and can be accessed through I/O ports 00F8h, 00FAh, and 00FCh.

The coprocessor BUSY signal tells the microprocessor that the coprocessor is operating. The WAIT signal means that it is executing, and forces the microprocessor to wait until the coprocessor is done.

The coprocessor can operate in either the real or protected address mode. It is in real address mode after a power-on, a reset, or when returning from protected address mode.

The math coprocessor generates an error signal which sets IRQ 13, and the BUSY signal from the coprocessor is then held in the BUSY state. The BUSY signal can be cleared by an I/O Write to I/O port 00F0h or by a write of zero to I/O port address 00F0h with bits 0-7 set to zeros, which also clears IRQ 13.

#### ABIOS: INT 75h Numeric exception error handling

IRQ 13 (which is generated by a math coprocessor numeric exception error) is vectored to INT 75h hardware interrupt service routine as part of the ABIOS initialization. When IRQ 13 goes high, INT 75h clears the BUSY signal and issues a software interrupt, INT 02h.

**Note:** User programs which enable numeric exceptions must provide a method for intercepting and processing either INT 75h or INT 02h.

# Micro Channel

# Introduction

The ABIOS supports such IBM Micro Channel-compatible features as Programmable Option Select (POS) and configurable Direct Memory Access (DMA) arbitration levels.

The following table lists the Micro Channel hardware supported by the ABIOS:

Feature	Description	
I/O address width is 8-bit or 16-bits.	Allows either 8-bit or 16-bit I/O transfers.	
Central arbitration control point.	Arbitrates among as many as 15 devices.	
8 DMA channels.	Serial DMA protocol for 8 channels; either 8-bit or 16-bit DMA transfer.	
Level-sensitive interrupts.	Interrupt controller operated in level-triggered mode to allow devices to share interrupt levels.	
Programmable option select	Eliminates need for jumpers and configuration switches.	
Channel extension connectors	Support future growth and additional channel features.	
No support for PC-type adapters.	Supports only adapters designed for the Micro Channel.	

continued

Hardware Environment 33

#### Micro Channel connectors

The ABIOS supports three types of channel connectors:

- 16-bit, made up of an 8-bit section, and a 16-bit extension,
- 16-bit with auxiliary video extensions, and
- 32-bit connectors in Intel 80386-based systems.

# Programmable option select (POS)

POS data is accumulated in adapter description files (ADFs) which are created by adapter manufacturers for each adapter. The reference diskette supplied with MCA-compatible systems reads .ADF files and stores configuration information in CMOS RAM. The ABIOS power-on self test (POST) reads CMOS RAM and writes the configuration information to the POS registers of the adapters.

The POS I/O addresses are 0094h - 0097h and 0100h - 0107h.

# I/O Devices: Introduction

The ABIOS supports the following I/O devices:

- a diskette controller,
- a fixed disk controller.
- a VGA video controller.
- an Intel 8042 or equivalent keyboard controller,
- a serial port, and
- a parallel port.

Each of these capabilities is discussed below.

# I/O Devices: Diskette and Disk Hardware

#### Diskette controller

The ABIOS supports an NEC 765 or equivalent diskette controller. Four types of diskette drives are supported:

- 720K 3.5-inch.
- 1.44 MB 3.5-inch.
- 360K 5.25-inch, and
- 1.2 MB 5.25-inch drives.

#### Diskette drive configuration

The ROM BIOS supports a maximum of two diskette drives.

#### Fixed disk controller

The ROM BIOS supports up to two fixed disks. The ABIOS supports an ST506 fixed disk adapter or equivalent. This adapter should be PS/2-compatible. The ST506 adapter is single-tasking and must complete one operation before starting another, even though the next operation may be for the other fixed disk. The hardware interrupt request for fixed disk is 14.

RLL and ESDI fixed disk controllers are also supported by the ABIOS.

Hardware Environment 35

#### Introduction

The ABIOS video service supports IBM VGA-compatible hardware, including:

- a VGA-compatible chip or chip set that includes a:
  - CRT Controller
  - Sequencer
  - Graphics Controller, and
  - Attribute Controller
- DAC chip INMOS G171 or compatible Digital-to-Analog Converter
- Video RAM 256K of dynamic read/write RAM configured as four 64K maps
- Monochrome or color direct drive analog monitor
- Monochrome or color multiple sync frequency monitors

# VGA-compatible chip (or chip set)

The VGA chip (or chip set) provides all CRT control signals. It consists of four components: CRT Controller, Sequencer, Graphics Controller, and Attribute Controller.

The function of each VGA component is summarized in the table below.

Component	Function CRT Controller	
CRT Controller	Generates horizontal and vertical CRT sync timings, cursor and underline timings, video buffer addressing, and refresh addressing.	
Sequencer	Arbitrates system access to display RAM and fonts. The sequencer allows up to eight fonts with two fonts displayable at any one time.	
Graphics Controller	Handles read/write operation on 4 parallel bit planes. Outputs data to Attribute Controller.	
Attribute Controller	Converts incoming text mode attribute data or graphics mode pixel data into 8-bit indices into the Digital-to-Analog Converter (DAC) color registers (see below).	

**Note:** For a complete description of VGA-compatible components, I/O ports, and registers, refer to the hardware documentation accompanying your particular VGA-compatible chip or chip set.

#### DAC

The video DAC contains 256 individual color registers which can be accessed by the BIOS as either four 64-color registers or sixteen 16-color registers.

Each DAC color register contains one 18-bit RGB analog value. Six bits of each register are allocated to each primary color. Thus, the color represented in each DAC color register may be any of 256K possible colors (i.e.  $2^{3*6} = 256$ K).

#### Video RAM

The ABIOS Video Service requires 256K of read/write video RAM formatted into four banks (or maps) of 64K.

To maintain compatibility, display memory for each of the historical MDA, CGA, and EGA-compatible modes is mapped exactly as it was in the original display adapter. The display memory organization for the new VGA modes is outlined in the ABIOS Video Services chapter.

# Analog monitor support

To display all modes, the Video Service requires either a monochrome or a color direct drive analog monitor with a 31.5 KHz horizontal scan frequency.

The display's vertical gain is adjusted automatically by the VGA-compatible circuitry. Thus, video modes with 350, 400, and 480 horizontal scan lines can be displayed without requiring manual adjustment.

#### Multiscan monitor support

In addition to 31.5 KHz direct drive analog monitors, the Video Service also supports multiscan rate monitors capable of operating in analog modes (e.g. NEC Multisync monitor). Monitors of this type require an adapter cable that matches the signal assignments and monitor ID circuitry of the DAC external video controller.

# I/O Devices: Keyboard Hardware

#### Introduction

The ABIOS supports an intelligent keyboard subsystem based on the Intel 8042 or equivalent keyboard controller.

The hardware interrupt level associated with the ABIOS Keyboard Service is IRO 1.

#### The 8042 controller chip

The Intel 8042 peripheral controller (or compatible) is a single chip micro-computer that can be programmed to allow bidirectional communication between the master microprocessor and up to two auxiliary serial input devices. The 8042 chip, generally, is mounted on the system motherboard. 8042 programs reside as firmware in the 8042 chip itself.

# **Device support**

The kind of devices a given 8042 chip supports are dependent on how the 8042 is programmed.

On IBM PS/2-compatible systems, the 8042 is programmed to allow bidirectional communication between the system and the keyboard, as well as between the system and one other auxiliary serial device, such as a mouse, joystick, or trackball.

# Pointing device interface

The pointing device in PS/2-compatible systems is controlled by the 8042. INT 74h handles interrupts from the pointing device. The ABIOS Pointing Device Service controls the device operations.

# I/O Devices: Parallel Port Hardware

#### Introduction

The ABIOS Parallel Port Service is associated with hardware interrupt request 7. The ABIOS supports a parallel port that can transfer eight bits of data at standard TTL levels. The parallel port can be called port 1 through 8, must be IBM PS/2-compatible, and must have a bidirectional mode, supporting both input and output. The parallel port also supports level-sensitive interrupts and a readable interrupt pending status.

# Parallel port addresses

The following table lists the common parallel port addresses. Up to 8 parallel ports are supported.

Parallel Port Number	Data Address	Status Address	Control Address
1	03BCh	03BDh	03BEh
2	0378h	0379h	037Ah
3	0278h	0279h	027Ah

#### Parallel port extended mode

The extended mode of the parallel port can be selected through the port system-based POS registers. The extended mode adds a bidirectional interface.

Hardware Environment 39

#### Introduction

The ABIOS supports a National Semiconductor 16550 serial port controller or equivalent logic. The serial ports can be addressed as Serial 1–8. See (40:10h) to find out how many serial ports are available. Serial 1 and 3 interrupts are on IRQ 4; Serial 2 and 4 interrupts are on IRQ 3. The serial port base addresses are shown below. ABIOS initializes the serial ports in the same order that they reside in the ROM BIOS data area, so the serial port Logical IDs will be in the same order as in the BIOS Data area (40:10h). Additional serial ports and Logical IDs may be initialized.

# Serial port addresses/interrupt levels

The serial port addresses and interrupt levels are listed in the table below.

Serial Port Number	Base Address	Interrupt Level
1	03F8h	4
2	02F8h_	3
3	3220h	3
4	3228h	3
5	4220h	3
6	4228h	3
7	5220h	3
8	5228h	3

#### NS 16550 characteristics

The NS 16550, which is functionally compatible with the NS 16450 and the NS 8250, supports:

- Characters of 5, 6, 7, or 8 bits,
- 1, 1.5, or 2 stop bits, and
- even, odd, or no parity modes.

#### NS 16550 Serial Communications Controller

The NS 16550 does serial-to-parallel conversions on data received from a peripheral device or a modem, and parallel-to-serial conversion on data received from the system processor. The system processor can read the status of the NS 16550 at any time during its operation. The information furnished includes the type and condition of transfer operations in progress, as well as any error conditions (parity, overrun, framing, or break interrupt) present. The NS 16550 provides complete modem control, and has a user programmable processor-interrupt system.

# NS 16550 Serial Controller Registers

The NS 16550 has 12 accessible registers:

- Receiver Buffer Register (Read Only)
- Transmitter Holding Register (Write Only)
- Interrupt Enable Register (Read/Write)
- Interrupt Identification Register (Read Only)
- FIFO (First in/First out) Control Register (Write Only)
- Line Control Register (Read/Write)
- Modem Control Register (Read/Write)
- Line Status Register (Read Only)
- Modern Status Register (Read Only)
- Scratch Register (Read/Write)
- Divisor Latch (LSB) (Read/Write)
- Divisor Latch (MSB) (Read/Write)

Information on the operation of these registers is contained in the National Semiconductor NS 16550 Data Sheet. However, to avoid any incompatibility problems introduced by direct hardware programming, use the access to the serial controller provided through the BIOS services.

#### Programmable baud rate generator

The serial port controller can operate at speeds of from 110 to 19,200 bps.

Hardware Environment 41

# System Time-Related Devices: Introduction

# System time-related components

The ABIOS supports that the following time-handling chips, or their equivalents:

- Intel 82284 Clock Generator
- Intel 8254A Programmable Interval Timer (PIT)
- Motorola MC146818A Real Time Clock

# System Time-Related Devices: 82284 Clock Generator

# Description

The Intel 82284 (or compatible) Clock Generator chip interfaces directly to the system microprocessor (CPU). The 82284 chip:

- Provides the CPU with two clock inputs
- Generates the READY input to the CPU
- Synchronizes the system RESET input to the CPU.

#### Introduction

The 8254A Programmable Interval Timer (PIT) is a counter and timer that provides three channel timers. All channels are driven by a 1.19 MHz oscillator signal. Each "tick" of the PIT generates hardware interrupt request 0.

The BIOS supports the Intel 8254A programmable counter chip or its equivalent. The timer chip need not include a timer/counter 1 but should provide a limited-function timer/counter 3.

#### Timer channel differences

There are some differences between the three timer channels.

Counters 0 and 2:

- are independent 16-bit counters,
- can be preset, and
- can count in BCD (binary coded decimal) or in binary.

#### Counter 3:

- is only 8 bits,
- can be preset,
- counts in binary only, and
- can only count downward.

#### **System Timer Modes**

The system timer has six modes:

Mode	Name	
0	Interrupt on Terminal Count	
1	Hardware Retriggerable One-Shot	
2	Rate Generator	
3	Square Wave	
4	Software Triggered Strobe	
5	Hardware Retriggerable Strobe	

continued

Hardware Environment 43

# Common timer mode operations

All modes have the following operations in common:

- All control logic resets when control bytes are written to a counter.
- Counters do not stop when they reach zero.
- In Modes 0, 1, 4, and 5 the counter wraps to the highest possible count, and continues to count.
- In Modes 2 and 3, the counter reloads the initial count and continues to count.

#### **Timer Channels**

The following table describes the functions of the timer channels. The system timer is treated as a series of I/O ports. Three are count registers, and two are control registers.

Channel	Description	I/O Port	Read/Write Status
0	System Timer	0040h	R/W
2	Tone Generation for Speaker	0042h	R/W
3	Watchdog Timer	0044h	R/W
3	Control Register 3	0047h	W
0, 2	Control Register 0, 2	0043h	W

# Watchdog Timer

The Watchdog Timer is used to find out if IRQ 0 is not being serviced, which can be used to detect a user program in a tight loop.

The Watchdog Timer is enabled or disabled by the CBIOS INT 15h, System Services, function C3h.

# System Time-Related Devices: MC146818A RTC Chip

#### Introduction

The ABIOS supports a Motorola MC146818A Real Time Clock, or equivalent. This chip is assumed to have at least 64 bytes of nonvolatile CMOS RAM available to store configuration data.

#### **RTC CMOS RAM Addresses**

The following table lists the CMOS RAM addresses:

I/O Address	Length	Description	
0070h	1 Byte	CMOS RAM address, where:  Bit 7 = 1 NMI disabled  Bits 6-0 = 0 CMOS RAM address	
0071h	1 Byte	CMOS RAM data port	

#### ■ To write to CMOS RAM:

- Inhibit interrupts.
- Write the CMOS address to which the data is to be written to I/O port 0070h.
- Write the data to be written to I/O port 0071h.

#### ■ To read from CMOS RAM:

- Inhibit interrupts.
- Write the CMOS address from which the data is to be read to I/O Port 0070h.
- Read from I/O port 0071h.

# **CMOS RAM Service**

# Introduction

Information may be stored in up to two areas of CMOS RAM. The table below describes the CMOS RAM areas available to the ROM BIOS.

# Table of CMOS RAM areas

Data Area	I/O Location	Size	Description
CMOS RAM Data Area	0070h and 0071h	64 bytes	These bytes are located on the Motorola MC146818A Real Time Clock CMOS chip (or its equivalent). All implementations of the BIOS make use of this area to store real time clock, POST, and system configuration data.
Extended CMOS RAM Data Area	0074h, 0075h, and 0076h	2K	When implemented on systems that employ more than four adapter slots, the BIOS requires an additional 2K of CMOS RAM. This extended CMOS RAM is primarily used to store POS data.

#### **DMA** functionality

The hardware environment for DMA transfers is described here in order to explain the background against which the DMA ABIOS functions operate. The ABIOS, however, serves as a shield between underlying hardware and requests of the operating system, obviating the need for the caller to directly access the DMA controller.

Direct Memory Access (DMA) allows large amounts of data to be transferred from a physical device to system memory or vice versa without microprocessor involvement. A program may initiate a DMA transfer and have no need to copy each byte or word individually, freeing the processor for more complex tasks. DMA transfers are typically from/to a fixed I/O port address to/from a continually incremented memory address.

DMA functionality in Micro Channel systems is a superset of the functionality of two Intel 8237 DMA Controllers, one addressed at every port, starting with Port 0000h, and one addressed at every other port, starting at port 00C0h. Access to 8237-compatible DMA functions and to additional functions for all channels is provided at I/O ports 0018h and 001Ah. Data output to port 0018h selects the channel and function, and data output to or input from 001Ah goes to or from the selected internal register.

#### Bus sharing

The system microprocessor and any currently-transferring DMA users can share the bus by taking turns directing bus cycles (driving the Micro Channel's address lines and certain control signals). An arbitration process determines which of these possible bus masters are ready to direct a cycle. Competing bus masters (DMA devices) are assigned varying priorities, which are weighed during arbitration. Each bus master gets control of the bus for a number of cycles as determined by the arbitration process.

#### DMA device

A DMA device (or bus master) is one that enters into arbitration for the channel. If it wins, it receives addresses and control signals from the DMA controller so it can read or write data.

continued

Hardware Environment 47

#### **DMA Controller functions**

A DMA controller is a device which monitors the arbitration process and gives addresses and control signals to the device that has won the bus through arbitration. The controller does not enter into the arbitration itself. PS/2-compatible Micro Channel-based systems provide a DMA controller that supports DMA transfers to/from up to eight devices at once.

# DMA hardware registers

The DMA controller maintains several hardware registers for each DMA channel. The key registers are:

- a memory address where the next byte or word will be transferred to or from
- a count of the remaining bytes to transfer (transfer count)
- a flag (mode) controlling the transfer direction (to memory or to the device), and
- transfer status flags for each channel (status)

# DMA hardware registers

The DMA Controller has ten sets of registers, summarized below:

Register	Size (bits)	Number of Registers	How Allocated
Memory Address	24	8	1 per Channel
I/O Address	16	8	1 Per Channel
Transfer Count	16	8	1 Per Channel
Temporary Holding	16	1	All Channels
Mask	4	2	1 for Channels 7-4 1 for Channels 3-0
Arbus	4	2	1 for Channel 4 1 for Channel 0
Mode	8	8	1 per Channel
Status	8	2	1 for Channel 7-4 1 for Channel 3-0
Function	8	1	All Channels
Refresh	9	1	Independent of DMA

#### Mode Control Field

The Mode Control field provides an opportunity for the caller to use the Autoinitialization and Programmed I/O (PIO) features of the DMA Controller.

#### ■ Autoinitialization

Specifies if the DMA Controller will initialize automatically when the transfer reaches the terminal count.

#### ■ Programmed I/O

Specifies that the I/O address is to be programmed to the DMA Controller, driving the I/O address on the bus during the DMA cycles.

continued

49

Hardware Environment

#### **Transfer Control Bytes**

These fields provide an opportunity for the caller to specify the physical address of the memory and I/O fields for ABIOS DMA Service functions 10h, 11h, and 12h.

#### **■** Count Control

Specifies if the physical address is decremented or incremented during a transfer.

#### ■ Device Size

Specifies whether this is an 8-bit or 16-bit transfer.

## DMA controlled by microprocessor

The microprocessor can address the DMA controller and access the DMA registers. The microprocessor can control the DMA modes, transfer addresses, transfer counts, channel masks, and page registers.

#### **Direct DMA Controller access**

Reading directly from or writing directly to any DMA Controller port may cause unpredictable results.

#### DMA data transfer

After a DMA device has won the arbitration bus and the DMA controller is programmed to service the request, a transfer can take place.

DMA transfers can be:

- single transfer,
- multiple transfer (burst mode), or
- read verification.

#### **Burst mode**

Burst mode is a method of DMA transfer that allows a device to remain inactive for long periods and then send large amounts of data in a short time. Some peripheral devices, e.g. a fixed disk, transfer their data in bursts that are frequently separated by long periods of inactivity. Burst mode is a way of making these devices more efficient. The device asks to be serviced only when it has data to transfer and then does so in large quantities.

#### **Arbitration levels**

Arbitration is a process through which devices compete for control of the Micro Channel on a prioritized basis. Arbitration levels are predefined or programmable levels of priority assigned to devices that compete for possession of the channel.

Central Arbitration Control is a hardware function that allows intelligent peripherals to share and control access to the system. Arbitration is organized in levels of priority, and on each level there can be a number of competing devices.

Arbitration Levels are numbered from 00h to 0Fh. In addition, there are Arbitration Levels -1 and -2, which exist only on the system board. Of the former set, Arbitration Level 00h has the highest priority; Level 0Eh has the lowest. All arbitration level priorities are assigned sequentially; 00h through 0Eh are the highest through lowest priorities. Level 0Fh is reserved.

**Note:** The ABIOS DMA service reads the fixed disk arbitration level from the CBIOS extended data area at ABIOS initialization and uses this arbitration level throughout the ABIOS session.

## Arbitration levels, cont'd

The following table summarizes the arbitration levels:

Arbitration Levels	Primary Assignment		
FEh	Memory Refresh		
FFh	NMI		
00h	DMA Channel 0*		
01h	DMA Channel 1		
02h	DMA Channel 2		
03h	DMA Channel 3		
04h	DMA Channel 4*		
05h	DMA Channel 5		
06h	DMA Channel 6		
07h	DMA Channel 7		
08h	Reserved		
09h	Reserved		
0Ah	Reserved		
0Bh	Reserved		
0Ch	Reserved		
0Dh	Reserved		
0Eh	Reserved		
0Fh	System Microprocessor		
* These DMA Cha	* These DMA Channels can be programmed to any arbitration level		

ABIOS functions allow these arbitration levels to be allocated, deallocated or disabled.

#### DMA channel flags

Additional channel flags control whether

- a transfer is to be repeated forever,
- the memory address is to be decremented or incremented after each cycle,
- the DMA controller maintains I/O address (this is hardwired in most devices that use DMA), or
- a byte or a word is transferred at each cycle.

# Physical and Virtual DMA channels

DMA channels can be either physical or virtual. A physical channel can only have one arbitration level, but a virtual channel can be programmed to own any arbitration level not currently assigned to a different channel. Thus, a virtual DMA channel can have many arbitration levels.

Functionally, there is no difference between physical and virtual channels. Priority is determined by the arbitration level only, where level 00h is the highest priority and level 0Eh the lowest.

# Virtual DMA Channels and the Arbus register

The arbitration level assignment for channels 0 and 4 can be programmed using the two 4-bit Arbus registers. The Arbus registers permit dynamic reassignment of the arbitration ID value by which the DMA controller responds to DMA requests for bus arbitration. Channels 0 and 4 can then service devices at any arbitration level.

#### **DMA Channels**

The DMA channel I/O addresses are defined in the I/O Port Address section later in this chapter. They range from 0000h - 000Fh, 0018h, 001Ah, 0081h - 008Fh, and 00C0h - 00DEh.

#### DMA extended mode

An extended mode register is available for each programmable DMA channel and is used when a DMA channel requests a DMA data transfer. DMA channels must match the transfer size of the DMA slave, which is programmed by Bit 6 of the extended mode register. DMA read transfers of 16 bits from 8-bit memory or 8-bit memory-mapped I/O devices are not supported.

The following table describes the DMA extended mode register:

Bit Number	Description
7	= 0 Reserved
6	= 0 8-bit transfer = 1 16-bit transfer
5	= 0 Reserved
4	= 0 Reserved
3	= 0 Read memory transfer = 1 Write memory transfer
2	= 0 Verify = 1 Transfer data
1	= 0 Reserved
0	= 0 I/O address 00h = 1 User programs the I/O address

# Programmable Option Select (POS)

### Introduction

Because it is an integral part of the Micro Channel Architecture (MCA), Programmable Option Select support is assumed.

## Adapter slots

The ABIOS supports up to eight adapter cards (or more on systems with a customized BIOS). The ABIOS will work with any system regardless of the number of adapter slots available.

# Adapter card Identification

Each adapter card must have a unique 2-byte identifier.

## Adapter description files

POS data is accumulated in adapter description files (ADFs) that are created by adapter manufacturers for each adapter. The reference diskette supplied with MCA-compatible systems reads the .ADF files and stores the configuration information in CMOS RAM. This information is read by the BIOS poweron self test (POST), which writes it to the POS registers of the adapters and the system board.

Hardware Environment

# Intel 8259A Programmable Interrupt Controllers

#### Introduction

The ABIOS supports two cascaded Intel 8259A Programmable Interrupt Controller (PIC) chips, or their functional equivalent.

## Description

The PIC handles all maskable hardware interrupts. The ABIOS insures compatibility with hardware interrupts expected by existing software. Formerly reserved, IRQ2 is now associated with the 8042 Auxiliary Device (mouse) controller.

## Levels of Interrupt

There are 16 levels of interrupts. Interrupts are level-sensitive, allowing several devices to share the same hardware interrupt. This reduces the interrupt controller's sensitivity to a transient signal on the Micro Channel bus.

# Programmable Interrupt Controller Addresses

The following table lists all PIC addresses:

I/O Address	Functional Equivalents	IRQs Routed	Read/Write Status	Description
20h	master 8259A	IRQ 0 - IRQ 7	R/W	Base
21h	master 8259A	IRQ 0 - IRQ 7	w	Mask
A0h	slave 8259A	IRQ 8 - IRQ 15	R/W	Base
A1h	slave 8259A	IRQ 8 - IRQ 15	W	Mask

# Table of IRQ assignments

The following table shows the assignment of interrupt requests to commonly interrupting devices, listed from highest to lowest priority. Other devices not listed may use interrupt requests and may share requests with these devices.

Request	Device
IRQ 0	Timer tick
IRQ 1	Keyboard
IRQ 2	IRQ 8-15 are cascaded through IRQ 2
IRQ 8	Real time clock
IRQ 9	Redirect cascade
IRQ 10	Reserved
IRQ 11	Reserved
IRQ 12	Mouse
IRQ 13	80x87 math coprocessor exception
IRQ 14	Fixed disk controllers
IRQ 15	Reserved
IRQ 3	Serial port 2
IRQ 4	Serial port 1
IRQ 5	Parallel port 2
IRQ 6	Diskette
IRQ 7	Parallel port 1

Hardware Environment 57

# **System Control Port Definitions**

## Introduction

The ABIOS supports certain system control functions at I/O Port addresses 0061h and 0092h.

# Port 61h: System Control Port B

The read/write definitions for I/O port address 0061h, System Control Port B, are:

Port 61h: Write Operations		
Bit	Description	
7	= 1 Reset timer 0 output latch (IRQ 0)	
6-4	= 0 Reserved	
3	= 0 Enable channel check	
2	= 0 Enable parity check	
1	= 1 Speaker data enable	
0	= 1 Enable Timer 2 gate to speaker	

Port 61h: Read Operations		
Bit	Description	
7	= 1 Parity check	
6	= 1 Channel check	
5	= 1 Timer 2 output	
4	= 1 Toggles with each refresh request	
3	= 0 Channel check enabled	
2	= 0 Parity check enabled	
1	= 1 Speaker data enabled	
0	= 1 Timer 2 gate to speaker enabled	

# System Control Port Definitions, Continued

# Port 0092h: System Control Port A

I/O port 0092h (R/W), System Control Port A, contains system control flag data. System control Port A is defined below:

Bit	Description	
7	1 = Fixed disk activity light A on	
6	1 = Fixed disk activity light B on	
5	0 = Reserved (must be zero)	
4	1 = Watchdog time-out occurred	
3	1 = Security lock latch is locked	
2	0 = Reserved (must be zero)	
1	1 = Alternate gate A20 line active	
0	1 = Alternate hot CPU reset	

59

## Power-On Password

There are eight bytes in CMOS RAM reserved for a 1-7 byte password and a check character for that password. The microprocessor accesses these bytes during POST. These bytes cannot be accessed by a user program.

These eight bytes are initialized to zeros and are changed to the password during password installation. Passwords can only be changed during POST via the program on the reference diskette which is supplied with MCA-compatible systems.

**Models 25 and 30:** Power-on password is not supported in IBM PS/2 Models 25 and 30, and compatibles.

# **NMI Mask**

The NMI (nonmaskable interrupt) input to the microprocessor is masked off at power-on reset. Bit 7 of I/O address 0070h is set to zero to enable the NMI. A power-on reset sets this bit to one.

Table: Hardware I/O Port Definitions

I/O Address	Read/Write Status	Description
0000h	R/W	DMA channel 0, memory address register
0001h	R/W	DMA channel 0, transfer count register
0002h	R/W	DMA channel 1, memory address register
0003h	R/W	DMA channel 1, transfer count register
0004h	R/W	DMA channel 2, memory address register
0005h	R/W	DMA channel 2, transfer count register
0006h	R/W	DMA channel 3, memory address register
0007h	R/W	DMA channel 3, transfer count register
0008h	R	DMA channel 0-3, status register, where:  Bit 7 = 1 Channel 3 request Bit 6 = 1 Channel 2 request Bit 5 = 1 Channel 1 request Bit 4 = 1 Channel 0 request Bit 3 = 1 Terminal count on channel 3 Bit 2 = 1 Terminal count on channel 2 Bit 1 = 1 Terminal count on channel 1 Bit 0 = 1 Terminal count on channel 0
000Ah	R/W	DMA channel 0-3, mask register, where:  Bits 7-3 = 0 Reserved  Bit 2 = 0 Clear mask Bit = 1 Set mask Bit  Bits 1-0 = 00b Select channel 0 = 01b Select channel 1 = 10b Select channel 2 = 11b Select channel 3
000Bh	W	DMA channel 0-3, mode register, where:  Bits 7-6 = 00b Demand mode = 01b Signal mode = 10b Block mode = 11b Cascade mode  Bits 5-4 = 0 Reserved  Bits 3-2 = 00b Verify operation = 01b Write operation = 10b Read operation = 11b Reserved  Bits 1-0 = 00b Select channel 0 = 01b Select channel 1 = 10b Select channel 2 = 11b Select channel 3
000Ch	W	DMA Clear Byte Pointer
000Dh	W	DMA Master Clear Byte

Hardware Environment 61

Table: Hardware I/O Port Definitions, cont'd

I/O Address	Read/Write Status	Description
000Eh	W	DMA Channel 0-3 Clear Mask Register
000Fh	W	DMA channel 0-3, write mask register, where:  Bits 7-4 = 0 reserved  Bit 3 = 0 unmask channel 3 mask bit
0018h	W	DMA extended function register, where:  Bits 7-4 = Progress command, where: 00h I/O address register 01h Reserved 02h Memory address register write 03h Memory address register read 04h Transfer count register write 05h Transfer count register read 06h Status register read 07h Mode register 08h Arbus register 09h Mask register set single bit 0Ah Mask register reset single bit 0Bh-0Ch Reserved 0Dh Master clear 0Eh-0Fh Reserved Bits 3-0 = 0 Reserved
001Ah	R/W	DMA extended function execute register
0020h	R	PIC, Interrupt request/In-service registers programmed by Operation Command Word 3 (OCW3):  Interrupt request register, where:  Bits 7-0= 0 No active request for the corresponding interrupt line = 1 Active request for the corresponding interrupt line Interrupt in-service register, where:  Bits 7-0= 0 The corresponding interrupt line is not currently being serviced = 1 The corresponding interrupt line is currently being serviced

Table: Hardware I/O Port Definitions, cont'd

I/O Address	Read/Write Status	Description
0020h	W	PIC, Initialization Command Word 1 (ICW1) (Bit 4 is one), where:  Bits 7-5 = 000 Only used in 80/85 mode Bit 4 = 1 Reserved Bit 3 = 0 Edge triggered mode = 1 Level triggered mode Bit 2 = 0 Successive interrupt vectors are separated by eight bytes = 1 Successive interrupt vectors are separated by four bytes Bit 1 = 0 Cascade mode = 1 Single mode — no ICW3 needed Bit 0 = 0 No ICW4 needed = 1 ICW4 needed
0021h	W	PIC, ICW2, ICW3, or ICW4 in sequential order after ICW1 written to Port 0020h  ICW2, where:  Bits 7-3 = Address lines A0-A3 of base vector address for interrupt controller  Bits 2-0 = 000 Reserved  ICW3, where:  Bits 7-0 = 0 Slave controller not attached to corresponding interrupt pin = 0 Slave controller attached to corresponding interrupt pin  ICW4, where:  Bits 7-5 = 000 Reserved  Bit 4 = 0 No special fully-nested mode = 1 Special fully-nested mode = 1 Special fully-nested mode = 10 Buffered mode/slave = 11 Buffered mode/slave = 11 Buffered mode/master  Bit 1 = 0 Normal EOI = 1 Auto EOI  Bit 0 = 0 80/85 mode = 1 8086/8088 mode
0021h	R/W	PIC, Interrupt mask register (OCW1), where: Bit 7 = 0 Enable parallel printer interrupt Bit 6 = 0 Enable diskette interrupt Bit 5 = 0 Enable fixed disk interrupt Bit 4 = 0 Enable serial port 1 interrupt Bit 3 = 0 Enable serial port 2 interrupt Bit 2 = 0 Enable video interrupt Bit 1 = 0 Enable keyboard interrupt Bit 0 = 0 Enable timer interrupt

Table: Hardware I/O Port Definitions, cont'd

I/O Address	Read/Write Status	Description
0021h	W	PIC, OCW2 (Bit 4 is zero, Bit 3 is zero), where:  Bits 7-5 = 000 Rotate in automatic EOI mode (clear) = 001 Non-specific EOI = 010 No operation = 011 Specific EOI = 100 Rotate in automatic EOI mode (set) = 101 Rotate on non-specific EOI command = 110 Set priority command = 111 Rotate on specific EOI command Bit 4 = 0 Reserved Bit 3 = 0 Reserved Bits 2-0 = Interrupt request to which the command applies
0020h	W	PIC, OCW3 (Bit 4 is zero, Bit 3 is one), where:  Bit 7 = 0 Reserved  Bits 6-5 = 00 No operation = 01 No operation = 10 Reset special mask = 11 Set special mask  Bit 4 = 0 Reserved  Bit 3 = 1 Reserved  Bit 2 = 0 No poll command = 1 Poll command Bits 1-0 = 00 No operation = 01 No operation = 10 Read interrupt request register on next read at Port 0020h = 11 Read interrupt in-service register on next read at Port 0020h
0040h	R/W	Programmable Interrupt Timer - Read/write counter 0
0042h	R/W	Programmable Interrupt Timer - Read/write counter 2

Table: Hardware I/O Port Definitions, cont'd

I/O Address	Read/Write Status	Description
0043h	W	PIT, control word register for counters 0 and 2, where:  Bits 7-6 = 00b Select counter 0 = 01b Reserved = 10b Select counter 2  Bits 5-4 = 00b Counter latch command = 01b Read/write counter bits 0-7 only = 10b Read/write counter bits 8-15 only = 11b Read/write counter bits 8-15 only = 11b Read/write counter bits 0-7 first, then bits 8-15  Bits 3-0 = 000b Mode 0 select = 001b Mode 1 select = X10b Mode 2 select = X11b Mode 3 select = 100b Mode 4 select = 101b Mode 5 select
0044h	w	PIT, read/write counter 3
0047h	W	PIT, control word register for counter 3, where:  Bits 7-6 = 00b Select counter 3 = 01b Reserved = 10b Reserved = 11b Reserved Bits 5-4 = 00b Counter latch command select counter 0 = 01b Read/write counter bits 0-7 only = 10b Reserved = 11b Reserved
0060h	R/W	Keyboard/auxiliary data port
0061h	R	System control port B, where:  Bit 7 = 1 Parity check Bit 6 = 1 Channel check Bit 5 = 1 Timer 2 output Bit 4 = 1 Toggle with each refresh request Bit 3 = 0 Channel check enabled Bit 2 = 0 Parity check enabled Bit 1 = 1 Speaker data enabled Bit 0 = 1 Timer 2 gate to speaker enabled

Table: Hardware I/O Port Definitions, cont'd

I/O Address	Read/Write Status	Description
0061h		System control port B, where:  Bit 7 = 1 Reset timer 0 output latch (IRQ 0)  Bits 6-4 = Reserved  Bit 3 = 0 Enable channel check  Bit 2 = 0 Enable parity check  Bit 1 = 1 Speaker data enable  Bit 0 = 1 Enable timer 2 gate to speaker
0064h	w	8042 Commands
0064h	R	8042 Status, where:  Bit 7 = 1 Parity error  Bit 6 = 1 General time out  Bit 5 = 1 Auxiliary output buffer full  Bit 4 = 1 Inhibit switch  Bit 3 = 1 Command/data  Bit 2 = System flag  Bit 1 = 1 Input buffer full  Bit 0 = 1 Output buffer full
0070h	W	CMOS RAM address register port, where:  Bit 7 = 1 NMI disable = 0 NMI enabled  Bits 6-0 = 0 CMOS RAM address
0071h	R/W	CMOS RAM data register port
0074h	w	Extended CMOS RAM address register port, least significant byte
0075h	. <b>W</b>	Extended CMOS RAM address register port, most significant byte
0076h	R/W	Extended CMOS RAM data register port
0080h	R	DMA access
0081h	R/W	DMA channel 2, page table address register
0082h	R/W	DMA channel 3, page table address register
0083h	R/W	DMA channel 1, page table address register
0087h	R/W	DMA channel 0, page table address register
0089h	R/W	DMA channel 6, page table address register
008Ah	R/W	DMA channel 7, page table address register
008Bh	R/W	DMA channel 5, page table address register
008Fh	R/W	DMA channel 4, page table address register

Table: Hardware I/O Port Definitions, cont'd

I/O Address	Read/Write Status	Description
0090h	R	DMA arbitration register, where:  Bit 7 = 1 System microprocessor cycles enabled  Bit 6 = 1 Arbitration mask by NMI  Bit 5 = 1 Bus timeout  Bit 4 = 0 Reserved  Bits 3-0 = Arbitration level
0090h	W	DMA arbitration register, where:  Bit 7 = 1 Enable system microprocessor cycle  Bit 6 = 1 Arbitration mask  Bit 5 = 1 Enable extended arbitration  Bits 4-0 = 0 Reserved
0091h	W	DMA card selected feedback register, where:  Bits 7-1 = Reserved  Bit 0 = 1 Card selected feedback signal active on previous cycle or system board I/O functions accessed by an I/O cycle
0092h	R/W	System control port A, where:  Bit 7 = 1 Fixed disk activity light bit A on Bit 6 = 1 Fixed disk activity light bit B on Bit 5 = X Reserved Bit 4 = 1 Watchdog timeout occurred Bit 3 = 1 Security lock latch locked Bit 2 = X Reserved Bit 1 = 1 Alternate gate A20 active Bit 0 = 1 Alternate hot reset
0094h	R/W	System board setup enable register, where:  Bit 7 = 0 Enable system board setup = 1 Disable system board setup  Bit 6 = 1 Reserved  Bit 5 = 0 Enable VGA setup = 1 Disable VGA setup  Bits 4-0 = 1 Reserved
0096h	R/W	POS channel position select register, where: Bit 7 = 1 Channel 1 reset Bits 6-4 = Reserved (written as 0, read as 1) Bit 3 = 1 Channel select Bits 2-0 = 0 Channel number
00A0h	R/W	Programmable Interrupt Controller 2

Table: Hardware I/O Port Definitions, cont'd

	Read/Write	
I/O Address	Status	Description
00A1h	R/W	Programmable Interrupt Controller 2 mask, where:
		Bit 7 = 0 Reserved Bit 6 = 0 Enable fixed disk interrupt Bit 5 = 0 Enable 80387 exception interrupt Bit 4 = 0 Enable mouse interrupt Bit 3 = 0 Reserved Bit 2 = 0 Reserved Bit 1 = 0 Enable redirect cascade Bit 0 = 0 Enable real time clock interrupt
00C0h	R/W	DMA channel 4, memory address register
00C2h	R/W	DMA channel 4, transfer count register
00C4h	R/W	DMA channel 5, memory address register
00C6h	R/W	DMA channel 5, transfer count register
00C8h	R/W	DMA channel 6, memory address register
00CAh	R/W	DMA channel 6, transfer count register
00CCh	. R/W	DMA channel 7, memory address register
00CEh	R/W	DMA channel 7, transfer address register
00D0h	R	DMA channel 4-7, status register, where:  Bit 7 = 1 Channel 7 request  Bit 6 = 1 Channel 6 request  Bit 5 = 1 Channel 5 request  Bit 4 = 1 Channel 4 request  Bit 3 = 1 Terminal count on channel 7  Bit 2 = 1 Terminal count on channel 6  Bit 1 = 1 Terminal count on channel 5  Bit 0 = 1 Terminal count on channel 4
00D4h	R/W	DMA channel 4-7, mask register, where:  Bits 7-3 = 0 Reserved  Bit 2 = 0 Clear mask bit

Table: Hardware I/O Port Definitions, cont'd

I/O Address	Read/Write Status	Description
00D6h	R/W	DMA channel 4-7, Mode Register, where:  Bits 7-6 = 00b Demand mode = 01b Single mode = 10b Block mode = 11b Cascade mode Bit 5 = 0 Reserved Bit 4 = 0 Reserved Bits 3-2 = 00b Verify operation = 01b Write operation = 10b Read operation = 11b Reserved Bits 1-0 = 00b Select channel 4 = 01b Select channel 5 = 10b Select channel 6 = 11b Select channel 7
00D8h	W	DMA Clear Byte Pointer
00DAh	W	DMA Master Clear
00DCh	W	DMA Channel 4-7, Clear Mask Register
00DEh	W	DMA Channel 4-7, Write Mask Register, where:  Bits 7-4 = 0 Reserved  Bit 3 = 0 Unmask channel 7 mask bit
F0-FFh	R/W	Math Coprocessor
0100h	R	POS Adapter Identification (least significant byte)
0101h	R	POS Adapter Identification (most significant byte)

Hardware Environment 69

Table: Hardware I/O Port Definitions, cont'd

I/O Address	Read/Write Status	Description
0102h	R/W	POS register 2 for the system board setup, where:  Bit 7 = 0 Enable parallel port extended mode = 1 Disable parallel port extended mode  Bits 6, 5 = Parallel port select, where: = 00 Parallel 1 3BC-3BE = 01 Parallel 2 278-37A = 10 Parallel 3 278-27A = 11 Reserved  Bit 4 = 1 Enable parallel port, if bit 0 = 1 = 0 Disable parallel port  Bit 3 = 1 System board serial is serial 1 = 0 System board serial is serial 2  Bit 2 = 1 Enable serial port, if bit 1 = 1 = 0 Disable serial port  Bit 1 = 1 Enable diskette, if bit 0 = 1 = 0 Disable diskette  Bit 0 = 1 Allows bits 4, 2, and 1 to enable/disable devices = 0 Disables system board devices For an adapter card, the following bit is defined:  Bit 0 = 1 Enable adapter card
0103h	R/W	POS register 3, where:  Bits 7-2 = Reserved Bit 1 = 0 Password disable Bit 0 = Reserved
0104h	R/W	POS register 4
0105h	R/W	POS register 5 for an adapter card, where:  Bit 7 = 0 Channel check condition occurred = 1 Channel reset  Bit 6 0 Channel check exception status available
0106h	R/W	POS subaddress extension (least significant byte)
0107h	R/W	POS subaddress extension (most significant byte)
1F0-1F8h	R/W	Fixed disk
200-20Fh	R/W	Game port
0278h	R/W	Parallel 3, Data Port

Table: Hardware I/O Port Definitions, cont'd

I/O Address	Read/Write Status	Description
0279h	R/W	Parallel 3, Status Port, where:  Bit 7 = 0 Busy Bit 6 = 0 Acknowledge Bit 5 = 1 Out of paper Bit 4 = 1 Printer is selected Bit 3 = 0 Error Bit 2 = 0 IRQ has occurred Bits 1-0 = Reserved
027Ah	R/W	Parallel 3, Control Port, where:  Bits 7-6 = Reserved  Bit 5 = 0 Direction is write to port
02F8h	W	Serial 2, transmitter holding register, where: Bits 7-0 Data bits 7-0, respectively, when Divisor Latch Access Bit = 0
02F8h	R	Serial 2, receiver buffer register, where:  Bits 7-0 = Data bits 7-0, respectively, when  DLAB = 0
02F8h	R/W	Serial 2, divisor latch, low byte, where: Bits 7-0 = Bits 7-0 of divisor, when DLAB = 1
02F9h	R/W	Serial 2, divisor latch, high byte Bits 7-0 = Bits 15-8 of divisor, when DLAB = 1
02F9h	R/W	Serial 2, interrupt enable register, where:  Bits 7-4 = 0 Reserved  Bit 3 = 1 Modem status interrupt enable  Bit 2 = 1 Receiver line status interrupt enable  Bit 1 = 1 Transmitter holding register empty interrupt enable  Bit 0 = 1 Received data available interrupt enable when DLAB = 0
02FAh	R	Serial 2, interrupt identification register, where:  Bits 7-3 = 0 Reserved  Bits 2-1 = 00b Modem status interrupt = 01b Transmitter holding register empty interrupt = 10b Received data available register interrupt = 11b Receiver line status interrupt  Bit 0 = 0 interrupt pending

Table: Hardware I/O Port Definitions, cont'd

I/O Address	Read/Write Status	Description
02FAh	W	Serial 2, FIFO control register, where:  Bits 7-6 = Receiver FIFO register trigger 00b = 1 byte 01b = 4 bytes 10b = 8 bytes 11b = 14 bytes Bits 5-3 = 0 Reserved Bit 2 = Transmitter FIFO register reset 1 = transmit FIFO register cleared, counter cleared, bit is self- clearing Bit 1 = Receiver FIFO register reset 1 = receiver FIFO register cleared, counter cleared, bit is self- clearing Bit 0 = FIFO enable 1 = receiver and transmitter FIFOs enabled, must be 1 to program FIFO registers 0 = clears receive and transmit FIFO registers, enters charac- ter mode
02FBh	R/W	Serial 2, line control register, where:  Bit 7 = 1 Divisor latch access = 0 Receiver buffer, transmitter holding, or interrupt enable registers access  Bit 6 = 1 Set break enable Bit 5 = Stick parity Bit 4 = Even parity select Bit 3 = Parity enable Bit 2 = Number of stop bits Bits 1-0 = 00b Word length is 5 bits = 10b Word length is 6 bits = 10b Word length is 7 bits = 11b Word length is 8 bits
02FCh	R/W	Serial 2, modem control register, where:  Bits 7-5 = 0 Reserved Bit 4 = 1 Loopback mode Bit 3 = 1 Enable OUT2 interrupt Bit 2 = 1 Force OUT1 active Bit 1 = 1 Force request-to-send active Bit 0 = 1 Force data-terminal-ready active

Table: Hardware I/O Port Definitions, cont'd

	Read/Write	
I/O Address	Status	Description
02FDh	R	Serial 2, line status register, where:  Bit 7 = 0 Reserved  Bit 6 = 1 Transmitter shift and holding registers empty  Bit 5 = 1 Transmitter holding register empty  Bit 4 = 1 Break interrupt  Bit 3 = 1 Framing error  Bit 2 = 1 Parity error  Bit 1 = 1 Overrun error  Bit 0 = 1 Data ready
02FEh	R	Serial 2, modem status register, where:  Bit 7 = 1 Data carrier detect  Bit 6 = 1 Ring indicator  Bit 5 = 1 Data set ready  Bit 4 = 1 Clear to send  Bit 3 = 1 Delta to carrier detect  Bit 2 = 1 Trailing edge ring indicator  Bit 1 = 1 Delta data set ready  Bit 0 = 1 Delta clear to send
02FFh	R/W	Serial 2, scratch register
0320h	R/W	Fixed Disk Adapter Register (8 or 16 bit)
0322h	<b>W</b>	Fixed Disk Adapter Control Register, where:  Bit 7 = 1 Reset Bit 6 = 1 Reserved (except during reset) Bit 5 = 1 16-bit mode (must match bit 2) = 0 8-bit mode Bit 4-3= 0 Reserved Bit 2 = 1 16-bit mode (must match bit 5) = 0 8-bit mode Bit 1 = 1 Enable interrupt through Programmable Interrupt Controller (hardware interrupt) = 0 enable interrupt through Interrupt Status Register (port 324h) Bit 0 = 1 DMA mode = 0 PIO mode
0322h	R	Fixed Disk Adapter Status Register, where:  Bit 7-6=0 Reserved Bit 5 = 1 16-bit mode = 0 8-bit mode Bit 4 = 1 Data transfer requested by adapter Bit 3 = 1 Direction is adapter to system = 0 Direction is system to adapter  Bit 2 = 1 Busy Bit 1 = 1 Interrupt request (notification) Bit 0 = 1 Transfer in progress

Table: Hardware I/O Port Definitions, cont'd

I/O Address	Read/Write Status	Description
0324h	W	Fixed Disk Adapter Attention Register, where:  Bit 7 = 1 Command control block Bit 6 = 1 Command specify block Bit 5 = 1 Sense summary block Bit 4 = 1 Data transfer requested by system Bit 3 = 0 Reserved Bit 2 = 0 Drive 0 select = 1 drive 1 select Bit 1 = 0 Reserved Bit 0 = 1 Abort current command
0324h	R	Fixed Disk Adapter Interrupt Status Register where:  Bit 7 = 1 Termination error, bits 0-6 indicate what the error is  Bit 6 = 1 Invalid command  Bit 5 = 1 Command reject  Bit 4-3 = 0 Reserved  Bit 2 = 0 Drive 0 selected  = 1 Drive 1 selected  Bit 1 = 1 Error recovery procedure invoked  Bit 0 = 1 Equipment check
0378h	R/W	Parallel 2, data port
0379h	R/W	Parallel 2, status port, where:  Bit 7 = 0 Busy Bit 6 = 0 Acknowledge Bit 5 = 1 Out of paper Bit 4 = 1 Printer is selected Bit 3 = 0 Error Bit 2 = 0 IRQ has occurred Bits 1, 0 = Reserved
037Ah	R/W	Parallel 2, control port, where:  Bit 7-6 = Reserved Bit 5 = 0 Direction is write to port = 1 Direction is read from port  Bit 4 = 1 Enable IRQ Bit 3 = 1 Select printer Bit 2 = 0 Initialize printer Bit 1 = 1 Automatic line feed Bit 0 = 1 Strobe
03B4h	R/W	VGA CRT controller index register (mono)
03B5h	R/W	Other VGA CRT controller registers (mono)
03BAh	R	VGA input status register 1 (mono)
03BAh	w	VGA feature control register (mono)

Table: Hardware I/O Port Definitions, cont'd

I/O Address	Read/Write Status	Description
03BCh	R/W	Parallel 1, data port
03BDh	R/W	Parallel 1, status port, where:  Bit 7 = 0 Busy Bit 6 = 0 Acknowledge Bit 5 = 1 Out of paper Bit 4 = 1 Printer is selected Bit 3 = 0 Error Bit 2 = 0 IRQ has occurred Bits 1, 0 = Reserved
03BEh	R/W	Parallel 1, control port, where:  Bit 6 = Reserved Bit 5 = 0 Direction is write to port = 1 Direction is read from port Bit 4 = 1 Enable IRQ Bit 3 = 1 Select printer Bit 2 = 0 Initialize printer Bit 1 = 1 Automatic line feed Bit 0 = 1 Strobe
03C0h	R/W	VGA attribute address register
03C0h	W	Other VGA attribute registers
03C1h	R	Other VGA attribute registers
03C2h	W	VGA miscellaneous output register
03C2h	R	VGA input status register 0
03C3h	R/W	VGA video subsystem enable
03C4h	R/W	VGA sequencer address register
03C5h	R/W	Other VGA sequencer registers
03C6h	R/W	Video DAC PEL mask
03C7h	w	Video DAC PEL address, read mode
03C7h	R	Video DAC state register
03C8h	R/W	Video DAC PEL address, write mode
03C9h	R/W	Video DAC PEL data register
03CAh	R	VGA feature control register
03CCh	R	VGA miscellaneous output register
03CEh	R/W	VGA graphics registers, address register
03CFh	R/W	VGA and other graphics registers

Table: Hardware I/O Port Definitions, cont'd

I/O Address	Read/Write Status	Description
03D4h	R/W	VGA CRT controller index register (color)
03D5h	R/W	Other VGA CRT controller registers (color)
03DAh	R	VGA input status register 1 (color)
03DAh	W	VGA feature control register (color)
03F0h	R	Diskette controller status register A, where:  Bit 7 = 1 Interrupt pending Bit 6 = 0 Second drive installed Bit 5 = 1 Step Bit 4 = 1 Track 0 Bit 3 = 1 Head 1 select Bit 2 = 0 Index Bit 1 = 0 Write protect Bit 0 = 0 Data received by controller
03F1h	R	Diskette controller status register B, where:  Bit 7-6 = 0 Reserved Bit 5 = Drive select Bit 4 = Write data Bit 3 = Read data Bit 2 = Write enable Bit 1 = 1 Motor enable 1 Bit 0 = 1 Motor enable 0
03F2h	W	Diskette controller digital output register, where:  Bit 7-6 = 0 Reserved  Bit 5 = 1 Motor enable 1  Bit 4 = 1 Motor enable 0  Bit 3 = 0 Allow interrupts  Bit 2 = 0 Controller reset  Bit 1 = 0 Reserved  Bit 0 = 0 Drive select 0  = 1 Drive select 1
03F4h	R	Diskette controller status register, where:  Bit 7 = 1 Data register is ready Bit 6 = 1 Transfer is from controller to system = 0 Transfer is from system to controller  Bit 5 = 1 Non-DMA mode Bit 4 = 1 Diskette controller busy Bit 3-2 = Reserved Bit 1 = 1 Drive 1 busy Bit 0 = 0 Drive 0 busy
03F5h	R/W	Diskette controller data registers

Table: Hardware I/O Port Definitions, cont'd

I/O Address	Read/Write Status	Description
03F7h	R	Diskette controller digital input register where:  Bit 7 = Diskette change  Bits 6-1 = Reserved  Bit 0 = 0 High density select
03F7h	W	Diskette controller configuration control register, where:  Bits 7-2 = Reserved Bits 1-0 = 00b 500 kbs mode = 01b Reserved = 10b 250 kbs mode = 11b Reserved
03F8h	W	Serial 1, transmitter holding register, where:  Bits 7-0 = Data bits 7-0, respectively, when Divisor Latch Access Bit (DLAB) = 0
03F8h	R	Serial 1, receiver buffer register, where:  Bits 7-0 = Data bits 7-0, respectively, when DLAB = 0
03F8h	R/W	Serial 1, divisor latch, low byte, where: Bits 7-0 = Bits 7-0 of divisor, when DLAB = 1
03F9h	R/W	Serial 1, divisor latch, high byte, where: Bits 7-0 = Bits 15-8 of divisor, when DLAB = 1
03F9h	R/W	Serial 1, interrupt enable register, where:  Bits 7-4 = 0 Reserved  Bit 3 = 1 Modem status interrupt enable  Bit 2 = 1 Receiver line status interrupt enable  Bit 1 = 1 Transmitter holding register empty interrupt enable  Bit 0 = 1 Received data available interrupt enable when DLAB = 0
03FAh	R	Serial 1 Interrupt ID Register, where:  Bits 7-3 = 0 Reserved Bits 2-1 = 00b Modem status interrupt 01b Transmitter holding register empty interrupt 10b Received data available register interrupt 11b Receiver line status interrupt Bit 0 = 0 Interrupt pending

Hardware Environment 77

Table: Hardware I/O Port Definitions, cont'd

I/O Address	Read/Write Status	Description
03FAh	W	Serial 1, FIFO Control Register, where:  Bits 7-6 = Receiver FIFO register trigger 00b = 1 byte 01b = 4 bytes 10b = 8 bytes 11b = 14 bytes Bits 5-3 = 0 Reserved Bit 2 = Transmitter FIFO register reset 1 = transmit FIFO register cleared, counter cleared, bit is self- clearing Bit 1 = Receiver FIFO register reset 1 = receiver FIFO register cleared, counter cleared, bit is self- clearing Bit 0 = FIFO enable 1 = receiver and transmitter FIFOs enabled, must be 1 to program FIFO registers 0 = clears receive and transmit FIFO registers, enters character mode
03FBh	R/W	Serial 1, Line Control Register, where:  Bit 7 = 0 Receiver Buffer, Transmitter Holding, or Interrupt Enable Registers Access = 1 Divisor Latch Access Bit 6 = 1 Set Break Enabled Bit 5 = Stick Parity Bit 4 = Even Parity Select Bit 3 = Parity Enable Bit 2 = 0 1 Stop Bit = 1 0 Stop Bits Bits 1-0 = 00b 5 Bit Word Length 10b 7 Bit Word Length 11b 8 Bit Word Length
03FCh	R/W	Serial 1, Modem Control Register, where:  Bits 7-5 = 0 Reserved  Bit 4 = 1 Loopback mode  Bit 3 = 1 Enable OUT2 interrupt  Bit 2 = 1 Force OUT1 active  Bit 1 = 1 Force request to send active  Bit 0 = 1 Force data terminal ready active

Table: Hardware I/O Port Definitions, cont'd

I/O Address	Read/Write Status	Description
03FDh	R/W	Serial 1, Line Status Register, where:  Bit 7 = 0 Reserved Bit 6 = 1 Transmitter shift and holding registers empty Bit 5 = 1 Transmitter holding register empty Bit 4 = 1 Break interrupt Bit 3 = 1 Framing error Bit 2 = 1 Trailing edge ring indicator Bit 1 = 1 Overrun error Bit 0 = 1 Data ready
03FEh	R	Serial 1 Modem Status Register, where:  Bit 7 = 1 Data carrier detect  Bit 6 = 1 Ring indicator  Bit 5 = 1 Data set ready  Bit 4 = 1 Clear to send  Bit 3 = 1 Delta data carrier detect  Bit 2 = 1 Trailing edge ring indicator  Bit 1 = 1 Delta data set ready  Bit 0 = 1 Delta clear to send
03FFh	R	Serial 1, Scratch register
0680h	w	Manufacturing checkpoint port
3220-3227h	See 03F8h-03FFh	Serial Port 3 (see description for addresses 03F8h-03FFh for details).
3228-322Fh	See 03F8h-03FFh	Serial Port 4 (see description for addresses 03F8h-03FFh for details).
4220-4227h	See 03F8h-03FFh	Serial Port 5 (see description for addresses 03F8h-03FFh for details).
4228-422Fh	See 03F8h-03FFh	Serial Port 6 (see description for addresses 03F8h-03FFh for details).
5220-5228h	See 03F8h-03FFh	Serial Port 7 (see description for addresses 03F8h-03FFh for details).
5228-522Fh	See 03F8h-03FFh	Serial Port 8 (see description for addresses 03F8h-03FFh for details).

Hardware Environment 79



# Chapter 3 ABIOS Data Structures

# Overview

# **Description**

ABIOS makes use of data structures to link ABIOS services/functions to the operating system. The data structures reside in system memory and are initialized during ABIOS initialization. The ABIOS data structures are the

- Common Data Area,
- Function Transfer Tables, and
- Device Blocks.


continued

ABIOS Data Structures 81

## Data structure relationships

Each ABIOS service has a Function Transfer Table and a Device Block associated with it.

- The Function Transfer Table contains address pointers to each ABIOS function.
- 2. The Device Block is used by the ABIOS to store interrupt levels, device status information, and hardware port addresses.
- 3. The Common Data Area contains a linked list of the Function Transfer Table and Device Block pointer pairs associated with each service, as well as device memory pointers (if any) associated with a given device.

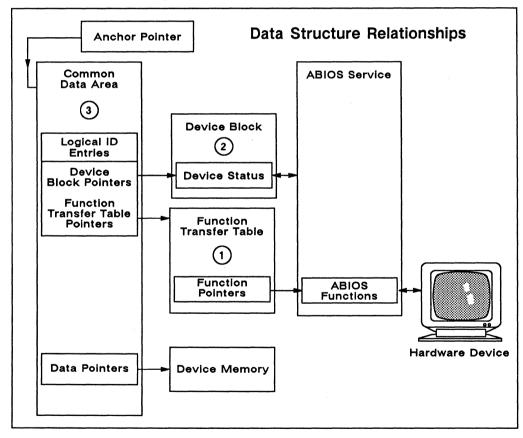

# Overview, Continued

# In this chapter


This chapter defines the internal components of each kind of ABIOS data structure. The following topics are discussed:

- Common Data Area
- Function Transfer Tables
- Device Blocks
- Related Information

ABIOS Data Structures 83

#### Introduction

Created during ABIOS initialization, the Common Data Area (CDA) is provided so that operating systems that use both the real and protected address modes (or a combination of both) of the system microprocessor can be implemented. The main features of the Common Data Area are outlined below:

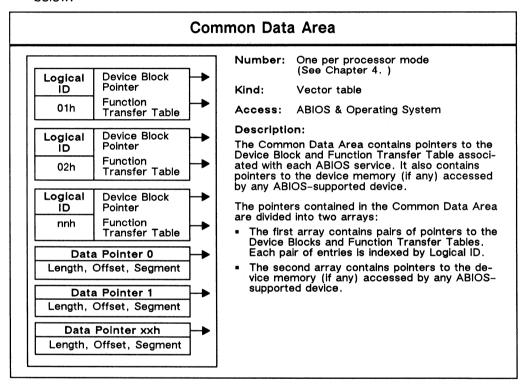

#### Real mode/protected mode CDAs

The Common Data Area acts as a link between all ABIOS pointers. It gathers them all in one structure, allowing an operating system to manage the ABIOS requests in both real and protected modes. There must be a Common Data Area in both the real mode and the protected mode if both address modes are used by the operating system.

# Common Data Area, Continued

#### The Anchor Pointer

Every time the operating system makes a request of the ABIOS, it passes a segment or selector (the offset is assumed to be zero) to the ABIOS. This selector points to the Common Data Area and is called the Anchor Pointer to the Common Data Area.

## Device IDs and Logical IDs

Device IDs are physical device identifiers that are attached to each device known to the ABIOS. Each Device ID may have one or more Logical IDs. A Logical ID is a device handle used by the operating system to make a call to the ABIOS. Logical IDs are assigned during ABIOS initialization.

### **Device Data pointers**

The Common Data Area data pointers point to system data areas such as the CBIOS Data Area. Additional data pointers may be defined and used by individual services. The data areas pointed to by the data pointers are permanently resident in RAM data areas reserved by the operating system.

#### Null entries into the Common Data Area

If the Function Transfer Table Pointer and the Device Block Pointer Fields are both set to 0000:0000h after initialization, the associated Logical ID must be thought of as a null Common Data Area entry. The entire entry for this Logical ID is used as a temporary place holder at initialization time.

continued

ABIOS Data Structures 85

#### Common Data Area structure

Offset	Bytes	Description
00h	2	OFFSET TO DATA POINTER 0 Combined with the Anchor Pointer, is a pointer to the Data Pointer 0 Length field.
02h	2	COUNT OF LOGICAL IDS Number of Device Block and Function Transfer Table pointer pairs
04h	4	Reserved
08h	4	Pointer to Device Block for Logical ID 2.
0Ch	4	Pointer to Function Transfer Table for Logical ID 1.
10h	4	Pointer to the Device Block for Logical ID 2.
14h	4	Pointer to the Function Transfer Table for Logical ID 2.
(08h*n)	4	Pointer to the Device Block for Logical ID n.
(08h*n) + 04h	4	Pointer to the Function Transfer Table for Logical ID n.
(08h*n) + 08h	2	LENGTH OF THE INDICATED DATA POINTER Data pointer length of the data areas indicated by an associated data pointer.
(08h*n) + 0Ah	2	OFFSET OF THE INDICATED DATA AREA Combined with associated data pointer segment, indicates the location of the beginning of the data area.
(08h*n) + 0Ch	2	DATA AREA POINTER SEGMENT Combined with its associated offset, indicates the location of the beginning of the data area.
(08h*n) + 0Eh	2	Length of the data pointer for pointer p - 1.
(08h*n) + 10h	2	DATA AREA OFFSETS Combined with an associated segment to construct the pointer to the data area for pointer p - 1.
(08h*n) + 12h	2	DATA AREA SEGMENTS Combined with an associated data area offset to construct the pointer to the data area for pointer p - 1.
(08h*n) + (06h*p) + 08h	2	Length of data pointer 0.
(08h*n) + (06h*p) + 0Ah	2	DATA AREA OFFSET Combined with an associated segment to construct the pointer to the data area.
(08h*n) + (06h*p) + 0Ch	2	DATA AREA SEGMENTS Combined with an associated data area offset to construct the pointer to the data area.
(08h*n) + (06h*p) + 0Eh	2	The total number of data pointers.

Note: n is the number of Logical IDs. p is the number of Data Pointers minus one.

# **Function Transfer Table**

# Description

The Function Transfer Table is a table of vectors to ABIOS entry points. Each entry contains the four-byte address pointer for each ABIOS function. Reserved function pointers are initialized to 0000:0000h.

Each logical ID, or each entry in the Common Data Area, has a Function Transfer Table Pointer. Multiple Logical IDs can have Function Transfer Table Pointers that point to the same Function Transfer Table and thus establish its relationship with the Common Data Area.

The main features of the Function Transfer Table are outlined below:

		Number:	One per ABIOS service and one per
Start Routine Interrupt Routine	Vector → Vector →		processor mode used (See Chapter 4 in this volume.)
Time-out Routine	Vector —▶	Kind:	Double Word Vector table
Count of functions	in service	Access:	ABIOS and operating system
Function 00h	Vector	Description	
Function 01h	Vector		on Transfer Table contains a list of
Function 02h	Vector		d vectors that supply the entry points BIOS service.
Function 03h	Vector		
Function 04h	Vector		nree entries in each ABIOS Function
Function 05h	Vector —		able are vectors to the start, interrupt, out routines contained in an ABIOS
Function 06h	Vector -	service.	at i datilida dall'all'Abido
Function 07h	Vector	The remain	ning antrias in each Eurotian Transfer
Function 08h	Vector —		ning entries in each Function Transfer vectors to specific ABIOS functions.
Function 09h	Vector —▶	These fund	ctions are referred to by function number
Function nnh	Vector —▶	in the Requ	uest Block Function field.
		entry cond function re function th	and interrupt routines check for valid itions before transferring control to the quested. The time-out routine ends a at does not receive an interrupt in a mount of time.

continued

ABIOS Data Structures 87

#### **Function Transfer Table structure**

The structure of the Function Transfer Table is described in the following table:

Offset	Bytes	Description
00h	4	START ROUTINE POINTER Pointer to a routine that validates the Function field, Request Block Length field, and the Unit field. The routine saves all registers before this field is used and restores them after it returns. The routine is called using a CALL FAR indirect to start an ABIOS request.
04h	4	INTERRUPT ROUTINE POINTER Pointer to a routine that resumes all multistaged requests if the operation is not completed in one request. The routine saves all registers before this field is used and restores them after it returns. If this Function Transfer Table corresponds to a device that does not interrupt, the Interrupt Routine Pointer Field is initialized to 0000:0000h. This routine is called using a CALL FAR indirect to resume a multistaged request after an interrupt is cleared.
08h	4	TIME-OUT ROUTINE POINTER Pointer to a routine that aborts the request, and, as a result, sets the affected hardware controller in a known state. The routine saves all registers before this routine executes and restores them after it returns. The Time-out Routine is called using a CALL FAR indirect. It is used to terminate a request that does not receive a hardware interrupt within a specified time period. If this Function Transfer Table corresponds to a device that does not generate interrupts, or a device that generates interrupts but never times out, the Time-out Routine Pointer field must be initialized by the operating system to 0000:0000h.
0Ch	2	FUNCTION COUNT Contains a count of the number of functions supported by a device.
0Eh	2	Reserved
10h	4	Pointer to the Function 1 Routine.
14h	4	Pointer to the Function 2 Routine.
0Ch + (4*n)	4	Pointer to the Function n Routine.

Note: n is equal to the number of functions specified in this Function Transfer Table.

## Description

Each ABIOS device service requires a permanent work area for storing device interrupt levels, device status information, and hardware port addresses. This work area is called the Device Block.

The main features of the Device Block are summarized in the graphic below:

#### **Device Block**

#### **Public Data**

Device Block Length Revision Secondary Device ID Logical ID Device ID I/O Port Pairs

#### Private Data

Device Unique Data Unit Unique Data

Number: One per ABIOS service

Kind: Work area

Public data — ABIOS and operating system Private data — ABIOS only Access:

#### Description:

Physical devices are linked to the ABIOS services by Device ID. The ABIOS services, in turn, are linked to the operating system by Logical ID. Logical IDs are assigned dynamically by the operating system during ABIOS initialization.

The Device Block associated with any ABIOS Service contains public information such as the Device Block length, the Logical ID/Device ID pairing, and the I/O port pairs used by the associated ABIOS service. Public information is accessible by both the operating system and the ABIOS itself.

The Device Block also contains data that is private to the individual ABIOS Service and is subject to change in future ABIOS releases. Typically, Device Block private data includes the interrupt level, arbitration level, and device status. Private information must only be accessed by the ABIOS.

#### Public data

Public Data in the Device Block

- is readable.
- has a format common to all Device Blocks, and
- should not be changed by the caller.

continued

**ABIOS Data Structures** 89

#### Private data

Private data in the Device Block

- is used internally by the ABIOS,
- may not have the same format from one Device Block to another,
- may not contain the same kind of data from one Device Block to the next, and
- should not read or be written to by the caller.

Private data in the Device Block may be altered in future ABIOS releases.

#### **Device Block structure**

The structure of the Device Block is described in the following table.

Offset	Туре	Bytes	Description
00h	Public	2	DEVICE BLOCK LENGTH ABIOS returns the required size of the Device Block here during ABIOS initialization. The maxi- mum length is 65,535 bytes.
02h	Public	1	REVISION Indicates the ABIOS version/revision level.
03h	Public	1	SECONDARY DEVICE ID Indicates the hardware level that ABIOS supports. When this field is incremented, the Revision Field reverts to zero.
04h	Public	2	LOGICAL ID The logical identifier of the device associated with this Device Block. Logical IDs are set at ABIOS initialization time. The Logical ID for a given device is determined by the index of its entry into the Common Data Area.
			The operating system must reserve the first n Logical IDs for ABIOS use. The number of Logical IDs to be reserved for ABIOS use is passed to the operating system at ABIOS initialization time via the Initialization Table.
			(A table describing how the ABIOS Logical IDs are used follows this table.)
06h	Public	2	DEVICE ID The type of device that the function request addresses, or the ABIOS internal call, is specified in this field. (A table of valid ABIOS Device IDs follows.)

# Device Block structure, cont'd

Offset	Туре	Bytes	Description
08h	Public	2	COUNT OF LOGICAL ID EXCLUSIVE PORT PAIRS Logical ID exclusive port pairs are two ports (input and output) used by a certain Logical ID. For example, I/O ports 0061h and 0062h are used by the diskette services Logical ID.  If the entry in this field is zero, no space is allocated for the Logical ID Exclusive Port Pairs Fields. This field contains the number of Logical ID Exclusive Port Pairs.
0Ah	Public	2	COUNT OF LOGICAL ID COMMON PORT PAIRS Logical ID common port pairs are ports that are shared by more than one Logical ID. For example, the DMA controller ports or Keyboard Controller ports are used by other Logical IDs. Each Logical ID that uses one of these ports contains an entry in the Logical ID Common Port pairs fields of the Device Block. If this field is set to zero, no space is allocated for the Logical ID Common Port Pairs Field. This field contains the number of Logical ID Common Port Pairs for this Request Block.
Varies	Private	4	LOGICAL ID EXCLUSIVE PORT PAIRS Contains the Logical ID Exclusive Port Pairs for this Request Block. The first word contains the starting I/O port number; the last word contains the ending I/O port number.  Note: Every port that an ABIOS Logical ID writes to or reads from must be accounted for in either the Logical ID Exclusive Port Pairs or Logical ID Common Port Pairs Fields.
Varies	Private	4	LOGICAL ID COMMON PORT PAIRS Points to a list of the I/O Port addresses of the Logical ID Common Port Pairs. The first word contains the starting I/O port number; the last word contains the ending I/O port number.  Note: Every port that an ABIOS Logical ID writes to or reads from must be accounted for in either the Logical ID Exclusive Port Pairs or Logical ID Common Port Pairs Fields.
Varies	Private	2	DEVICE-UNIQUE DATA AREA LENGTH Contains the length in bytes of the Device-Unique Data Area for this device.

continued

ABIOS Data Structures 91

#### Device Block structure, cont'd

Offset	Туре	Bytes	Description
Varies	Private	Varies	DEVICE-UNIQUE DATA AREA Information about arbitration levels, interrupt levels, and device status is stored in this field. Parameters that describe the device and working data that concerns this Device ID are stored in this field. The information in this field is data that is unique to this particular device. The content and format of the information in this field are Private Data and may change.
Varies	Private	2	COUNT OF UNITS The number of Unit Unique Data Area fields in the Device Block is stored in this field. If the entry is zero, this field is the last field in the Device Block.
Varies	Private	2	UNIT-UNIQUE DATA AREA LENGTH The length in bytes of a single entry in the repeatable Unit-Unique Data Area, not including the Unit-Unique Data Area Length, is stored here. This field will be here only if the Count of Units field is greater than zero.
Varies	Private	Varies	UNIT-UNIQUE DATA AREA This repeatable ABIOS Private Data area is reserved for each unit of the Device ID. For example, if the diskette Logical ID is 01h, a particular diskette drive will be the Unit. This area contains parameters describing the unit and the working data for individual requests. The contents and format of the data in this field may change, since it is ABIOS Private Data. This field will be here only if the Count of Units Field is greater than zero.

Note: n is the last Logical ID reserved for ABIOS internal calls. This value will vary depending on how many Logical IDs ABIOS must reserve for internal use, extending, and adding functions. ABIOS passes this value to the operating system at ABIOS initialization by noting it in the initialization table.

# Table of Logical ID Values

Logical ID	How used
00h	Reserved for use by ABIOS.
01h	Reserved for use by ABIOS.
02h-xxh	Reserved for use by ABIOS. xxh is specified by the operating system in the initialization Table when the ABIOS is initialized. xxh is the number of ABIOS logical IDs.
greater than xxh	System board ROM, adapter ROM, RAM extension.

# **Device IDs**

The following table lists all valid ABIOS Device IDs.

Device ID	Device Type/Service	Device ID	Device Type/Service
00h	ABIOS Internal Calls	0Bh	Pointing Device
01h	Diskette	0Ch	Reserved
02h	Fixed Disk	0Dh	Reserved
03h	Video	0Eh	CMOS RAM
04h	Keyboard	0Fh	Direct Memory Access
05h	Parallel Port	10h	Programmable Option Select
06h	Serial Port	11h	Error Log
07h	System Timer	12h-15h	Reserved
08h	Real Time Clock Timer	16h	Keyboard Security
09h	System Services	17h-FFFFh	Reserved
0Ah	Nonmaskable Interrupt		

ABIOS Data Structures 93

#### Related Information

#### Data structure initialization

The discussion of ABIOS data structures presented in this chapter is confined to a detailed presentation of data structure internal components. No mention was made, however, of how these structures are initialized.

For more information on how ABIOS Data Structures are initialized, refer to Chapter 4.

#### **Request Blocks**

In addition to the ABIOS data structures, the ABIOS also interfaces with RAM-resident parameter blocks called Request Blocks.

The ABIOS caller must initialize one Request Block per function call. The input, output, and status parameters associated with a given function call are stored in the Request Block dedicated to that call. Request Blocks associated with completed function calls can be reused.

For a complete discussion of Request Block structure, turn to Chapter 5.

#### Transfer conventions

Each time an ABIOS device function is called, the caller must build a function-specific Request Block, push a set of pointers to the ABIOS Data Structures onto the stack, and invoke the appropriate function entry routine.

ABIOS functions can be called via either of two transfer conventions: the operating system transfer convention and the ABIOS transfer convention. The difference between these two conventions lies in the stack information and the entry routine called.

For more information on how ABIOS functions are called, turn to Chapter 7.

# Chapter 4 ABIOS Initialization

#### Overview


#### Initialization facts

Before ABIOS can be used, it must be initialized. Here are the key facts surrounding ABIOS initialization:

- Before ABIOS can be initialized, CBIOS must be initialized and the operating system must be booted.
- ABIOS can only be initialized in the microprocessor's real mode.
- Initializing ABIOS is largely a matter of initializing the ABIOS data structures.
- In bimodal environments, the operating system must initialize parallel sets of Common Data Areas and Function Transfer Tables.

#### Initialization steps

ABIOS initialization flow is illustrated below.

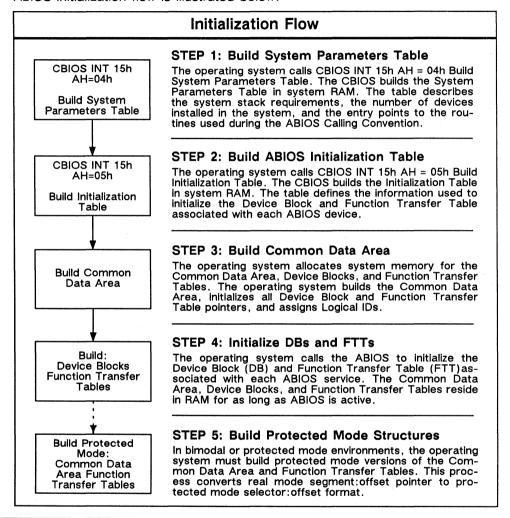

#### **About Request Blocks**

Request Blocks, which are initialized by the operating system as each function request arises, are not built as part of the ABIOS initialization process.

For more information on Request Blocks, please refer to Chapter 5.

#### In this chapter

This chapter details each of the steps required to initialize ABIOS. The following topics are discussed:

- Step 1: Build System Parameters Table
- Step 2: Build ABIOS Initialization Table
- Step 3: Build the Common Data Area
- Step 4: Initialize Device Blocks/Function Transfer Tables
- Step 5: Build Protected Mode Tables
- Initializing Logical ID 2: ABIOS Internal Calls
- How ABIOS Supports Multiple Instances of a Device

# Step 1: Build the System Parameters Table

#### Introduction

In step 1 of the ABIOS initialization process, the operating system calls the CBIOS INT 15h AH = 04h Build System Parameters Table function.

The System Parameter table describes the number of devices available in the system, the ABIOS common entry points and the system stack requirements.

Once the ABIOS initialization process is complete, the operating system may deallocate the memory space occupied by the System Parameters Table.

# System Parameter table

The structure of the System Parameter Table is listed below:

Offset	Length	Description
00h	4 Bytes	COMMON START ROUTINE POINTER  Contains the address of the Common Start Routine entry point.
04h	4 Bytes	COMMON INTERRUPT ROUTINE POINTER  Contains the address of the Common Interrupt Routine entry point.
08h	4 Bytes	COMMON TIME-OUT ROUTINE POINTER  Contains the address of the Common Time-out Routine entry point.
0Ch	2 Bytes	STACK REQUIRED  Contains the number of bytes of stack memory that is required for the particular ABIOS implementation.
0Eh	4 Bytes	RESERVED
12h	4 Bytes	RESERVED
16h	4 Bytes	RESERVED
1Ah	4 Bytes	RESERVED
1Eh	2 Bytes	NUMBER OF ENTRIES  The ABIOS gathers configuration information by polling the Common Data Area and by scanning for the presence of ROM and RAM extensions to the ABIOS.

# Step 1: Build the System Parameters Table, Continued

#### Operating system tasks

To build the System Parameters table, the Operating System must

- 1. Allocate 20h bytes for CBIOS to build the system parameters table.
- 2. Call CBIOS INT 15h, function AH = 04h, Build System Parameters Table.
- 3. Optionally deallocate the memory used for the System Parameters Table after the ABIOS initialization process is complete.

#### CBIOS Function: INT 15h AH = 04h Build System Parameters Table

The CBIOS Build System Parameters Table function:

- Establishes the value of the System Parameters Table's Number of Initialization Table Entries field by examining configuration information in CMOS RAM, the system equipment data area, and by testing for the presence of those devices with operating code that resides in system ROM.
- 2. Scans in 2K increments absolute addresses C0000h to DF800h to determine the presence of adapter ROM (if any), updating the Number of Initialization Table Entries field accordingly.
- Scans the RAM extension area pointed to by the parameter passed by the operating system in the DS register to count the number of entries (if any) to add to the Number of Initialization Table Entries field.
- 4. Builds the System Parameter Table in the 20h byte location allocated by the operating system.

#### Input/Output

Input: AH = 04h

ES:DI= Pointer to 20h byte location in RAM where the table is to

be built.

DS = Segment where ABIOS RAM Extensions reside. If there are

no RAM extensions, this register must be set to 0000h. (ABIOS RAM extension offset is assumed to be 0000h)

Output: System Parameter Table is output to RAM

AH = 00h If function was successful CF = 1 Exception error has occurred

All registers except AX and flags are restored.

#### Introduction

Once the System Parameters Table is built, the operating system must call CBIOS INT 15H function AH = 05h to build the ABIOS Initialization Table.

The information contained in the Initialization Table is referred to later in the ABIOS initialization process in two ways:

- In step 3, the operating system refers to the ABIOS Initialization Table to determine the size of the Common Data Area, as well as the size of each Device Block and Function Transfer Table.
- In step 4, the ABIOS refers to the Initialization Table when initializing Device Blocks and Function Transfer Tables.

#### Initialization Table Structure

The Initialization Table is made up of fields of 18h bytes. The information in each field is repeated for each device found by the CBIOS INT15h AH = 05h Build ABIOS Initialization Table function. The entries making up each field are described in the following table.

Offset	Length	Description
00h	2 Bytes	DEVICE ID  The same Device ID can appear more than one time within the Initialization table. Device IDs are listed in Chapters 1 and 3.
02h	2 Bytes	NUMBER OF LOGICAL IDs  The maximum number of Logical IDs used by the operating system is stored in this field. This field stores the maximum number of devices that require Device Blocks but are used by the same code.
04h	2 Bytes	DEVICE BLOCK LENGTH  Contains the allocation of storage needed by the Device Block for this device. If a Device Block Length is zero, this entry is for an ABIOS patch or extension. A zero length entry means that a Device Block need not be built for this entry. If the Device Block Length is zero, the operating system must initialize the Device Block Pointer in the Common Data Area to 0000:0000h. See Chapter 7 ABIOS Extensions for more detail on modifying the ABIOS.

# Step 2: Build the Initialization Table, Continued

# Initialization Table Structure, cont'd

Offset	Length	Description
06h	4 Bytes	INITIALIZE DEVICE BLOCK AND FUNCTION TRANSFER TABLE ROUTINE POINTER
		Contains the address, in real address mode, segment:off- set format, of the routine that will initialize the Device Blocks and Function Transfer Tables for an entry in the Initialization Table. Adapter ROMs and RAM extensions must also provide this routine to patch, add, extend, or replace services. See Chapter 7 ABIOS Extensions for more detail on modifying ABIOS functions.
0Ah	2 Bytes	REQUEST BLOCK LENGTH
		Contains the length of the Request Block required for this device. Any Request Block size equal or greater to this size is valid when making a request to the ABIOS.
0Ch	2 Bytes	FUNCTION TRANSFER TABLE LENGTH
		Contains the Function Transfer Table length, in bytes.
		If the Function Transfer Table length is zero,
<b>\</b>		this entry is for a patch,
		<ul> <li>the data area for the Function Transfer Table need not be allocated, and</li> </ul>
		<ul> <li>the operating system must initialize the Function Transfer Table Pointer field in the Common Data Area to 0000:0000h.</li> </ul>
0Eh	2 Bytes	DATA POINTERS LENGTH
		Contains the required length of the data pointer fields in the Common Data Area.
10h	1 Byte	SECONDARY DEVICE ID
		Indicates the level of hardware that this ABIOS version supports.
11h	1 Byte	REVISION
		Indicates the device driver revision level that ABIOS supports for this device.
12h	2 Bytes	RESERVED
14h	2 Bytes	RESERVED
16h	2 Bytes	RESERVED
<b>—————————————————————————————————————</b>	•	•

continued

#### Operating system tasks

The operating system must perform the following steps to help build the Initialization Table:

- Allocate an area of memory where the CBIOS will build the Initialization
   Table. The area must be 18h times the number of entries in the Initialization Table. The information about the number of entries in the Initialization
   Table can be found in the System Parameters Table under the Number of
   Entries field.
- 2. Call INT 15h, function AH = 05h, Build Initialization Table.

Memory allocated for the Initialization Table may be reused by the operating system after the initialization process is complete.

#### CBIOS Function: INT 15h AH = 05h Build Initialization Table

The CBIOS Build Initialization Table function must:

- 1. Use the following order of precedence for Initialization Table entries:
  - a. system board devices
  - b. adapter ROM devices (CBIOS uses POST for this search)
  - c. extension RAM devices.
- 2. Construct the Initialization Table using information found in system ROMs, adapter ROMs (if any), and the RAM extensions (if any).

#### Input/Output

Input:

AH = 05h

ES:DI= Pointer to location in RAM where the table is to be built.

DS = Segment of the Extended System RAM data area.

(Offset is assumed to be 0000h)

Output:

ABIOS Initialization Table is output to RAM

AH = 00h If function was successful

CF = 1 Exception error has occurred

All registers except AX and flags are restored.

## Step 3: Build the Common Data Area

#### Introduction

Once the System Parameters Table and ABIOS Initialization Table are built, the operating system has all the information it needs to build the Common Data Area.

#### Operating system tasks

The Operating System builds the Common Data Area in the following sequence:

- 1. Allocates memory at offset 0 within a segment for the Common Data Area. The operating system saves a pointer (called the Anchor Pointer) to this segment.
- 2. Allocates memory within the Common Data Area for pointers to the Device Block and Function Transfer Table associated with each ABIOS device service.
- 3. Allocates memory for pointers to the data area (if any) associated with each ABIOS device service.
- 4. Initializes the offset to the Data Pointer 1 Field so that it points to the Data Pointer Length 0 Field in the Common Data Area.
- 5. Initializes the Data Pointer Count Field to zero.
- 6. Places the number of Device Block and Function Transfer Table pointer pairs in the Count of Logical IDs Field in the Common Data Area.
- 7. Initializes each Device Block Pointer to point to the memory location that has been allocated for that particular Device Block.
- 8. Initializes each Function Transfer Table Pointer to point to the memory location that has been allocated for that particular Function Transfer Table.
- Assigns a Logical ID to each pair of Device Block/Function Transfer Table pointers.

continued

# Step 3: Build the Common Data Area, Continued

#### Logical IDs

A Logical ID identifies the logical name of the device associated with one Device Block.

#### Logical ID numbering

During step 3 of the ABIOS initialization process, the operating system assigns Logical ID numbers ordinally, according to the rules defined in the table below:

Logical ID	Description
00h	Reserved for use by ABIOS.
01h	Reserved for use by ABIOS.
02h-xxh	Reserved for ABIOS Internal Calls. Logical IDs 2 to nnh are reserved for ABIOS internal calls. xxh is the number of the last Logical ID reserved for ABIOS internal calls. Logical ID 2 is always defined. All remaining entries in the initialization Table with Device ID 0 must be initialized as reserved for ABIOS internal calls. This insures support for patches to the ABIOS Common Routines.
greater than xxh	Reserved for ABIOS Services. The starting Logical ID assigned to an ABIOS device must be one greater than nnh. System board, adapter devices, RAM extension devices are assigned Logical ID numbers in this range.

#### Device 00h and Logical ID 02h

Device 00h is not associated with a particular hardware device but is provided to allow for ABIOS internal calls.

In the ABIOS system ROM, code associated with the ABIOS Common Entry Routines is contained in the Device 00h service. The operating system always assigns Logical ID 02h to the system ROM Device 00h service.

#### For more on Common Entry Routines

Control can be optionally transferred to any given ABIOS service via the Common Entry Routines. A complete discussion is found in Chapter 6.

# Step 3: Build the Common Data Area, Continued

## Device 00h and Logical IDs 02h + xxh

Subsequent instances, if any, of Device 00h correspond to ABIOS extensions designed to patch the Common Entry Routines contained in the system ROM Device 00h service. The operating system ordinally assigns a Logical ID to each subsequent Common Data Area entry with Device 00h.

#### Logical ID nnh

Once it has assigned Logical IDs to Device 00h, the operating system assigns a Logical ID, ordinally, to each pair of Device Block/Function Transfer Table pointers in the Common Data Area.

It is possible for a single ABIOS service to be assigned more than one Logical ID. The number of Logical IDs assigned to a service lies in the relationship between the number of hardware devices that will access the service's code, and the interrupt and/or arbitration level associated with each device.

#### For more on multiple Logical IDs

For more information on multiple Logical IDs, see How ABIOS Supports Multiple Instances of a Device later in this chapter.

#### Introduction

Whether it is in system ROM, adapter ROM, or in an ABIOS RAM extension, each ABIOS service contains a routine to initialize the Device Block (DB) and Function Transfer Table (FTT) associated with that service. Once it has built the Common Data Area, the operating system calls each of these routines.

#### Operating system tasks

For each field in the Initialization Table, the operating system must

- 1. load the CX, DX, and DS registers with the parameters required for entry into the Device Block and Function Transfer Table initialization routine associated with the Initialization Table.
- 2. invoke the initialization routine contained in the Initialize Device Block and Function Transfer Table Routine pointer entry for the field under consideration.
- 3. after the initialization routine completes, convert all 32-bit Data Pointers contained in the Common Data Area to segment:offset address format.

## Input/Output

Here is a definition of the input parameters that must be passed, and the output parameter that is returned.

Input:

CS:IP= Pointer to Initialization Routine CX = Number of Logical IDs to initialize. This number must be

less than or equal to the number of Logical IDs allowed by the Number of Logical IDs field in the Initialization

Table.

DX = Starting Logical ID

DS = Anchor Pointer to Common Data Area

(Segment value: Offset is assumed to be 0000h)

= 00h Success Output: AL

01h Device initialization failure.

All other registers are preserved.

# Initialization routine processing

In initializing Device Blocks and Function Transfer Tables, ABIOS performs the following actions:

Step	Description
1.	COMPLETES THE FUNCTION TRANSFER TABLE
	When the operating system calls the Initialize Device Block and Function Transfer Table Routine, ABIOS Completes the Function Transfer Table.
	The Function Transfer Table is completed at the location defined by the Function Transfer Table pointer in the Starting Logical ID parameter in Register DX.
	<ul> <li>When the Initialize Device Block and Function Transfer Table routine is called for adapter ROMs or RAM extensions, each segment value that is placed in the Function Transfer Table must equal the seg- ment of its corresponding adapter ROM header or RAM extension header.</li> </ul>
	When the headers and segment values are equal, an operating system can access the Length Field (given in 512-byte blocks) of either the adapter ROM or RAM extension header so that the seg- ment limit can be determined in either bimodal or protected mode environments.
	When building the protected mode Common Data Area, if offset 0 of the ROM header segment or RAM extension header segment contains the RAM or ROM signature, offset 2 will contain the length of the segment (in 512-byte blocks up to a maximum of 7Fh 512-byte blocks). The operating system can use this value to calculate the segment limit.
2.	FILLS IN THE DEVICE BLOCK
	a. After completing the Function Transfer Table, the Initialize Device Block and Function Transfer Table Routine completes the Device Block for the Starting Logical ID Parameter (which is contained in DX).
	b. The Initialize Device Block and Function Transfer Table Routine builds a Device Block for each Logical ID up to the Number of Logi- cal IDs To Initialize Parameter (this value is contained in CX). It may affect multiple services.
3.	WRITES 32-BIT DEVICE DATA POINTERS TO THE COMMON DATA AREA
	<ul> <li>a. ABIOS stores any Data Pointers associated with an ABIOS service (if any) into the appropriate Data Pointer field in the Common Data Area.</li> </ul>
	b. ABIOS increments the Data Pointer Count field as each Data Pointer is stored.
	c. ABIOS stores a handle to the Data Pointer in the Device Block. This handle is an offset to the location in the Common Data Area where the Data Pointer is stored.

# Step 4: Initialize Device Blocks and Function Transfer Tables, Continued

#### How the operating system handles error conditions

If the Return Code Parameter (in AL) is not zero upon return from the Initialize Device Block and Function Transfer Table Routine, the operating system should deallocate the associated Device Blocks and Function Transfer Table Areas and replace the associated Device Block pointers and Function Transfer Table pointers with 0000:0000h, making all affected entries into null Common Data Area entries.

#### Order of initialization

The Initialize Device Block And Function Transfer Table Routines are called in the exact order that their respective pointers appear in the Initialization Table. The order of initialization is system board ROMs, adapter ROM extensions, and RAM extensions.

Because ABIOS services contained in system board ROMs are initialized first, the Initialize Device Block and Function Transfer Table routines for adapter ROM and RAM extension devices can then easily identify the system board device services they need.

The initialization routines associated with adapter ROMs and ABIOS RAM extensions must scan the Common Data Area using the Device ID in the public portion of the Device Block to identify the system board services that they need. Once the Device ID is found, the Logical ID, stored in the public portion of the Device Block, should be used for all additional requests to the system board ABIOS service.

#### ABIOS services and initialization

The operating system is free to decide not to initialize an ABIOS service based on the model, device, and revision information for each Initialization Table entry (OS/2 uses model and submodel number). If the operating system decides that this information indicates that the ABIOS code is not appropriate for current hardware, then the initialization of these ABIOS routines may not be performed. Initialization routines are also free not to initialize themselves.

# Step 4: Initialize Device Blocks and Function Transfer Tables, Continued

#### Support for ABIOS extensions

To properly support ABIOS extensions, the operating system must insure that all entries in the Initialization Table with the same Device ID and Secondary Device ID are initialized.

#### Logical ID 02h initialization

In the ABIOS system ROM, the code associated with the ABIOS Common Entry Routines is contained in the Device 00h service. The operating system always assigns Logical ID 02h to the system ROM Device 00h service. The process of initializing Logical ID 02h is a separate subject in itself and is discussed further in this chapter under the heading "Logical ID 02h Initialization.

#### Physical addresses must be converted to segment:offset

Unless they are altered by the operating system, all Data Pointer fields contained in the Common Data Area remain in 32-bit physical address format. Before calling the ABIOS, the operating system must translate the 32-bit physical address of each data pointer into segment:offset format.

#### Data Pointer/Pointer length facts

Here are the most important things to remember about data pointers and data pointer lengths:

- Data Pointers are stored in the ABIOS service as 32-bit physical addresses in Intel low word/high word format.
- The Initialization Routine initializes the Data Pointer field with this 32-bit physical address.
- All Data Pointer fields in the Common Data Area are preceded by a Data Pointer Length Field.
- The Data Pointer Length field specifies the segment limit for a protected mode or bimodal environment.
- In a bimodal environment, if the Data Pointer Length field is 0000:0000h in the real mode Common Data Area, then an address above 1 MB is assumed.

# Step 5: Build Protected Mode Tables

#### Introduction

In bimodal or protected mode environments, protected mode versions of the real mode Common Data Area and Function Transfer Tables must be built by the operating system. The operating system can use the information already gathered in the real mode Common Data Area and Function Transfer Tables to build these protected mode tables.

#### Building the protected mode Common Data Area

The protected mode Common Data Area and the protected mode Function Transfer Tables pointers are stored in protected mode selector:offset format. The operating system must initialize all protected mode pointers so that their effective addresses are identical to their real mode, segment:offset counterparts.

The operating system must perform the following the steps in order to build the protected mode Common Data Area:

Step	Description
1	Build the real mode Common Data Area.
2	Allocate memory for the protected mode Common Data Area.
3	Allocate memory for the protected mode Function Transfer Tables.
4	Convert each real mode Device Block Pointer to a protected mode Device Block Pointer.
5	Create a protected mode Function Transfer Table Pointer for each protected mode Function Transfer Table.
6	Convert each real mode Function Pointer within each real mode Function Transfer Table to a protected mode Function Pointer.
7	Convert each real mode Data Pointer to a protected mode data pointer.

# Step 5: Build Protected Mode Tables, Continued

#### **Building selector descriptors**

To build descriptors associated with each selector, the operating system must know

- the actual physical address of the descriptor.
- the access rights of each segment, and
- the segment limits of each segment.

#### Pointer characteristics

The Function Transfer Table pointers and the Device Block pointers are data segment descriptors that can be written to by the operating system. The expansion direction and limit of each pointer must be maintained by the operating system.

Function Transfer Table length and Device Block length are returned to the operating system via the Initialization Table.

Each data pointer's selector must reference a data segment descriptor that can be written to and has an expansion direction of *up*. Segment limit is stored in the Data Pointer Length Field associated with each Data Pointer entry in the Common Data Area.

All Function Transfer Table pointers must be readable code segment descriptors. The Conforming Bit for each pointer is set by the operating system.

If offset zero of either the ROM header segment or the RAM extension header segment contains the ROM/RAM signature, then offset 2 contains the length (in 512-byte increments with a limit of 7Fh) of the segment. This value should be used as the segment limit by the operating system.

The segment limit for ROM/RAM signatures that do not exist must be FFFFh.

**Note:** A complete description of both ROM and RAM extension headers is found in Chapter 7.

continued

# Step 5: Build Protected Mode Tables, Continued

#### ABIOS I/O privileges

The ABIOS must have I/O privilege at all times. Insuring ABIOS I/O privilege is the responsibility of the operating system, particularly when the operating system calls the ABIOS using multiple privilege levels or as a conforming code segment.

#### Null Common Data Area entries

Each null entry in the real mode Common Data Area must have a corresponding null entry in the protected mode Common Data Area.

When the protected mode version of each Function Transfer Table is initialized, each entry in the protected mode version that has a corresponding real mode entry equal to 0000:0000h must also equal 0000:0000h.

The offset fields in the Function Transfer Table must be the same for the corresponding entries in both the real mode and the protected mode tables.

The Device Block pointers for each Logical ID entry in both the real mode and the protected mode Common Data Areas must point to the same Device Block.

# Initializing Logical ID 2: ABIOS Internal Calls

#### Introduction

The data structures associated with Logical ID 2 are reserved for ABIOS internal calls.

#### How reserved Data Pointers are initialized

Data Pointers 0, 1, and 2 in the Common Data area are initialized by Logical ID 2. The operating system initializes reserved Data Pointers in the Common Data Area when the Initialize Device Block and Function Transfer Table Routine is called for Logical ID 2.

The purpose of these data pointers is to allow a single common data pointer to be used in common by several ABIOS devices. The reserved data pointers are:

Data Pointer Number	Physical Value	Limit	Description
0	400h	0100h	BIOS Data Area
1	E000:0000h	FFFFh	First 64K of System Board ROM
2	F000:0000h	FFFFh	Second 64K of System Board ROM

#### How the Function Transfer Table is initialized

When the Initialize Device Block and Function Transfer Table Routine is called for Logical ID 2, this routine must perform the following actions:

Place the address of the	at
Common Start Routine	the Start Routine pointer in the Function Transfer Table for Logical ID 2.
Common Interrupt Routine	the Interrupt Routine pointer in the Function Transfer Table for Logical ID 2.
Common Time-out Routine Pointers	the Time-out Routine pointer in the Function Transfer Table for Logical ID 2.

continued

# Logical ID 2 Function Transfer Table entry

The Initialization Table entry for the first Device ID that is a zero must have a Function Transfer Table length of 10h or greater, since the first 10h bytes are reserved. The Function Transfer Table length must be more than 10h if there are ABIOS internal functions.

The Function Transfer Table entry for Logical ID 2 is described in the following table:

Offset	Length	Description
00h	4 Bytes	Common Start Routine Pointer
04h	4 Bytes	Common Interrupt Routine Pointer
08h	4 Bytes	Common Time-out Routine Pointer
0Ch	2 Bytes	Function Count (should be zero)
0Eh	2 Bytes	Reserved

#### When a service supports more than one device

Once it has initialized all Device ID 00h structures, the operating system moves on to nonzero Device IDs, assigning Logical IDs ordinally. Occasionally, an ABIOS service supports more than one instance of a device. The number of Device Blocks required by the service depends on how the individual devices are distinguished. There are two cases.

Serial Port 1 Common Data Area Serial Port Device Request Service Block LID nnh Block (Port 1) **DB** Pointer Function FTT Pointer Transfer Table Operating System Func. 01h Func. 01h LID nnh + 1 Device Request **DB** Pointer Block Block FTT Pointer (Port 2) Serial

Case 1: Separate interrupt and arbitration levels


When multiple copies of a device require separate interrupt or arbitration levels, each device requires its own Device Block. Thus each device is logically identified with a separate Logical ID. Even though they require multiple Device Blocks and Logical IDs, each device must share the same device driver code. As such, the Function Transfer Table pointer associated with each Device Block can be initialized to point to the same structure. In other words, device services that support separate interrupt and arbitration levels still only require one Function Transfer Table.

The ABIOS Serial Port Service, for example, supports up to eight physical serial ports. Since each serial port requires a separate interrupt and arbitration level, each serial port is associated with a separate Logical ID. The ABIOS Serial Port Service interfaces with up to eight Device Blocks; all Serial Port Service functions, however, are located by one Function Transfer Table.

continued

Port 2

Case 2: Share interrupt and arbitration levels

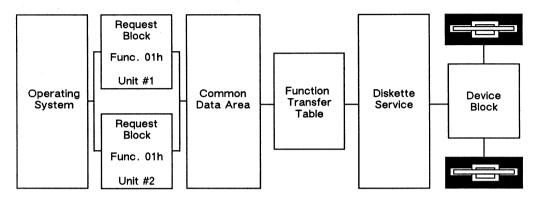

When multiple copies of a device share the same interrupt and arbitration levels, they are distinguished from each other by the Device Block unit number field. Device Services of this type require only one Device Block, and one function Transfer Table.

The ABIOS Diskette Service supports two physical diskette drives. Each diskette drive is identified by unit number.

#### Related Information

#### **Request Blocks**

In addition to the ABIOS data structures, the ABIOS also interfaces with RAM-resident parameter blocks, called Request Blocks.

The ABIOS caller must initialize one Request Block per function call. The input, output, and status parameters associated with a function call are stored in the Request Block dedicated to that call. Request Blocks associated with completed function calls can be reused.

For a complete discussion of Request Block structure, turn to Chapter 5.

#### Transfer conventions

Each time an ABIOS device function is called, the caller must build a function-specific Request Block, push a set of pointers to the ABIOS Data Structures onto the stack, and invoke the appropriate function entry routine.

ABIOS functions can be called via either of two transfer conventions: the operating system transfer convention and the ABIOS transfer convention. The difference between these two conventions lies in the stack information and the entry routine called.

For more information on how ABIOS functions are called, turn to Chapter 6.

#### **ABIOS** extensions

The discussion of ABIOS initialization presented in this chapter is kept on a fairly generic level. Although some mention was made of the process of initializing ABIOS extensions, the details of extension structure and requirements was kept to a minimum.

For more information on how ABIOS extensions, refer to Chapter 7.



# Chapter 5 Request Block Structure

#### Overview

#### Introduction

Request Blocks are parameter blocks resident in system RAM which are created on demand by the operating system. There must be one Request Block per active ABIOS function request.

#### Limits of this discussion

This discussion is limited strictly to a definition of Request Block internal structure. The process of initializing and using Request Blocks is integrally related to the process of calling ABIOS functions.

All discussion of Request Blocks beyond the definition of Request Block internal structures is found in Chapter 6 Calling ABIOS.

# Summary of internal structure

Numbe	Output:	Input:	Size	Offset
Kind:		Request Block length	Word	00h
		Logical ID	Word	02h
Acces		Unit	Word	04h
		Function	Word	06h
Descri		Reserved	Word	08h
All inpu		Reserved	Word	0Ah
ters are	Return Code	Return Code	Word	0Ch
operatin ABIOS f quest B	Time-out		Word	0Eh
		Reserved	Word	10h
		Data pointer 1	Word	12h
Request controlle		Reserved	Word	16h
		Reserved	Word	18h
system		Data pointer 2	Word	1Ah
Because in system		Reserved	Word	1Eh
		Relative block address	Word	20h
put par		Reserved	Word	24h
Block s				28h
		Number of blocks read		2Ch
Offsets the san ABIOS xxh bea function		Caching  Bits 7-1 = Reserved  Bit 0 = Caching  0 Yes  1 No		2Eh

One per function

request

Parameter block

ABIOS and Oper-

ating System

#### tion:

and output paramepassed between the g system and the unction via the Reock.

Blocks are built and d by the operating

Request Blocks reside n RAM, input and outmeters are designated ts from the Request ament.

00h-0Eh are defined e way across all unctions. Offsets 10hdefinitions that are -specific.

Request Blocks associated with completed functions can be reused.

#### In this chapter

This chapter describes the internal structure of ABIOS Request Blocks. The following topics are presented:

- Request Block Parameters
- Request Block Structure
- Error Codes

# **Request Block Parameters**

#### Types of Request Block parameters

The Request Block has two types of parameters:

- Functional Parameters
- Service-Specific Parameters.

#### **Functional parameters**

Request Block functional parameters are the same for every ABIOS service request. Information about the service requested and the device to be called on is placed in these parameters by the caller and sent to the ABIOS.

Each parameter is initialized by the caller and must not be changed while the request is being processed by the ABIOS, especially through multistaged ABIOS requests. The first 10h bytes in a Request Block are reserved for the Functional Parameters. See the Request Block Structure table in this chapter for a list of all Request Block functional parameters.

#### Service-Specific parameters

Request Block service-specific parameters may change with every ABIOS request. The information passed in these parameters varies with each type of ABIOS request. See the specific ABIOS service explanations in Chapters 8 through 23 for detailed information about the contents of these parameters. See the Request Block Structure table in this chapter for a list of all Request Block service-specific parameters.

# Request Block structure table

Offset	Input/ Output	Bytes	Description		
	FUNCTIONAL PARAMETERS				
00h	Input	2	REQUEST BI	LOCK LENGTH	
			Contains the length in bytes of the Request Block. The maximum is 65,535. The caller initializes this field for a specific Logical ID. The ABIOS gives the size of the Request Block for a Logical ID in the Initialization Table. Function 01h, Return Logical ID Parameters, also gives the size, but the Request Block may actually be larger than the returned size from this function call.		
02h	Input	2	LOGICAL ID		
			this service i	particular device to be operated on for request. Used as an index to the Device on Transfer Table pair located in the ta Area.	
04h	Input	2	UNIT		
	·		Addresses only a certain unit of a device within a Logical ID. The range of values for this field is specific to each device that is identified as a Logical ID. The number of units attached to a single controller determines how many units are in a Logical ID. Units are numbered from zero, so the maximum unit number is one less than the number of devices attached to the controller associated with this Logical ID.		
06h	Input	2	FUNCTION		
			The entry in this field requests a particular ABIOS function. The following list details the common ABIOS functions. Refer to Chapter 8 for an example of how these are used in the Request Block.		
			Function	Description	
	1		00h	Default Interrupt Handler	
			01h	Return Logical ID Parameters	
			02h Reserved		
			03h	Read Device Parameters	
			04h	Set Device Parameters	
			05h Reset/Initialize		
			06h Enable		
			07h Disable		
			08h Read 09h Write		
			09h Write 0Ah Additional Data Transfer		
			0Bh-FFh Other service-specific functions		
L	L	<u> </u>			

# Request Block structure table, cont'd

Offset	Input/ Output	Bytes	Description	
08h		2	RESERVED	
0Ah		2	RESERVED	
0Ch	Input/	2	RETURN CODE	
	Output		Indicates the result of the current stage of the ABIOS function request. For single-stage requests or those requests in the final stage of a multistage request, this field indicates the final result of the entire function request. For more information, see the Return Code Handling heading in Chapter 3.	
0Eh	Output	2	TIME-OUT	
			The expected time that a requested stage will take. The time-out value is used to ensure that no operation or stage of an operation takes too much microprocessor time.	
			This field is valid if the Return Code is Resume Stage after Time Delay (Bit 1 is set).	
			This field is structured as follows:	
			Bits 15-3 = Units of time before time-out (in seconds)	
			Bits 2-0 = Reserved	
		SERV	ICE SPECIFIC PARAMETERS	
10h	Output	2	RESERVED	
12h	Input	4	DATA POINTER 1	
			Contains a pointer to an I/O buffer used for this ABIOS request. The effective address, a 16-bit segment in the high word and a 16-bit offset in the low word, must be addressable from within the current mode of the microprocessor (real or protected) when in a bimodal environment.	
			The address may be:	
			a 32-bit physical address for DMA, or	
			a segmented address for programmed I/O.	
			The Return Logical ID Parameters Function (01h) returns a parameter (Transfer Data Pointer Mode) that indicates the mode (physical or logical) of the data pointer for the	
			■ Read (08h),	
			■ Write (09h), and	
			Additional Data Transfer (0Ah) functions.	

# Request Block structure table, cont'd

Offset	Input/ Output	Bytes	Description	
12h (cont'd)			DATA POINTER 1, continued  If the Transfer Data Pointer Mode Parameter specifies that this must be a logical pointer, Data Pointer 1 is a logical pointer and Data Pointer 2 is reserved.  If the Transfer Data Pointer Mode Parameter specifies that this must be a physical pointer, Data Pointer 2 is a physical pointer and Data Pointer 1 is reserved.	
			If the Transfer Data Pointer Mode parameter specifies that both a logical pointer and a physical pointer will be passed, Data Pointer 1 is the logical pointer and Data pointer 2 is the physical pointer.  If the Transfer Data Pointer Mode parameter specifies none of the above, this Logical ID does not support functions 08h, 09h, and 0Ah, or these functions do not need address pointers, and no space will be allocated in the Request Block for any data pointers.	
16h		2	RESERVED	
18h		2	RESERVED	
1Ah	Input	4	DATA POINTER 2 See Data Pointer 1 above.	
1Eh-nnh	Input/ Output	varies	SERVICE-SPECIFIC PARAMETERS  Operands and the results of ABIOS functions may be communicated in these fields. Their contents depend on the device service and the requested function. See Chapters 8 through 23 for detailed descriptions, by service and function, of the contents of the service-specific parameter fields.	
varies	Private	varies	WORK AREA Optional data area for ABIOS use only. User data may not be stored in this field. This field is not initialized. The caller must not alter the contents of this field, particularly while ABIOS is processing a multistaged request.	

## Related Information

#### Transfer conventions

Each time an ABIOS device function is called, the caller must build a function-specific Request Block, push a set of pointers to the ABIOS Data Structures onto the stack, and invoke the appropriate function entry routine.

ABIOS functions can be called via either of two transfer conventions: the operating system transfer convention and the ABIOS transfer convention. The difference between these two conventions lies in the stack information and the entry routine called.

For more information on how ABIOS functions are called, turn to Chapter 6.

#### Request Block handling

Each time the caller builds a Request Block, the rules governing Request Block initialization and reuse must be observed. Because the rules for handling Request Blocks are so integrally related to the act of calling ABIOS functions, a complete discussion of the rules for handling Request Blocks are delineated in Chapter 6.

## Return Code handling

The specifics of Return Code handling can be viewed as an integral part of calling ABIOS functions. A more detailed discussion of can be found in Chapter 6.



# Chapter 6 Calling ABIOS

## Overview

#### Introduction

This chapter describes the tasks, conventions, and operating system responsibilities involved in calling ABIOS functions.

## In this chapter

The following topics are presented:


- ABIOS Processing Model
- Request Block Initialization
- Transfer Conventions
- ABIOS Transfer Conventions
- Operating System Transfer Convention
- Return Code Handling
- Hardware Interrupt Handlers
- Default Interrupt Handler
- Time-out Handler
- ABIOS and Program Access
- Accessing ABIOS via ABIOSCommonEntry
- Accessing ABIOS via ABIOSCall

#### Introduction

When an operating system is interfaced with a ROM BIOS, care must be taken to insure that BIOS functions calls do not tie up the processor. In the ABIOS, this is accomplished by processing all functions that could potentially monopolize the processor time in multiple stages.

## How ABIOS processes functions

The following illustration depicts the three ways ABIOS function calls are processed.

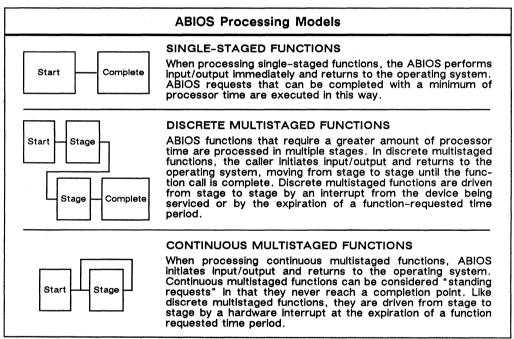

#### How functions are interfaced

In order to further liberate the processor, all function parameters are passed between the operating system and the ABIOS function via a function-specific parameter block, called the Request Block. Before starting a given ABIOS function, the operating system must initialize that function's Request Block.

#### Return Codes: how function status is reported

The ABIOS signals the status (successful, unsuccessful, etc.) of a function stage by placing a Return Code in offset 0Ch of the Request Block. The ABIOS assumes that all Return Code handling is under the control of the operating system.

#### What drives multistaged functions

Multistaged functions are driven from stage to stage by either:

- A hardware interrupt or
- The elapse of a function requested period of time.

Some multistaged functions are driven purely by hardware interrupt. Others are driven purely by time period. Others are driven by some combination of both hardware interrupt and time period.

#### Interrupt-driven stages

Each interrupt-driven ABIOS service is associated with one hardware interrupt level. The ABIOS assumes that all hardware interrupt handlers are under the control of the operating system.

When a hardware interrupt occurs, the operating system must call the function associated with the interrupt so that the interrupting condition can be serviced. The ABIOS resets the interrupting condition at the hardware level. The operating system's hardware interrupt handler must perform end-of-interrupt processing at the interrupt controller level.

A service can have more than one active function request. When this happens, the hardware interrupt handler must call each function until the ABIOS replies that the hardware interrupt has been serviced.

continued

#### Time period driven stages

Some ABIOS functions are driven from stage to stage by the elapse of a function-requested period of time. The ABIOS assumes that time-period stage handlers are under the control of the operating system. When a time period requested by the function expires, the operating system's time period handler must call the given ABIOS function.

## Hardware interrupt stages and hardware time-out

All hardware interrupt-driven stages of a function indicate a maximum time (in seconds) to wait for the hardware interrupt. The ABIOS assumes that all hardware time-out handlers are under the control of the operating system. Should the hardware time-out period associated with a given interrupt driven function elapse, the operating system is responsible for terminating the function and resetting the hardware.

## Hardware time-out vs. time period stages

The terminology surrounding time period-driven stages and hardware timeout handling is similar. However, it is important not to confuse the processing associated with the hardware time-out handling and time-period stage handling.

Hardware time-out handling is associated exclusively with those stages of a multistaged function that are driven by hardware interrupt and is designed to handle function termination cleanly. Execution of a time-out handling routine is symptomatic of a hardware error.

Time-period handling is associated with those stages of a multistaged function that are driven by time periods. Execution of a time-period handling routine indicates the elapse of a function-requested time delay and should not be associated with a hardware error.

#### How ABIOS functions are called

Each ABIOS Service is associated with a set of function entry routines. There are three kinds of entry routines:

#### ■ Start Routine

The start routine associated with a service is called when a function is first started.

#### ■ Interrupt Routine

The Interrupt Routine associated with a service must be called when the function interrupts or when a time period-driven function requires servicing.

#### ■ Time-out Routine

The Time-out Routine associated with a service must be called when an interrupt-driven function suffers a hardware time-out.

To reduce caller overhead, the ABIOS also contains a set of Common Entry Routines: a Common Start, Interrupt, and Time-out Routine. The Common Entry Routines do some initial processing then transfer control to the entry routine tied to the specific service.

#### Conventions for calling ABIOS

Whether it is a single-staged or a multistaged function, the caller has the option of starting functions via either of two conventions: the Operating System Transfer Convention or the ABIOS Transfer Convention. Each transfer convention is described in this chapter.

## Program accessibility

The program accessibility of any ROM BIOS depends on the architecture of the operating system interfaced with the BIOS.

Starting with IBM OS/2 Version 1.1, programs have full access to the ABIOS through the operating system via the IBM OS/2 **DevHlp** services: **ABIOSCommonEntry** and **ABIOSCall**.

ABIOS accessibility for non-IBM versions of OS/2 varies from vendor to vendor. Programmers who are not using IBM OS/2 should refer to their OS/2 documentation to determine if their version of OS/2 supports program access to the ABIOS.

# Request Block Initialization

## Description

The Request Block, resident in system RAM, is a parameter block used to communicate information to and from the calling routine (usually the operating system) and the ABIOS. Each ABIOS function is interfaced to its caller via a function-specific Request Block. The caller passes input parameters and the ABIOS passes output parameters and any other information concerning the completion state of a function through that function's Request Block.

## Request Blocks and function requests

The Request Block associated with a function must be initialized by the caller (usually the operating system) before the function can be started.

When the operating system calls more than one function contained in the same ABIOS service, it must create one Request Block for each function requested. When each function is entered, the ABIOS references the service's Device Block to determine the state of the device as it pertains to the function being processed.

## **Defining Request Blocks**


The Request Block is defined differently for each ABIOS Service. The length of a Request Block is fixed for all functions numbered above 01h for a service. Request Block length is checked by ABIOS upon entry into an ABIOS function.

#### Request Block lifespan

Once initialized, Request Blocks stay resident in system RAM for as long as the function call is active. Those Request Blocks associated with multistaged function stay resident in system RAM for the life of the function. Request Blocks associated with completed functions may be reused, or the memory they occupy can be deallocated. Reuse Request Blocks only if the Request Block length for the new function is the same or longer.

## Rules governing Request Block use

The general rules associated with Request Block use are illustrated below.

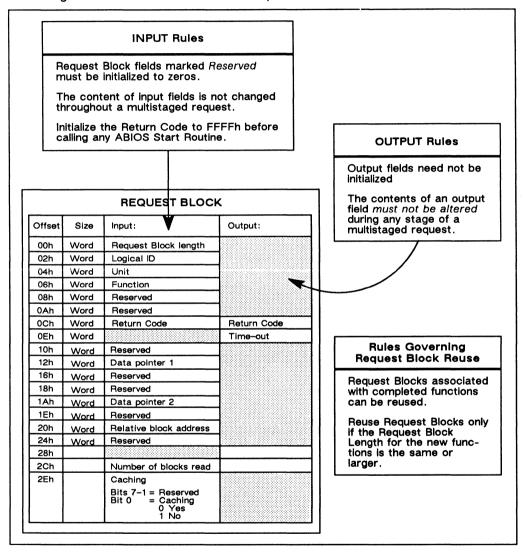

#### Introduction

Once its Request Block has been initialized, the caller is free to transfer control to the ABIOS function. The process of transferring control to an ABIOS function is divided into two basic tasks:

- 1. PUSH required entry pointers onto stack frame,
- 2. CALL function entry routine.

Control can be transferred to the function via the ABIOS Common Entry Routines or the ABIOS Service-Specific Entry Routines. The difference between the two methods of calling ABIOS lies in the process used to locate pointers and load them onto the stack.

 
#### Two tasks


The graphic below details each control transfer task.

#### **Control Transfer Tasks**

#### PUSH POINTERS ON STACK

The caller pushes pointers to the Request Block and the Common Data Area onto the stack. Depending on which convention is used to transfer control to ABIOS, the caller may optionally push pointers to the Function Transfer Table and Device Block.



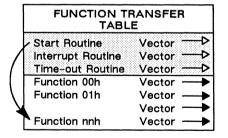

#### TRANSFER CONTROL TO FUNCTION

There are two kinds of function entry routines:

- Service-specific Entry Routines
- Common Entry Routines

By convention, control can be transferred to a given ABIOS function via either set of entry routines. The ABIOS transfer convention indicates that control be transferred to ABIOS functions via the Common Entry Routines. The Operating System Transfer Convention indicates that control be transferred to functions via the Service-Specific Entry Routines.

#### Common Entry Routine processing

The Common Entry Routines — Start, Interrupt, and Time-out — provide the operating system with a common entry point to the ABIOS Service-Specific Entry Routines. The Common Entry Routines:

- Test the Logical ID field contained in the Request Block associated with the function being requested. If an invalid Logical ID is found, the Common Entry Routine returns to the caller with the Return Code field set to C000h Invalid Logical ID. The Logical ID input into the Common Data Area can be invalid for two reasons:
  - The Logical ID is greater than the count of Logical ID field contained in the Common Data Area, or
  - The Logical ID corresponds to a null Logical ID entry in the Common Data Area. (Logical IDs 0 and 1 are reserved).
- Index into the Common Data Area based on the Logical ID and the Anchor Pointer to determine which pair of Device Block and Function Transfer Table pointers are required.
- Copy the Device Block address into the stack placeholder.
- Copy the address into the Function Transfer Table stack placeholder.
- Transfer control to the Service-Specific Entry Routine.

## Service-Specific Entry Routine processing

Every ABIOS service contains a set of service-specific entry routines — Start, Interrupt, and Time-out. The entry point to each of these routines is contained in the first three entries in the service's Function Transfer Table.

The Service-Specific Entry Routines:

- save the state of the registers.
- test the Request Block for valid function,
- test the Request Block for valid Unit Number (if any), and
- transfer control to function called.
- The function executes and returns to the operating system with a Return Code, and
- restores the state of the registers

#### **ABIOS Transfer Convention**

Under the ABIOS Transfer Convention, the operating system loads the stack frame with pointers to the caller's return address, Common Data Area, and Request Block. However, only placeholders are supplied for the pointers associated with the function's Device Block and Function Transfer Table.

With the stack frame loaded, control is then transferred to the ABIOS function via its Common Entry Routine. The Common Entry Routine fills in the placeholders in the stack frame then transfers control to the function via the function's Service-Specific Entry Routine.

#### **Advantages**

From the caller's point of view, the ABIOS Transfer Convention is the simpler of the two transfer conventions in that it reduces programming overhead when ABIOS functions are called in a bimodal environment.

## Caller responsibilities on function return

Once the function returns, the caller is responsible for

- supplying error handling routines, and
- removing arguments from the stack.

#### **Pseudocode**

The pseudocode below shows the suggested method for transferring control to an ABIOS function via the ABIOS Transfer Convention.

PUSH	Pointer to Anchor Pointer Segment or Selector
PUSH	Pointer to Request Block Segment or Selector
PUSH	Offset to Request Block
SUB	Stack Pointer, 8
CALL	Common Entry Routine (Start, Interrupt, or Time-out)

# **Operating System Transfer Convention**

#### The Operating System Transfer Convention

Under the Operating System Transfer Convention, the operating system assumes the responsibility for loading the stack frame with pointers to the caller's return address and to the Common Data Area, as well as to the function's Request Block, its Device Block, and its Function Transfer Table. With the stack frame loaded, control is transferred to the ABIOS function via its service-specific entry routine.

## Two ways to load the stack frame

The Operating System Transfer Convention supports two methods for loading the stack frame.

#### ■ Direct CDA access method

The caller indexes directly into the Common Data Area to locate the Device Block and Function Transfer Tables pointers associated with the Logical ID contained in the function's Request Block. This is similar to the ABIOS Transfer Convention except that the Common Routines are not used, giving this method a slight performance edge.

#### ■ Stored pointer method

The caller (i.e. usually the operating system) stores the necessary pointers and loads the stack frame directly without indexing the Common Data Area.

## OS Transfer Convention: Advantage #1

The Operating System Transfer Convention involves more programming overhead, but may result in some improvement in speed of execution. This calling convention's main advantage is realized in real mode only or protected mode only operating environments.

Where the ABIOS Transfer Convention relies on the Common Entry Routines to index into the Common Data Area to determine which Device Block/Function Transfer Table pointer pair to use, there is a small performance disadvantage to this method in a single mode environment. The Common Data Area is provided as an aid so that functions can be easily located in a bimodal environment.

## OS Transfer Convention: Advantage #2

Whether the operating environment is single or bimodal, the Operating System Transfer Convention is most effective when used to handle interrupts from programmed I/O devices (such as the keyboard controller) that are called repeatedly by a single function.

## Caller responsibilities on function return

Once the function returns, the operating system is responsible for:

- supplying error handling routines, and
- removing arguments from the stack

#### **Pseudocode**

The pseudocode below shows the suggested method for transferring control to an ABIOS function via the Operating System Transfer Convention.

PUSH	Pointer to Anchor Pointer Segment or Selector
PUSH	Pointer to Request Block Segment or Selector
PUSH	Offset to Request Block
PUSH	Pointer to Function Transfer Table Segment
	or Selector
PUSH	Offset to Function Transfer Table
PUSH	Pointer to Device Block Segment or Selector
PUSH	Offset to Device Block
CALL	Service-Specific Entry Routine
	(Start, Interrupt, or Time-out)

# **Return Code Handling**

#### Introduction

ABIOS signals the status (successful, unsuccessful, etc.) of a function call by writing a Return Code to offset 0Ch of the function's Request Block. The ABIOS assumes that all Return Code handlers are under the control of the operating system.

## Return Code bit testing

The operating system's Return Code Handling routine should always test certain Return Code bits. Depending on the settings for bits 15, 13, 12, and 8, all other bits, including some bits marked reserved, may be meaningful.

## Return Code bit definitions


The following table lists the primary and secondary definitions for Return Code bit settings.

Bits	Primary Definition	Secondary Definition
15	Unsuccessful	None
14	Parameter Error	None
13	Time-out error	None
12	Device Error	None
11-9	Reserved	Device-specific error
8	Retryable Error	Device-specific error
7	Unexpected Interrupt Reset	Device-specific error
6–4	Reserved	Device-specific error
3	Attention	Device-specific error
2	Not My Interrupt	Device-specific error
1	Resume Stage after Time Delay	Device-specific error
0	Resume Stage after Interrupt	Device-specific error

- Notes: 1. Bits 14-8 take the Primary Definition only when Bit 15 is set.
  - 2. Bits 11-0 take the Secondary Definition only when Bit 15 is on and any combination of bits 13, 12, and 8 are also on.
  - 3. Bits 7-0 take the Primary Definition only when Bit 15 is not on.
  - 4. If all bits are on, this Request Block has not been processed yet.

#### Flow chart

The following flow chart shows a method of testing the Return Code field.

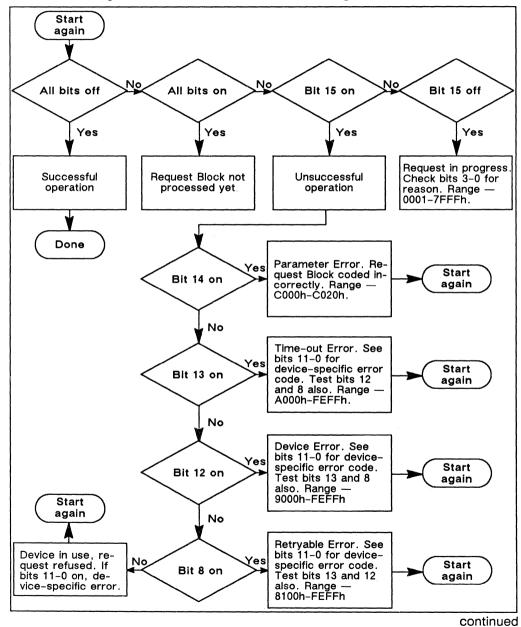

#### Return codes

The following table contains a general listing of the ABIOS Return Codes. ABIOS may generate any value that can occur in a 16-bit ABIOS field, so all operating system routines that test ABIOS Return Codes should be prepared for any value. That is, each bit in the Return Code field should be tested.

Code	Description	
0000h	Successful	
0001h	Resume Stage after Interrupt	
0002h	Resume Stage after Time Delay	
0005h	Not My Interrupt, Resume Stage after Interrupt	
0009h	Attention, Resume Stage after Interrupt	
0081h	Unexpected Reset, Resume Stage after Interrupt	
8000h	Device in Use, Request Refused	
8001h-8FFFh	Service-Specific Unsuccessful Operation	
9000h-90FFh	Device Error	
9100h-91FFh	Retryable Device Error	
9200h-9FFFh	Device Error	
A000h-A0FFh	Time-out Error	
A100h-A1FFh	Retryable Time-out Error	
A200h-AFFFh	Time-out Error	
B000h-B0FFh	Device Error With Time-out	
B100h-B1FFh	Retryable Device Error With Time-out	
B200h-BFFFh	Device Error With Time-out	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C002h	Reserved	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
C005h-C01Fh	Invalid Service-Specific Parameter	
C020h-FFFEh	Service-Specific Unsuccessful Operation	
FFFFh	Return Code Field Not Valid	

## Hardware Interrupt Handlers

#### Introduction

The ABIOS assumes that the operating system provides hardware interrupt handlers that receive control via a hardware interrupt vector.

#### Logical IDs and the hardware interrupt handler

Once ABIOS initialization is complete, all ABIOS services are identified to the operating system by unique Logical ID. The operating system's hardware interrupt handler must keep track of the Logical IDs that operate on each interrupt level. And it must maintain the validity of all Request Block pointers currently tied to each Logical ID.

When a hardware interrupt occurs, the ABIOS Common Entry and Service-Specific Entry Routines, in turn, provide the operating system with a way to transfer control to the given ABIOS service.

## Request Block polling

When a given hardware interrupt occurs, a Logical ID may have more than one active Request Block. The operating system's hardware interrupt handler must process each active Request Block by calling the ABIOS service involved at its Interrupt Routine entry point. Depending on the transfer convention used, this can be done through either the common interrupt routine or through a service–specific interrupt routine.

If bit 0 of the Return Code field is set, the Request Block is waiting for an interrupt. As the hardware interrupt handler polls each Request Block, the ABIOS is responsible for setting the Return Code field to indicate whether or not the hardware interrupt was associated with the given Request Block.

The operating system's interrupt handler can call the ABIOS with interrupts either enabled or disabled. If interrupts must be disabled, the ABIOS restores the state of the interrupt flag when interrupts are disabled and re-enabled.

## Initializing the Return Code Field before starting functions

The operating system should always initialize the Return Code field in a Request Block to FFFFh before calling the start routine.

If there is an outstanding Request Block at interrupt time, the operating system must first see if the Return Code field is FFFFh. If it is, the hardware interrupt handler must not attempt to resume this request. In this way, the ABIOS can process the function request and set the Return Code appropriately when the interrupt is executed.

## Preventing interruption of a routine while it is being started

When a Start Routine transfers control to a function, it does not reset the registers to their pre-call state until the function returns with a valid (i.e. other than FFFFh) Return Code.

When an interrupt occurs before a Start Routine has interrogated the Return Code field and reset the register state, it is possible for the Start Routine and an Interrupt Routine to be accessing the same Request Block from within different stack frames.

To prevent this, the operating system should maintain a flag to indicate whether or not a Start Routine has processed completely. An Interrupt Routine should not be allowed to call a function until its Start Routine has finished execution.

#### ABIOS processing

If the interrupt is not associated with the Request Block being polled, the ABIOS generates the Return Code 0005h Not My Interrupt, Resume Stage After Interrupt.

When the interrupt is associated with the Request Block being polled, the ABIOS:

- processes the interrupt,
- resets the device condition causing the interrupt at the device level, The return code handler routine and
- returns to the caller via the Request Block with an updated Return Code.

continued

## End-of-interrupt (EOI) processing

Although it resets the interrupting condition at the device, the ABIOS does not reset the interrupt controller. Therefore, all end of interrupt processing must be handled by the operating system at the interrupt controller.

Once all Request Blocks for a given Logical ID have been processed through the operating system's hardware interrupt handler and at least one Request Block responds that the interrupt was serviced, the operating system is free to reset the interrupt controller.

The ABIOS informs the caller that a Request Block has been serviced by placing any value other than 0005h Not My Interrupt, Resume Stage After Interrupt into the Request Block's Return Code field (offset 0Ch).

#### Default interrupt handler

If the hardware interrupt handler has called all Request Blocks waiting on an interrupt level and none have "claimed" the interrupt (i.e. sent a Return Code other than 0005h Not My Interrupt, Resume Stage after Interrupt), a rogue interrupt has occurred.

The hardware interrupt handler should call each Default Interrupt Handler for each Logical ID using the interrupt level. For more information on the Default Interrupt Handler see the next topic in this chapter.


#### Interrupt sharing

No Logical ID can operate on more than one interrupt level. Logical IDs with multiple units operate on the same interrupt level.

Should more than one Logical ID or Logical ID/Unit combination share the same interrupt level, the hardware interrupt handler associated with that interrupt level should repeat the polling process until all the Logical IDs are processed, or until one Logical ID is processed to completion.

## Interrupt sharing

The graphic below depicts the situation where more than one Request Block is active on a given Logical ID.

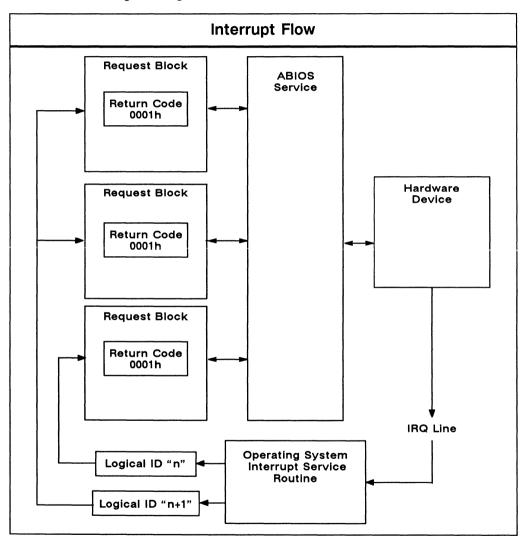

continued

# ABIOS bimodal support for interrupt handlers

When operating in a bimodal environment, it is possible for one Logical ID (i.e. one ABIOS service) to be associated with a number of real mode and protected mode function requests.

When this is the case, the ABIOS supports hardware interrupt handlers in the following way:

## ■ Microprocessor mode is maintained

After a function polls its hardware interrupt handler, the ABIOS is returned to the microprocessor mode that was in effect before the hardware interrupt call was made.

## ■ Interrupt routine can be called bimodally

When servicing the next Request Block, the hardware interrupt handler calls the interrupt routine from the current mode in effect. The microprocessor mode is hidden from the ABIOS. Control is transferred to the next function called whether or not that function was originally started in the current mode. For example, if the system is operating in real mode, the hardware interrupt handler can call a function that was initiated in protected mode.

# **Default Interrupt Handler**

## Description

Each ABIOS service that uses hardware interrupts contains a Default Interrupt Handler. The Default Interrupt Handler resets the interrupting condition at the device level when a hardware device generates an unexpected interrupt.

## Determining which services contain Default Interrupt Handlers

To determine whether or not a given Logical ID (ABIOS service) contains a Default Interrupt Handler, place a call to function 01h Return Logical ID Parameters to determine the Logical ID.

The value returned in the Request Block at offset 10h will indicate whether or not the Default Interrupt Handler is supported. The values may be:

Return Code	Description	
FFh	Default Interrupt Handler is not supported	
FEh Reserved for NMI Service. Default Interrupt Handler is not supported		
nnh	Default Interrupt Handler supported for this Logical ID, where nnh = hardware interrupt level.	

## How the Default Interrupt Handler is invoked

When an interrupt occurs while there are no active Request Blocks, the operating system must

- build the Default Interrupt Handler's Request Block,
- load the stack frame with the appropriate pointers.
- call either the Common Interrupt Routine or Service-Specific Interrupt Routine, depending on the transfer convention being used. The Default Interrupt Handler resets the unexpected interrupt at the device level, and
- upon return, the operating system performs EOI processing, resetting the interrupt at the interrupt controller.

continued

## **Request Block Structure**

The structure of the Default Interrupt Handler's Request Block is described in the table below:

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0000h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	32
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out

#### **Return Codes**

The Default Interrupt Handler Return Codes are listed in the table below:

Code	Description	
0000h	Successful Operation	
0005h	Not My Interrupt, Resume Stage after Interrupt	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
FFFFh	Return Code Field Not Valid	

#### Time-Out Handlers

#### Introduction

The ABIOS informs the operating system of the maximum period it is to wait for a hardware interrupt-driven stage by outputting a value (in seconds) to the the time-out field (offset 0Eh) in the function's Request Block. The ABIOS assumes that all hardware time-out handlers are under the control of the operating system.

A time-out value of 00h indicates no time-out checking should be done by the caller. The keyboard is an example of a device for which the ABIOS device service is willing to wait forever for the next interrupt.

#### Time-out handler duties

The operating system's time-out handler must refer to function time-out value and set up a function-specific time-out counter. If the hardware interrupt associated with a given function does not occur in this amount of time, the time-out handler transfers control to the ABIOS Time-Out Routine. The Time-Out Routine disables further interrupts for the device, aborts the function, and cleanly returns control to the operating system.

#### Either transfer convention will do

Depending on the transfer convention used, the operating system's time-out handler can handle hardware time-outs via either the Common Interrupt Routine or through a Service-Specific Interrupt Routine.

continued

## Time-out Routine vs. Resume Stage after Time Delay value

It is important not to confuse the processing associated with the Time-out Routine with the processing associated with the Resume Stage After Time Delay value (Return Code 0002h) returned by the ABIOS for those stages of a function that are driven by a function-requested time delay.

The ABIOS Time-out Routine is associated exclusively with those stages of a multistage function that are driven by hardware interrupts. It is designed to handle function termination cleanly.

The Resume Stage after Time Delay (Return Code 0002h) value is associated exclusively with those stages of a multistaged function that are not driven by a hardware interrupt. Error handling resulting from this stage is handled by the ABIOS function itself. Generally, the function indicates an error in a time delay-driven stage by returning a Return Code of 0002h to its Request Block.

# **ABIOS and Program Access**

#### Introduction

For now, OS/2 is the primary operating system using ABIOS. OS/2 itself provides end user programs with powerful functionality which makes bypassing the operating system in favor of the ABIOS largely unnecessary. However, the need may arise for the greater hardware control provided by direct access to the ABIOS Services.

## The Anchor Pointer, OS/2, and program access

When ABIOS is initialized under OS/2, the segment address of the Common Data Area is stored by the operating system in a non-public variable called the Anchor Pointer. See Chapter 3 for more information about Anchor Pointers and public and private data.

Control cannot be transferred to an ABIOS function without first accessing the information contained in the Common Data Area. Therefore, access to the ABIOS is impossible from a program running under OS/2 unless it is supported by the operating system.

## IBM OS/2 allows program access to ABIOS

Although it does not make the Anchor Pointer public, IBM OS/2 (versions 1.1 and beyond), support program access of the ABIOS via two OS/2 **DevHIp** services: **ABIOSCommonEntry** and **ABIOSCall**.

Programmers who are not using IBM OS/2 should refer to their OS/2 documentation to determine if their version of OS/2 supports direct access to the ABIOS.

# Accessing ABIOS via ABIOSCommonEntry

#### Description

The IBM OS/2 service **ABIOSCommonEntry** is used to call an ABIOS functions via the ABIOS Transfer Convention, that is to say via the ABIOS Common Entry Routines.

**ABIOSCommonEntry** initializes the stack frame with pointers in the format required by the current processor mode. Then it calls the Common Entry Routine specified in DH. On return, **ABIOSCommonEntry** cleans up the stack before returning to the caller.

## Caller must locate Logical ID

Before invoking ABIOSCommonEntry, the caller must first initialize the Request Block associated with the ABIOS function to be called. Since a service's Logical ID is a mandatory input into each function Request Block, the caller is responsible for determining the Logical ID assigned to the service being called.

## Locating Logical ID via function 01h

Because the Anchor Pointer to the Common Data Area is a non public variable, the only way for the caller to determine a service's Logical ID is to invoke function 01h Return Logical ID Parameters for each entry in the Common Data Area.

To do this, the caller must use ABIOSCommonEntry to invoke function 01h, Return Logical ID Parameters for Logical IDs 03h to nnh. The Request Block associated with function 01h of each ABIOS service is fixed at 20h bytes. When called, function 01h returns to offset 12h the hardware Device ID associated with the service. From this value, the caller can determine which device service is linked to a given Logical ID.

#### **ABIOS** supported devices

The ABIOS supports 16 kinds of physical devices. There is one ABIOS device service for each device. The table below lists the physical device ID and the ABIOS device services tied to those devices.

Device ID	Device Type/Service	Device ID	Device Type/Service
00h	ABIOS Internal Calls	0Bh	Pointing Device
01h	Diskette	0Ch	Reserved
02h	Fixed Disk	0Dh	Reserved
03h	Video	0Eh	CMOS RAM
04h	Keyboard	0Fh	Direct Memory Access
05h	Parallel Port	10h	Programmable Option Select
06h	Serial Port	11h	Error Log
07h	System Timer	12h-15h	Reserved
08h	Real Time Clock Timer	16h	Keyboard Security
09h	System Services	17h-FFFFh	Reserved
0Ah	Nonmaskable Interrupt		

## ABIOSCommonEntry Input/Output

## Input:

```
MOV SI, Request_Block_Offset; Offset in DS of Request Block MOV DH, Which Com Routine; Indicate in DH which Common
```

; Routine to call, where:

; 00h = Common Start Routine

; 01h = Common Interrupt Routine

: 02h = Common Time-out Routine

MOV DL, DevHlp\_ABIOSCommonEntry CALL [Device\_Help]

#### **Output:**

CF = 0 If call was successful

= 1 If error occurred

AX = Error Code

ABIOS not present.

Unknown ABIOS command.

## To avoid suspension in the background

ABIOS functions can sometimes be suspended if the operating environment is shifted from OS/2 mode to the DOS compatibility box. This occurs when functions executed in the DOS compatibility box put the service's operating environment is a state that is unknown to the function called in OS/2 mode.

**ROMCritSection** sets a flag that prevents entry into the DOS compatibility box until the function called via **ABIOSCommonEntry** has executed to completion. Since there is no way to determine in advance whether or not a function is susceptible to suspension, the caller has two choices:

- call OS/2 ROMCritSection before calling ABIOSCommonEntry, or
- test the function by calling it via ABIOSCommonEntry and switching to the DOS compatibility box.

If **ROMCritSection** is called to prevent entry into the DOS compatibility box, then it must be called again after the ABIOS function completes to re-enable entry.

## ROMCritSection Input/Output

DS must point to the ABIOS Device Driver's data segment. Reset DS if it has been previously used in a **PhysToVirt** call.

```
MOV AL, enter or exit
```

;Critical Section Flag

; = 0 exit

; < > 0 enter

MOV DL, DevHlp\_ROMCritSection

CALL [Device Help]

#### For more information

For more information on calling ABIOS functions via ABIOSCommonEntry, refer to IBM Operating System/2 Technical Reference, Volume 1.

# Accessing ABIOS via ABIOSCall

## Description

The IBM OS/2 service ABIOSCAII is used to call an ABIOS functions via the Operating System Transfer Convention via the ABIOS Service-Specific Entry Routines.

**ABIOSCAII** initializes the stack frame with pointers in the format required by the current processor mode. Then, it calls the Service-Specific Entry Routine specified in DH. On return, **ABIOSCAII** cleans up the stack before returning to the caller.

#### ABIOSCall Input/Output

#### Input:

MOV AX, LID

MOV SI,RB\_Offset

;Service's Logical ID ;Data Segment DS offset to

; caller's Request Block

MOV DH, Entry\_Point

;Service-Specific Routine :00h = Start Routine

;01h = Interrupt Routine ;02h = Time-out Routine

MOV DL, DevHlp\_ABIOSCall CALL [Device Help]

#### Output:

CF

0 If call was successful

= 1 If error occurred

AX

Error Code

ABIOS not present.

Unknown ABIOS command.

#### To avoid suspension in the background

ABIOS functions can sometimes be suspended if the operating environment is shifted from OS/2 mode to the DOS compatibility box. To avoid this, the caller should call OS/2 **ROMCritSection** before calling **ABIOSCommonEntry**. The method for doing this is described on the previous page.



# Chapter 7 ABIOS Extensions

## Overview

#### Introduction

In general, how a given BIOS extension is implemented depends on the nature of the BIOS-to-operating system interface.

## BIOS extensions in PC XT/AT systems

In IBM PC XT/AT-compatible environments, system hardware is isolated from the operating system (typically MS- or PC-DOS) by a ROM-based BIOS, such as the Phoenix AT-compatible BIOS.

Under DOS, ROM BIOS interrupt vectors and data structures are publicly accessible. As a result, system hardware or software enhancements that require extensions to the BIOS are typically implemented by intercepting an existing software interrupt. Since BIOS data is public, BIOS extensions of this type are free to use existing BIOS data or to create data structures of their own.

#### CBIOS extensions in PS/2-compatible systems

In MCA-based PS/2-compatibles, the CBIOS portion of the ROM BIOS isolates single-tasking operating systems (such as MS- or PC-DOS) from system hardware in the same way the BIOS isolates DOS from the hardware in PC XT/AT-compatible systems. Extensions to the CBIOS/DOS interface are implemented exactly as they are in PC XT/AT-compatible systems.

#### ABIOS extensions


When a multitasking operating system (such as OS/2) is interfaced with a PS/2-compatible system, that operating system interfaces with the ABIOS portion of the ROM BIOS.

Under OS/2, however, ABIOS data structure addresses and service/function entry points are only known to the operating system. Because of this, enhancements to system software or hardware that require ABIOS extensions must insure that:

- the undefined interstage state information and work areas contained in the pre-existing service's Device Block are not overwritten,
- the extension maintains control of all function entry points, and
- the extension will only be initialized if its revision level is greater than the revision level of the pre-existing service.

#### Summary of requirements

To ensure each of the above considerations, all ABIOS extensions must meet the requirements outlined in the illustration below:

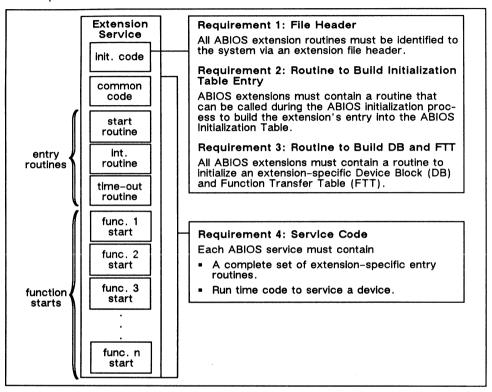

continued

# Two types of ABIOS implementations

As long as it meets the four requirements for creating valid ABIOS extensions, an extension can be implemented either in ROM or in RAM.

The differences between the two types of implementations are described below.

Туре	Description
ROM extension	ABIOS ROM extensions:  Exist in the same peripheral card ROM that contains their CBIOS counterparts.  Contain manufacturer-specific ABIOS device services.  Are located and initialized as part of the overall ABIOS ROM initialization process.
RAM extension	ABIOS RAM extensions exist as files that will be located and initialized into system RAM during the overall ABIOS ROM initialization process. If they are to be implemented under OS/2, extension file names must be listed in the file ABIOS.SYS. The following facts apply:  - ABIOS.SYS must contain a list of filespecs separated by either blanks or new lines.  - Both ABIOS.SYS and any files listed in ABIOS.SYS must reside in the root directory of the OS/2 IPL volume.  - The files listed in ABIOS.SYS are loaded into memory in the order in which they are listed.  - The sector size of all RAM extension files must be a multiple of 512K.  - All ABIOS RAM extension files must have a .BIO extension.  - RAM extensions are loaded after ROM extensions.

#### In this chapter

This chapter explains how to implement ABIOS extensions.

#### Topics presented

The following topics are presented:

- Recommendations for extending ABIOS
- Requirement 1: ABIOS Extension Header Formats
- Requirement 2: Build Initialization Table Routine
- Requirement 3: Build Device Block and Function Transfer Table Routine
- Requirement 4: ABIOS Function Code
- Initialization: ABIOS ROM Extensions
- Initialization: ABIOS RAM Extensions
- Examples: Introduction
- Example 1: Non-Intrusive Interception
- Example 2: Redirection of a Nonstaged Function
- Example 3: Redirection of a Staged Function

# **Recommendations for Extending ABIOS**

#### **Background**

IBM suggests in its document, Advanced BIOS Supplement for the Personal System/2 and Personal Computer BIOS Interface Technical Reference, that an ABIOS extension may:

- ADD a completely new device service.
- REPLACE an existing device service.
- PATCH revised function support into an existing device service.
- EXTEND new function support to an existing device service.

#### Why patching and extending are not recommended

In its definition for ABIOS extensions that patch or extend device services, IBM suggests that such function-level ABIOS extensions can be implemented by changing the vectors to function starts in the Function Transfer Table used by the previous service.

There are two problems with this approach to function-level extensions:

#### Start replacement does not accommodate interstage data

If the start of a staged function is replaced, interrupt and time-out handling associated with this function must also be replaced (because the extension and the previous service may use interstage state information differently). There are no public vectors to an individual function's interrupt and time-out handling.

#### Stack and register contents are not defined

Stack and register contents passed to individual function starts are not defined by IBM and are presumably subject to change. Therefore, a start routine in one service doesn't know how to pass control to an individual function start in another service, and the function start doesn't know how to return.

# Recommendations for Extending ABIOS, Continued

#### Phoenix recommendations

Phoenix Technologies Ltd. recommends that function-level extensions to the ABIOS fall under the single class: MODIFY. Extensions that modify ABIOS services on the function level must carefully conform to the requirements set down in this chapter. The requirements insure that:

#### ■ Device Block private data is not overwritten

The Device Blocks associated with all ABIOS services contain a substantial amount of "private" data that is neither publicly defined nor publicly accessible.

#### ■ Interstage state information is not lost

Interstage state information is not defined. Therefore, if an extension performs any stage of a particular function or a particular call, it must perform all stages.

#### Phoenix terminology

When handled in this way, ABIOS extensions fall into three categories: RE-PLACE, ADD, and MODIFY. As a general rule, the extent of change between the pre-existing service and the extension service should help determine which extension type is required.


#### Graphic examples

The following illustrations graphically depict how extensions that REPLACE, ADD, or MODIFY might interface with fixed disk hardware.

continued

#### ABIOS extensions that REPLACE services

ABIOS extensions that replace an existing service completely supersede that service.

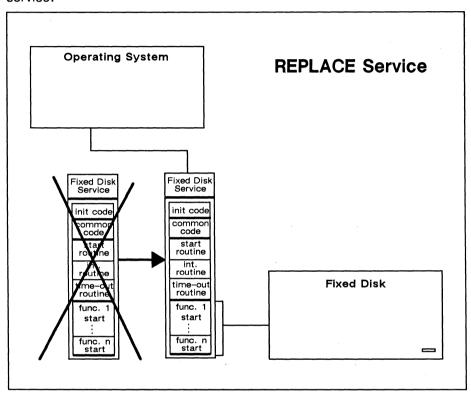


#### The REPLACE option and ABIOS Data Structures

ABIOS extensions that replace existing services require an all new Device Block and Function Transfer Table. At initialization, the Common Data Area pointers to the "old" service's Device Block and Function Transfer Table are zeroed, thus nullifying all calls to the older service.

#### ABIOS extensions that ADD services

ABIOS extensions that add a service are similar to those extensions that replace a service, but differ in one critical respect. ABIOS extensions that add a service do not supersede any pre-existing service.

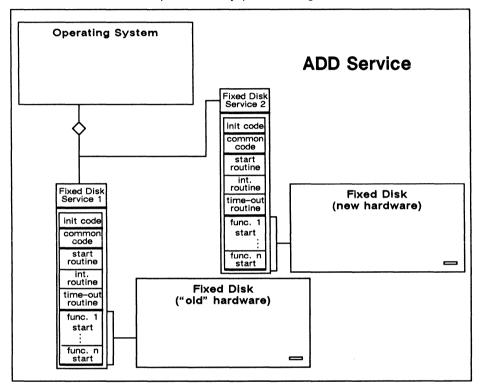


#### The ADD option and ABIOS Data Structures

ABIOS extensions that add a new, coexistent device service require an all new Device Block and Function Transfer Table. At initialization, each device service is assigned its own Logical ID. Function calls to each service are distinguished from each other by Logical ID.

continued

#### ABIOS extensions that MODIFY services

When the degree of change between a pre-existing ABIOS service and the extension is small, the ABIOS service can be modified by creating an extension that shares duties with the pre-existing service.

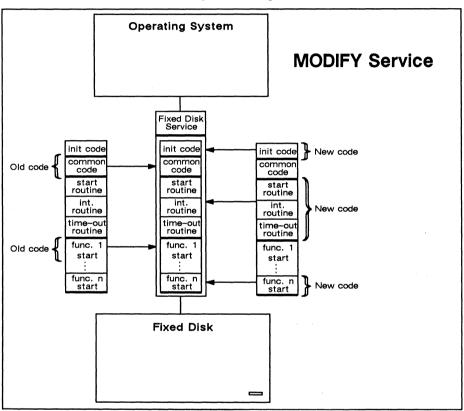

# Recommendations for Extending ABIOS, Continued

#### The MODIFY option and ABIOS Data Structures

ABIOS extensions that share functionality with an existing service require a "hybrid" Device Block and a new Function Transfer Table. At initialization, the Common Data Area pointers to the "old" device service data structures are nullified. All function calls are relayed via a new Logical ID associated with the modified service.

The new Function Transfer Table directs all functions to the new service, where a decision to revector certain functions to the "old" service may be made. The private Device Block parts reserved by the "old" service must not be written to by the new service; private data may not be shared between services.

# Requirement 1: Create Proper Extension Header

#### Introduction

ABIOS extensions are identified to the system by an extension file header. The format of this header varies depending on whether the extension is to be implemented in ROM or RAM.

#### ROM extension file header

The ROM extension file header is described in the table below.

Offset	Bytes	Description	
00h		EXTENSION ROM SIGNATURE = AA55h Extension ROMs may contain extensions to either (or both) the CBIOS and the ABIOS. The power-on self test (POST) searches for CBIOS extension ROMs in 2K increments over the absolute address range C0000h-DF800h. ABIOS extension ROMs are searched for over the same address range as part of ABIOS initialization.	
		The extension ROM signature AA55h informs POST that an extension ROM is present. All extension ROMs must begin on a paragraph boundary.	
02h	1	ROM LENGTH IN 512-BYTE BLOCKS Extension ROMs must be divided into 512-byte blocks. The maximum value for this field is 7Fh.	
03h	3	ENTRY POINT TO CBIOS INITIALIZATION ROUTINE (FAR CALL)  If the extension ROM contains a portion that will be used to extend CBIOS, then the entry point to the CBIOS extension's Initialization Routine must appear here.  Note: If the extension ROM contains an ABIOS extension only, this field must contain a dummy Return Far instruction. The dummy Return Far instruction allows POST to continue its ROM extension scan.	
06h	2	ABIOS EXTENSION ROM SIGNATURE — BB66h The search for ABIOS extension ROMs is performed in 2K increments over the absolute address range C0000h-DFFFFh a part of ABIOS initialization. The ABIOS Extension ROM signature indicates that the ROM contains an ABIOS extension. The ABIOS Extension Signature must be set to BB66h.	
08h	1	NUMBER OF ENTRIES TO ADD TO INITIALIZATION TABLE The total number of Initialization Table Entries is accumulated as part of the ABIOS initialization process. This field must contain the number of Initialization Table Entries required by the ABIOS ROM extension. The minimum acceptable value is 1.	
09h	_	ENTRY POINT FOR BUILD INITIALIZATION TABLE ROUTINE Entry point to routine to Build Initialization Table routine.	

# RAM extension file header

The RAM extension file header is described in the table below.

	,		
Offset	Bytes	Description	
00h	2	EXTENSION RAM PRESENT = AA55h The value AA55h indicates that a RAM extension is present.	
02h	1	RAM EXTENSION LENGTH IN 512-BYTE BLOCKS Extension RAMs must be created in increments of 512-byte blocks. The maximum value for this field is 7Fh.	
03h 04h 05h	1 1 1	MODEL BYTE SUBMODEL BYTE ROM REVISION LEVEL The model byte and submodel byte identify the system board with which the RAM extension is to be associated. The ROM Revision Level Indicates the revision of system board ROM which the RAM extension is designed to interact.	
06h	2	DEVICE ID The Device ID field (along with the secondary device ID below) identifies the ABIOS device with which the RAM extension is to be associated.	
08h	2	NUMBER OF ENTRIES TO ADD TO INITIALIZATION TABLE The total number of Initialization Table Entries is accumulated as part of the ABIOS initialization process. The value contained in this field must be set to the number of Initialization Table Entries that will be required by this ABIOS ROM extension. The minimum acceptable value is 1.	
09h	1	ENTRY POINT FOR BUILD INITIALIZATION TABLE ROUTINE Entry point to routine to Build Initialization Table routine.	
0Ch	1	SECONDARY DEVICE ID When more than one physical device is associated with a Device ID, the two physical devices can be differentiated with a Secondary Device ID. When a unique ABIOS Service is required for each physical device, the two services must be differentiated via their Secondary Device ID.	
0Dh	1	RAM EXTENSION REVISION LEVEL The RAM extension revision level identifies the revision level of the RAM extension.	
0Eh	2	RESERVED (Must be initialized to zero.)	

continued

# Requirement 1: Create Proper Extension Header, Continued

# Table of ABIOS Device IDs and Services

The system ROM ABIOS contains one device service for each of the Device IDs listed in the table below.

Device ID	Device Type/Service	Device ID	Device Type/Service
00h	ABIOS Internal Calls	0Bh	Pointing Device
01h	Diskette	0Ch	Reserved
02h	Fixed Disk	0Dh	Reserved
03h	Video	0Eh	CMOS RAM
04h	Keyboard	0Fh	Direct Memory Access
05h	Parallel Port	10h	Programmable Option Select
06h	Serial Port	11h	Error Log
07h	System Timer	12h-15h	Reserved
08h	Real Time Clock Timer	16h	Keyboard Security
09h	System Services	17h-FFFFh	Reserved
0Ah	Nonmaskable Interrupt		

# Requirement 2: Build Initialization Table Entry Routine

#### Introduction

ABIOS extensions are initialized and integrated as part of the general process of initializing the system ROM ABIOS. ABIOS extensions must contain a routine that can be called during the ABIOS initialization process to build the extension's entry into the ABIOS Initialization Table.

#### Example: Routine to Build Initialization Table Entry

The example below shows how a routine to build an ABIOS extension's entry into the Initialization Table could be implemented.

Those routines associated with ABIOS extensions that modify an existing service must reserve a Device Block size equal to that reserved by the existing service plus enough bytes for the modification's workspace.

```
MY-BINIT
                      proc far
                      Entry: ES:DI points to where to put init
                      table entry(s)
                      Exit: far ret w/AL =000h (successful),
                      80h (no units found), or other error and
                      CX = # entries added. Other registers are
                      preserved.
       assume DS:nothing, ES:nothing
       cld
                      patch CS in template
            fixseg1, CS
       mov
                      copy template to entry
       mov SI, offset MY-INITEMPL
       mov CX, 18h/2
   rep movs word ptr ES: [DI], word ptr CS: [SI]
       sub
             di, 18h
```

continued

#### Example: Routine to Build Initialization Table Entry, cont'd

```
:* At this point, if this is a MODIFY, the Device Block
;* and Request Block reserved sizes should be calculated
'* from those of the previous service plus the sizes for
* workspace required by the modification.
: *
      return w/AL = 0, cx = 1
      popa
      mov al, 0
      mov cx, 1
      ret
MY BINIT endp
MY INITEMPL label word
                                    ; Init Table Template
         MY DID1
                                     : device ID
      dw
      dw MY LIDCNT
                                     : logical ID count
                                     : device block size in
      dw MY DEVBLLEL
          offset MY INITDS
                                     ; ptr to init-FUNCT-and-
                                      : DEVBL routine
fixseg1 dw ?
                                      : CS - fill in the blank
                                      ; default request block
      dw MY REQBLLEN
                                      ; length
         (MY FUNCCNT +4)*4
      dw
                                     : function table size in
                                      ; bytes
      dw MY DATAPTCNT*6
                                      ; bytes required for
                                      : buffer ptrs
      dw MY DID2
                                      ; secondary Device ID
      dw MY REV+80H
                                      : code level
      dw 0, 0, 0
                                      ; reserved
```

# Requirement 3: Routine to Build Device Blocks and FTT

#### Introduction

All ABIOS extensions must contain a routine to initialize an extension-specific Device Block and Function Transfer Table (FTT).

#### How the routine is entered

The routine to build an extension-specific Device Block and Function Transfer Table must be entered with DS:00h pointing to the Common Data Area (CDA) and DX = Logical ID, so that:

- the double word at DS: (DX\*8) points to where the Device Block is to be built, and
- the double word at DS: (DX\*8+4) points to where the Function Transfer Table is to be built.

continued

# Extension type requirements

How the routine to initialize an extension's Device Block and Function Transfer operates depends on the type of ABIOS extension involved.

Extension Type	initialization Routine	
ADD Service	The extension's Device Block and Function Transfer Table can be initialized to any length required.	
REPLACE Service	The initialization routine must zero the Common Data Area pointers to the older service's Device Block and Function Transfer Table.	
	This ensures that the operating system will not call the ABIOS service being replaced.	
MODIFY Service	The initialization routine must:	
	<ul> <li>Copy the existing service's Device Block to where the ex- tension's Device Block is to be built.</li> </ul>	
	<ul> <li>Initialize the modification's workspace in the Device Block.</li> </ul>	
	<ul> <li>Patch the existing Device ID in the service's Device Block to a number unrecognized by an operating system (e.g. 0FFh) so that an operating system will not call it.</li> </ul>	
	Initializing the Device Block in this way ensures that the functions involved with the ABIOS extension:	
	<ul> <li>Do not make use of any undefined areas within the existing service's Device Block.</li> </ul>	
	<ul> <li>Access extension-specific data only in the extension- specific workspace added at the end of the Device Block.</li> <li>In this way interstage state information need not be main- tained between the extension and the pre-existing ABIOS service.</li> </ul>	
	<ul> <li>Build an extension-specific Function Transfer Table that takes over all three entry routines.</li> </ul>	

# Pseudocode: Routine to Build Device Block and Function Transfer Table for a Fixed Disk Service REPLACEment

```
MY INITDS proc far
                        CX = logical ID count
               Entry:
                         DX = 1st logical ID
                         DS:0 points to CDA
               Exit:
                         FAR RET w/: AL = error code (0)
                   for each LID up until mine.
                    if it's for my device (DIDs & DID2s are =).
                        if device block rev > mine.
                           go zero my LID's ptrs and abort
                         endif
                        zero that LID's ptrs
                     endif
                    next LID
                   init device block(s) {
                    copy DB template
                    init device unique data
                    init all unit unique data {
                        for each UUDA.
                            get drive #
                            get potential hard disk params
                            get drive type, params for type
                            call UUDInit
                         next IIIDA
                     }
                    fill in offset to first data pointer
                    fill in LID
                    calc & fill in dev block size
               build function transfer table
               exit
MY INITDS endp
```

# Requirement 4: ABIOS Service Code

#### Introduction

Each ABIOS extension must contain the code implementing all or part of an ABIOS device service. This is the run-time code of an extension; the other requirements deal only with ABIOS initialization.

#### Reference

Information under the Examples heading in this chapter provides concrete examples of how various kinds of extensions can be coded.

#### Initialization: ABIOS ROM Extensions

#### Introduction

The process of initializing an ABIOS ROM extension includes the same steps and is closely integrated with the process of initializing the system board ROM ABIOS.

#### Limits of this discussion

The discussion below is limited to only those areas of ABIOS initialization directly related to the initialization of ABIOS ROM extensions. For additional ABIOS initialization information, refer to Chapter 4.

# ROM extension initialization procedure

The table below lists the steps involved in initializing ABIOS ROM extensions.

Step	Action
1.	The operating system calls CBIOS INT 15h, AH = 04h Build System Parameters Table.
2.	The Build System Parameters Table function scans (in 2K increments) absolute addresses C0000h to DFFFFh, testing for a valid ABIOS ROM extension header. Valid ABIOS ROM headers contain a signature value of BB66h at offset 06h.
3.	When a valid ABIOS ROM extension is found, the Build System Parameters Table function:  Reads the Number of Initialization Table Entries at ROM extension header offset 08h.  Adds that value to the value in offset 1Eh of the System Parameters Table.
	Continues it search at the next 2K boundary.
4.	The operating system call CBIOS INT 15h, AH = 05h Build Initialization Table.
5.	The Build Initialization Table function scans (in 2K increments) absolute addresses C0000h to DFFFFh, testing for a valid ABIOS ROM extension header.
6.	Valid ABIOS ROM headers contain a signature value of BB66h at offset 06h. When a valid ABIOS ROM extension is found, the Build Initialization Table function performs a far call to offset 09h in the ROM extension header. This is the ROM extension's routine to Build Initialization Table Entry.
7.	Once it has built its entry into the Initialization Table, the ABIOS ROM extension's Routine to Build the extension's Device Block and Function Transfer Table are called directly from OS/2 in the same manner as system board ABIOS device code.
	The routine to build the extension's Device Block and Function Transfer Table may choose to install or not install itself. If it does not install itself, it zeros its Device Block pointer and Function Transfer Table pointer in the Common Data Area.

#### Initialization: ABIOS RAM Extensions

#### Introduction

The process of initializing an ABIOS RAM extension is similar to the process of initializing an ABIOS ROM extension.

The difference between the two lies in the additional steps that the Build Initialization Table routine contained ABIOS RAM extensions must take to insure that only the latest revision of a given ABIOS service is initialized.

#### When RAM extensions are initialized

ABIOS RAM extensions are initialized only after the system board ROM ABIOS and all adapter board ABIOS ROM extensions have been fully initialized.

#### Extension requirements reprised

As discussed in the previous pages, all ABIOS RAM extensions must meet the four requirements below:

- Requirement 1: ROM Extension Header
- Requirement 2: Build Initialization Table Routine
- Requirement 3: Routine to Build Device Block and Function Transfer Table
- Requirement 4: Extension Code

#### Limits of this discussion

The discussion below is limited to those areas of ABIOS initialization directly related to the initialization of ABIOS RAM extensions. For further information about ABIOS initialization, refer to Chapter 4.

#### RAM extension initialization procedure

The table below lists the steps involved in initializing ABIOS RAM extensions.

Step	Action
1.	The operating system calls CBIOS INT 15h, AH = 04h Build System Parameters Table.
2.	The Build System Parameters Table function scans RAM extension area, polling the Number of Initialization Table Entries field (offset 08h) of each RAM extension header to determine the total number of Initialization Table Entries.
3.	When a valid ABIOS RAM extension is found, the Build System Parameters Table function:
	<ul> <li>Reads the Number of Initialization Table Entries at RAM extension header offset 08h.</li> </ul>
	<ul> <li>Adds that value to the value in offset 1Eh of the System Parameters Table.</li> </ul>
	<ul> <li>Continues it search at the next 2K boundary.</li> </ul>
4.	The operating system calls CBIOS INT 15h, AH = 05h Build Initialization Table.
5.	Once it has built its entry into the initialization Table, the ABIOS ROM extension's Routine to Build the extension's Device Block and Function Transfer Table are called directly from OS/2 in the same manner as system board ABIOS device code.
6.	If the extension replaces or modifies an existing service, the Routine to Build DB and FTT may compare the extension's revision level against the revision level of the existing service, choosing to replace or modify only if its own revision is greater. To disable either the existing service or the extension's service, the corresponding DB and FTT pointers in the CDA must be zeroed.

#### Reference

To be initialized, all ABIOS RAM extensions should be listed in the OS/2 file ABIOS.SYS. For more information on ABIOS.SYS, refer to the documentation accompanying OS/2.

continued

Initialization: ABIOS RAM Extensions, Continued

#### The ABIOS RAM extension area

The ABIOS RAM extension area resides in system RAM and contains a chained list of all ABIOS RAM extensions. The ABIOS RAM extension area must start on a paragraph boundary. Individual RAM extensions within the ABIOS RAM extension area are linked via the Extension Length in 512-Byte Blocks field in the RAM Extension header.

#### Considerations for last RAM extension in area

The last RAM extension in the ABIOS RAM extension area must have its Extension Length in 512-Byte Blocks header field set to zero.

# Examples of How to Modify an Existing Service

#### Introduction

Anything a programmer might hope to achieve with ABIOS extensions that MODIFY an existing service can be achieved by building extensions that do not replace individual function-start vectors.

Well-behaved programming strategies that are useful in different situations include:

- Non-intrusive service interception
- Redirection of a nonstaged function
- Redirection of a staged function

# **Example 1: Non-Intrusive Interception**

#### Description

The example below shows how an ABIOS extension can replace an entire service yet redirect all activity to the previous device service transparently to that service and to the operating system.

#### Code example: non-intrusive interception

```
CODE segment byte public
     assume cs:CODE
start:
   RAM extension header
   dw OAA55h
   db EXTSIZE
                            : length in half Ks
   db 0, 0, 0
                            : model. submodel. ROM revision
                            : device ID for hard disk
   dw 2
   db 1
                            : # initialization table entries
 jmp near ptr BINIT
                            : build init table entry
   db OFFh, OFFh
                            ; secondary dev ID, my revision
   dw 0
                            : reserved
  my workspace in pseudo-Device-Block:
   offsets into workspace:
WORK1
                eau 0
                            ; word
WORK3
                equ 2
                           ; byte
WORKSPACESIZE
                equ 3
                            : my read-only (after init) data:
OLDFUNCTOFF
                            ; offset in CDA of ptr to old LIDs
                dw ?
FUNCT
MYDATAPTROFF
                dw ?
                            ; offset in CDA of my data ptr
                            ; offset in device block of my
WORKSPACEOFFSET dw ?
workspace
FUNCTABLESIZE
                dw ?
                            ; size of previous function table
```

continued

# Code example: non-intrusive interception, cont'd BINIT proc far ; Build-initialization table subroutine ;\* find previous init table for this device ID ;\* if none, go return unhappy :\* store DID, LID count=1 :\* WORKSPACEOFFSET = previous device block size :\* store device block size = previous device block size + : \* WORKSPACESIZE :\* store pointer to init-data-structures subroutine :\* store request block size = previous request block size :\* store function table size = 4\*4 ;\* store data pointer size, DID2, revision, 0000s ; \* return happy BINIT endp INITDS proc far ; Initialize-data-structures subroutine :\* get offset of our pointers in CDA ;\* find previous service's ptrs in CDA :\* save offset to its function table ; \* copy device block to mine, changing size :\* init workspace at end of device block

; \* give old driver a weird device ID so OS doesn't call it

;\* MYDATAPTROFF = offset of my data pointer's selector in CDA

;\* build function transfer table - vectors to

;\* and LOG Time-out routines (and no functions)
:\* update Common Data Area's data pointer count

:\* LOGSTART. LOGINTERRUPT.

:\* load my data pointer

endp

; \* return happy

INITDS

;\* find where my data pointer goes

#### Code example: non-intrusive interception, cont'd

```
LOGTime-out:
                                       : time-out routine
:* save offset into transfer table = 8
: * goto LOGCOMMON
                                      ; interrupt routine
LOGINTERRUPT:
:* save offset into transfer table = 4
: * goto LOGCOMMON
LOGSTART:
                                      ; start routine
;* save offset into transfer table = 0
; * goto LOGCOMMON
LOGCOMMON proc far
;* save registers
:* change function transfer table in stack for revector
;* get address of previous service's start, int, or time-out
: * routine from previous transfer table
;* place it in stack for return from here
;* get function code from request block
: * get pointer to workspace
:* get my data pointer
:* record function code
;* restore registers and return (to previous service's start
: * routine)
LOGCOMMON endp
EXTSIZE = (offset \$ - offset start + 1FFh)/200h
;* RAM ext. size / 200h
org EXTSIZE*200h
CODE ends
     end
```

# **Example 2: Redirection of a Nonstaged Function**

#### Description

Redirection of a nonstaged function is relatively easy. The extension's start routine examines the function code in the request block and either services the function itself or redirects the request to the previous device service.

In the example below, a replacement video service redirects all functions to the previous video service and regains control when that service returns. It then checks to see if one of the font-loading functions was performed; if so, the font is "italicized" by shifting half of each loaded character font.

#### Code example: redirecting a nonstaged function — italicizing fonts

INITDS proc far ; Initialize-data-structures subroutine

- ;\* get offset of our pointers in CDA
- ;\* find previous service's ptrs in CDA
- ;\* save offset to its function table
- :\* copy device block to mine
- ;\* give old driver a weird device ID so OS doesn't call it
- ;\* build function transfer table vector to MYSTART (and no
- ; \* functions)
- : \* update Common Data Area's data pointer count
- ;\* find where my data pointer goes
- ;\* load my data pointer
- ; \* MYDATAPTROFF = offset of my data pointer's selector in CDA
- ; \* return happy
- INITDS endp

# Example 2: Redirection of a Nonstaged Function, Continued

#### Code example: redirecting a nonstaged function - italicizing fonts, cont'd

```
MYSTART
               proc far ; start routine
:* Save registers.
; * Build additional stack, copying pointers from passed stack,
;* replacing transfer table vector with vector to previous
;* transfer table.
:* Get previous service start address from previous transfer
:* table.
;* Call previous service start routine.
;* Flush additional stack.
:* Get function code from request block.
     if function code = OFh or 10h,
         set up hardware to access font plane,
         get my data pointer (to font at A0000)
         for each character,
          shift top half of character definition right.
          next character
         restore hardware
      endif
;* restore registers and return to OS
MYSTART
               endp
```

# Example 3: Redirection of a Staged Function

#### Description

Replacing a staged function requires careful design because all stages of the interrupt function must be redirected, not just the function start.

The way to handle this is for all three device service entries — the start routine, the interrupt routine, and the time-out routine — to make redirection decisions based on function code.

For instance, if an extension wishes to replace only "read" functionality, all three entries into the device service (start, interrupt, and time-out routines) will examine the function code in the request block and redirect all functions except "read" to the corresponding entry in the previous device service.

In this manner, interstage state information (which is private) need not be compatible between, say, an extension's start processing and the system ROM ABIOS's interrupt processing.

In the example on the following page, an ABIOS extension for a diskette drive which has a "ready" signal rather than a change line is presented.

#### Code example: redirecting staged functions — diskette change line emulation

```
proc far : Initialize-data-structures subroutine
:* get offset of our pointers in CDA
:* find previous service's ptrs in CDA
;* save offset to its function table
: * copy device block to mine, changing size
:* init workspace at end of device block
: * give old driver a weird device ID so OS doesn't call it
:* build function transfer table - vectors to MYSTART.
: * MYINTERRUPT.
;* and previous service's time-out routine (and no functions)
:* update Common Data Area's data pointer count
;* find where my data pointer goes
:* load my data pointer
: * MYDATAPTROFF = offset of my data pointer's selector in CDA
: * return happy
INITDS
          endp
MYINTERRUPT
               proc far ; interrupt routine
: * save registers
;* if it's diskette interrupt but function code = 0000
;* (default),
:* sense interrupt status
         if interrupt is due to change in state of ready line,
          changedflag = yes
         restore regs and return to caller w/ return code 0000
      endif
; * get address of previous service's interrupt routine
;* place it in stack for return from here
;* restore registers and return (to previous service's
:* interrupt routine)
MYINTERRUPT
               endp
```

continued

Code example: redirecting staged functions — diskette change line emulation, cont'd

```
MYSTART
              proc far ; start routine
: * save registers
:* get function code from request block
     if function code = 000E,
· *
         if changedflag = yes,
          restore regs and return to caller w/ change active
; *
          else if changedflag = no,
          restore regs and return to caller w/ change inactive
          endif
: *
      else if function code = 0008 through 000B.
; *
         if changedflag = yes.
          sense drive status
          if drive not ready.
              restore regs and return to caller
              (w/ return code 800D)
           else.
              restore regs and return to caller
              (w/ return code 8006)
              changedflag = no
: *
           endif
          endif
: *
      endif
     change function transfer table in stack for revector
: *
     get address of previous service's start routine
     place it in stack for return from here
· *
     restore registers and return
     (to previous service's start routine)
MYSTART
               endp
```

# Chapter 8 ABIOS Diskette Service

#### Overview

#### Introduction

The ABIOS Diskette Service provides access to diskette I/O operations.

### Rules for using the PS/2 BIOS Diskette Services

Because the CBIOS and ABIOS interface with different operating systems, either the CBIOS or ABIOS Diskette Service may place diskette hardware in an unknown state. The CBIOS does not inform the ABIOS of the diskette hardware state when control is passed from the CBIOS to the ABIOS, and vice versa. As a result, it is possible for one part of the PS/2 ROM BIOS to put the diskette hardware in a state that will not be recognized by the other part of the BIOS.

#### Rules for using the PS/2 BIOS Diskette Services, cont'd

Follow the rules listed below to avoid diskette problems in the PS/2 BIOS:

- 1. If there is an outstanding ABIOS Diskette function request, do not request a CBIOS diskette function.
- 2. If there is an outstanding CBIOS Diskette function request, do not request an ABIOS Diskette function request.
- If using CBIOS and the last Diskette Service function call was to ABIOS, request INT 13h, AH = 00h, Reset Diskette System, before invoking other CBIOS Diskette functions.
- 4. If using ABIOS and the last Diskette Service function call was to CBIOS, request ABIOS Diskette Service function 05h, Reset Diskette System, before invoking other ABIOS Diskette Service functions.
- 5. After ABIOS is initialized, the first ABIOS Diskette Service function request must be function 05h, Reset Diskette System.

#### Logical IDs for diskette drives

All diskette drives may share the same Logical ID with each drive assigned a separate unit number. For example, all diskette drives may be Logical ID 11. Diskette drive 0 may be Logical ID 11, Unit 0 and diskette drive 1 may be Logical ID 11, Unit 1.

#### Diskette Change Line signal

Some diskette drives are equipped with a Diskette Change Line signal that is set when the diskette drive door is opened. The Diskette Change Line signal has two states, set and not set:

#### ■ set

The diskette has been changed or the diskette drive door is open. Diskette data cannot be read or written in this state. Diskette media status cannot be determined while the Change Line is set.

#### ■ not set

The diskette drive door is closed, information can be read from and written to the diskette, and all status information can be read and modified.

#### Testing the Diskette Change Line signal status

The Diskette Change Line signal status is tested by the ABIOS Diskette Service before functions 08h Read Diskette, 09h Write to Diskette, 0Ah Format Diskette, or 0Bh Verify Diskette Data are processed.

Function 03h Read Device Parameters may be requested to determine if the Diskette Change Line signal status is supported by the specified diskette drive.

continued

ABIOS Diskette Service 191

# **Summary of Diskette Service functions**

Function	Description
00h	Default Interrupt Handler
01h	Return Logical ID Parameters
02h	Reserved
03h	Read Device Parameters
04h	Set Device Parameters
05h	Reset/Initialize Diskette Subsystem
06h	Reserved
07h	Disable Diskette
08h	Read Diskette
09h	Write to Diskette
0Ah	Format Diskette
0Bh	Verify Diskette Sectors
0Ch	Read Media Parameters
0Dh	Set Media Type for Format
0Eh	Read Change Line Signal Status
0Fh	Turn Diskette Motor Off
10h	Interrupt Status

# In this chapter

This chapter includes information about the following topics:

- Hardware Environment
- Error Handling
- ABIOS Diskette Service functions

#### Hardware Environment

#### Hardware interrupt

The ABIOS Diskette Service is associated with hardware interrupt request 6 (IRQ 6).

#### Diskette controller

The ABIOS supports an NEC 765 or equivalent diskette controller. Also, additional hardware support for data separation, interrupt, and DMA control is required.

#### Data transfer rates

All supported formats must use a 512-byte sector size. Data transfer rates supported are:

Transfer Rate (Kbs)*	Diskette Capacity	Drive Capacity	Drive Size
250Kbs	360K	360K	5.25
250Kbs	720K	720K	3.5
500Kbs	1.2MB	1.2MB	5.25
300Kbs	360K	1.2MB	5.25
250Kbs	720K	1.44MB	3.5
500Kbs	1.44MB	1.44MB	3.5

continued

ABIOS Diskette Service 193

### Supported drive types

The ABIOS supports a maximum of two diskette drives. The Phoenix ABIOS supports both 5.25 inch and 3.5 inch diskette drives. The IBM ABIOS supports only 3.5 inch diskette drives.

The Phoenix ABIOS Diskette Service supports four types of diskette drives:

Maximum Storage Capacity	Disk Size (inches)	Maximum Tracks/Side	Maximum Sectors/Track
1.44 MB	3.5	80	18
720K	3.5	40	18
360K	5.25	40	9
1.2 MB	5.25	80	15

### 5.25 inch diskette compatibility

5.25 inch diskette media can be high density (1.2 MB) or double density (360K). Diskettes written to on one type of 5.25 inch drive may or may not be written to or read from using the other type. The following table outlines the possible read/write combinations of 5.25 inch diskette media and drive types.

Media Type	If diskette was formatted on	Then it can be read on	or	And it can be written to by
360K	360K drive	360K drives	1.2 MB drives	360K drives only
1.2 MB	360K drive	360K drives	1.2 MB drives	360K drives only

If a high density (1.2 MB) diskette is formatted on a 1.2 MB drive, it can only be read from and written to by 1.2 MB drives.

The DOS command, format/4, can be used to format a 360K diskette in a 1.2 MB drive. Both 1.2 MB and 360K drives can generally read and write these diskettes.

### Hardware Environment, Continued

### 3.5 inch diskette compatibility

The following outlines the possible read/write combinations for 3.5 inch drives and media:

- If a 720K media type diskette is formatted on a 720K drive, it can be read on either 720K or 1.44 MB drives, but it can only be written to by 720K drives.
- If a 1.44 MB media type diskette is formatted on a 1.44 MB drive, it can only be read from and written to by 1.44 MB drives.

## **Error Handling**

#### How errors are reported

ABIOS signals the status (Successful, Resume Stage after Interrupt, etc.) of each ABIOS request by returning a one word Return Code at offset 0Ch in the Request Block.

If Bit 15 of the Return Code field is set, the diskette function requested has an error. The caller's Return Code handler routine should test Bits 14, 13, 12, and 8 to determine the class of error that has occurred, and should then test the remaining bits to determine the precise nature of the error.

#### Retryable diskette errors

When Bit 8 (Retryable Error) of the Return Code is set, the request should be retried. The recommended number of retries is returned by Diskette function 03h, Read Device Parameters (in offset 2Bh in the Request Block).

## Function: 00h — Default Interrupt Handler

## **Description**

Function 00h, Default Interrupt Handler, is a single-staged request. It handles unexpected hardware interrupts by resetting the interrupt at the device level.

### How function is requested

When the Logical ID associated with the ABIOS Diskette Service has no outstanding Request Blocks waiting for an interrupt and an unexpected hardware interrupt occurs, the operating system must build a Request Block in the format below and call function 00h to turn off the interrupt at the diskette controller level.

### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (10h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0000h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
0005h	Not My Interrupt, Resume Stage after Interrupt
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 01h — Return Logical ID Parameters

## Description

This function is a single-staged request that returns the parameters for the Diskette Logical ID.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (20h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0001h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word		
0Ch	Word		Return Code
0Eh	Word		
10h	Byte		Hardware Interrupt Level (06h)
11h	Byte		Arbitration Level (02h)
12h	Word		Device ID (0001h)
14h	Word		Count of Units
16h	Word		Logical ID Flags
			Bits 15-4 = Reserved Bit 3 = 0 No overlap across units Bit 2 = 0 Reserved Bits 1-0 = Transfer Data Pointer Mode: 10b = Physical Pointer Required
18h	Word		Request Block Length (for other functions)
1Ah	Byte	Reserved (initialize to 0000h)	Secondary Device ID
1Bh	Byte		Revision Level
1Ch	Word	Reserved (initialize to 0000h)	
1Eh	Word	Reserved (initialize to 0000h)	
3Ah	Byte		Diskette Controller Status Byte

continued

## **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 03h — Read Device Parameters

## Description

This function is a single-staged request. It returns the parameters for this device in the Request Block as specified below. The information returned applies to the maximum capacity of the media for the specified drive type. The ABIOS resets the diskette subsystem if there is a hardware error.

### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0003h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word		Return Code
0Eh	Word		Time-out Value
10h	Word		Sectors per track for the maximum media density supported by the drive
12h	Word		Sector Size in bytes  00h = Reserved  01h = 256 bytes/sector  02h = 512 bytes/sector  (Default)
14h	Word		Device Control Flags  Bits 15-4 = Reserved  Bit 3 = Recalibrate status 0 Recalibrate not required 1 Recalibrate required Bit 2 = Concurrent operations 0 Not supported 1 Not supported 1 Supported 1 Not supported

continued

# Function: 03h — Read Device Parameters, Continued

## Request Block Structure, cont'd

Offset	Size	Input:	Output:
16h	Word		Diskette Drive Type  00h = Drive not present/invalid
18h	Word	Reserved (Initialize to 0000h)	Reserved
1Ch	DWord		Delay Before Turning Motor Off (microseconds)
20h	DWord		Motor Startup Time (microseconds)
26h	Word		Number of Cylinders on the Maximum-Density Media the Drive Supports
2Ah	Byte		Number of Heads
2Bh	Byte		Recommended Number of Software Retries
2Ch	Byte		Fill Byte for Format
2Dh	DWord		Head Settle Time (microseconds)
31h	Byte		Gap Length for Read/Write/Verify
32h	Byte		Gap Length for Format
33h	Byte		Data Length
3Ah	Byte		Disk Controller Status Byte

## Function: 03h — Read Device Parameters, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
8000h	Device Busy, Request Refused
8001h	Diskette Not Started
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 04h — Set Device Parameters

### Description

This function is a single-staged request. It is used to change the default Sector Size (512 bytes), Gap Length, and Data Length for diskette I/O functions.

If a diskette is formatted with a sector size other than 512 bytes, this function must be issued before executing functions 08h Read Diskette, 09h Write to Diskette, 0Ah Format Diskette, or 0Bh Verify Diskette Data.

The ABIOS resets the diskette subsystem if there is a hardware error.

### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0004h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Word	Reserved (Initialize to 0000h)	
12h	Word	Size of sector (bytes)	
		00h = Reserved 01h = 256 bytes per sector 02h = 512 bytes per sector (default)	
31h	Byte	Gap Length for Read/Write/Verify	
33h	Byte	Data Length	

## Function: 04h — Set Device Parameters, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
8000h	Device Busy, Request Refused
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Sector Size
FFFFh	Return Code Field Not Valid

## Function: 05h — Reset/Initialize Diskette Subsystem

### Description

This function is a discrete multistaged request. It resets the diskette controller to a known state, which generates an interrupt to which the caller must respond and forces a recalibration of the diskette drive(s) on the next access to each drive. The ABIOS resets the diskette subsystem if there is a hardware error.

### If using both ABIOS and CBIOS Diskette Services

If a CBIOS Diskette Service function has been requested last, the caller must request ABIOS Diskette function 05h before requesting any other Diskette function.

If ABIOS has just been initialized, the caller must request this function to set the diskette subsystem to a known state.

continued

### Testing the Diskette Change Line signal status

The Diskette Change Line signal status is tested by the ABIOS Diskette Service before functions 08h Read Diskette, 09h Write to Diskette, 0Ah Format Diskette, or 0Bh Verify Diskette Data are processed.

Function 03h Read Device Parameters may be requested to determine if the Diskette Change Line signal status is supported by the specified diskette drive.

### Diskette Change Line signal

The Diskette Change Line signal has two states: set and not set.

#### ■ Set

The diskette has been changed or the diskette drive door is open. Diskette data cannot be read or written in this state. Diskette media status cannot be determined while the Change Line is set.

#### ■ Not set

The diskette drive door is closed, information can be read from and written to the diskette, and all status information can be read and modified.

#### Turning off the diskette motor

If it is known that the requested function is the last diskette operation and the Return Code is 0000h Successful Operation, the caller can turn off the diskette motor by requesting function 0Fh, Turn Diskette Motor Off. The recommended turn-off delay value can be found by requesting function 03h, Read Device Parameters.

#### Track switching

The ABIOS Diskette Service does not support a switch from head 1 of a diskette cylinder to head 0 of the next cylinder. However, it allows you to cross track boundaries if you switch from head 0 to head 1 on the same cylinder.

## Switching between ABIOS and CBIOS

Request this function after switching from CBIOS to ABIOS and before invoking any other ABIOS Diskette Service functions.

### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0005h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Word	Reserved (Initialize to 0000h)	

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
8000h	Device Busy, Request Refused
9009h	Controller Failure in Reset Operation
A120h	Controller Failure
B020h	Controller Failure
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Function: 07h — Disable Diskette

## **Description**

This function is a single-staged request that disables the diskette interrupt. ABIOS reads the diskette controller result bytes and returns them at offsets 3Ah and 3Bh in the Request Block and then shuts down the diskette interrupt. The ABIOS resets the diskette subsystem if there is a hardware error.

### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	7
04h	Word	Unit	
06h	Word	Function (0007h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Word	Reserved (Initialize to 0000h)	
3Ah	Word		Diskette Result Byte 0 (Status Register 0), where:  Bits 7-6 = Interrupt Code 00b = Command ends normally 01b = Commands ends abnormally 10b = Invalid command 11b = Ready Line state changed Bit 5 = 1 Seek End Bit 4 = 1 Equipment Check Bit 3 = 1 Not Ready Bit 2 = 1 Head Address Bit 1 = 1 Unit 1 selected Bit 0 = 1 Unit 0 selected
3Bh	Word		Diskette Result Byte 1 (Present Cylinder Number)

## **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
8000h	Device Busy, Request Refused
9009h	Controller Failure in Reset Operation
9120h	All Diskette Controller Register Bytes Not Read
9180h	Either Data is Not Ready Or the Transfer Direction is Incorrect
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

### Description

This function is a discrete multistaged request that reads data from the specified cylinder, head, and sector number on the specified diskette drive to the memory location specified in Data Pointer 2, if the Diskette Change Line signal status is not set (the diskette door is closed).

If a diskette is formatted with a sector size other than 512 bytes, function 04h Set Device Parameters must be issued, resetting the sector size, before executing this function.

The ABIOS resets the diskette subsystem if there is a hardware error.

### Turning off the diskette motor

If it is known that the requested function is the last diskette operation and the Return Code is 0000h Successful Operation, the caller can turn off the diskette motor by requesting function 0Fh, Turn Diskette Motor Off. The recommended turn-off delay value can be found by requesting function 03h, Read Device Parameters.

### Track switching

The ABIOS Diskette Service does not support a switch from head 1 of a diskette cylinder to head 0 of the next cylinder. However, it allows you to cross track boundaries if you switch from head 0 to head 1 on the same cylinder.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0008h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Word	Reserved (Initialize to 0000h)	
12h	DWord	Reserved	1
16h	Word	Reserved (Initialize to 0000h)	1
18h	Word	Reserved (Initialize to 0000h)	
1Ah	DWord	Data pointer 2 (32-bit physical address required)	
1Eh	Word	Reserved (Initialize to 0000h)	]
20h	DWord		Time to wait before continuing request (microseconds) — Valid only if Return Code is 0002h.
24h	Word	Number of sectors to read	Number of sectors read
26h	Word	Cylinder number (0-based)	
2Ah	Byte	Head number (0-based)	]
31h	Word	Sector number	

continued

## **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description	
0000h	Successful Operation	
	If the Number of Sectors to Read field is zero, no action is performed and this Code is generated.	
0001h	Resume Stage after Interrupt	
0002h	Resume Stage after Time Delay	
8000h	Device Busy, Request Refused	
8003h	Write Attempted on Write-Protected Diskette	
8006h	Media Changed	
	Generated if the ABIOS can reset the Diskette Change Line signal to not set; data may be transmitted.	
800Dh	Media Not Present	
	Generated if the ABIOS cannot reset the Diskette Change Line signal to not set; no data is transferred.	
9009h	Controller Failure in Reset Operation	
9102h	Address Mark Not Found	
9104h	Requested Sector Not Found	
9108h	DMA Overrun on Operation	
9110h	Bad CRC on Diskette Read	
9120h	Controller Fallure	
9140h	Seek Operation Falled	
9180h	Error	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit	
C004h	Invalid Request Block Length	
C00Ch	Unsupported Media Type/Unestablished Media	
FFFFh	Return Code Field Not Valid	

Function: 09h — Write to Diskette

### Description

This function is a discrete multistaged request that writes the specified number of sectors of data from the memory location specified by Data Pointer 2 to the specified cylinder, head, and sector number on the specified diskette drive if the diskette Change Line signal status is not set (the diskette door is closed).

If a diskette used in the system's diskette drive(s) was formatted with a sector size other than 512 bytes, function 04h Set Device Parameters must be issued, resetting the sector size, before executing function 09h Write to Diskette.

The ABIOS resets the diskette subsystem if there is a hardware error.

#### Turning off the diskette motor

If it is known that the requested function is the last diskette operation for awhile and the Return Code is 0000h Successful Operation, the caller can turn off the diskette motor by requesting function 0Fh, Turn Diskette Motor Off. The recommended turn-off delay value can be found by requesting function 03h, Read Device Parameters.

#### Track switching

The ABIOS Diskette Service does not support a switch from head 1 of a diskette cylinder to head 0 of the next cylinder. However, it allows you to cross track boundaries if you switch from head 0 to head 1 on the same cylinder.

# Function: 09h — Write to Diskette, Continued

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (0009h)	]
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Word	Reserved (Initialize to 0000h)	
12h	DWord	Reserved	]
16h	Word	Reserved (Initialize to 0000h)	]
18h	Word	Reserved (Initialize to 0000h)	]
1Ah	DWord	Data pointer 2 (32-bit physical address required)	
1Eh	Word	Reserved (Initialize to 0000h)	
20h	DWord		Time to wait before continuing request (microseconds) — Valid only if Return Code is 0002h.
24h	Word	Number of sectors to write	Number of sectors written
26h	Word	Cylinder number (0-based)	
2Ah	Byte	Head number (0-based)	7
31h	Word	Sector number	]

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description	
0000h	Successful Operation If the Number of Sectors to Read field is zero, no action is performed and this Code is generated.	
0001h	Resume Stage after Interrupt	
0002h	Resume Stage after Time Delay	
8000h	Device Busy, Request Refused	
8003h	Write Attempted on Write-Protected Diskette	
8006h	Media Changed  Generated if the ABIOS can reset the Diskette Change Line signal to not set; data may be transmitted.	
800Dh	Media Not Present  Generated if the ABIOS cannot reset the Diskette Change Line signal to not set; no data is transferred.	
9009h	Controller Failure in Reset Operation	
9102h	Address Mark Not Found	
9104h	Requested Sector Not Found	
9108h	DMA Overrun on Operation	
9110h	Bad CRC on Diskette Read	
9120h	Controller Failure	
9140h	Seek Operation Falled	
9180h	Error	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit	
C004h	Invalid Request Block Length	
C00Ch	Unsupported Media Type/Unestablished Media	
FFFFh	Return Code Field Not Valid	

Function: 0Ah — Format Diskette

### Description

This function is a discrete multistaged request that formats the media in the specified drive if the Diskette Change Line signal status is not set (the diskette drive door is closed).

If a diskette is formatted with a sector size other than 512 bytes, function 04h Set Device Parameters must be issued, resetting the sector size, before executing function 0Ah Format Diskette.

The ABIOS resets the diskette subsystem if there is a hardware error.

### Formatting a diskette

To format a diskette:

- Construct a table with one entry (the Address field) for each sector on the track. The table entries (Address fields) must have the format described below.
- Place the table in a buffer and place the address of the buffer in Data Pointer 2.
- Request function 0Dh Set Media Type for Format. The field ID for each sector is written sequentially from the buffer to each sector in the specified track.

#### Address field format

Each Address field consists of the following four bytes, in order:

- Track number (C)
- Head number (H)
- Sector number (R)
- Sector size (N)

Each sector on the track must be represented by one entry, consisting of one byte each containing the data items above, in order, in the buffer pointed to by Data Pointer 2.

### Function: 0Ah — Format Diskette, Continued

#### **Return Code Processing**

If the Return Code is 8006h Media Changed or 800Dh Media Not Present, request function 0Dh Set Media Type for Format before invoking function 0Ah Format Diskette again.

### Turning off the diskette motor

If it is known that the requested function is the last diskette operation and the Return Code is 0000h Successful Operation, the caller can turn off the diskette motor by requesting function 0Fh, Turn Diskette Motor Off. The recommended turn-off delay value can be found by requesting function 03h, Read Device Parameters.

#### Track switching

The ABIOS Diskette Service does not support a switch from head 1 of a diskette cylinder to head 0 of the next cylinder. However, it allows you to cross track boundaries if you switch from head 0 to head 1 on the same cylinder.

continued

# Function: 0Ah — Format Diskette, Continued

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	]
06h	Word	Function (000Ah)	]
08h	Word	Reserved (initialize to 0000h)	]
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Word	Reserved (Initialize to 0000h)	
12h	DWord	Reserved	
16h	Word	Reserved (Initialize to 0000h)	
18h	Word	Reserved (Initialize to 0000h)	
1Ah	DWord	Data pointer 2 (32-bit physical)	
1Eh	Word	Reserved (Initialize to 0000h)	
20h	DWord		Time to wait before continuing request (microseconds). Valid only if Return Code is 0002h.
24h	Word	Subfunction number	
26h	Word	Cylinder number (0-based)	]
2Ah	Byte	Head number (0-based)	

### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description	
0000h	Successful Operation If the Number of Sectors to Read field is zero, no action is performed and this Code is generated.	
0001h	Resume Stage after Interrupt	
0002h	Resume Stage after Time Delay	
8000h	Device Busy, Request Refused	
8003h	Write Attempted on Write-Protected Diskette	
8006h	Media Changed  Generated if the ABIOS can reset the Diskette Change Line signal to not set; data may be transmitted.	
800Dh	Media Not Present  Generated if the ABIOS cannot reset the Diskette Change Line signal to not set; no data is transferred.	
9009h	Controller Failure in Reset Operation	
9102h	Address Mark Not Found	
9104h	Requested Sector Not Found	
9108h	DMA Overrun on Operation	
9110h	Bad CRC on Diskette Read	
9120h	Controller Failure	
9140h	Seek Operation Failed	
9180h	Error	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit	
C004h	Invalid Request Block Length	
C00Ch	Unsupported Media Type/Unestablished Media	
FFFFh	Return Code Field Not Valid	

## Function: 0Bh — Verify Diskette Sectors

### Description

This function is a discrete multistaged request that verifies the data residing on the specified number of sectors on the specified cylinder number, head number, and sector number on the drive if the the diskette drive door is closed. The data is not read, but is determined to be accurate.

If a diskette used in the system's diskette drive(s) was formatted with a sector size other than 512 bytes, function 04h Set Device Parameters must be issued, resetting the sector size, before executing this function.

The ABIOS resets the diskette subsystem if there is a hardware error.

#### Turning off the diskette motor

If it is known that the requested function is the last diskette operation and the Return Code is 0000h Successful Operation, the caller can turn off the diskette motor by requesting function 0Fh, Turn Diskette Motor Off. The recommended turn-off delay value can be found by requesting function 03h, Read Device Parameters.

#### Track switching

The ABIOS Diskette Service does not support a switch from head 1 of a diskette cylinder to head 0 of the next cylinder. However, this service will allow you to cross track boundaries if you switch from head 0 to head 1 on the same cylinder.

# Function: 0Bh — Verify Diskette Sectors, Continued

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Bh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
16h	Word	Reserved (Initialize to 0000h)	
1Eh	Word	Reserved (Initialize to 0000h)	
20h	DWord		Time to wait before continuing request (microseconds). Valid only if Return Code is 0002h.
24h	Word	Number of sectors to verify	Number of sectors verified
26h	Word	Cylinder number (0-based)	77
2Ah	Byte	Head number (0-based)	7
31h	Word	Sector number	

continued

### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description	
0000h	Successful Operation If the Number of Sectors to Read field is zero, no action is performed and this Code is generated.	
0001h	Resume Stage after Interrupt	
0002h	Resume Stage after Time Delay	
8000h	Device Busy, Request Refused	
8003h	Write Attempted on Write-Protected Diskette	
8006h	Media Changed  Generated if the ABIOS can reset the Diskette Change Line signal to not set; data may be transmitted.	
800Dh	Media Not Present  Generated if the ABIOS cannot reset the Diskette Change Line signal to not set; no data is transferred.	
9009h	Controller Failure in Reset Operation	
9102h	Address Mark Not Found	
9104h	Requested Sector Not Found	
9108h	DMA Overrun on Operation	
9110h	Bad CRC on Diskette Read	
9120h	Controller Failure	
9140h	Seek Operation Failed	
9180h	Error	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit	
C004h	Invalid Request Block Length	
C00Ch	Unsupported Media Type/Unestablished Media	
FFFFh	Return Code Field Not Valid	

## Function: 0Ch — Read Media Parameters

### Description

This function is a discrete multistaged request. It returns the parameters of the media used in the preceding diskette function, if the Diskette Change Line signal status is not set.

This function is intended to be used after requests for either function 08h Read Diskette, 09h Verify Diskette, or 0Ah Format Diskette.

The ABIOS resets the diskette subsystem if there is a hardware error.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Ch)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Word		Number of sectors per track
12h	Word		Size of sector (bytes)
			00h
16h	Word	Reserved (Initialize to 0000h)	
26h	Word		Number of cylinders
2Ah	Byte		Number of heads
31h	Byte		Gap Length for Read/Write/Verify
32h	Byte		Gap Length for format
33h	Byte		Data Length

### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

г	
Code	Description
0000h	Successful Operation
	If the Number of Sectors to Read field is zero, no action is performed and this Code is generated.
0001h	Resume Stage after Interrupt
0002h	Resume Stage after Time Delay
8000h	Device Busy, Request Refused
8003h	Write Attempted on Write-Protected Diskette
8006h	Media Changed
	Generated if the ABIOS can reset the Diskette Change Line signal to not set.
800Dh	Media Not Present
	Generated if the ABIOS cannot reset the Diskette Change Line signal to not set.
9009h	Controller Failure in Reset Operation
9102h	Address Mark Not Found
9104h	Requested Sector Not Found
9108h	DMA Overrun on Operation
9110h	Bad CRC on Diskette Read
9120h	Controller Failure
9140h	Seek Operation Failed
9180h	Error
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit
C004h	Invalid Request Block Length
C00Ch	Unsupported Media Type/Unestablished Media
FFFFh	Return Code Field Not Valid

## Function: 0Dh — Set Media Type for Format

### Description

This function is a single-staged request that sets the media information used in the format function. This information includes the number of tracks and the number of sectors per track. These parameters are used until changed by function 04h Set Device Parameters, or until the drive door is opened (changing the Change Line signal status to set).

The ABIOS resets the diskette subsystem if there is a hardware error.

Warning: If the sector size is changed by this function, the caller must restore the sector size to its original value by invoking function 04h Set Device Parameters immediately after using function 0Dh.

### ABIOS diskette processing

If the diskette has been changed since the last time function 0Dh was requested and a diskette is in the drive, the ABIOS sets the specified parameters and resets the Diskette Change Line signal to not set.

Note: request this function before invoking function 0Ah Format Diskette.

# Function: 0Dh — Set Media Type for Format, Continued

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Dh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Word	Number of sectors per track	
12h	Word	Size of sector (bytes)	
		01h = 256 bytes per sector 02h = 512 bytes per sector	
16h	Word	Reserved (Initialize to 0000h)	
20h	DWord		Time to wait before continuing request (microseconds). Valid only if Return Code is 0002h.
26h	Word	Number of tracks to format	
2Ch	Byte	Fill byte for format	
32h	Byte	Gap Length for format	

# Function: 0Dh — Set Media Type for Format, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation If the Number of Sectors to Read field is zero, no action is performed and this Code is generated.
8000h	Device Busy, Request Refused
8006h	Media Changed  Generated if the ABIOS can reset the Diskette Change Line signal to not set; data may be transmitted.
800Dh	Media Not Present  Generated if the ABIOS cannot reset the Diskette Change Line signal to not set (the diskette drive door is open); no data is transferred.
800Fh	Invalid Value in CMOS RAM
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Diskette Parameter
C00Ch	Unsupported Media Type/Unestablished Media Invalid input in the Number of Tracks to Format or Number of Sectors Per Track fields causes this code to be set.
FFFFh	Return Code Field Not Valid

## Function: 0Eh — Read Change Line Signal Status

### Description

This function is a single-staged request. It determines if the drive door of the specified diskette drive has been opened since the last time the change line was cleared. The Change Line Signal Status field is valid only if the specified drive supports the Diskette Change Line signal. Function 03h, Read Device Parameters specifies if the Change Line signal status is supported.

The ABIOS resets the diskette subsystem if there is a hardware error.

This function does not clear the Diskette Change Line signal.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (000Eh)	]
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Byte	1	Change Signal Status, where:
			00h = Change signal not set 06h = Change signal set
16h	Word	Reserved (Initialize to 0000h)	

## Function: 0Eh — Read Change Line Signal Status, Continued

### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
8000h	Device Busy, Request Refused
800Eh	Change Line Signal Not Available
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 0Fh — Turn Diskette Motor Off

## Description

This function is a single-staged request that turns off the diskette drive motor for the specified diskette drive. The caller should request this function when the 0000h Successful Operation Return Code is set for those functions that may turn the motor on:

- 05h Reset/Initialize Diskette
- 08h Read Diskette
- 09h Write to Diskette
- 0Ah Format Diskette
- 0Bh Verify Diskette Data

The ABIOS resets the diskette subsystem if there is a hardware error.

### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Fh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
16h	Byte	Reserved (Initialize to 0000h)	

## Function: 0Fh — Turn Diskette Motor Off, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
8000h	Device Busy, Request Refused
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 10h — Interrupt Status

#### Description

This function is a single-staged request that returns the diskette interrupt pending status. This function does not reset the interrupt condition.

The ABIOS resets the diskette subsystem if there is a hardware error.

### Track switching

The ABIOS Diskette Service does not support a switch from head 1 of a diskette cylinder to head 0 of the next cylinder. However, it allows you to cross track boundaries if you switch from head 0 to head 1 on the same cylinder.

continued

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0010h)	]
08h	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte		Interrupt Pending Status  00h = No interrupt 01h = Interrupt pending
16h	Word	Reserved (initialize to 0000h)	

## **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
8000h	Device Busy, Request Refused
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Chapter 9 ABIOS Fixed Disk Service

## Overview

## **Description**

The ABIOS Fixed Disk Service provides access to fixed disk I/O through a series of function requests. All ABIOS Fixed Disk Service functions disable interrupts upon completion.

## **DMA** interface

The ABIOS Fixed Disk Service accesses the ABIOS DMA Service. If the ABIOS Fixed Disk Service is used, the ABIOS DMA Service must also be initialized.

## Rules for using the PS/2 BIOS fixed disk services

Because the CBIOS and ABIOS interface with different operating systems, either the CBIOS or ABIOS Fixed Disk Service may place fixed disk hardware in an unknown state. The CBIOS does not inform the ABIOS of the fixed disk hardware state when control is passed from the CBIOS to the ABIOS, and vice versa. As a result, it is possible for one part of the PS/2 ROM BIOS to put the fixed disk hardware in a state that will not be recognized by the other part of the BIOS.

Follow the rules listed below to avoid fixed disk problems in the PS/2 BIOS:

- 1. If there is an outstanding ABIOS Fixed Disk function request, do not request a CBIOS Fixed Disk function.
- 2. If there is an outstanding CBIOS Fixed Disk function request, do not request an ABIOS Fixed Disk function.
- If using CBIOS and the last Fixed Disk Service function call was to ABIOS, request INT 13h, AH = 0Dh, Alternate Reset Fixed Disk System, before invoking other CBIOS Fixed Disk functions.
- 4. If using ABIOS and the last Fixed Disk Service function call was to CBIOS, request ABIOS Fixed Disk Service function 05h, Reset Fixed Disk System, before invoking other ABIOS Fixed Disk Service functions.
- 5. After ABIOS is initialized, the first ABIOS Fixed Disk Service function request must be function 05h, Reset Fixed Disk System.

#### Fixed disk drive access

In the ABIOS, fixed disk drives are specified by Logical ID. All fixed disk drives may share the same Logical ID, with each drive assigned a separate unit number. For example, all fixed disk drives may be Logical ID 11; fixed disk drive 0 may be Logical ID 11, Unit 0 and fixed disk drive 1 may be Logical ID 11, Unit 1.

## Fixed Disk Relative Block addressing

The ABIOS Fixed Disk Service functions 08h, 09h, 0Ah, and 0Bh require Relative Block Addresses as input in the Request Block that invokes these functions. An RBA is constructed of three elements. The derivation of these elements is as follows:

- 1. Multiply the Number of Sectors Per Track times the Head Number times the Cylinder Number to arrive at the first element of the RBA.
- Multiply the Number of Sectors Per Track times the Head Number for the second element of the RBA.
- 3. The third element is the Sector ID minus one.

Add all three elements together to arrive at the RBA.

Relative Block Addresses begin at zero. In relative block addressing the first data block is at location 0 on the fixed disk (Cylinder 0, Head 0, Sector 1).

## Relative Block Address input

Function 03h Read Device Parameters of the ABIOS Fixed Disk Service returns actual physical values for the number of sectors per track, number of heads, and number of cylinders. When multiplied together, these three values indicate the number of Relative Block Addresses on the fixed disk. The largest Relative Block Address is one less than that number.

continued

ABIOS Fixed Disk Service 233

## Summary of ABIOS Fixed Disk Service functions

Function	Description
00h	Default Interrupt Handler
01h	Return Logical ID Parameters
02h	Reserved
03h	Read Device Parameters
04h	Reserved
05h	Reset/Initialize Fixed Disk
06h-07h	Reserved
08h	Read Fixed Disk
09h	Write to Fixed Disk Drive
0Ah	Write and Verify Fixed Disk
0Bh	Verify Fixed Disk Data
0Ch	Fixed Disk Interrupt Status

## In this chapter

This chapter includes information about the following topics:

- Hardware Environment
- Fixed Disk Service Parameters Table
- Error Handling
- ABIOS Fixed Disk Service functions

## Hardware Environment

#### Fixed disk controller

The ABIOS supports up to two fixed disks. The ABIOS supports a PS/2-compatible ST506 fixed disk adapter. The ST506 adapter is single-tasking and must complete one operation before starting another, even though the next operation may be for the other fixed disk. The hardware interrupt request for fixed disk is 14.

RLL and ESDI fixed disk controllers may also be supported by the ABIOS.

#### **Data Transfer characteristics**

The standard data transfer rate for the fixed disks is 500 kilobits per second (Kbs). The largest contiguous block of data that can be transferred at any one time is 255 sectors. The time-out value for all fixed disk functions is 22 seconds.

ABIOS Fixed Disk Service 235

## Fixed Disk Service Parameters Table

#### Table of fixed disk definitions

The defined entries into the Fixed Disk Parameters table are listed below. Wherever possible, the manufacturer name and model number associated with a given drive type are listed in the column, "Manufacturer."

Туре	Manufacturer	Cyl.	Heads	Write Precomp	Landing Zone	Sectors/ Track	Defect Map
1	IBM 10 MB	306	4	128	305	17	No
2	IBM 20 MB Seagate ST-225 CDC Wren II 9415-5-25 Miniscribe 8438F	615	4	300	615	17	No
3	IBM 30 MB	615	6	300	615	17	No
4	IBM 62 MB	940	8	512	940	17	No
5	IBM 46 MB	940	6	512	940	17	No
6	IBM 20 MB Miniscribe MS 8425 Seagate ST4026 Tandon TM 262 Tandon TM 702AT	615	4	0FFFFh*	615	17	No
7	IBM 30 MB	462	8	256	511	17	No
8	IBM 30 MB Seagate ST-4038 CDC Wren II 9415-5-38 Tandon TM 703AT	733	5	0FFFFh*	733	17	No
9	IBM 112 MB	900	15	0FFFFh*	901	17	No
10	IBM 20 MB	820	3	0FFFFh*	820	17	No
11	IBM 35 MB	855	5	0FFFFh*	855	17	No
12	IBM 49 MB	855	7	0FFFFh*	855	17	No
13	IBM 20 MB	306	8	128	319	17	No

<sup>\*</sup> If a table entry contains 0FFFFh for Write Precompensation, then there is no write precompensation for this disk. If the Write Precompensation is zero, then there is write precompensation for all cylinders.

# Fixed Disk Service Parameters Table, Continued

Table of fixed disk definitions, cont'd

Туре	Manufacturer	Cyl.	Heads	Write Precomp	Landing Zone	Sectors/ Track	Defect Map
14	IBM 42 MB	733	7	0FFFFh*	733	17	No
15			Not	used			
16	IBM 20 MB	612	4	0*	663	17	No
17	IBM 40 MB	977	5	300	977	17	No
18	IBM 56 MB	977	7	0FFFFh*	977	17	No
19	IBM 59 MB	1024	7	512	1023	17	No
20	IBM 30 MB	733	5	300	732	17	No
21	IBM 42 MB	733	7	300	732	17	No
22	IBM 30 MB	733	5	300	733	17	No
23	IBM 10 MB	306	4	0*	336	17	No
24	IBM 20 MB	612	4	305	663	17	No
25	IBM 10 MB	306	4	0FFFFh*	340	17	No
26	IBM 20 MB	612	. 4	0FFFFh*	670	17	No
27	IBM 40.5 MB	698	7	300	732	17	Yes
28	IBM 40.5 MB	976	5	488	977	17	Yes
29	IBM 10 MB	306	4	0FFFFh*	340	17	No
30	IBM 20 MB	611	4	306	663	17	Yes
31	IBM 42.5 MB	732	7	300	732	17	Yes
32	IBM 42.5 MB	1023	5	0FFFFh*	1023	17	Yes

<sup>\*</sup> If a table entry contains 0FFFFh for Write Precompensation, then there is no write precompensation for this disk. If the Write Precompensation is zero, then there is write precompensation for all cylinders.

## **Error Handling**

## How errors are reported

ABIOS signals the status (Successful, Resume Stage after Interrupt, etc.) of each ABIOS request by returning a one word Return Code at offset 0Ch in the Request Block.

If Bit 15 of the Return Code field is set, the fixed disk function requested has an error. The caller's Return Code handler routine should then test Bits 14, 13, 12, and 8 to determine the class of error that has occurred. The return code handler routine should then test the remaining bits to determine the precise nature of the error.

## Retryable fixed disk errors

When Bit 8 (Retryable Error) of the Return Code is set, the request should be retried. The recommended number of retries is returned by Diskette function 03h, Read Device Parameters (in offset 1Dh in the Request Block).

# Function: 00h — Default Interrupt Handler

### Description

This function is a single-staged request that handles unexpected hardware interrupts by resetting the interrupt at the device level. It is invoked through the interrupt routine.

## When invoked

This function is invoked by calling the interrupt routine with a function code of 0000h. It is only invoked if a given Logical ID has no outstanding Request Blocks waiting for an interrupt.

### Request Block Structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	2.9
04h	Word	Unit	
06h	Word	Function (0000h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description	
0000h	Successful Operation	
0005h	Not My Interrupt, Resume Stage after Interrupt	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
FFFFh	Return Code Field Not Valid	

ABIOS Fixed Disk Service 239

# Function: 01h — Return Logical ID Parameters

## Description

This function is a single-staged request that returns the parameters for the specified Logical ID.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (20h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0001h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte		Hardware Interrupt Level (14h, 0Eh)
11h	Byte		Arbitration Level (00h through 0Eh)
12h	Word		Device ID (0002h)
14h	Word		Count of Units
16h	Word		Logical ID Flags
			Bits 15-4 = Reserved Bit 3 = 0 No overlap across units Bit 2 = 0 Reserved Bits 1-0 = Transfer Data Pointer Mode 10b= Physical Pointer Required
18h	Word		Request Block Length (for other functions)
1Ah	Byte	Reserved (initialize to 0000h)	Secondary Device ID
1Bh	Byte		Revision Level
1Ch	Word	Reserved (initialize to 0000h)	
1Eh	Word	Reserved (initialize to 0000h)	1

# Function: 01h — Return Logical ID Parameters, Continued

## **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Function: 02h — Reserved

## Function: 03h — Read Device Parameters

## Description

This function is a single-staged request that returns the parameters for this device in the Request Block as specified below. The information returned applies to the maximum capacity of the media for the specified drive type. All ABIOS Fixed Disk Service functions disable interrupts upon completion.

#### Software retries

This function returns a recommendation for the Number of Retries (at offset 1Dh) performed by the caller when a Retryable error (Bit 8 in the Return Code field) is set.

#### Fixed disk hardware error conditions

The ABIOS resets the Fixed Disk subsystem if there is a fixed disk hardware error.

## Request Block structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0003h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Word		Sectors per track associated with requested unit
12h	Word		Size of Sector (bytes)  00h-01h = Reserved 02h = 512-byte sectors 03h-FFFFh = Reserved
16h	Word		Drive Type, where:  00h = Drive Type 1 01h = Drive Type 2, etc, up to 21h = Drive Type 33

# Function: 03h — Read Device Parameters, Continued

## Request Block structure, cont'd

Offset	Size	Input:	Output:	
14h	Word		Device Co	ontrol Flags
				3 = Reserved 1 = Format support 00 No format support 01 Format track support 10 Format unit support 11 Track/unit
			Bit 10	support = ST506 drive 0 No ST506 1 ST506
			Bit 9	= Concurrent unit requests 0 Not concurrent 1 Concurrent
			Bit 8	= Ejecting capability 0 No ejecting 1 Ejecting
			Bit 7	= Media organization 0 Random 1 Sequential
			Bit 6	= Locking capability 0 No locking 1 Locking
			Bit 5	= Read capability 0 Not readable 1 Readable
			Bit 4	= Caching support 0 No caching 1 Caching
			Bit 3	= Write frequency 0 Write once 1 Write many
			Bit 2	= 1 Change signal supported
18h	DWord		Bits 1-0 Number o	= Reserved f cylinders associated
101			with reque	ested unit
1Ch	Byte		Number of requested	f heads associated with I unit
1Dh	Byte		Suggested retries	d number of software
20h	DWord		Number o associate	f Block Addresses d with requested unit
24h	DWord	Reserved (Initialize to 0000h)	Reserved	
28h	Word		Reserved	
2Ch	Word			number of blocks to or one call

## Function: 03h — Read Device Parameters, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Function: 04h — Reserved

Function: 05h — Reset/Initialize Fixed Disk

## Description

This function is a discrete multistaged request that resets the fixed disk subsystem (both hardware and software) to a known state. Setting the fixed disk drives to a known state involves resetting the fixed disk controller, which generates an interrupt to which the caller must respond, and recalibrating the drives on the next fixed disk access. All ABIOS Fixed Disk Service functions disable interrupts upon completion.

# Function: 05h — Reset/Initialize Fixed Disk, Continued

#### Switching between ABIOS and CBIOS

Invoke this function after switching from CBIOS to ABIOS and before invoking any other ABIOS Fixed Disk Service functions.

#### Software retries

Function 03h Read Device Parameters returns the Number of Retries (at offset 1Dh in the Request Block) to attempt for a Fixed Disk Service function when a Retryable error (Bit 8 in the Return Code field) is set.

#### Fixed disk hardware error conditions

The ABIOS resets the Fixed Disk subsystem if there is a fixed disk hardware error.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0005h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Word	Reserved (Initialize to 0000h)	
28h	DWord		Time to Wait Before Continuing request (microseconds). Valid only if Return Code is 0002h.

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation: If the Number of Blocks to Read field is zero, no processing occurs, and this code is generated.
0001h	Resume Stage after Interrupt
0002h	Resume Stage after Time Delay
0005h	Not My Interrupt, Resume Stage after Interrupt
8000h	Device Busy, Request Refused
800Fh	DMA Arbitration Level Out of Range
9001h	Bad Command
9002h	Address Mark Not Found
9004h	Record Not Found
9005h	Reset Falled
9007h	Controller Parameter Activity Failed
900Ah	Defective Sector
900Bh	Bad Track
900Dh	Invalid Sector on Format
900Eh	CAM Detected During Read or Verify
9010h	Uncorrectable ECC or CRC Error
9020h	Bad Controller
9021h	Equipment Check
9040h	Bad Seek
9080h	Device Did Not Respond
90AAh	Drive Not Ready
90BBh	Undefined Error
90CCh	Write Fault
90FFh	Incomplete Sense Operation
9105h	Reset Falled
9107h	Controller Parameter Activity Failed

# Function: 05h — Reset/Initialize Fixed Disk, Continued

## Return Codes, cont'd

Code	Description
9120h	Bad Controller
9121h	Equipment Check
9140h	Bad Seek
9180h	Device Did Not Respond
91AAh	Drive Not Ready
91BBh	Undefined Error
91CCh	Write Fault
91FFh	Incomplete Sense Operation
A000h	Time-out Occurred — No Other Error
A001h	Bad Command
A002h	Address Mark Not Found
A004h	Record Not Found
A005h	Reset Falled
A007h	Parameter Activity Failed
A00Ah	Defective Sector
A00Bh	Bad Track
A00Dh	Invalid Sector on Format
A00Eh	CAM Detected During Read or Verify
A010h	Uncorrectable ECC or CRC Error
A011h	ECC Corrected Data Error
A020h	Bad Controller
A021h	Equipment Check
A040h	Bad Seek
A080h	Device Did Not Respond
A0AAh	Drive Not Ready
A0BBh	Undefined Error
A0CCh	Write Fault
A0FFh	Incomplete Sense Operation
A100h	Time-out Occurred — No Other Error

## Return Codes, cont'd

Code	Description
A105h	Reset Falled
A107h	Controller parameter Activity Failed
A120h	Bad Controller
A121h	Equipment Check
A140h	Bad Seek
A180h	Device Did Not Respond
A1AAh	Drive Not Ready
A1BBh	Undefined Error
A1CCh	Write Fault
A1FFh	Incomplete Sense Operation
B001h	Bad Command
B020h	Bad Controller
B021h	Equipment Check
B080h	Device Did Not Respond
B0BBh	Undefined Error
B0FFh	Sense Falled
B101h	Bad Command
B120h	Bad Controller
B121h	Equipment Check
B180h	Device Did Not Respond
B1BBh	Undefined Error
B1FFh	Sense Falled
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Fixed Disk Parameter: If Number the of Blocks to Read is greater than 255, no processing occurs, and this code is returned.
FFFFh	Return Code Field Not Valid

Functions: 06h - 07h - Reserved

Function: 08h - Read Fixed Disk

## Description

This function, a multistaged request, reads the amount of data specified in the Number of Blocks to Read field from the specified location on the fixed disk to the location specified in Data Pointer 2. All ABIOS Fixed Disk Service functions disable interrupts upon completion.

## Fixed disk hardware error conditions

The ABIOS resets the Fixed Disk subsystem if there is a fixed disk hardware error.

#### Software retries

Function 03h Read Device Parameters returns the Number of Retries (at offset 1Dh in the Request Block) to attempt for a Fixed Disk Service function when a Retryable error (Bit 8 in the Return Code field) is set.

## **Request Block**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0008h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Word	Reserved (Initialize to 0000h)	
12h	DWord	Reserved	
16h	Word	Reserved (Initialize to 0000h)	
18h	Word	Reserved (Initialize to 0000h)	
1Ah	DWord	Data Pointer 2 (32-bit physical data pointer required)	
1Eh	Word	Reserved (Initialize to 0000h)	
20h	DWord	Relative Block Address	1
24h	DWord	Reserved (Initialize to 0000h)	
28h	DWord		Time to wait before continuing request (microseconds). Valid only if Return Code is 0002h.
2Ch	Word	Number of blocks to read (amount of data to be transferred)	Number of blocks read (not up- dated if Return Code is C005h). Number of blocks transferred if successful or partially successful. Only valid if request is complete.
2Eh	Byte	Caching  Bits 7-1 = Reserved (set to 0)  Bit 0 = Caching 0 = Caching is OK for this request 1 = Do not cache	
2Fh	Word		Soft Error Occurred: if adapter detected and corrected an error, the recovered error code is displayed.  0000h = no error.

## **Return Codes**

All Return Codes valid for the ABIOS Fixed Disk Service may be returned by the ABIOS in response to this function. See the Return Codes list for Function 05h – Reset/Initialize Fixed Disk.

## Function: 09h - Write to Fixed Disk

## Description

This function, a discrete multistaged request, writes the amount of data specified in the Number of Blocks to Write field from the location specified in Data Pointer 2 to the Relative Block Address on the fixed disk. All ABIOS Fixed Disk Service functions disable interrupts upon completion.

#### Fixed disk hardware error conditions

The ABIOS resets the Fixed Disk subsystem if there is a fixed disk hardware error.

#### Software retries

Function 03h Read Device Parameters returns the Number of Retries (at offset 1Dh in the Request Block) to attempt for a Fixed Disk Service function when a Retryable error (Bit 8 in the Return Code field) is set.

continued

ABIOS Fixed Disk Service 251

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0009h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Word	Reserved (Initialize to 0000h)	
12h	DWord	Reserved	
16h	Word	Reserved (Initialize to 0000h)	
18h	Word	Reserved (Initialize to 0000h)	
1Ah	DWord	Data Pointer 2 (32-bit physical)	
1Eh	Word	Reserved (Initialize to 0000h)	
20h	DWord	Relative Block Address	
24h	DWord	Reserved (Initialize to 0000h)	
28h	DWord		Time to Wait Before Continuing Request (microseconds). Valid only if Return Code is 0002h.
2Ch	Word	Number of Blocks to Write: If zero, no processing occurs; Return Code is 0000h; if > 255, Return Code is C005h, no processing occurs.	Number of blocks written (not updated if Return Code is C005h). Number of blocks transferred if successful or partially successful. Only valid if request is complete.
2Eh	Byte	Caching  Bits 7-1 = Reserved (set to 0)  Bit 0 = Caching 0 = Caching is OK for this request 1 = Do not cache	
2Fh	Word		Soft Error Occurred: If adapter detected and corrected an error, the recovered error code is displayed.  0000h = no error.

## Return Codes

All Return Codes valid for the ABIOS Fixed Disk Service may be returned by the ABIOS in response to this function. See the Return Codes list for Function 05h – Reset/Initialize Fixed Disk.

# Function: 0Ah — Write and Verify Fixed Disk

## Description

This function, a multistaged request, writes data to the fixed disk (just as function 09h does), then immediately verifies that same data (as function 08h does).

#### Software retries

Function 03h Read Device Parameters returns the Number of Retries (at offset 1Dh in the Request Block) to attempt for a Fixed Disk Service function when a Retryable error (Bit 8 in the Return Code field) is set.

#### Fixed disk hardware error conditions

The ABIOS resets the Fixed Disk subsystem if there is a fixed disk hardware error.

# Function: 0Ah — Write and Verify Fixed Disk, Continued

## **Request Block structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Ah)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Word	Reserved (Initialize to 0000h)	
12h	DWord	Reserved	
16h	Word	Reserved (Initialize to 0000h)	
18h	Word	Reserved (Initialize to 0000h)	
1Ah	DWord	Data Pointer 2 (32-bit physical)	
1Eh	Word	Reserved (Initialize to 0000h)	
20h	DWord	Relative Block Address	
24h	DWord	Reserved (Initialize to 0000h)	
28h	DWord		Time to Wait Before Continuing Request (microseconds). Valid only If Return Code is 0002h.
2Ch	Word	No. of Blocks to Write/Verify. — If the input is zero, no processing occurs, if the input is > 255, no processing occurs and the Return Code is set to C005h.	Number of blocks written and verified (not updated if Return Code is C005h). Number of blocks written/verified if successful or partially successful. Only valid if request is complete.
2Eh	Byte	Caching  Bits 7-1 = Reserved (set to 0)  Bit 0 = Caching 0 = Caching OK 1 = Do not cache	
2Fh	Word		Soft Error Occurred: if adapter detected and corrected an error, the recovered error code is displayed.  0000h = no error.
31h	Word	Reserved for Subfunction	

## **Return Codes**

All Return Codes valid for the ABIOS Fixed Disk Service may be returned by the ABIOS in response to this function. See the Return Codes list for Function 05h – Reset/Initialize Fixed Disk.

## Function: 0Bh — Verify Fixed Disk Data

## Description

This function, a discrete multistaged request, verifies the readability of the data on the fixed disk. Data is read but is not transferred. All ABIOS Fixed Disk Service functions disable interrupts upon completion.

#### Software retries

Function 03h Read Device Parameters returns the Number of Retries (at offset 1Dh in the Request Block) to attempt for a Fixed Disk Service function when a Retryable error (Bit 8 in the Return Code field) is set.

#### Fixed disk hardware error conditions

The ABIOS resets the Fixed Disk subsystem if there is a fixed disk hardware error.

continued

ABIOS Fixed Disk Service 255

# Function: 0Bh — Verify Fixed Disk Data, Continued

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Bh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
16h	Word	Reserved (Initialize to 0000h)	
18h	Word	Reserved (Initialize to 0000h)	
1Eh	Word	Reserved (Initialize to 0000h)	
20h	DWord	Relative Block Address	
24h	DWord	Reserved (Initialize to 0000h)	
28h	DWord		Time to wait before continuing request (microseconds). Valid only If Return Code is 0002h.
2Ch	Word	Number of Blocks to Verify — If > 255, no processing occurs. If zero, Return Code is C005h.	Number of Blocks Written (contains number of blocks verified if Return Code is 0000h).
2Eh	Byte	Caching	
		Bits 7-1 = Reserved Bit 0 = Caching allowed	
2Fh	Word		Soft Error Occurred: if adapter detected and corrected an error, the recovered error code is displayed.  0000h = no error.

## **Return Codes**

All Return Codes valid for the ABIOS Fixed Disk Service may be returned by the ABIOS in response to this function. See the Return Codes list for Function 05h – Reset/Initialize Fixed Disk.

## Function: 0Ch — Fixed Disk Interrupt Status

#### Description

This function, a single-staged request, returns the fixed disk controller interrupt pending status. All ABIOS Fixed Disk Service functions disable interrupts upon completion.

The interrupt condition is not reset by the ABIOS.

## Logical ID

The Interrupt Status field applies to the fixed disk controller Logical ID and not to any individual diskette drive (Unit) entered in the Request Block by the caller.

## Interrupt Status field

A parameter error in the input to the Request Block will cause the Interrupt Status field to be invalid. The Interrupt Status field indicates if any interrupts are currently pending from the interrupt controller.

#### Fixed disk hardware error conditions

The ABIOS resets the Fixed Disk subsystem if there is a fixed disk hardware error.

#### Software retries

Function 03h Read Device Parameters returns the Number of Retries (at offset 1Dh in the Request Block) to attempt for a Fixed Disk Service function when a Retryable error (Bit 8 in the Return Code field) is set.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Ch)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte		Interrupt Status
			00h = Interrupt not pending 01h = Interrupt pending 02h-FFh = Reserved
16h	Word	Reserved (Initialize to 0000h)	

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Fixed Disk Parameter
FFFFh	Return Code Field Not Valid

# Chapter 10 ABIOS Keyboard Service

## Overview

## Description

The ABIOS Keyboard Service provides an interface between the operating system and IBM PS/2-compatible keyboards. The functions available provide the user with a means of accessing the keyboard which is independent of hardware specifics. To maintain maximum compatibility across different keyboard controllers, direct hardware programming of a controller should be avoided.

## Summary of Keyboard Service functions

Function	Description
00h	Default Interrupt Handler
01h	Return Logical ID Parameters
02h	Reserved
03h	Read Keyboard ID Bytes
04h	Reserved
05h	Reset/Initialize Keyboard
06h	Enable Keyboard
07h	Disable Keyboard
08h	Continuous Keyboard Read
09h-0Ah	Reserved
0Bh	Read Keyboard LED Status
0Ch	Set Keyboard LED Status
0Dh	Set Typematic Rate and Delay
0Eh	Read Keyboard Scan Code Mode
0Fh	Set Keyboard Scan Code Mode
10h	Write Command(s) to Keyboard Controller
11h	Write Command(s)/Data to Keyboard

## In this chapter

This chapter includes information about the following topics:

- Hardware Environment
- 101-key Keyboard Layout
- Scan Codes
- System Scan Codes
- Error Handling
- ABIOS Keyboard Service functions

## Hardware Environment

#### Introduction

The ABIOS supports an intelligent keyboard subsystem based on the Intel 8042 or equivalent keyboard controller.

The hardware interrupt level associated with the ABIOS Keyboard Service is IRQ 1.

#### The 8042 controller chip

The Intel 8042 peripheral controller (or compatible) is a single-chip micro-computer that can be programmed to allow bidirectional communication between the master microprocessor and up to two auxiliary serial input devices. The 8042 chip, generally, is mounted on the system motherboard. 8042 programs reside as firmware in the 8042 chip itself.


#### **Device support**

The kind of devices a given 8042 chip supports are dependent on how the 8042 is programmed.

On IBM PS/2-compatible systems, the 8042 is programmed to allow bidirectional communication between the system and the keyboard, as well as between the system and one other auxiliary serial device, such as a mouse, joystick, or trackball.


## Keyboard layout

The figure below depicts the key arrangement and key number system applied to the typical 101-key keyboard.

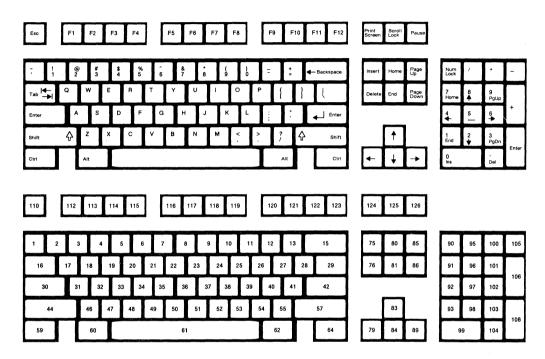

#### Introduction

The keyboard hardware generates two kinds of keyboard codes: keyboard scan codes and system scan codes. The illustration below defines each type of code and shows their relationship to the ABIOS Keyboard Service.

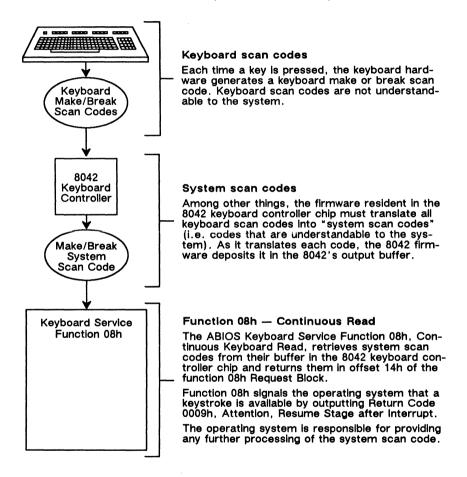

# **System Scan Codes**

The following system scan codes, including multi-byte codes, can be used for the Write Password, Write Invocation and Write Match Byte functions.

## Typewriter/Function Keys

Key#	U.S. Keyboard Legend	System Scan Codes (hex)
1	'~	0E
2	1!	16
3	2@	1E
4	3#	26
5	4\$	25
6	5%	2E
7	6	36
8	7&	3D
9	8*	3E
10	9(	46
11	0)	45
12		4E
13	=+	55
15	Backspace	66
16	Tab	0D
17	Q	15
18	W	1D
19	E	24
20	R	2D
21	Т	2C
22	Y	35
23	U	3C
24	ı	43
25	0	44

Key#	U.S. Keyboard Legend	System Scan Codes (hex)
26	Р	4D
27	[ {	54
28	] }	5B
29	101-key only	5D
30	Caps Lock	58
31	Α	1C
32	S	1B
33	D	23
34	F	2B
35	G	34
36	Н	33
37	J	3B
38	К	42
39	L	4B
40	;:	4C
41	, ,	52
42	102-key only	5D
43	Enter	5A
44	L Shift	12
45	102-key only	61
46	Z	1A
47	Х	22
48	С	21
49	V	2A

# Typewriter/Function Keys, cont'd

Key#	U.S. Keyboard Legend	System Scan Codes (hex)
50	В	32
51	N	31
52	М	3A
53	, <	41
54	. >	49
55	/ ?	4A
57	R Shift	59
58	L Ctrl	14
60	L Alt	11
61	Space	29
62	R Alt	E0-11
64	R Ctrl	E0-14
90	Num Lock	77
91	7 Home	6C
92	4 Left	6B
93	1 End	69
96	8 Up	75
97	5	73
98	2 Down	72
99	0 Ins	70
100	*	7C

Key#	U.S. Keyboard Legend	System Scan Codes (hex)
101	9 PgUp	7D
102	6 Right	74
103	3 Page Down	7A
104	. Del	71
105	_	7B
106	+	79
108	Enter	E0-5A
110	Esc	76
112	F1	05
113	F2	06
114	F3	04
115	F4	0C
116	F5	03
117	F6	0B
118	F7	83
119	F8	0A
120	F9	01
121	F10	09
122	F11	78
123	F12	07
125	Scroll Lock	7E

### Other keys

The rest of the keys send a series of codes that depend on the state of the shift keys (Ctrl, Alt, and Shift) and the Num Lock key (On or Off). Since the base scan code is the same as that for another key, an additional code (hex E0) is added to the base code so that it is unique. The following four tables summarize the scan codes for these other keys.

### **Cursor/Control Keys**

Key#	U.S. Keyboard Legend	Base Case or Shift + Num Lock	Shift Case*	Num Lock on
75	Insert	E0-70	E0 F0 12 E0 70	E0 12 E0 70
76	Delete	E0-71	E0 F0 12 E0 71	E0 12 E0 71
79	Left	E0-6B	E0 F0 12 E0 6B	E0 12 E0 6B
80	Home	E0-6C	E0 F0 12 E0 6C	E0 12 E0 6C
81	End	E0-69	E0 F0 12 E0 69	E0 12 E0 69
83	Up	E0-75	E0 F0 12 E0 75	E0 12 E0 75
84	Down	E0-72	E0 F0 12 E0 72	E0 12 E0 72
85	Page Up	E0-7D	E0 F0 12 E0 7D	E0 12 E0 7D
86	Page Down	E0-7A	E0 F0 12 E0 7A	E0 12 E0 7A
89	Right	E0-74	E0 F0 12 E0 74	E0 12 E0 74

<sup>\*</sup> With the Left Shift key down, the F0 12 shift code is added to the other scan codes sent. With the Right Shift key down, F0 59 is added. When both keys are down, both sets of codes are sent with the rest of the scan code.

# "/" Key on Numeric Keypad

Key#	U.S. Keyboard Legend	System Scan Codes (hex)	Shift Case*
95	/	E0 4A	E0 F0 12 E0 4A

<sup>\*</sup> With the Left Shift key down, the F0 12 shift code is added to the other scan codes sent. With the Right Shift key down, F0 59 is added. When both keys are down, both sets of codes are sent with the rest of the scan code.

# Print Screen/Sys Req Key

Key#	U.S. Keyboard Legend	System Scan Codes (hex)	Ctrl Case Shift Case	Alt Case
124	Print Screen	E0 12 E0 7C	E0 7C	84

# Pause/Break Key

Key#	U.S. Keyboard Legend	System Scan Codes (hex)	Ctrl Key Pressed
126	Pause	E1 14 77 E1 F0 14 F0 77	E0 7E E0 F0 7E

### **Error Handling**

#### Description

The ABIOS Keyboard Service assumes that the operating system will handle:

#### ■ Hardware errors

The ABIOS does not reset the keyboard after a keyboard hardware error. It is the operating system's responsibility to execute function 05h Reset/Initialize Keyboard every time there is a hardware error.

#### ■ Time-out error retries

The ABIOS Keyboard Service resets the keyboard after time-out errors.

#### How errors are reported

ABIOS signals the status (Successful, Resume Stage after Interrupt, etc) of each ABIOS request by returning a one word Return Code at offset 0Ch in the Request Block.

If Bit 15 of the Return Code field is set, the keyboard function requested has an error. The caller's Return Code handler routine should then test Bits 14, 13, 12, and 8 to determine the class of error that has occurred. The return code handler routine should then test the remaining bits to determine the precise nature of the error.

# Function: 00h — Default Interrupt Handler

### Description

This single-staged function handles unexpected hardware interrupts by resetting the interrupt at the device level.

#### How and When to invoke

This function is invoked by calling the interrupt routine with a function code of 0000h. It is only invoked if a given Logical ID has no outstanding Request Blocks waiting for an interrupt.

#### Request Block Structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0000h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out

#### **Return Codes**

Code	Description
0000h	Successful Operation
0005h	Not My Interrupt, Resume Stage after Interrupt
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Request Code Field Not Valid

# Function: 01h — Return Logical ID Parameters

# Description

This single-staged function returns the parameters for the specified Logical ID.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (20h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0001h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte		Hardware interrupt Level (01h)
11h	Byte		Arbitration Level (FFh)
12h	Word		Device ID (0004h)
14h	Word		Count of Units
16h	Word		Logical ID flags
,			Bits 15-4 = Reserved Bit 3 = 0 No overlap across units
18h	Word		Request Block Length (for other functions)
1Ah	Byte	Reserved (initialize to 0000h)	Secondary Device ID
1Bh	Byte		Revision Level
1Ch	Word	Reserved (initialize to 0000h)	
1Eh	Word	Reserved (initialize to 0000h)	]]

# Function: 01h — Return Logical ID Parameters, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	invalid Request Block Length
FFFFh	Return Code Field Not Valid

Function: 02h — Reserved

# Function 03h — Read Keyboard ID Bytes

#### Description

This function generates a multistaged request that returns the keyboard identification code which indicates the keyboard type.

### Keyboard ID code

The Keyboard ID is a two-byte code. Function 03h returns the low byte of the keyboard ID in offset 14h of the function 03h Request Block. The high byte of the keyboard ID is returned in offset 15h.

### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	]
06h	Word	Function (0003h)	]
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	DWord		Time, in microseconds, to Wait Be- fore Continuing Request (Valid only if Return Code = 0002h)
14h	Byte		Keyboard ID low byte
15h	Byte		Keyboard ID high byte
16h	Word	Reserved (Initialize to 0000h)	

#### **Return Codes**

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
0002h	Resume Stage after Time Delay
0005h	Not My Interrupt, Resume Stage after Interrupt
0009h	Attention, Resume Stage after Interrupt
8000h	Device Busy, Request Refused
8003h	Security Enabled, Keyboard Inhibited — Request Refused
9000h	Keyboard Controller Perpetually Busy
9001h	Keyboard Failed Reset
9002h	Resend Error
9003h	Keyboard Parity Error
9004h	General Hardware Time-out
9006h	Undefined Mode Returned by Keyboard
9100h	Keyboard Controller Perpetually Busy
9101h	Keyboard Failed Reset
9102h	Resend Error
9103h	Keyboard Parity Error
9104h	General Hardware Time-out
B001h	Keyboard Error
B101h	Keyboard Error The caller should invoke function 05h Reset/Initialization after a keyboard hardware error.
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Keyboard Parameter
FFFFh	Return Code is Not Valid

Function: 05h — Reset/Initialize Keyboard

### Description

This function generates a multistaged request that resets the keyboard hardware and turns off the Caps Lock, Num Lock, Scroll Lock LEDs.

#### **Keyboard Reset**

The ABIOS does not reset the keyboard after a keyboard hardware error.

**Note:** It is the operating system's responsibility to execute function 05h Reset/Initialize Keyboard every time there is a hardware error.

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0005h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	DWord		Time, in microseconds, to wait be- fore continuing request (Valid only if Return Code = 0002h)
16h	Word	Reserved (Initialize to 0000h)	

#### **Return Codes**

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
0002h	Resume Stage after Time Delay
0005h	Not My Interrupt, Resume Stage after Interrupt
0009h	Attention, Resume Stage after Interrupt
8000h	Device Busy, Request Refused
8003h	Security Enabled, Keyboard Inhibited — Request Refused
9000h	Keyboard Controller Perpetually Busy
9001h	Keyboard Failed Reset
9002h	Resend Error
9003h	Keyboard Parity Error
9004h	General Hardware Time-out
9006h	Undefined Mode Returned by Keyboard
9100h	Keyboard Controller Perpetually Busy
9101h	Keyboard Failed Reset
9102h	Resend Error
9103h	Keyboard Parity Error
9104h	General Hardware Time-out
B001h	Keyboard Error
B101h	Keyboard Error The operating system should invoke function 05h Reset/ Initialization after a keyboard hardware error.
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Keyboard Parameter
FFFFh	Return Code is Not Valid

# Function: 06h — Enable Keyboard

# Description

This function generates a multistaged request that enables the keyboard, allowing data from the keyboard to be passed to the system.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0006h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	DWord		Time to wait before continuing request (microseconds)
16h	Word	Reserved (Initialize to 0000h)	

# Function: 06h — Enable Keyboard, Continued

#### **Return Codes**

Code	Description
0000h	Successful Operation
0002h	Resume Stage after Time Delay
8000h	Device Busy, Request Refused
8003h	Security Enabled, Keyboard Inhibited — Request Refused
9000h	Keyboard Controller Perpetually Busy
9100h	Keyboard Controller Perpetually Busy
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Keyboard Parameter
FFFFh	Return Code is Not Valid

# Function: 07h — Disable Keyboard

# Description

This function generates a multistaged request that disables the keyboard, inhibiting the flow of data from the keyboard to the system.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0007h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	DWord		Time to wait before continuing request (microseconds)
16h	Word	Reserved (Initialize to 0000h)	

### **Return Codes**

Code	Description
0000h	Successful Operation
0002h	Resume Stage after Time Delay
8000h	Device Busy, Request Refused
8003h	Security Enabled, Keyboard Inhibited — Request Refused
9000h	Keyboard Controller Perpetually Busy
9100h	Keyboard Controller Perpetually Busy
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Keyboard Parameter
FFFFh	Return Code is Not Valid

### Function: 08h — Continuous Keyboard Read

#### Description

This function generates a continuous multistaged request that retrieves system scan codes as they are generated by the 8042 keyboard controller chip from I/O port 0060h and signals the operating system that a keystroke is available for processing.

#### When to invoke function 08h

Since no keystrokes can be processed unless function 08h has been successfully invoked, function 08h should be invoked immediately after ABIOS initialization.

#### What is a raw system scan code

The keyboard hardware generates two kinds of keyboard codes: keyboard scan codes and system scan codes.

#### ■ Keyboard scan codes

Each time a key is pressed, the keyboard hardware generates a keyboard make or break scan code. Keyboard scan codes are not understandable to the system.

#### ■ System scan codes

The firmware resident in the 8042 keyboard controller chip translates all keyboard scan codes into "system scan codes" (i.e. codes that are understandable to the system). As it translates each code, the 8042 firmware deposits it in the 8042's output buffer.

Function 08h retrieves system scan codes from their buffer in the 8042 keyboard controller chip and returns them in offset 14h of the Request Block. Function 08h signals to the operating system that a keystroke is available by sending Return Code 0009h Attention, Resume Stage after Interrupt.

# Function: 08h — Continuous Keyboard Read, Continued

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0008h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
14h	Byte		Keyboard Scan Code
16h	Word	Reserved (Initialize to 0000h)	

#### **Return Codes**

Code	Description	
0000h	Successful Operation	
0001h	Resume Stage after Interrupt	
0005h	Not My Interrupt, Resume Stage after Interrupt	
0009h	Attention, Resume Stage after Interrupt	
8000h	Device Busy, Request Refused	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit Number	
C004h	invalid Request Block Length	
C005h	Invalid Keyboard Parameter	
FFFFh	Return Code Field Not Valid	

Functions: 09h - 0Ah - Reserved

# Function: 0Bh — Read Keyboard LED Status

#### Description

This single-staged request returns the status of the keyboard Caps Lock, Scroll Lock, and Num Lock LEDs.

#### **Function 0Bh limitations**

The data returned by function 0Bh reflects the state of the Keyboard LED status byte after the last successful call of either function 05h, Reset/Initialize Keyboard or function 0Ch Write Keyboard LED Status.

When function 11h, Write Keyboard Command, is used to set the Keyboard LEDs, the value returned by function 0Bh may not be reliable.

# Function 0Bh — Read Keyboard LED Status, Continued

### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Bh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
14h	Byte		Keyboard Indicator LED Status
			Bits 7-3= 1 Reserved Bit 2 = 1 Caps Lock on Bit 1 = 1 Num Lock on Bit 0 = 1 Scroll Lock on
16h	Word	Reserved (Initialize to 0000h)	

#### **Return Codes**

Code	Description
0000h	Successful Operation
8000h	Device Busy, Request Refused
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Keyboard Parameter
FFFFh	Return Code Field Not Valid

# Function: 0Ch — Set Keyboard LED Status

# Description

This function generates a multistaged request that turns on or off the keyboard Caps Lock, Scroll Lock, and/or Num Lock LEDs.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Ch)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	DWord		Time to wait before continuing request (microseconds)
14h	Byte	Program the Keyboard LED Status Indicators	
		Bits 7-3= 0 Reserved Bit 2 = 1 Caps Lock on Bit 1 = 1 Num Lock on Bit 0 = 1 Scroll Lock on	
16h	Word	Reserved (Initialize to 0000h)	

#### **Return Codes**

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
0002h	Resume Stage after Time Delay
0005h	Not My Interrupt, Resume Stage after Interrupt
8000h	Device Busy, Request Refused
8003h	Security Enabled, Keyboard Inhibited — Request Refused
9000h	Keyboard Controller Perpetually Busy
9002h	Resend Error
9100h	Keyboard Controller Perpetually Busy
9101h	Keyboard Failed Reset
9102h	Resend Error
B001h	Keyboard Error
B101h	Keyboard Error The operating system should invoke function 05h Reset/In- Itialize Keyboard after a keyboard hardware error.
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Keyboard Parameter
FFFFh	Return Code is Not Valid

# Function: 0Dh — Set Typematic Rate and Delay

### Description

This function generates a single-staged or discrete multistaged request that changes or sets the typematic rate and the keystroke delay for all keys on the keyboard.

#### Typematic rate

The typematic rate is the maximum number of make codes per second that the keyboard can support. The rate in characters per second can be set at any of 32 values, ranging from 2 to 30 characters per second.

#### Keystroke delay

The keystroke delay established by this function is the delay between the period of time that elapses between a keystroke and the scan code generated by the key stroke being sent to the keyboard controller. This delay can be set at 250, 500, 750, or 1000 milliseconds.

# Function: 0Dh — Set Typematic Rate and Delay, Continued

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Dh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	DWord		Time to wait before continuing request (microseconds)
14h	Byte	Typematic Rate Setting  Bits 7-5= Reserved (must be 0)  Bits 4-0= Rate setting in characters per second (values in binary)  00000 = 30.0 10000 = 7.5	
451	Divi	00001 = 26.7	
15h	Byte	Typematic Delay Setting  Bits 7-2 = Reserved	
16h	Word	Reserved (Initialize to 0000h)	

#### **Return Codes**

r	
Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
0002h	Resume Stage after Time Delay
0005h	Not My Interrupt, Resume Stage after Interrupt
8000h	Device Busy, Request Refused
8003h	Security Enabled, Keyboard Inhibited — Request Refused
9000h	Keyboard Controller Perpetually Busy
9002h	Resend Error
9100h	Keyboard Controller Perpetually Busy
9101h	Keyboard Failed Reset
9102h	Resend Error
B001h	Keyboard Error
B101h	Keyboard Error The operating system should invoke function 05h Reset/in- itialize Keyboard after a keyboard hardware error.
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Keyboard Parameter
FFFFh	Return Code is Not Valid

### Function 0Eh — Read Keyboard Scan Code Mode

#### Description

This function generates a discrete multistaged request that reads the keyboard scan code mode from the 8042 status port.

#### What is a keyboard scan code mode?

Each time a key is pressed, the keyboard hardware generates a keyboard make or break scan code. The keyboard hardware is capable of generating any of three sets of keyboard scan codes (Modes 1, 2, or 3).

Keyboard scan codes are not understandable to the system. The firmware resident in the 8042 keyboard controller chip translates all keyboard scan codes into system scan codes (i.e. codes that are understandable to the system).

#### Function 0Eh and the Phoenix 8042 AK/MCF

Systems equipped with the Phoenix 8042 Advanced Keyboard/Mouse Controller Firmware (AK/MCF) support keyboard scan code mode 2 exclusively. Function 0Eh returns the value corresponding to keyboard scan code mode 2 only.

# Function 0Eh — Read Keyboard Scan Code Mode, Continued

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
· 02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (000Eh)	]
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	DWord		Time to Wait Before Continuing Request (microseconds)
14h	Byte		Current Keyboard Scan Code
	:		00h = Reserved 01h = Set to 1 02h = Set to 2 03h = Set to 3 04h-Fh = Reserved
16h	Word	Reserved (Initialize to 0000h)	

### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
0002h	Resume Stage after Time Delay
0005h	Not My Interrupt, Resume Stage after Interrupt
8000h	Device Busy, Request Refused
8003h	Security Enabled, Keyboard Inhibited — Request Refused
9000h	Keyboard Controller Perpetually Busy
9002h	Resend Error
9003h	Keyboard Parity Error
9004h	Hardware Time-out
9006h	Undefined Mode from Keyboard
9100h	Keyboard Controller Perpetually Busy
9101h	Keyboard Failed Reset
9102h	Resend Error
9103h	Keyboard Parity Error
9104h	General Hardware Time-out
9106h	Undefined Mode from Keyboard
B001h	Keyboard Error
B101h	Keyboard Error The operating system should invoke function 05h Reset/In- itialize Keyboard after a keyboard hardware error.
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Keyboard Parameter
FFFFh	Return Code is Not Valid

### Function: 0Fh — Set Keyboard Scan Code Mode, Continued

#### Description

This function generates a multistaged request that sets the keyboard scan code mode.

#### What is a keyboard scan code mode

Each time a key is pressed, the keyboard hardware itself generates a keyboard make or break scan code. The keyboard hardware is capable of generating any of three sets of keyboard scan codes (Modes 1, 2, or 3).

Keyboard scan codes are not understandable to the system. The firmware resident in the 8042 keyboard controller chip translates all keyboard scan codes into system scan codes (i.e. codes that are understandable to the system).

#### Function 0Fh and the Phoenix 8042 AK/MCF

Systems equipped with the Phoenix 8042 Advanced Keyboard/Mouse Controller Firmware (AK/MCF) support keyboard scan code mode 2 exclusively. Function 0Fh returns the value corresponding to keyboard scan code mode 2 only.

# Function: 0Fh — Set Keyboard Scan Code Mode, Continued

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	]
06h	Word	Function (000Fh)	]
08h	Word	Reserved (initialize to 0000h)	]
0Ah	Word	Reserved (initialize to 0000h)	]
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	DWord		Time to Wait Before Continuing Request (microseconds)
14h	Byte	Change Current Keyboard Scan Code	
		00h = Reserved 01h = Set to 1 02h = Set to 2 03h = Set to 3	
16h	Word	Reserved (Initialize to 0000h)	]

#### **Return Codes**

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
0002h	Resume Stage after Time Delay
0005h	Not My Interrupt, Resume Stage after Interrupt
8000h	Device Busy, Request Refused
8003h	Security Enabled, Keyboard Inhibited — Request Refused
9000h	Keyboard Controller Perpetually Busy
9002h	Resend Error
9100h	Keyboard Controller Perpetually Busy
9101h	Keyboard Failed Reset
9102h	Resend Error
B001h	Keyboard Error
B101h	Keyboard Error The operating system should invoke function 05h Reset/In- itialize Keyboard after a keyboard hardware error.
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Input Parameter
FFFFh	Return Code is Not Valid

### Function 10h — Write Command(s) to Keyboard Controller

#### Description

This function generates a discrete multistaged request that writes a command and associated data from the system to the 8042 controller. The command consists of a single byte. The location and length of the command must be specified at function start-up. This function permits access to 8042 RAM, keyboard self-tests, interface tests, and other 8042 functions that are otherwise not available in ABIOS.

#### Changes to 8042

The caller must not change the state of the 8042 in intermediate stages of a multistaged request for this function.

#### Input field considerations

The Data String Length (offset 1Ch) must be initialized to a nonzero value. If the Data String Length field is initialized to 00h, then function 10h does not perform any action and sets the Return Code field to 0000h, Successful Operation.

#### ABIOS keyboard command processing

The first byte of the string passed to ABIOS is assumed to be the command byte and is sent to I/O port 0064h. All subsequent bytes are sent to I/O port 0061h. ABIOS issues a Return Code of 0001h, Resume Stage after Interrupt, between each byte sent. At this point, ABIOS does not respond to the keyboard controller. It reads the 8042 status register, which indicates when commands have been accepted. Return Code 0000h is issued when all bytes have been read.

# System-to-8042 commands

Command	Description
20h	READ THE 8042 COMMAND BYTE. This command instructs the 8042 to send the contents of location 20h, the command byte, to the system.
21h-3Fh	READ THE 8042 RAM. This command instructs the 8042 to send the contents of the RAM location, defined by bits 5–0 of the command to the system.
60h	WRITE THE 8042 COMMAND BYTE. This command instructs the 8042 to write the data byte following the command to the location of the command byte (20h).
61h-7Fh	WRITE THE 8042 RAM. This command instructs the 8042 to write the data byte following the command to the RAM location defined by bits 0-5 of the command.
A4h	TEST PASSWORD INSTALLED. This command instructs the 8042 to check whether there is a password currently installed. If there is no password, the contents of the first location where the password would be stored will be zero. If there is a password installed, FAh is placed in the 8042 output buffer, if not, F1h is placed in the buffer.
A5h	LOAD SECURITY. This command instructs the 8042 to read password data from the 8042 input buffer and store it until a null (0) is detected. The null is stored as the last byte of the password.
A6h	ENABLE SECURITY. This command instructs the 8042 to check the installed password against the incoming keystrokes for a match.
A7h	DISABLE AUXILIARY DEVICE INTERFACE. This command instructs the 8042 to set bit 5 of the command byte. This disables the auxiliary device by driving the auxiliary clock low.
A8h	ENABLE AUXILIARY DEVICE INTERFACE. This command instructs the 8042 to clear bit 5 of the command byte. This enables the auxiliary device by driving the auxiliary clock high.
A9h	AUXILIARY INTERFACE TEST. This command instructs the 8042 to test the auxiliary device clock and data lines. The result of the test is placed in the output buffer as follows:
	00 — No error detected. 01 — Auxiliary device clock line is stuck low. 02 — Auxiliary device clock line is stuck high. 03 — Auxiliary device data line is stuck low. 04 — Auxiliary device data line is stuck high.
AAh	SELF TEST. This command instructs the keyboard 8042 to perform internal diagnostics tests. A 55h is placed in the output buffer if no errors are detected.

# System-to-8042 commands, cont'd

Command	Description
ABh	KEYBOARD INTERFACE TEST. This command instructs the 8042 to test the keyboard clock and data lines. The result of the test is placed in the output buffer as follows:  00 — No error detected.
	01 — Keyboard device clock line is stuck low. 02 — Keyboard device clock line is stuck high. 03 — Keyboard device data line is stuck low. 04 — Keyboard device data line is stuck high.
ACh	Reserved
ADh	DISABLE KEYBOARD INTERFACE. This command instructs the 8042 to set bit 4 of the command byte. This disables the keyboard by driving the keyboard clock low.
AEh	ENABLE KEYBOARD INTERFACE. This command instructs the 8042 to clear bit 4 of the command byte. This enables the keyboard by driving the keyboard clock line high.
C0h	READ INPUT PORT. This command instructs the 8042 to read the 8042 input port (port 1) and place the data in the 8042 output buffer.
C1h	POLL INPUT PORT LOW. This command instructs the 8042 to continuously read input port 1 bits 0-3 into the status register, bits 4-7, until IBF goes high, when the next command is executed.
C2h	POLL INPUT PORT HIGH. This command instructs the 8042 to continuously read input port 1 bits 4-7 into the status register, bits 4-7, until IBF goes high, when the next command is executed.
D0h	READ OUTPUT PORT. This command instructs the 8042 to read the 8042 output port (port 2) and place the data in the 8042 output buffer.
D1h	WRITE OUTPUT PORT. This command instructs the 8042 that the next byte of data received should be sent to the 8042 output port.
D2h	WRITE KEYBOARD OUTPUT BUFFER. This command instructs the 8042 that the next byte of data received should be sent to the output buffer. The controller will generate an interrupt to the system if the interrupt bit is enabled in the command byte.
D3h	WRITE AUXILIARY DEVICE OUTPUT BUFFER. This command instructs the 8042 that the next byte of data received should be sent to the output buffer. The 8042 will generate an interrupt to the system if the interrupt bit is enabled in the command byte.

# System-to-8042 commands, cont'd

Command	Description
D4h	WRITE TO AUXILIARY DEVICE. This command instructs the 8042 that the next byte of data received should be transmitted to the auxiliary device.
E0h	READ TEST INPUTS. This command instructs the 8042 to read the 8042 T0 and T1 inputs and place them in the output buffer. Bit 0 represents T0 and bit 1 represents T1.
F0-FF	PULSE OUTPUT PORT. This command instructs the 8042 to pulse bits 0 through 3 of the output port (port 2) low for 6 microseconds. Bits 0 through 3 of the command indicate the bits to be pulsed.  If the bit is a 0 then the corresponding bit on port 2 should be pulsed. If the bit is a 1 then the corresponding bit should not be pulsed.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0010h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	DWord		Time to wait before continuing request (microseconds)
14h	Word	Reserved (Initialize to 0000h)	
16h	DWord	Pointer to the data area	
1Ch	Byte	Data String Length	
		Note: No action occurs if this field is 0.	
28h	Word	Reserved (Initialize to 0000h)	

# Function 10h — Write Command(s) to Keyboard Controller, Continued

#### **Return Codes**

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
0002h	Resume Stage after Time Delay
0005h	Not My Interrupt, Resume Stage after Interrupt
8000h	Device Busy, Request Refused
8003h	Security Enabled, Keyboard Inhibited — Request Refused
9000h	Keyboard Controller Perpetually Busy
9002h	Resend Error
9100h	Keyboard Controller Perpetually Busy
9101h	Keyboard Falled Reset
9102h	Resend Error
B001h	Keyboard Error
B101h	Keyboard Error The operating system should invoke function 05h Reset/In- itialize Keyboard after a keyboard hardware error.
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Keyboard Parameter
FFFFh	Return Code is Not Valid

# Function 11h — Write Command(s) and Data to Keyboard

#### Description

This function generates a discrete multistaged request that writes a "list" of a command and data from the system to the keyboard hardware itself. The command/data list may consist of any combination of a command and data, however, only one command can be sent per request. The location and length of the command/data list must be specified at function startup. ABIOS delays between writing each byte.

# Receipt of ACK

ABIOS expects an Acknowledge from the 8042 keyboard controller at I/O port 0060h after each byte is received, but does not send the ACK byte to the caller.

#### Changes to 8042

The caller must not change the state of the 8042 in intermediate stages of a multistaged request for this function.

#### ABIOS keyboard command processing

The first byte of the string passed to ABIOS is assumed to be the command byte and is sent to I/O port 0060h. All subsequent bytes are also sent to I/O port 0060h. ABIOS issues a Return Code of 0001h, Resume Stage after Interrupt, between each byte sent. From the I/O ports, each byte is sent to the keyboard controller. At this point, ABIOS does not respond to the keyboard controller, since it reads the 8042 status register which indicates when commands have been accepted. Return Code 0000h is issued when all bytes have been read.

Some commands from the system to the 8042 controller require that a data byte also be written to I/O port 64h. Function 11h does not support such commands.

# Table of system-to-keyboard commands

Command	Description
EDh	SET/RESET LED TOGGLE STATUS INDICATORS. The Num Lock, Caps Lock, and Scroll Lock LED indicators can be turned on or off by a command from the system. The EDh command byte is written to port 0060h and the keyboard responds with FAh (ACK). The system then writes the option byte to port 0060h. A value of 1 means turn the LED on. The option byte takes the format below:  Bit 7-3 = Reserved (must be 00000b)  Bit 2 = Caps Lock LED  Bit 1 = Num Lock LED  Bit 0 = Scroll Lock LED
EEh	ECHO. The system uses this command to test the keyboard. The keyboard issues an EEh (Echo) in reply to this command.
EFh	INVALID COMMAND. The keyboard does not acknowledge this command.
F0h	CHOOSE ALTERNATE SCAN CODE SET. The 8042 APCF supports scan code set 2 only.
F1h	INVALID COMMAND. The keyboard does not acknowledge this command.
F2h	READ KEYBOARD ID BYTES. The keyboard acknowledges the command and sends the two keyboard ID bytes.
F3h	SET TYPEMATIC REPEAT RATE AND DELAY PERIOD. The system may set typematic rate and delay.
F4h	ENABLE. Commands the keyboard to clear its output buffer and begin scanning.
F5h	DEFAULT DISABLE. Resets all conditions within the keyboard to their power-on default state and disables scanning. The keyboard responds with ACK, clears its output buffers, and waits for the next instruction from the system.
F6h	SET DEFAULT Resets all conditions within the keyboard to their power-on default state and enables scanning. The keyboard responds with ACK and clears all output buffers.
F7h-FDh	RESERVED
FEh	RESEND. If the system detects an error in transmission, it issues the resend command. The keyboard responds by sending the previous output.
FFh	RESET. System issues this command to invoke the keyboard's internal self-test.

# Function 11h - Write Command(s) and Data to Keyboard, Continued

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	]
06h	Word	Function (0011h)	][
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	DWord		Time to Wait Before Continuing Request (microseconds)
14h	Word	Reserved (Initialize to 0000h)	
16h	DWord	Logical Pointer to the Data Area	]
1Ch	Byte	Data String Length	]
		Note: No action occurs if this field is 0.	
28h	Word	Reserved (Initialize to 0000h)	]

# Function 11h — Write Command(s)/Data to Keyboard, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
0002h	Resume Stage after Time Delay
0005h	Not My Interrupt, Resume Stage after Interrupt
8000h	Device Busy, Request Refused
8003h	Security Enabled, Keyboard Inhibited — Request Refused
9000h	Keyboard Controller Perpetually Busy
9002h	Resend Error
9100h	Keyboard Controller Perpetually Busy
9102h	Resend Error
B001h	Keyboard Error
B101h	Keyboard Error The operating system should invoke function 05h Reset/In- itialize Keyboard after a keyboard hardware error.
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Keyboard Parameter
FFFFh	Return Code is Not Valid



# Chapter 11 ABIOS Video Service

# Overview

# Description

The ABIOS Video Service provides provides I/O support for IBM PS/2-compatible video hardware, specifically, a video graphics array (VGA) adapter. VGA video is built into the motherboard of most PS/2 and compatible computers.

The ABIOS Video Service provides I/O support for both color and monochrome analog video monitors.

ABIOS Video Service provides a significant advantage in that most routines can be called by user programs regardless of the video mode being used (monochrome, CGA, EGA, or VGA). The ABIOS Video Service makes available all the features and functions of the VGA BIOS. The Video Services determine the current display type and perform the necessary address translation.

# Summary of Video Service functions

Function	Description
00h	Default Interrupt Handler
01h	Return Logical ID Parameters
02h	Reserved
03h	Read Device Parameters
04h	Reserved
05h	Set Video Mode
06h-0Ah	Reserved
0Bh	Return ROM Fonts Information
0Ch	Save Video Environment
0Dh	Restore Video Environment
0Eh	Select Character Generator Block
0Fh	Load Text Mode Font
10h	Enhanced Load Text Mode Font
11h	Read Palette Register
12h	Write Palette Register
13h	Read DAC Color Register
14h	Write DAC Color Register
15h	Read Block of Color Registers
16h	Write Block of Color Registers

# In this chapter

This chapter includes information about the following topics:

- Hardware Environment
- Video Modes
- Mode/Monitor Support
- ROM-Resident Fonts
- Error Handling
- Video Service Functions

# **Hardware Environment**

#### Introduction

The ABIOS Video Service supports IBM VGA-compatible hardware, including:

- a VGA-compatible chip or chip set that includes a:
  - CRT Controller
  - sequencer
  - graphics controller, and an
  - attribute controller
- DAC chip INMOS G171 or compatible DAC (digital-to-analog converter)
- video RAM 256K of dynamic read/write RAM configured as four 64K maps
- monochrome or color direct drive analog monitor
- monochrome or color multiple sync frequency monitors

# VGA-compatible chip (or chip set)

The VGA chip (or chip set) provides all CRT control signals. It consists of four components, summarized in the following table:

Component	Function		
CRT Controller	Generates horizontal and vertical CRT sync timings, cursor and underline timings, video buffer addressing, and refresh addressing.		
Sequencer	Arbitrates system access to display RAM and fonts. The sequencer allows up to eight fonts with two fonts displayable at any one time.		
Graphics Controller	Handles read/write operation on four parallel bit planes. Outputs data to Attribute Controller.		
Attribute Controller	Converts incoming text mode attribute data or graphics mode pixel data into 8-bit indices into the Digital-to-Analog Converter (DAC) color registers (see below).		

For a complete description of VGA-compatible components, I/O ports, and registers, refer to the hardware documentation accompanying your particular VGA-compatible chip or chip set.

continued

# Digital-to-Analog Converter (DAC)

The video DAC contains 256 individual color registers which can be accessed by the BIOS as either four 64-color registers or sixteen 16-color registers.

Each DAC color register contains one 18-bit RGB analog value. Six bits of each register are allocated to each primary color. Thus, the color represented in each DAC color register may be any of 256K possible colors (i.e.  $2^{3*6} = 256$ K).

#### Video RAM

The ABIOS video service requires at least 256K of read/write video RAM formatted into four banks (or maps) of 64K.

To maintain compatibility, display memory for each of the MDA, CGA, and EGA-compatible modes is mapped exactly as it was in the original display adapter. The display memory organization for the new VGA modes is outlined in this chapter under the Video Modes heading.

# Analog monitor support

To display all modes, the Video Service requires either a monochrome or a color direct drive analog monitor with a 31.5 KHz horizontal scan frequency.

The display's vertical gain is adjusted automatically by the VGA-compatible circuitry. Thus, video modes with 350, 400, and 480 horizontal scan lines can be displayed without requiring manual adjustment.

# Multiscan monitor support

In addition to 31.5 KHz direct drive analog monitors, the Video Service also supports multiscan rate monitors capable of operating in analog modes (e.g. NEC Multisync monitor). Monitors of this type require an adapter cable that matches the signal assignments and monitor ID circuitry of the DAC external video controller.

# Video Modes

#### Introduction

The ABIOS video service supports 17 video modes, providing backward compatibility with MDA (Monochrome Display Adapter), CGA (Color Graphics Adapter), and EGA (Enhanced Graphics Adapter) modes — as well as compatibility with all new VGA modes.

#### Table of video modes

Mode	Emul.	Res.	Туре	Max. Colors	Scheme	Char. Box	Max. Pgs.	Buff. Start
0, 1	CGA*	320x200	Text	16/256K	40x25	8x8	8	B8000h
0, 1	EGA*	320x350	Text	16/256K	40x25	8×14	8	B8000h
0, 1	VGA+	360x400	Text	16/256K	40x25	9x16	8	B8000h
2, 3	CGA*	640×200	Text	16/256K	80×25	8×8	8	B8000h
2, 3	EGA*	640×350	Text	16/256K	80x25	8×14	8	B8000h
2, 3!	VGA+	720x400	Text	16/256K	80x25	9x16	8	B8000h
4, 5	CGA	320×200	Graphics	4/256K	40x25	8x8	1	B8000h
6	CGA	640×200	Graphics	2/256K	80×25	8×8	1	B8000h
7	MDA*	720×350	Text	MDA Mono	80×25	9x14	8	B0000h
7!	VGA*	720×400	Text	VGA Mono	80×25	9x16	8	B0000h
D	EGA	320×200	Graphics	16/256K	40×25	8×8	8	A0000h
E	EGA	640×200	Graphics	16/256K	80x25	8×8	4	A0000h
F	EGA	640×350	Graphics	Mono	80×25	8×14	2	A0000h
10	EGA	640×350	Graphics	16/256K	80x25	8x14	2	A0000h
11	VGA	640×480	Graphics	2/256K	80×30	8×16	1	A0000h
12	VGA	640×480	Graphics	16/256K	80×30	8×16	1	A0000h
13	VGA	320×200	Graphics	256/256K	40x25	8×8	1	A0000h

<sup>&</sup>quot;!" Indicates power-on default mode

continued

<sup>3! =</sup> color monitor is attached,

<sup>7! =</sup> monochrome monitor is attached.

<sup>&</sup>quot;\*" Indicates that scan lines must be specified before mode set. (See AH = 12h BL = 30h Select Scan Line for Alphanumeric Codes for details.)

<sup>&</sup>quot;+" indicates default mode

#### Video mode facts

- All modes can be displayed on color or monochrome
  All video modes can be displayed on either color or monochrome monitors.
- MDA, CGA, and EGA modes are emulated

  To insure compatibility with older software, the ABIOS Video Service emulates all MDA, CGA, and EGA modes.
- Modes 00h, 02h, 04h = Modes 01h, 03h, 05h
  On the CGA adapter, modes 00h, 02h, and 04h have color burst turned off, and modes 01h, 03h, and 05h have color burst turned on. The ABIOS video service does not support color burst; modes 00h, 02h, and 04h are identical to modes 01h, 03h, and 05h, respectively.
- Text mode resolution determines default font/text scheme
  In text modes, the number of scan lines to display must be specified via function 05h Set Video Mode. Setting text mode scan lines determines both the default ROM-resident font ABIOS will load and the column-by-row text scheme in which the font will be displayed.
- Text mode default font and text scheme can be overridden

  ABIOS Video Service function 0Fh Load Text Mode Font allows the caller
  to override the default font loaded when a text mode is requested. Function 10h Enhanced Load Text Mode Font allows the caller to override both
  the default font and column-by-row text scheme associated with a given
  text mode.
- Color modes are programmable

  Unless specified otherwise, the default colors associated with a given video mode are programmed by ABIOS at mode set. ABIOS Video Service functions 11h-16h can be used to override the default colors associated with any given color mode. See the Programming Colors section in this chapter for more information.
- 200 scan-line modes are double-scanned

  Each line of video is painted on the screen twice, one beneath the other, before the next new scan line is painted.
- No cursor in graphics modes

  A cursor is not displayed in graphics modes.

# Mode/Monitor Support

#### Introduction

Both monochrome and color 31.5 KHz direct drive analog monitors, as well as multiscan monitors, can display all of the VGA video modes.

When a monochrome monitor is attached, colors are displayed as shades of gray. When a color monitor is attached, gray scale summing must be explicitly enabled or disabled via function 05h Set Video Mode.

#### Some mode/monitor facts

lf	Then
a monochrome analog monitor is attached	colors are displayed as shades of gray, with the maximum number of shades equal to the maximum number of colors displayable in the respective mode. In mode 0Eh, for example, 16 shades of gray can be displayed. Mode 13h is an exception to this rule. Only 64 (and not 256) shades of gray can be displayed in mode 13h.
a color analog monitor is attached	the colors displayed are selected from a BIOS initialized palette of 64 color registers. The number of colors displayed in each mode is listed under the Video Mode heading in this chapter. In mode 0Eh, for example, 16 different colors can be displayed.
	The BIOS initializes the 64 colors in this palette to analog equivalents of the 64-color digital EGA palette. The remaining 192 color registers are undefined.
	Mode 13h is an exception to this rule. Mode 13h is capable of displaying all 256 colors stored in the DAC. The BIOS initializes these colors to IBM compatible defaults at mode set.
a 200 scan line mode is selected	all 200 scan line modes are double-scanned. That is, each horizontal line is scanned twice, for a total of 400 scan lines. This is true for both color and monochrome analog monitors.
power-on default video modes are in effect	the default power on mode is mode 3+ (720x400, 16-color) when a color analog monitor is attached, or mode 7+ (720x400, monochrome) is the default power-on mode when a monochrome analog monitor is attached.

continued

## Palette register/DAC relationship

The Attribute Controller component of the VGA hardware contains an internal Palette Register. The Palette Register is composed of sixteen 8-bit registers. The value contained in each palette register is combined with other Attribute Controller information to create an 8-bit index into the DAC.

The video DAC contains 256 individual color registers. Each DAC color register contains one 18-bit RGB analog value. Six bits of each register are allocated to each primary color. Thus, the color represented in each DAC color register may be any of 256K possible colors (i.e.  $2^{3*6} = 256K$ ).

ABIOS initializes the Palette Registers and the DAC Color Registers upon each mode set:

Туре	Description
EGA and 16–color VGA	DAC The ABIOS initializes access to the 256 DAC color registers in blocks, or pages, of 64 colors each. The first 64 color page is initialized to analog equivalents of the 64 EGA colors. The remaining 192 colors remain undefined.  Attribute Controller To maintain color compatibility with existing EGA software, the BIOS initializes the Attribute Controller to the 16 commonly accepted default EGA colors.
CGA	DAC The ABIOS initializes access to the 256 DAC color registers as four blocks of 64 colors each in CGA modes. The first 64 color block is initialized as four 16 color subblocks. Each of these 16 color subblocks is initialized to the 16 colors displayable in CGA mode. The remaining 192 DAC registers are undefined.  Attribute Controller To maintain color compatibility with existing CGA software, the ABIOS initializes the Attribute Controller to the 16 color CGA palette. When applications software requests a CGA color, the Attribute Controller maps the requests through to its analog equivalent in the DAC controller.
13h	DAC The ABIOS initializes all 256 color registers to their IBM PS/2 default equivalents.  Attribute Controller The attribute controller receives 8-bit color values directly from application programs. It maps those values directly into the DAC color registers.

# Mode/Monitor Support, Continued

# Overriding default color values

ABIOS Video Service functions 11h-16h provide ways of overriding default Palette Register values. For more information, see the descriptions of these functions later in this chapter.

# **ROM-Resident Fonts**

#### ROM-resident fonts

The BIOS contains three ROM BIOS-resident character generators (fonts):

- 8x8 dot
- 8x14 dot
- 8x16 dot

The BIOS is also capable of generating a 9x16 dot font in 400 line text modes. The BIOS generates this 9x16 font by running the 8x16 character set through a ROM-resident table of corrections.

continued

# Default fonts are loaded during mode set

The default font associated with a given video mode is loaded by function 05h Set Video Mode. Which default font is loaded is directly related to the resolution produced by the mode requested.

If the resolution is	Then the default font is
320×200	8×8
320×350	8×14
360×400	9x16
640×200	8×8
640×350	8x14
640x480	8x16
720×350	9x14
720x400	9x16

#### Text modes and character blocks

In text modes, the ASCII character number is written to video memory map 0; the corresponding attribute byte is written to memory map 1. Memory map 2 is used for storing font data.

Each font occupies one 8K block, making for a total of 8 possible fonts. Character block numbers are zero-based. Character block 0 contains the first 8K font; character block 1 contains the second 8K character block; and so on through character block 7.

The maximum number of characters associated with any one font is 100h (i.e. 256 characters). The video hardware is capable of displaying characters selected from up to two character blocks (i.e. up to 512 characters).

# Overriding default fonts

ABIOS Video Service functions 0Fh Load Text Mode Font and function 10h Enhanced Load Text Mode Font provide a way to load nondefault or user-defined fonts into character blocks for display in a given text mode.

# **Error Handling**

# How errors are reported

ABIOS signals the status (Successful, Resume Stage after Interrupt, etc.) of each ABIOS request by returning a one word Return Code at offset 0Ch in the Request Block.

If Bit 15 of the Return Code field is set, the Video Service function requested has an error. The caller's Return Code handler routine should then test Bits 14, 13, 12, and 8 to determine the class of error that has occurred. The return code handler routine should then test the remaining bits to determine the precise nature of the error.

# Function: 00h — Default Interrupt Handler

# Description

This single-staged function handles unexpected hardware interrupts by resetting the interrupting condition at the device level.

In the ABIOS Video Service, function 00h resets the appropriate video hard-ware registers.

#### When to invoke

This function is only invoked if a given Logical ID has no outstanding Request Blocks waiting for an interrupt.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0000h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper ABIOS performance.

Code	Description
0000h	Successful Operation
0005h	Not My Interrupt, Resume Stage after Interrupt
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 01h — Return Logical ID Parameters

# Description

This function is a single-staged request that returns the parameters for the specified Logical ID.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (20h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0001h)	
08h	Word	Reserved (initialize to 0000h)	_
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Byte		Hardware Interrupt Level (06h)
11h	Byte		Arbitration Level (09h)
12h	Word		Device ID (0003h)
14h	Word		Count of Units
16h	Word		Logical ID flags
			Bits 15-4 = Reserved Bit 3 = 0 No overlap across units = 1 Overlap across units supported Bit 2 = 0 Reserved Bits 1-0 = Transfer Data Pointer Mode 00 = No Pointers Required
18h	Word		Request Block Length (for other functions)
1Ah	Byte	Reserved (initialize to 0000h)	Secondary Device ID
1Bh	Byte		Revision Level
1Ch	Word	Reserved (initialize to 0000h)	
1Eh	Word	Reserved (initialize to 0000h)	

continued

# Function: 01h — Return Logical ID Parameters, Continued

#### Return Codes

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper ABIOS performance.

Code	Description
0000h	Successful Operation
0005h	Not My Interrupt, Resume Stage after Interrupt
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Function: 02h — Reserved

## Function: 03h — Read Device Parameters

# Description

This single-staged function returns parameter data concerning the current video state. It also returns buffer size information that must be referenced before invoking Function 0Bh Return ROM Fonts Information and Function 0Ch Save Video Environment.

# Video state parameters

The video parameters returned by function 03h include:

- current video mode.
- number of scan lines associated with mode,
- monitor type (color or monochrome),
- · character height, and
- character blocks specifiers.

#### Character block specifier field

When the current video mode is a text mode, the Character Block Specifier field at offset 24h in the Request Block identifies which two character blocks are being used.

Bits 11-8 hold the binary value (000b-111b) of character block A, which contains the first displayable character set. Bits 3-0 hold the binary value of character block B, which contains the second displayable character set. The remaining bits in this field are reserved.

continued

# Interpreting the character block specifier field

The values returned in the function 03h Request Block Character Block Specifier field are interpreted as described in the table below:

Selector Field Value	Meaning
When the value of character block specifier A is different from charac- ter block specifier B	<ul> <li>Two character sets are available for display.</li> <li>Bit 3 of the attribute byte identifies which character block is to be displayed:         <ul> <li>1 = Use character block selector A</li> <li>0 = Use character block selector B</li> </ul> </li> </ul>
When the value in character block specifier A is equal to the value in character block specifier B	<ul> <li>One character set is available for display.</li> <li>Bit 3 of the attribute byte determines the foreground intensity of the character displayed:</li> <li>1 = Foreground intensity on</li> <li>0 = Foreground intensity off</li> </ul>

If the mode returned is a graphics mode, the value returned in the Character Block Specifier field is undefined.

# Function: 03h — Read Device Parameters, Continued

### **Buffer size parameters**

Function 03h also returns buffer size information applicable to the two Video Service functions listed below:

#### ■ Buffer size: Function 0Bh Return ROM Fonts Information

Function 0Bh Return ROM Fonts Information outputs information concerning each of the ROM fonts to a buffer specified on input. The value returned by function 03h at Request Block offset 2Ah provides the size of the buffer required by function 0Bh.

Function 03h must always be invoked before function 0Bh can be executed successfully. For more information on Function 0Bh, see the description of this function later in this chapter.

#### ■ Buffer size: Function 0Ch Save Video Environment

Function 0Ch Save Video Environment outputs the requested aspects of the current video state to a buffer specified on input. The values returned by function 03h at Request Block offsets 2Eh, 30h, 32h, and 34h are referenced by function 0Ch when determining the buffer size it will require.

Function 03h must always be invoked before function 0Ch can be executed successfully. For more information on Function 0Ch, see the description of this function later in this chapter.

continued

# Function: 03h — Read Device Parameters, Continued

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	]
06h	Word	Function (0003h)	]
08h	Word	Reserved (initialize to 0000h)	]
0Ah	Word	Reserved (initialize to 0000h)	]
0Ch	Word	Return Code	Return Code
0Eh	Word		
1Ch	Byte		Scan lines per screen
			00h = 200 lines 01h = 350 lines 02h = 400 lines 03h = 480 lines 04h-0FFh = Reserved
1Eh	Word		Video Mode
20h	Word		Type of monitor attached
			Bits 15-1 = Reserved Bit 0 = Color or monochrome 0 = Color 1 = Monochrome
22h	Word		Character height (bytes/character)
24h	Word		Character block specifier (Modes 0, 1, 2, 3, or 7 only)
			Bits 15-12 = Reserved Bits 11-8 = Character block select A Bits 7-4 = Reserved Bits 3-0 = Character block select B
28h	Word	Reserved (Initialize to 0000h)	
2Ah	Word		Size of data buffer required for function 0Bh Return ROM Fonts Information
2Eh	Word		Size of save/restore buffer header (bytes)
30h	Word		Size of save/restore hardware states (bytes)
32h	Word		Size of save/restore Device Block state (bytes)
34h	Word		Size of save/restore Digital-to- Analog Converter state (bytes)

# Function: 03h — Read Device Parameters, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper ABIOS performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Video Parameter
FFFFh	Return Code Field Not Valid

Function: 04h — Reserved

# Function: 05h — Set Video Mode

# **Description**

This single-staged function initializes the video hardware to the requested mode.

#### Table of video modes

Mode	Emul.	Res.	Туре	Max. Colors	Scheme	Char. Box	Max. Pgs.	Buff. Start
0, 1	CGA*	320x200	Text	16/256K	40x25	8x8	8	B8000h
0, 1	EGA*	320×350	Text	16/256K	40x25	8x14	8	B8000h
0, 1	VGA+	360×400	Text	16/256K	40x25	9x16	8	B8000h
2, 3	CGA*	640×200	Text	16/256K	80x25	8x8	8	B8000h
2, 3	EGA*	640×350	Text	16/256K	80x25	8x14	8	B8000h
2, 3!	VGA+	720×400	Text	16/256K	80x25	9x16	8	B8000h
4, 5	CGA	320x200	Graphics	4/256K	40x25	8x8	1	B8000h
6	CGA	640×200	Graphics	2/256K	80x25	8x8	1	B8000h
7	MDA*	720x350	Text	MDA Mono	80x25	9x14	8	B0000h
7!	VGA*	720x400	Text	VGA Mono	80x25	9x16	8	B0000h
D	EGA	320x200	Graphics	16/256K	40x25	8x8	8	A0000h
E	EGA	640x200	Graphics	16/256K	80x25	8x8	4	A0000h
F	EGA	640×350	Graphics	Mono	80x25	8x14	2	A0000h
10	EGA	640x350	Graphics	16/256K	80×25	8x14	2	A0000h
11	VGA	640x480	Graphics	2/256K	80×30	8x16	1	A0000h
12	VGA	640×480	Graphics	16/256K	80×30	8×16	1	A0000h
13	VGA	320x200	Graphics	256/256K	40x25	8×8	1	A0000h

indicates power-on default mode 3! = color monitor is attached, 7! = monochrome monitor is attached.

Indicates that scan lines must be specified before mode set. (See AH = 12h BL = 30h Select Scan Line for Alphanumeric Codes for details.)

<sup>&</sup>quot;+" indicates default mode

#### Video mode facts

# ■ All modes can be displayed in color and monochrome All 17 video modes can be displayed on either color or monochrome monitors.

# ■ MDA, CGA, and EGA modes are emulated To insure compatibility with older software, the ABIOS Video Service emulates all MDA, CGA, and EGA modes.

# ■ Modes 00h, 02h, 04h = Modes 01h, 03h, 05h On the CGA adapter, modes 00h, 02h, and 04h have color burst turned off, and modes 01h, 03h, and 05h have color burst turned on. The ABIOS video service does not support color burst; modes 00h, 02h, and 04h are identical to modes 01h, 03h, and 05h, respectively.

# ■ Text mode resolution determines default font/text scheme In text modes, the number of scan lines to display must be specified via function 05h Set Video Mode. Setting text mode scan lines determines both the default ROM-resident font ABIOS will load and the column-by-row text scheme in which the font will be displayed.

# ■ Text mode default font and text scheme can be overridden ABIOS Video Service function 0Fh Load Text Mode Font allows the caller to override the default font loaded when a text mode is requested. Function 10h Enhanced Load Text Mode Font allows the caller to override the default font and the column-by-row text scheme associated with a text mode.

#### ■ Color modes are programmable

The default colors associated with a given video mode are programmed by ABIOS at mode set. ABIOS Video Service functions 11h-16h can be used to override the default colors associated with any color mode. See the Programming Colors section in this chapter for more information.

# ■ 200 scan-line modes are double-scanned Each line of video is painted on the screen twice, one beneath the other, before the next new scan line is painted.

continued

#### Video mode facts, cont'd

# ■ No dots or characters written to screen by ABIOS

ABIOS does not actually write dots or characters to video RAM so that they appear on the screen. The caller and/or other programs must do this

#### ■ No cursor in graphics modes

A cursor is not displayed in graphics modes.

### Function 05h input field considerations

The Video Mode field (offset 1Eh) must be defined to a valid video mode number on entry into function 05h. The entry values of the remaining input fields depends on the monitor attached and the mode being requested

# Device Control Flag field (offset 1Ah)

Located at offset 1Ah in the function 05h Request Block, the Device Control Flag contains three flags. The Device Control Flag field must always be defined upon entry into function 05h.

# ■ Bit 2 — Gray scale summing flag

When a monochrome monitor is attached, gray scale summing is handled automatically by the video hardware. When a color monitor is attached, gray scale summing is enabled or disabled by setting this bit.

### ■ Bit 1 — Initialize DAC to default values flag

The video DAC can be initialized to IBM-compatible default values upon each mode set. Bit 1 enables (on) or disables (on) this feature of the ABIOS Video Service.

#### ■ Bit 0 — Clear video buffer flag

Video buffer memory can be cleared upon mode set. This clears the video screen. Bit 0 enables (on) or disables (off) this feature.

## Text mode scan lines (offset 1Ch)

The number of scan lines must be defined each time a text mode (modes 00h, 01h, 02h, 03h, 07h) is requested. Besides indicating the number of scan lines to display, the value in this field determines which ROM-resident font the requested text mode will use.

The PS/2 BIOS contains three BOM BIOS-resident fonts:

- 8x8 dot, used in 200 scan-line text and graphics modes
- 8x14 dot, used in 350 scan-line text and graphics modes
- 8x16 dot, used in 480 scan-line graphics modes

When 400 scan lines are indicated in the Text Mode Scan Lines field, the BIOS generates a 9x16 dot font. Because there is no ROM-resident 9x16 font, the BIOS generates the 9x16 font by running the 8x16 font through a ROM-resident table of corrections.

Note: This field is not defined for graphics modes.

# Character block to load (offset 26h)

In text modes, the ASCII character number is written to video memory map 0; the corresponding attribute byte is written to memory map 1. Memory map 2 is divided into eight 8K character blocks. Each character block may contain one text mode character font. Character block numbers are zero-based.

Bits 0-7 of the Character Block to Load field define which character blocks will be loaded with the *default* font associated with the text mode being requested. Setting Bit 0 to 1 instructs ABIOS to load the default font into Character Block 0. Setting Bit 0 to 0 tells ABIOS to preserve the present contents of Character Block 0. Setting Bit 1 to 1 instructs ABIOS to load the default font into Character Block 1, and so on.

If all eight bits of the Character Block to Load field are set to zero, then ABIOS does not load the *default* font associated with the text mode requested. Setting all bits to one causes ABIOS to load the default font into each Character Block.

continued

## Overriding default fonts

ABIOS Video Service functions 0Fh Load Text Mode Font and function 10h Enhanced Load Text Mode Font provide a way to load nondefault or user-defined fonts into character blocks for display in a given text mode.

# Character Block to Select (offset 24h)

In text modes, the video hardware is capable of displaying characters selected from up to two character blocks. The maximum number of characters associated with any one font is 256; therefore up to 512 characters can be displayed.

When the current video mode is a text mode, the Character Block Specifier field identifies which two character blocks are being used.

Bits 11-8 hold the binary value (000b-111b) of character block A, which contains the first displayable character set. Bits 3-0 hold the binary value of character block B, which contains the second displayable character set. The remaining bits in this field are reserved.

Selector Field Value	Meaning
When the value of character block specifier A is different from charac- ter block specifier B	<ul> <li>Two character sets are available for display.</li> <li>Bit 3 of the attribute byte identifies which character block is to be displayed:         <ul> <li>1 = Use character block selector A</li> <li>0 = Use character block selector B</li> </ul> </li> </ul>
When the value in character block specifier A is equal to the value in character block specifier B	<ul> <li>One character set is available for display.</li> <li>Bit 3 of the attribute byte determines the foreground intensity of the character displayed:         <ul> <li>1 = Foreground intensity on</li> <li>0 = Foreground intensity off</li> </ul> </li> </ul>

Function 0Eh Select Character Generator Block can be used to set the Character Block Specifier field independently from function 05h.

# Request block structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0005h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
1Ah	Word	Device Control Flags	
		Bits 15-3 = Reserved Bit 2 = Gray Scale Summing 0 Disabled 1 Enabled Bit 1 = Initialize DAC to default values 0 No 1 Yes Bit 0 = Clear video buffer 0 No 1 Yes	
1Ch	Byte	Text Mode Scan Lines  00h = 200 lines	
1Eh	Word	Video Mode	
24h	Word	Character Block to Display (modes hex 0,1,2,3,7) Bits 15-12 = Reserved Bits 11-8 = Character Block A Bits 7-4 = Reserved Bits 3-0 = Character block B	
26h	Word	Character block to load with default ROM font (modes hex 0,1,2,3,7)  Bit n = Block n flag 0 = Do not load font 1 = Load default font	
28h	Word	Reserved (Initialize to 0000h)	

continued

## **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper ABIOS performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Video Parameter
FFFFh	Return Code Field Not Valid

Functions: 06h - 0Ah - Reserved

# Function: 0Bh — Return ROM Fonts Information

# Description

This single-staged function outputs information concerning each ROM-resident font to a ROM Font buffer area specified on function entry.

#### How to determine buffer size

Function 03h Read Device Parameters returns the size of the buffer required by the Return ROM Fonts Information function. Function 03h returns this value to offset 2Ah of the function 03h Request Block.

Before function 0Bh can be issued, function 03h must always be invoked, to determine the proper buffer size.

### **Buffer format**

Each entry into the ROM Font Information buffer occupies 12 bytes. The format of each font entry is defined in the table below:

Size	Description	
Word	Reserved	
DWord	Pointer to ROM-resident font	
Word	Reserved	
Byte	Character size: number of columns	
Byte	Character size: number of rows	
Byte	Total/Partial font, where: 00h = total font 01h = Partial font 02h = FFh = Reserved	
Byte	Partial Font If a partial font is indicated in the byte above, this field tells which default font that partial font is drawn from.	

continued

# Function: 0Bh — Return ROM Fonts Information, Continued

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Bh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Word	Reserved (Initialize to 0000h)	
12h	DWord	Pointer to buffer that stores ROM font information	1
16h	Word	Reserved (Initialize to 0000h)	

# **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper ABIOS performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Video Parameter
FFFFh	Return Code Field Not Valid

# Function: 0Ch — Save Video Environment

# Description

This single-staged function stores any of three video states to a buffer specified upon function entry. The three states are:

- Hardware state
- Device Block state
- Digital-to-Analog Converter (DAC) state

# Buffer size values are returned by function 03h

The values returned by function 03h at Request Block offsets 2Eh, 30h, 32h, and 34h must be referenced in order to determine the buffer size to specify upon entry into function 0Ch.

Offset	Description	
2Eh	Size of Save Environment buffer header	
30h	Buffer size required to save hardware state	
32h	Buffer size required to save Device Block state	
34h	Buffer size required to save DAC state	

To insure a proper buffer size is calculated, function 03h must always be issued before function 0Ch can be executed successfully.

# Calculating video environment buffer size

The caller may elect to save any or all three video states.

The size of the save environment buffer that must be specified on entry into function 0Ch is calculated as follows:

Buffer header size + Buffer size of each state to be saved.

continued

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (000Ch)	][
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Word	Reserved (Initialize to 0000h)	
12h	DWord	Pointer to environment save area	
16h	Word	Reserved (initialize to 0000h)	]
2Ch	Word	Video states to be saved	1
		Bits 15-3	

# **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper ABIOS performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Video Parameter
FFFFh	Return Code Field Not Valid

# Function: 0Dh — Restore Video Environment

# Description

This single-staged function restores the video environment located at the buffer area pointed to on function entry.

For more information on the structure and contents of the video environment buffer, see "Function: 0Ch — Save Video Environment."

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (000Dh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Word	Reserved (Initialize to 0000h)	
12h	DWord	Pointer to the video environment to be restored	
16h	Word	Reserved (Initialize to 0000h)	]
1Ah	Word	Device control flag  Bits 15-1 = Reserved  Bit 0 = Clear video buffer  0 = No  1 = Yes	
2Ch	Word	Video states to be restored  Bits 15-3 = Reserved (set to 0)  Bit 2 = DAC state	

continued

# Function: 0Dh — Restore Video Environment, Continued

# **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper ABIOS performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Video Parameter
FFFFh	Return Code Field Not Valid

# Function: 0Eh — Select Character Generator Block

# Description

This single-staged function allows the caller, when in text modes, to select either of two character blocks.

The maximum number of characters associated with any one character block is 256; therefore up to 512 characters can be displayed.

When the current video mode is a text mode, the Character Block Specifier field identifies which two character blocks are being used.

Bits 11-8 hold the binary value (000b-111b) of character block A, which contains the first displayable character set. Bits 3-0 hold the binary value of character block B, which contains the second displayable character set. The remaining bits in this field are reserved.

Selector Field Value	Meaning
When the value of character block specifier A is different from charac- ter block specifier B	Two character sets are available for display.  Bit 3 of the attribute byte identifies which character block is to be displayed:  1 = Use character block selector A  0 = Use character block selector B
When the value in character block specifier A is equal to the value in character block specifier B	<ul> <li>One character set is available for display.</li> <li>Bit 3 of the attribute byte determines the foreground intensity of the character displayed:         <ul> <li>1 = Foreground intensity on</li> <li>0 = Foreground intensity off</li> </ul> </li> </ul>

Function 05h Set Video Mode can also be used to set the Character Block Specifier field.

continued

# Function: 0Eh - Select Character Generator Block, Continued

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (000Eh)	][
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	]
0Ch	Word	Return Code	Return Code
0Eh	Word		
16h	Word	Reserved (Initialize to 0000h)	]
24h	Word	Character Block to Display	]
	÷	Bits 15-12 = Reserved Bits 11-8 = Character block A Bits 7-4 = Reserved Bits 3-0 = Character block B	

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper ABIOS performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	invalid Video Parameter
FFFFh	Return Code Field Not Valid

#### Function: 0Fh — Load Text Mode Font

#### Description

This single-staged function loads the font indicated on function entry into the specified Character Block in Memory Map 2.

Scan lines per character, number of character rows, buffer length, and cursor size are not recalculated by this function. The font loaded here must occupy the *default* character box size associated with the text mode in effect.

#### When to use function 0Fh

When in text mode, use function 0Fh to load a nondefault or user-defined font. For best results, insure that the bytes-per-character of the font being loaded is equal to the bytes-per-character of the default font.

#### Function 0Fh input field considerations

When a ROM-resident font is loaded, the character height is known and the full 100h character set is loaded. Therefore, the caller need not specify the Count of Characters, Character Offset, or Character Height fields on function entry.

When a user-defined font is loaded, all input fields must be specified on function entry.

continued

# Function: 0Fh — Load Text Mode Font, Continued

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	]
06h	Word	Function (000Fh)	][
08h	Word	Reserved (initialize to 0000h)	]
0Ah	Word	Reserved (initialize to 0000h)	]
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Word	Reserved (Initialize to 0000h)	]
12h	DWord	Pointer to the user font	]
16h	Word	Reserved (Initialize to 0000h)	7
18h	Word	Count of characters	]
	Byte	Valid values = 01h to 100h	
1Dh	Byte	Font Type to Load	]
		00h = User-defined 01h = 8x8 ROM font 02h = 8x14 ROM font 03h = 8x16 ROM font 04h-FFh = Reserved	
22h	Word	Character Height (bytes/character)	
24h	Word	Character Block to Load	1
		00h-07h = Valid load values 08h-FFFFh = Reserved	
28h	Word	Character Offset	

# Function: 0Fh — Load Text Mode Font, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper ABIOS performance.

Code	Description
0000h	Successful Operation When a user-defined font is loaded, the Count of Characters field must not be zero. If set to zero, no font is loaded and function 0Fh returns with Return Code 0000h Successful Operation.
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Video Parameter When a user-defined font is loaded, the Count of Characters and the Character offset fields must not exceed the maximum numbers of characters per character set (100h characters). If greater than 100h, function 0Fh returns with a Return Code field of C005h Invalid Video Parameter.
FFFFh	Return Code Field Not Valid

#### Function: 10h — Enhanced Load Text Mode Font

#### Description

This single-staged function loads the font indicated on function entry into the specified Character Block in Memory Map 2. The font loaded here need not occupy the *default* character box size associated with the text mode in effect.

Scan lines per character, number of character rows, buffer length, and cursor size are recalculated by this function.

#### When to use function 10h

Use function 10h to load a font that has a different box size than the default font associated with the current text mode. Cursor size and number of rows on screen will be recalculated automatically.

For example, the default font associated with mode 07h (720x400, VGA text mode) is 9x16. The default text scheme is 80 columns by 25 rows.

Since function 10h recalculates scan lines per character, number of character rows, buffer length, and cursor size, loading the ROM-resident 8x8 font in this mode yields a screen that displays 80 columns by 50 rows, with a properly scaled cursor.

#### Function 0Fh input field considerations

When a ROM-resident font is loaded, the character height is known and the full 100h character set is loaded. Therefore, the caller need not specify the Count of Characters, Character Offset, or Character Height fields on function entry.

When a user-defined font is loaded, all input fields must be specified on function entry.

# Function: 10h — Enhanced Load Text Mode Font, Continued

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0010h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Word	Reserved (Initialize to 0000h)	
12h	DWord	Pointer to the user font	
16h	Word	Reserved (Initialize to 0000h)	
18h	Word	Count of characters	
		Valid values = 01h-100h	
1Dh	Byte	Font Type to Load	
		00h = User-defined 01h = 8x8 ROM font 02h = 8x14 ROM font 03h = 8x16 ROM font 04h-FFh = Reserved	
22h	Word	Character Height (bytes/character)	
24h	Word	Character Block to Load	
		00h-07h = Valid values 08h-FFFFh = Reserved	
28h	Word	Character offset	

continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper ABIOS performance.

Code	Description
0000h	Successful Operation When a user-defined font is loaded, the Count of Characters field must not be zero. If set to zero, no font is loaded and function 0Fh returns with Return Code 0000h Successful Operation.
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Video Parameter When a user-defined font is loaded, the Count of Characters and the Character offset fields must not exceed the maximum numbers of characters per character set (100h characters). If greater than 100h, function 0Fh returns with a Return Code field of C005h Invalid Video Parameter.
FFFFh	Return Code Field Not Valid

## Function: 11h — Read Palette Register

#### Description

This single-staged function reads the value of the palette register specified on function entry.

#### Attribute controller, palette registers, and the DAC

The Attribute Controller component of the VGA hardware contains an internal Palette Register. The Palette Register is composed of sixteen 8-bit registers. Bits 0-5 can be programmed to any value up to 3Fh (i.e. 64). Bits 7-6 are reserved. The value contained in each palette register is combined with other Attribute Controller information to create an 8-bit index into the DAC.

#### Palette registers are initialized at mode set

The value programmed into each Palette Register is determined by ABIOS at mode set. When a 16-color EGA or VGA mode is selected, ABIOS initializes the Palette Register to the 16 default EGA colors. When a 16-color CGA mode is selected, ABIOS initializes the Palette Registers to the 16-color CGA palette. In mode 13h, ABIOS initializes the entire Attribute Controller so that the 8 bit per pixel value used in this mode maps directly into the DAC.

continued

# Function: 11h — Read Palette Register, Continued

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0011h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
16h	Word	Reserved (Initialize to 0000h)	
32h	Word	Palette Register to Read	
		00h-0Fh = Valid values 10h-FFFFh = Reserved	
34h	Word		Palette Value Read

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper ABIOS performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Video Parameter
FFFFh	Return Code Field Not Valid

## Function: 12h — Write Palette Register

#### Description

This single-staged function writes a particular value to the palette register specified on function entry. Valid values are 00h-3Fh.

This function is valid for all modes except mode 13h. Writing to a palette register while in mode 13h may cause unpredictable results. In mode 13h, the VGA hardware requires that the Palette Registers remain as programmed on mode set.

#### Attribute controller, palette registers, and the DAC

The Attribute Controller component of the VGA hardware contains an internal Palette Register. The Palette Register is composed of sixteen 8-bit registers. Bits 0-5 can be programmed to any value up to 3Fh (i.e. 64). Bits 7-6 are reserved. The value contained in each palette register is combined with other Attribute Controller information to create an 8-bit index into the DAC.

#### Palette registers are initialized at mode set

The value programmed into each Palette Register is determined by ABIOS at mode set. When a 16-color EGA or VGA mode is selected, ABIOS initializes the Palette Register to the 16 default EGA colors. When a 16-color CGA mode is selected, ABIOS initializes the Palette Registers to the 16-color CGA palette. In mode 13h, ABIOS initializes the entire Attribute Controller so that the 8-bit per pixel value used in this mode maps directly into the DAC.

#### Reference

For more information on color palettes, the DAC, and color mode register initialization, refer to Hardware Environment in this chapter.

continued

# Function: 12h — Write Palette Register, Continued

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (0012h)	]
08h	Word	Reserved (initialize to 0000h)	]
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
16h	Word	Reserved (Initialize to 0000h)	]
32h	Word	Write value to the palette register	
		00h-0Fh = Valid write values 10h-FFFFh = Reserved	
34h	Word	Load the palette value	
·		00h-3Fh = Valid 40h-FFFFh = Reserved	

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper ABIOS performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Video Parameter
FFFFh	Return Code Field Not Valid

## Function: 13h — Read DAC Color Register

#### Description

This single-staged function returns the 18-bit Red-Green-Blue (RGB) value contained in the DAC color register specified on function entry.

#### Digital-to-Analog Converter (DAC) color registers

The video DAC contains 256 individual color registers.

Each DAC color register contains one 18-bit RGB analog value. Six bits of each register are allocated to each primary color. Thus, the color represented in each DAC color register may be any of 256K possible colors (i.e.  $2^{3*6} = 256K$ ).

#### How DAC color registers are initialized

The ABIOS initializes the 8-bit index values contained in the Attribute Controller and the 18-bit analog color values contained in the DAC color registers each time a video mode is set.

When a CGA, EGA, or 16-color VGA mode is requested, ABIOS initializes the first 64 DAC color registers to analog equivalents of the 64 EGA colors. The remaining 192 registers are undefined. When mode 13h (256 color mode) is set, ABIOS initializes all 256 color registers to their IBM PS/2-compatible values.

continued

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0013h)	]
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
16h	Word	Reserved (Initialize to 0000h)	1
2Ah	Word	DAC Color Register to Read	
		00h-FFh = Valid values 100h-FFFFh = Reserved	
2Ch	Word		Read value
2Eh	Word		Green value
30h	Word		Blue value

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper ABIOS performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Video Parameter
FFFFh	Return Code Field Not Valid

## Function: 14h — Write DAC Color Register

#### Description

This single-staged function outputs the 18-bit RGB value contained to the DAC color register specified on function entry.

#### Digital-to-Analog Converter (DAC) color registers

The video DAC contains 256 individual color registers.

Each DAC color register contains one 18-bit RGB analog value. Six bits of each register are allocated to each primary color. Thus, the color represented in each DAC color register may be any of 256K possible colors (i.e.  $2^{3*6} = 256K$ ).

#### How DAC color registers are initialized

The ABIOS initializes the 8-bit index values contained in the Attribute Controller and the 18-bit analog color values contained in the DAC color registers each time a video mode is set.

When a CGA, EGA, or 16-color VGA mode is requested, ABIOS initializes the first 64 DAC color registers to analog equivalents of the 64 EGA colors. The remaining 192 registers are undefined. When mode 13h (256 color mode) is set, ABIOS initializes all 256 color registers to their IBM PS/2-compatible values.

continued

# Function: 14h — Write DAC Color Register, Continued

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0014h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
16h	Word	Reserved (Initialize to 0000h)	
1Ah	Word	Device control flags	
		Bits 15-3 = Reserved Bit 2 = Gray Scale Summing 0 Disable 1 Enable Bits 1-0 = Reserved	
2Ah	Word	Color Register to Write  00h-FFh = Valid write values	
2Ch	Word	100h-FFFFh = Reserved  Red Value  00h-3Fh = Valid value  40h-FFFFh = Reserved	
2Eh	Word	Green Value 00h-3Fh = Valid value 40h-FFFFh = Reserved	
30h	Word	Blue Value 00h-3Fh = Valid value 40h-FFFFh = Reserved	

# Function: 14h — Write DAC Color Register, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper ABIOS performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Video Parameter
FFFFh	Return Code Field Not Valid

## Function: 15h — Read Block of Color Registers

#### Description

This single-staged function reads a block of 18-bit RGB color register values from the Digital-to-Analog-Converter (DAC), beginning with the color register specified on function entry.

A doubleword pointer to the buffer area where the block is to be stored must also be specified on function entry.

#### Function 16h input field considerations

- Number of registers to load must be greater than zero
  - If the value input into the Number of Registers to Load field is zero, no action is performed and function 16h returns with Return Code 0000h Successful Operation
- Block length must not exceed 100h

If the value in the First Color Register to Write field plus the value in the Number of Color Registers to Write field exceeds 100h, then no action is performed and function 16h returns with Return Code C005h Invalid Input Parameter.

#### Color register data format

The block of DAC color register values returned by function 15h is stored in a system RAM buffer as a series of three-byte sequences as follows:

(Red value, green value, blue value) (red value, green value, blue value) ....

The standard range for red, green, or blue values is 00h to 3Fh. The values 40h to FFFFh are reserved.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (0015h)	]
08h	Word	Reserved (initialize to 0000h)	]
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Word	Reserved (Initialize to 0000h)	]
12h	DWord	Pointer to read the color registers into the save area	
16h	Word	Reserved (Initialize to 0000h)	]
18h	Word	Number of color registers	]
2Ah	Word	First color register  00h-FFh = Valid read values 100h-FFFFh = Reserved	

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper ABIOS performance.

Code	Description
0000h	Successful Operation If the value input into the Number of Registers to Load field is zero, no action is performed and function 16h is- sues Return Code 0000h Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Video Parameter If the value in the First Color Register to Write field plus the value in the Number of Color Registers to Write field exceeds 100h, no action is performed and function 16h returns with Return Code C005h Invalid Input Parameter.
FFFFh	Return Code Field Not Valid

## Function: 16h — Write Block of DAC Color Registers

#### Description

This single-staged function loads a block of 18-bit RGB values to the DAC color registers, beginning with the color register specified on function entry.

The start address of the block of color register values to be loaded is indicated with a doubleword pointer that is also specified on function entry.

#### **RGB** data format

The block of RGB color register values to be loaded by function 16h must be stored in system RAM as a series of three-byte sequences as follows:

(Red value, green value, blue value) (red value, green value, blue value) ....

The standard range for red, green, or blue values is 00h to 3Fh. The values 40h to FFFFh are reserved.

#### Function 16h input field considerations

#### ■ Device Control Flag and gray scale summing

When a monochrome monitor is attached, gray scale summing is handled automatically by the video hardware. When a color monitor is attached, gray scale summing is enabled or disabled by setting the value of bit 2, Gray Scale Summing, of the Device Control Flag field.

#### ■ Number of register to load must be greater than zero

If the value input into the Number of Registers to Load field is zero, no action is performed and function 16h returns with Return Code 0000h Successful Operation

#### ■ Block length must not exceed 100h

If the value of the First Color Register to Write field plus the value of the Number of Color Registers to Write field exceeds 100h, then no action is performed and function 16h returns with Return Code C005h Invalid Input Parameter.

# Function: 16h — Write Block of DAC Color Registers, Continued

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0016h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Word	Reserved (Initialize to 0000h)	
12h	DWord	Pointer to write the color registers into the save area	
16h	Word	Reserved (Initialize to 0000h)	
18h	Word	Number of color registers	
1Ah	Word	Device control flags	
		Bits 15-3 = Reserved Bit 2 = Gray Scale Summing 0 Disable 1 Enable Bits 1-0 = Reserved	
2Ah	Word	First color register  00h-FFh = Valid write values 100h-FFFFh = Reserved	

continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper ABIOS performance.

Code	Description
0000h	Successful Operation If the value input into the Number of Registers to Load field is zero, no action is performed and function 16h issues Return Code 0000h Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Video Parameter If the values in the First Color Register to Write and the Number of Color Registers to Write field exceed 100h, no action is performed and function 16h returns with Return Code C005h Invalid Input Parameter.
FFFFh	Return Code Field Not Valid

# Chapter 12

# ABIOS Serial Communications Service

## Overview

#### Introduction

The ABIOS Serial Communications Service provides access to serial I/O device adapters. The functions available provide the caller with a means of accessing the system serial ports without directly programming hardware controller registers. To maintain maximum compatibility across different serial port controllers, direct hardware programming of a controller should be avoided.

## Summary of ABIOS Serial Communications Service functions

Function	Description
00h	Default Interrupt Handler
01h	Return Logical ID Parameters
03h	Read Device Parameters
04h	Reserved
05h	Reset/Initialize Serial Port
06h-0Ah	Reserved
0Bh	Set Modern Control
0Ch	Set Line Control
0Dh	Set Baud Rate
0Eh	Transmit
0Fh	Receive
10h	Transmit and Receive
11h	Modem Status
12h	Cancel
13h	Return Status Line
14h	Return Modem Status
15h	Enable FIFO Control

## In this chapter

This chapter includes information about the following topics:

- Hardware Environment
- Error Handling
- ABIOS Serial Communications Service functions

#### Hardware Environment

#### Serial port

The ABIOS supports a National Semiconductor 16550 serial port controller or equivalent logic. The serial ports can be addressed as Serial 1–8. See (40:10h) to find out how many serial ports are available. Serial 1 and 3 interrupts are on IRQ 4; Serial 2 and 4 interrupts are on IRQ 3. The serial port base addresses are shown below. ABIOS initializes the serial ports in the same order that they reside in the ROM BIOS data area, so the serial port Logical IDs will be in the same order as in the BIOS Data area (40:10h). Additional serial ports and Logical IDs may be initialized.

#### Serial port addresses/interrupt levels

Serial Port Number	Base Address	Interrupt Level
1	03F8h	4
2	02F8h	3
3	3220h	3
4	3228h	3
5	4220h	3
6	4228h	3
7	5220h	3
8	5228h	3

#### NS 16550 characteristics

The NS 16550, which is functionally compatible with the NS 16450 and the NS 8250, supports:

- Characters of 5, 6, 7, or 8 bits,
- 1, 1.5, or 2 stop bits, and
- even, odd, or no parity modes.

#### NS 16550 Serial Communications Controller

The NS 16550 does serial to parallel conversions on data received from a peripheral device or a modem, and parallel to serial conversion on data received from the system processor. The system processor can read the status of the NS 16550 at any time during its operation. The information furnished includes the type and condition of transfer operations in progress, as well as any error conditions (parity, overrun, framing, or break interrupt) present. The NS 16550 provides complete modem control, and has a user programmable processor–interrupt system.

#### Programmable baud rate generator

The serial port controller can operate at speeds of from 110 to 19,200 bps.

#### **NS 16550 Serial Controller Registers**

The NS 16550 has 12 accessible registers:

- Receiver Buffer Register (Read Only)
- Transmitter Holding Register (Write Only)
- Interrupt Enable Register (Read/Write)
- Interrupt Identification Register (Read Only)
- FIFO (First in/First out) Control Register (Write Only)
- Line Control Register (Read/Write)
- Modem Control Register (Read/Write)
- Line Status Register (Read Only)
- Modern Status Register (Read Only)
- Scratch Register (Read/Write)
- Divisor Latch (LSB) (Read/Write)
- Divisor Latch (MSB) (Read/Write)

Information on the operation of these registers is contained in the National Semiconductor NS 16550 Data Sheet. However, to avoid any incompatibility problems introduced by direct hardware programming, use the access to the serial controller provided through the BIOS services.

## Hardware Environment, Continued

#### I/O port addresses

The I/O port table in Section 2 provides a complete list of all serial I/O port addresses. These I/O addresses correspond to the serial port registers and provide a standard means of access for the caller.

## **Error Handling**

#### How errors are reported

ABIOS signals the status (Successful, Resume Stage after Interrupt, etc.) of each ABIOS request by returning a one word Return Code at offset 0Ch in the Request Block.

If Bit 15 of the Return Code field is set, the Serial Communications Service function requested has an error. The caller's Return Code handler routine should test Bits 14, 13, 12, and 8 to determine the class of error that has occurred and then test the remaining bits to determine the precise nature of the error.

## Function: 00h — Default Interrupt Handler

#### Description

This function is a single-staged or multistaged request that handles unexpected hardware interrupts by resetting the interrupt at the device level.

#### When to invoke

This function is invoked by calling the interrupt routine with a function code of 0000h. It is only invoked if a given Logical ID has no outstanding Request Blocks waiting for an interrupt.

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0000h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
0005h	Not My Interrupt, Resume Stage after Interrupt
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 01h — Return Logical ID Parameters

## **Description**

This function is a single-staged request that returns the parameters for the specified Logical ID.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (20h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0001h)	
08h	Word	Reserved (initialize to 0000h)	_
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte		Interrupt Level (03h or 04h))
11h	Byte		Arbitration Level (FFh)
12h	Word		Device ID (0006h)
14h	Word		Count of Units
16h	Word		Logical ID Flags
			Bits 15-4 = Reserved Bit 3 = 0 No overlap across units (only one unit is supported). Bit 2 = 0 Reserved Bits 1-0 = Transfer Data Pointer Mode Return Codes 01 = Logical Pointer Required
18h	Word		Request Block Length (for other functions)
1Ah	Byte	Reserved (initialize to 0000h)	Secondary Device ID
1Bh	Byte		Revision Level
1Ch	Word	Reserved (initialize to 0000h)	
1Eh	Word	Reserved (initialize to 0000h)	

# Function: 01h — Return Logical ID Parameters, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

#### Function: 03h — Read Device Parameters

#### Description

This function is a single-staged request that reads the parameters of the serial port(s). This function does not interact with any hardware and has no effect on any other outstanding requests.

## Before using this function

Invoke function 05h Reset/Initialize Serial Device to synchronize the serial port parameters before invoking this function.

#### How the serial port parameters are set up

The serial port parameters are maintained in the Serial Port Device Block (Device ID 0006h). These parameters always reflect the state of the serial port hardware. The parameters are updated every time an ABIOS (or CBIOS) Serial Communications Service function is invoked.

Warning: If the serial ports are directly programmed or programmed using CBIOS INT 14h functions after ABIOS initialization, the serial parameters in the ABIOS Device Block will not be accurate.

#### Initial serial port values

The serial port(s) is initialized to the following values during ABIOS initialization:

- Baud rate of 1200
- No parity
- One stop bit
- Seven Bits Per Character
- No break

# Function: 03h — Read Device Parameters, Continued

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0003h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
18h	Word	Reserved (Initialize to 0000h)	
28h	Byte		Modem Control
			Bits 7-5 = Reserved (set to 0) Bit 4 = 1 Loop Bit 3 = 1 Out2 Bit 2 = 1 Out1 Bit 1 = 1 Request To Send Bit 0 = 1 Data Terminal Ready
29h	Byte		Asynchronous Interrupt Status  Bits 7-6 = Reserved (set to 0)  Bit 5 = 1 Modern Status
2Ah	Byte		FIFO Trigger Level
44h	Byte		Transmission Baud Rate  00h = 110  01h = 150  02h = 300  03h = 600  04h = 1200  05h = 2400  06h = 4800  07h = 9600  08h = 19200

## Request Block Structure, cont'd

Offset	Size	Input:	Output:
45h	Byte		Parity Type  00h = None 01h = Odd 02h = Even 03h = Stick parity odd 04h = Stick parity even
46h	Byte		Number of Stop Bits  Note: The following is true if the number of Bits Per Characters either 1, 2, or 3.  00h = 1 01h = 2
			Note: The following is true if the number of Bits Per Character is 0.  00h = 1 01h = 1-1/2
47h	Byte		Number of Bits Per Character 00h = 5 01h = 6 02h = 7 03h = 8
48h	Byte		Break Status  00h = Disabled  01h = Enabled

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Function: 05h — Reset/Initialize Serial Port

#### Description

This function is a single-staged request that initializes the serial port(s) according to the specified values.

#### Reset process

When this interrupt is invoked, the ABIOS:

- cancels all outstanding serial communications Request Blocks,
- disables all serial port interrupts, including those generated by functions 0Eh Transmit, 0Fh Receive, 10h Transmit and Receive, and 11h Modem Status.
- clears any pending data at the serial ports, and
- synchronizes the Device Block parameters so they match the current hardware serial port values (this must be done before function 03h Read Device Parameters is invoked).

The caller is responsible for deallocating the appropriate Request Blocks and ensuring the appropriate condition of the interrupt controller (by sending EOIs).

# Function: 05h — Reset/Initialize Serial Port, Continued

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0005h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
18h	Word	Reserved (Initialize to 0000h)	
28h	Byte	Modem Control	
	-	Bits 7-5 = Reserved Bit 4 = 1 Loop Bit 3 = 1 Out2	
		Note: This bit must be 0 if Bit 4 is 0.	
		Bit 2 = 1 Out1	
		Note: This bit must be 0 if Bit 4 is 0.	
		Bit 1 = 1 Send Bit 0 = 1 Data Terminal Ready	
29h	Byte	FIFO Trigger Level, where: 00h= 1 Byte 01h= 4 Bytes 02h= 8 Bytes 03h= 14 Bytes	
2Ah	Byte	FIFO Control, where:  00h = Do not change or FIFO not supported  01h = Enable and Reset FIFO  02h-FFh=Enable FIFO	
44h	Byte	Transmission Baud Rate  00h = 110 01h = 150 02h = 300 03h = 600 04h = 1200 05h = 2400 06h = 4800 07h = 9600 08h = 19200	

## Request Block Structure, cont'd

Offset	Size	Input:	Output:
45h	Byte	Parity Type  00h = None 01h = Odd 02h = Even 03h = Stick parity odd 04h = Stick parity even	
46h	Byte	Number of Stop Bits  Note: The following is true for a 6 bit, 7 bit, or 8 bit word length.  00h = 1 01h = 2  Note: The following is true for a 5 bit word length.  00h = 1 01h = 1-1/2	
47h	Byte	Number of Bits Per Character 00h = 5 01h = 6 02h = 7 03h = 8	
48h	Byte	Break Status 00h = Disabled 01h = Enabled	
49h	Byte		Line Status  Bit 7 = Reserved  Bit 6 = 1 Transmitter Empty  Bit 5 = 1 Transmitter Holding  Register Empty  Bit 4 = 1 Break Interrupt  Bit 3 = 1 Framing Error  Bit 2 = 1 Parity Error  Bit 1 = 1 Overrun Error  Bit 0 = 1 Data Ready
4Ah	Byte		Modem Status  Bit 7 = 1 Data Carrier Detect  Bit 6 = 1 Ring Indicator  Bit 5 = 1 Data Set Ready  Bit 4 = 1 Clear To Send  Bit 3 = 1 Delta Data Carrier Detect  Bit 2 = 1 Trailing Edge Ring  Indicator  Bit 1 = 1 Delta Data Set Ready  Bit 0 = 1 Delta Clear To Send

# Function: 05h — Reset/Initialize Serial Port, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Functions: 06h - 0Ah - Reserved

# Function: 0Bh — Set Modem Control

# Description

This function is a single-staged request that sets the parameters for control of the modem as specified in the Request Block.

This function does not affect any Request Blocks already in process that have a Return Code of 0001h Resume Stage after Interrupt or 0005h Not My Interrupt, Resume Stage after Interrupt.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Bh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
18h	Word	Reserved	
28h	Byte	Modem Control	
		Bits 7-5 = Reserved (set to 0) Bit 4 = 1 Loop Bit 3 = 1 Out2	
		Note: This bit must be 0 if Bit 4 is 0.	
		Bit 2 = Out1	
		Note: This bit must be 0 if Bit 4 is 0.	
		Bit 1 = 1 Request-To-Send Bit 0 = 1 Data Terminal Ready	

Function: 0Bh — Set Modem Control, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Function: 0Ch - Set Line Control

## Description

This function is a single-staged request that sets the parameters for the line as specified in the Request Block.

This function does not affect any Request Blocks already in process that have a Return Code of 0001h Resume Stage after Interrupt or 0005h Not My Interrupt, Resume Stage after Interrupt.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Ch)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
18h	Word	Reserved (Initialize to 0000h)	
45h	Byte	Parity Type	
		00h = None 01h = Odd 02h = Even 03h = Stick parity odd 04h = Stick parity even	
46h	Byte	Number of Stop Bits	
		Note: The following is true for a 6 bit, 7 bit, or 8 bit word length.	
		00h = 1 Stop bit 01h = 2 Stop bits	
		Note: The following is true for a 5 bit word length.	
		00h = 1 Stop bit 01h = 1-1/2 Stop bits	
47h	Byte	Number of Bits Per Character	
÷		00h = 5 bits 01h = 6 bits 02h = 7 bits 03h = 8 bits	
48h	Byte	Break Status  00h = Disabled 01h = Enabled	

Function: 0Ch — Set Line Control, Continued

## **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 0Dh — Set Baud Rate

## Description

This function is a single-staged request that sets the baud rate as specified in the Request Block.

This function does not affect any Request Blocks already in process that have a Return Code of 0001h Resume Stage after Interrupt or 0005h Not My Interrupt, Resume Stage after Interrupt.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Dh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
18h	Word	Reserved (Initialize to 0000h)	
44h	Byte	Transmission Baud Rate  00h = 110 01h = 150 02h = 300 03h = 600 04h = 1200 05h = 2400 06h = 4800 07h = 9600 08h = 19200 09h-0FFh = Reserved	

Function: 0Dh — Set Baud Rate, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 0Eh — Transmit

#### Description

This function is a discrete multistaged request that enables the transmit interrupt. No data is transmitted until the actual transmit interrupt occurs.

## Pointer field definitions

The Transmit Tail Pointer must point to the first byte of the data block to be transmitted. The value in this field should be relative to the beginning of the Transmit Buffer. The value in this field must always be between zero and the value in the Transmit Buffer Length field minus one.

The Transmit Head Pointer should point to a location one byte past the last byte to be sent. The value in this field should be relative to the beginning of the Transmit Buffer. The value in this field must always be between zero and the value in the Transmit Buffer Length field minus one.

Function: 0Eh - Transmit, Continued

#### Updating the Transmit Tail Pointer field

When a transmit interrupt occurs, the interrupt routine increments the value of the Transmit Tail Pointer by the number of bytes transmitted. Bit 1 (Transmit In Progress) of the Current Serial Port Status field will be set.

The Transmit Buffer may be checked at any time during the transmit routine, so the ABIOS writes data to the Transmit Buffer *before* the value in the Transmit Tail Pointer field is incremented.

## Transmit Pointer field rules

The following rules apply to programming the transmit pointer fields:

- The Transmit Tail Pointer field value will always get closer to the Transmit Head Pointer value as interrupts occur.
- If the value of the Transmit Tail Pointer comes to the end of the Transmit Buffer, the Transmit Tail Pointer field value wraps around to 0.
- A Transmit Buffer Empty condition occurs when the value in the Transmit Tail Pointer equals the value in the Transmit Head Pointer field.
- If a Transmit Buffer Empty condition happens after data is sent to the serial port, the ABIOS stops sending data and sets bit 6 (Transmit Buffer Empty) of the Current Serial Port Status field (the transmit interrupt is still enabled). If the empty buffer condition persists on the next transmit interrupt (or any transmit interrupt), the ABIOS will then disable the transmit interrupt.
- If the transmit interrupt is disabled because the transmit buffer is empty,
   the Request Block is canceled by the ABIOS (although it is up to the caller to deallocate the Request Block).
- If a Request Block is canceled by the ABIOS, the Current Serial Port Status field will have bit 6 (Transmit Buffer Empty) and bit 7 (Transmitter Holding Register Empty) set.

## Function: 0Eh - Transmit, Continued

#### Transmit buffer full

This condition occurs when the value in the Transmit Head Pointer full is one less than the value in the Transmit Tail Pointer field.

It also occurs if zero is in the Transmit Tail Pointer field and the value in the Transmit Head Pointer field is one less than the value in the Transmit Buffer Length field.

#### Adding data during a transmit interrupt

The values in the Transmit Buffer Segment, Transmit Buffer Offset, and Transmit Buffer Length fields can be altered across calls to the transmit interrupt routine.

The ABIOS removes the data from the buffer before changing the Transmit Tail Pointer field, therefore the caller can add data to be transmitted during the process of a transmit interrupt by placing the data in the Transmit Buffer and logically incrementing the value in the Transmit Head Pointer field.

The caller must not permit the value in the Transmit Head Pointer field to equal the value in the Transmit Tail Pointer field while it adds data to the transmit buffer.

#### Maximum number of characters transmitted

The maximum number of characters that a single view of the Transmit Buffer can indicate to be transmitted is one less than the value in the Transmit Buffer Length field.


#### Number of bits per character

If the Number of Bits Per Character field in function 05h Reset/Initialize is less than 8, the high order bit(s) of each byte are transmitted as is.

#### Transmit sequence example


After the caller initializes the Request Block with a Transmit function (0Eh or 10h) and calls the start routine, the following actions take place:

1. The ABIOS tests the Transmit Head and Tail Pointers to ensure that they agree with the Transmit Buffer Length. The maximum number of characters that can be transmitted in this example is 6.

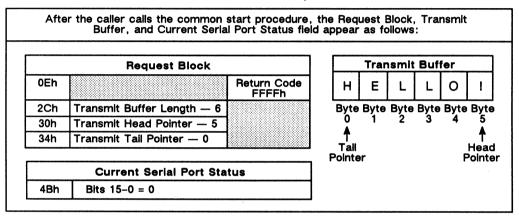


#### Transmit sequence example, cont'd

- 2. The ABIOS start routine enables the transmitter interrupt but doesn't send any data yet.
- 3. ABIOS tests the Transmitter Holding Register (bit 7 of the Current Serial Port Status field), finds it empty, and generates a transmit interrupt, setting the Return Code field to 0001h, Resume Stage after Interrupt.

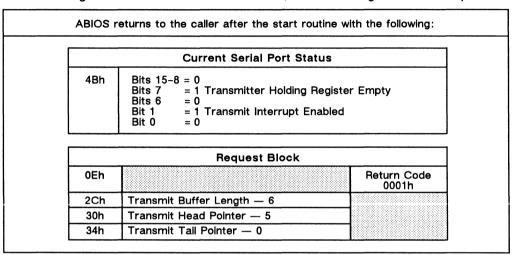

#### Transmit sequence example, cont'd


4. The caller, seeing that the ABIOS is waiting for the next interrupt, calls the interrupt routine. A character is sent to the active serial port and the Transmit Tail Pointer is incremented by one. Byte zero is sent in our example below.

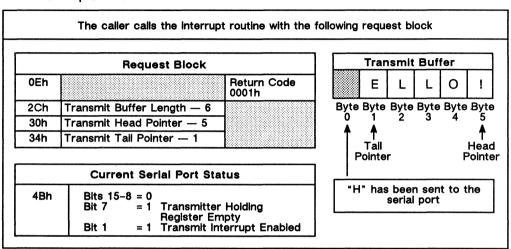

## Function: 0Eh - Transmit, Continued


## Transmit sequence example, cont'd

5. Since the Transmitter Holder Register Empty bit is still set, an interrupt is generated by the processor. The caller calls the transmit interrupt routine again, and byte one is sent to the serial port. Again, the Transmit Tail Pointer is incremented by one. This process is repeated until all bytes in the Transmit Buffer are sent (assuming the Transmit Head Pointer is not moved by the caller). Actually, standard transmit procedure is that transmission occurs while the buffer is being filled, so the buffer is never empty until all bytes are transmitted.

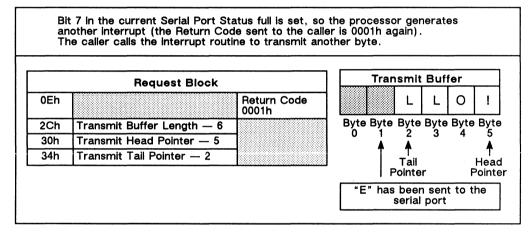

## Transmit sequence example, cont'd

6. When all bytes are sent, the Transmit Tail Pointer and Head Pointer point to the same location and bit 6 (Transmit Buffer Empty) is set. If bit 6 is still set on the next transmit interrupt, the ABIOS disables the transmit interrupt, sets a Return Code of 0000h, and returns to the caller.

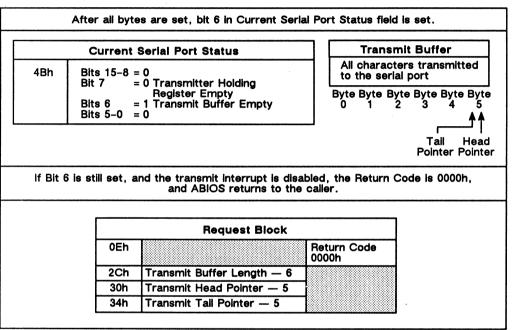

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	1
04h	Word	Unit	]
06h	Word	Function (000Eh)	
08h	Word	Reserved (initialize to 0000h)	]
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Word	Reserved (Initialize to 0000h)	
12h	Word	Transmit Buffer Offset	1
14h	Word	Transmit Buffer Segment	1
18h	Word	Reserved (Initialize to 0000h)	1
1Ah	DWord	Reserved (Initialize to 0000h)	
2Ch	Word	Transmit Buffer Length (Return Code is 0000h; no ac- tion taken if zero length input)	
2Eh	Word	Reserved (initialize to 0000h)	
30h	Word	Transmit Head Pointer	
32h	Word	Reserved (Initialize to 0000h)	1
34h	Word	Transmit Tail Pointer	Transmit Tail Pointer
36h	Word	Reserved (Initialize to 0000h)	Reserved
4Bh	Word		Current Serial Port Status
			(initialize to 0000h)
			Bits 15-13 = Reserved Bit 12 = 1 Overrun Error, with Null Data Byte Found Bit 11 = 1 Break Detected
			Bit 10 = 1 Framing Error
	İ		Bit 9 = 1 Parity Error
			Bit 8 = 1 Overrun Error Bit 7 = 1 Transmit Buffer Empty and Transmit- ter Holding Register Empty
			Bit 6 = 1 Transmit Buffer Empty
			Bit 5 = 1 Receive Buffer Full and Data Deleted
			Bit 4 = 1 Receive Buffer Full
			Bits 3-2 = Reserved   Bit 1 = 1 Transmit Interrupt in
			Progress  Bit 0 = 1 Receive Interrupt in Progress

### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
0005h	Not My Interrupt, Resume Stage after Interrupt
0081h	Spurious Interrupt
8000h	Device Busy, Request Refused
9000h	Bad Com Port
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Function: 0Fh - Receive

#### Description

This function is a discrete multistaged request that enables the receive interrupt. Data can be read from the serial port when a receive interrupt is generated after this function is invoked.

#### Pointer field definitions

The Receive Head Pointer must point to the first byte of the data block to be received. The value in this field should be relative to the beginning of the Receive Buffer. The value in this field must always be between zero and the value in the Receive Buffer Length field minus one.

The Receive Tail Pointer should point to a location one byte past the last byte to be received. The value in this field should be relative to the beginning of the Receive Buffer. The value in this field must always be between zero and the value in the Receive Buffer Length field minus one.

#### Head Pointer and Tail Pointer fields

The value in the Receive Head Pointer field points to the first character received position that will be filled by the ABIOS. The Value in the Receive Tail Pointer field points to the first received character to be removed by the caller.

#### Updating the Receive Tail Pointer field

When a receive interrupt occurs, the interrupt routine increments the value of the Receive Tail Pointer by the number of bytes received. Bit 0 (Receive In Progress) of the Current Serial Port Status field will be set.

The Receive Buffer may be checked at any time during the receive routine, so data is written to the Receive Buffer *before* the value in the Receive Tail Pointer field is incremented.

#### Receive Pointer rules

The following rules apply to processing the receive head and tail pointers:

- The Receive Tail Pointer field value will always get closer to the Receive Head Pointer value as interrupts occur.
- If the value of the Receive Tail Pointer comes to the end of the Receive Buffer, the Receive Tail Pointer field value wraps around to 0.
- A Receive Buffer Full condition occurs when the value in the Receive Tail Pointer equals the value in the Receive Head Pointer field.
- If a Receive Buffer Full condition happens after data is received from the serial port, the ABIOS stops receiving data and sets bit 4 (Receive Buffer Full) of the Current Serial Port Status field (the receive interrupt is still enabled). If the full buffer condition persists on the next receive interrupt (or any receive interrupt), the ABIOS will then disable the receive interrupt.
- If the receive interrupt is disabled because the receive buffer is empty, the Request Block is canceled by the ABIOS (although it is up to the caller to deallocate the Request Block).
- If a Request Block is canceled by the ABIOS, the Current Serial Port Status field will have bit 4 (Receive Buffer Empty) and bit 5 (Receive Buffer Full With Data Deleted) set.

## Receive buffer empty

This condition occurs when the value in the Receive Head Pointer field equals the value in the Receive Tail Pointer field. The ABIOS never sets the value of the Receive Head Pointer field equal to the value in the Receive Tail Pointer field, however, the caller may do so, which is a quick way to stop receiving.

#### How the caller can remove data during a receive interrupt

The values in the Receive Buffer Segment, Receive Buffer Offset, and Receive Buffer Length fields can be altered across calls to the receive interrupt routine.

The ABIOS removes the data from the buffer before changing the Receive Tail Pointer field. The caller can remove data during the process of a receive interrupt by removing the data from the Receive Buffer and logically incrementing the value in the Receive Head Pointer field.

The caller must not permit the value in the Transmit Head Pointer field to equal the value in the Transmit Tail Pointer field during the removal of data from the buffer.

#### Maximum number of characters received

The maximum number of characters that a single view of the Receive Buffer can indicate to be received is one less than the value in the Receive Buffer Length field.

#### Ending a receive interrupt

A receive interrupt can only be terminated by invoking ABIOS Serial Communications Service function 12h Cancel.

## Number of bits per character

If the Number of Bits Per Character field in function 05h Reset/Initialize is less than 8, the high order bit(s) of each byte are transmitted as is.

#### **Null Stripping Mode**

If	the following action is taken	
Null Stripping Mode is disabled	All received characters are stored unaltered in the Receive Buffer.	
Null Stripping Mode is enabled	No received zeros are stored in the Receive Buffer.	
An Overrun occurs and a Null Data Byte caused the error	The Null Data Byte is discarded. The Current Serial Port Status indicates that an overrun error was found and the Null Data Byte was found and discarded and bit 12 of the Current Serial Port Status field is set.	

#### Hardware errors

If a hardware error occurs at the serial port, the ABIOS stores the current data byte in the receive buffer, sets bits 8–10 of the Current Serial Port Status field, and returns to the caller. The ABIOS returns on the *first* hardware error, though there may be additional errors and additional data in the hardware buffer.

If there are additional hardware errors at the serial port, the caller must handle them and any data that is in the buffer.


The following table lists the actions taken for each type of error.

Error Type	Action taken by ABIOS
Break Interrupt	Data Byte set to zero.
Overrun	Overrun character is lost, the Data Byte contains the character that caused the overrun.
Parity Error	Data Byte contains the character with the incorrect parity.
Framing Error	Data Byte contains the character that has no valid stop bit.

#### Receive sequence example


After the caller initializes the Request Block with a Receive function (0Fh or 10h) and calls the start routine, the following actions take place:

1. The ABIOS tests the Receive Head and Tail Pointers to ensure that they agree with the Receive Buffer Length. The maximum number of characters that can be received in this example is 6.

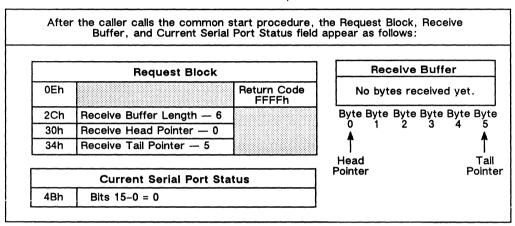

#### Receive sequence example, cont'd


- 2. The ABIOS start routine enables the receive interrupt but doesn't read any data yet.
- 3. When data is available at the serial port, an interrupt is generated.
- 4. The caller, seeing that the ABIOS is waiting for the next interrupt, calls the interrupt routine. A character is read from the active serial port and the Receive Tail Pointer is incremented by one. Byte zero is received in the example below.

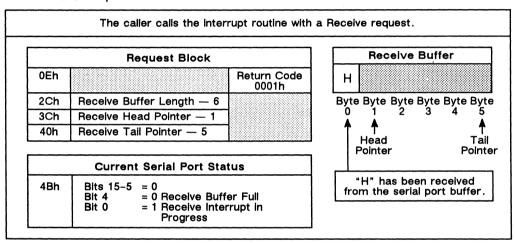


#### Receive sequence example, cont'd

5. Since there are five empty buffer bytes, the data received is read into each one in turn when the next receive interrupts are generated. The Receive Head Pointer is incremented by one each time.

 Bit 4 in the current Serial Port Status field is not set, so the processor generates another interrupt (the Return Code sent to the caller is 0001h again). The caller calls the interrupt routine to receive another byte.



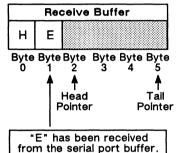

Note: If two or more characters are received at the same time, the Receive Head Pointer and the Receive Tail Pointer are incremented by 2 or more. The Tail Pointer may then wrap to byte 0. The calling routine should anticipate this possibility.

#### Receive sequence example, cont'd

6. When all bytes that the receive buffer has room for are received, the Receive Head pointer will point to the same byte as the Receive Tail Pointer, (or the Receive Tail Pointer will be one byte less than the Receive Buffer Length). At this point, a Return Code of 0000h is generated and control is returned to the caller. In actual practice, the tail pointer will chase the head pointer and the buffer never actually fills.

After all bytes in the receive buffer are filled, and the Tall Pointer and Head Pointer are the same, bit 4 in the Current Serial Port Status field is set. **Current Serial Port Status** Receive Buffer Ε 4Bh Bits 15-8 = 0Bit 5 = 0 Receive Buffer Full and Data Deleted Byte Byte Byte Byte Byte Bit 4 = 1 Receive Buffer Empty Bit 0 = 0 Receive Interrupt Not In **Progress** All characters received from Tall Head the serial port Pointer Pointer If bit 4 is still set, and the receive interrupt is disabled, the Return Code is set to 0000h, and ABIOS returns control to the caller. Request Block Return Code 0Eh 0000h 2Ch Receive Buffer Length - 6 Receive Head Pointer - 5 3Ch 40h Receive Tail Pointer - 5

7. If the Buffer Full condition exists upon entry into the receive function interrupt routine, the character that caused the interrupt is lost, and bit 5 of the Current Serial Port Status field (Receive Buffer Full and Data Deleted) is set.

Function: 0Fh - Receive, Continued

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Fh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
18h	Word	Reserved (Initialize to 0000h)	
1Ah	DWord	Reserved (Initialize to 0000h)	
20h	Word	Reserved (Initialize to 0000h)	
22h	Word	Receive Buffer Offset	
24h	Word	Receive Buffer Segment	
28h	Byte	Null Stripping Mode	
		00h = Disabled 01h = Enabled	
38h	Word	Receive Buffer Length	
		Note: No action occurs if this field is 0.	
3Ah	Word	Reserved (Initialize to 0000h)	
3Ch	Word	Receive Head Pointer	Receive Head Pointer
3Eh	Word	Reserved (Initialize to 0000h)	Reserved
40h	Word	Receive Tail Pointer	
42h	Word	Reserved (Initialize to 0000h)	

# Request Block Structure, cont'd

Offset	Size	Input:	Output:
4Bh	Word		Current Serial Port Status (initialize to 0000h)  Bits 15-13 = Reserved Bit 12 = 1 Overrun Error, with Null Data Byte Found Bit 11 = 1 Break Detected Bit 10 = 1 Framing Error Bit 9 = 1 Parity Error Bit 8 = 1 Overrun Error Bit 7 = 1 Transmit Buffer Empty and Transmit- ter Holding Register Empty Bit 6 = 1 Transmit Buffer Empty Bit 5 = 1 Receive Buffer Full and Data Deleted Bit 4 = 1 Receive Buffer Full Bits 3-2 = Reserved Bit 1 = 1 Transmit Interrupt in Progress Bit 0 = 1 Receive Interrupt in

# **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
0005h	Not My Interrupt, Resume Stage after Interrupt
0081h	Spurious Interrupt
8000h	Device Busy, Request Refused
9000h	Bad Com Port
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 10h - Transmit and Receive

#### Description

This function is a discrete multistaged request that starts both the transmit and receive interrupts, or starts only the receive interrupt. It allows faster access to the transmit and receive functions than would be the case if separate function requests were used.

#### Adding a transmit function to a receive-only function

Invoke a receive-only request with this function by only enabling the receive parameters (set the Transmit Buffer Length to zero), then calling the start routine. The Return Code field, as always, must be initialized to FFFFh when calling the start routine.

The transmit function can be requested later by recalling the start routine with an appropriate value in the Transmit Buffer Length field. Do not initialize the Return Code field to FFFFh when recalling the start routine.

If this function is restarted to enable the transmit after being initially set to receive only, the Return Code field is undefined when returning from recalling the start routine and should be ignored.

#### Transmit and Receive function characteristics

This function performs the transmit function as described for function 0Eh and the receive function as described for function 0Fh, except that during a receive interrupt, the transmit interrupt is never disabled. In processing this function, the ABIOS does not test if the Transmit Head Pointer and Tail Pointer are equal.

# Function: 10h - Transmit and Receive, Continued

### Input fields to initialize

After the first time this function is called via a start routine (the Return Code field should be initialized to FFFFh the first time), the caller should initialize the Current Serial Port Status field and the Return Code field from the previous interrupt to 0000h before the start routine for this function is called again.

## Multiple receive interrupts

After servicing a receive interrupt, the ABIOS tests for a transmit interrupt pending condition.

If a transmit Interrupt is pending, it is serviced by the ABIOS and Return Code 0009h Attention, Resume Stage after Interrupt is generated. But if a second receive interrupt is pending, the ABIOS does not service the pending transmit interrupt, returning to the caller instead.

# Function: 10h — Transmit and Receive, Continued

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0010h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Word	Reserved (Initialize to 0000h)	
12h	Word	Transmit Buffer Offset	
14h	Word	Transmit Buffer Segment	
18h	Word	Reserved (Initialize to 0000h)	1
1Ah	DWord	Reserved (Initialize to 0000h)	1
20h	Word	Reserved (Initialize to 0000h)	1
22h	Word	Receive Buffer Offset	1
24h	Word	Receive Buffer Segment	
28h	Byte	Null Stripping Mode	
:		00h = Disabled 01h = Enabled	
2Ch	Word	Transmit Buffer Length (bytes)	
		If zero and first call, Receive- only function. If zero and second call, Return Code = 0001h and no action is performed	
2Eh	Word	Reserved (Initialize to 0000h)	]
30h	Word	Transmit Buffer Head	]
32h	Word	Reserved (Initialize to 0000h)	
34h	Word	Transmit Buffer Tail	Transmit Buffer Tail
36h	Word	Reserved (Initialize to 0000h)	Reserved
38h	Word	Receive Buffer Length	
		If zero, no action performed, Return Code = 0000h	
3Ah	Word	Reserved (Initialize to 0000h)	
3Ch	Word	Receive Buffer Head	Receive Buffer Head
3Eh	Word	Reserved (Initialize to 0000h)	Reserved
40h	Word	Receive Buffer Tail	
42h	Word	Reserved (Initialize to 0000h)	

# Function: 10h - Transmit and Receive, Continued

# Request Block Structure, cont'd

Offset	Size	Input:	Output:
4Bh	Word		Current Serial Port Status (Initialize to 0000h)  Bits 15-13 = Reserved Bit 12 = 1 Overrun Error, with Null Data Byte Found Bit 11 = 1 Break Detected Bit 10 = 1 Framing Error Bit 9 = 1 Parity Error Bit 8 = 1 Overrun Error Bit 7 = 1 Transmit Buffer Empty and Transmit- ter Holding Register Empty Bit 6 = 1 Transmit Buffer Empty Bit 5 = 1 Receive Buffer Full and Data Deleted Bit 4 = 1 Receive Buffer Full Bits 3-2 = Reserved Bit 1 = 1 Transmit Interrupt in Progress Bit 0 = 1 Receive Interrupt in
4Dh	Word		Com Port Status of Previous Interrupt
4Fh	Word	1	Return Code of Previous Interrupt

Function: 10h — Transmit and Receive, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
0005h	Not My Interrupt, Resume Stage after Interrupt
0009h	Attention, Resume Stage after Interrupt The Com Port Status of the Previous Interrupt field (offset 4Dh) contains the original status. The Return Code of the Previous Interrupt (offset 4Fh) has the first Return Code.
0081h	Spurious Interrupt
8000h	Device Busy, Request Refused
9000h	Bad Com Port Indicates a hardware fallure
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Fleid Not Valid

## Function: 11h — Modem Status

## Description

This function is a discrete multistaged request that returns the Modern Status upon exit from the start and interrupt routines. After this function is invoked, the modern status interrupt is enabled.

## ABIOS notes changes in modem status immediately

If the Request Block that invokes this function is processed before a Transmit or Receive function (functions 0Eh, 0Fh, or 10h), the ABIOS notices a change in the modern status even though there may be higher priority interrupts in the interrupt identification register that are still pending. This allows an interrupt handler routine to notice a change in Modern Status before receiving or transmitting data.

# Function: 11h — Modem Status, Continued

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	]
06h	Word	Function (0011h)	]
08h	Word	Reserved (initialize to 0000h)	]
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
18h	Word	Reserved (Initialize to 0000h)	
1Ah	DWord	Reserved (Initialize to 0000h)	
4Ah	Byte		Modem Status
			Bit 6 = 1 Ring Indicator Bit 5 = 1 Data Set Ready Bit 4 = 1 Clear to Send Bit 3 = 1 Change in Data Carrier Detect Bit 2 = 1 Trailing Edge Ring Indicator Bit 1 = 1 Change in Data Set Ready Bit 0 = 1 Change in Clear To Send
4Bh	Byte		Current Serial Port Status (initialize to 0000h)
			Bits 15-13 = Reserved Bit 12 = 1 Overrun Error, with Null Data Byte Found Bit 11 = 1 Break Detected Bit 10 = 1 Framing Error Bit 9 = 1 Parity Error Bit 8 = 1 Overrun Error Bit 7 = 1 Transmit Buffer Empty and Transmit- ter Holding Register Empty Bit 6 = 1 Transmit Buffer Empty Bit 5 = 1 Receive Buffer Full and Data Deleted Bit 4 = 1 Receive Buffer Full Bits 3-2 = Reserved Bit 1 = 1 Transmit Interrupt in Progress Bit 0 = 1 Receive Interrupt in Progress

Function: 11h — Modem Status, Continued

## **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
0005h	Not My Interrupt, Resume Stage after Interrupt
0081h	Spurious Interrupt
8000h	Device Busy, Request Refused
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Function: 12h — Cancel

## Description

This function cancels a request for serial transmission (functions 0Eh or 10h), receiving (functions 0Fh or 10h), modem status (function 11h) or any combination of these three functions. It also cancels the associated Request Blocks, except for function 10h Transmit and Receive (see below). All interrupts generated by the request are disabled, except for function 10h Transmit and Receive, which is handled differently (see below).

Note: The caller must deallocate all canceled Request Blocks. The ABIOS does not deallocate Request Blocks.

## Canceling function 10h Transmit and Receive

If	then
Function 10h Transmit and Receive has both the transmit and receive interrupts enabled, and function 12h Cancel is invoked with the intent of disabling both interrupts,	the Request Block for function 10h is canceled by the ABIOS.
Function 12h Cancel is to disable only the transmit interrupt,	the caller may re-invoke the 10h Trans- mit and Receive function via the start routine after the function 12h Cancel re- quest is completed.
Function 12h Cancel is invoked with the intent of disabling only the receive interrupt,	the caller must complete the following steps to re-enable the receive interrupt:  disable the transmit interrupt  call the start routine with function 10h Transmit and Receive specified in the Request Block
Function 10h Transmit and Receive has only the receive interrupt enabled, and function 12h Cancel is invoked to disable the receive interrupt,	the entire function 10h Transmit and Receive Request Block is canceled by the ABIOS.
Function 10h Transmit and Receive has only the transmit interrupt enabled, and function 12h Cancel is invoked to disable the transmit interrupt	the entire function 10h Request Block is canceled by the ABIOS.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0012h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
18h	Word	Reserved (Initialize to 0000h)	
51h	Byte	Interrupt Operation to be Canceled	
		Bit 7 = Reserved Bit 6 = Reserved Bit 5 = 1 Modem Status interrupt Bit 4 = Reserved Bit 3 = 1 Transmit interrupt Bit 2 = 1 Receive interrupt Bit 1 = Reserved Bit 0 = Reserved	

## **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 13h — Return Line Status

## Description

This function, a single-staged request, reads the Modern Line Status.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0013h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
49h	Byte		Line Status  Bit 7 = Reserved  Bit 6 = 1 Transmitter Empty  Bit 5 = 1 Transmitter Holding  Register Empty  Bit 4 = 1 Break Interrupt  Bit 3 = 1 Framing Error  Bit 2 = 1 Parity Error  Bit 1 = 1 Overrun Error  Bit 0 = 1 Data Ready

## **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 14h — Return Modem Status

# Description

This function is a single-staged request that reads the current status of the modem.

If the Modern Status interrupt is enabled, no processing takes place and the Request Refused, Device Busy Return Code (8000h) is returned.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0014h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
4Ah	Byte		Modem Status
			Bit 7 = 1 Data delta Detect Bit 6 = 1 Ring Indicator Bit 5 = 1 Data Set Ready Bit 4 = 1 Clear To Send Bit 3 = 1 Delta Data Carrier Detect Bit 2 = 1 Trailing Edge Ring Indicator Bit 1 = 1 Delta Data Set Ready Bit 0 = 1 Delta Clear To Send

# Function: 14h — Return Modem Status, Continued

# **Return Codes**

Code	Description
0000h	Successful Operation
8000h	Device Busy, Request Refused
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 15h — Enable FIFO Control

### Description

This function is a single-staged request that enables FIFO (first-in, first-out) control for the serial port. The FIFO registers are not cleared.

This function may only be used if the ABIOS is operating on an 80386-based, MCA-based system which has an NS16550A serial controller. If the serial controller is not an NS16550A, unpredictable results may occur.

### Reusing this function

ABIOS calling routines should not reuse this Request Block for other Serial Communications Service function requests, since the structure of this Request Block is different from the other Serial Communications Service Request Blocks.

### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (0015h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
28h	Word	FIFO Trigger Level, where:  00h — 1 Byte 01h — 4 Bytes 02h — 8 Bytes 03h — 14 Bytes	

# Function: 15h — Enable FIFO Control, Continued

### **Return Codes**

Code	Description
0000h	Successful Operation
8000h	Device Busy, Request Refused
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid



# Chapter 13 ABIOS Parallel Port Service

# Overview

### Introduction

The ABIOS Parallel Port Service provides access to the system's parallel ports. Parallel ports on personal computers are most often used to send data to printers. This ABIOS service supports only the Transmit Mode of the parallel port.

# **Summary of Parallel Port Service functions**

Function	Description
00h	Default Interrupt Handler
01h	Return Logical ID Parameters
02h	Reserved
03h	Read Device Parameters
04h	Set Device Parameters
05h	Reset/Initialize Parallel Port
06h-08h	Reserved
09h	Print Block
0Ah	Reserved
0Bh	Cancel Print Block
0Ch	Return Printer Status

# In this chapter

This chapter includes information about the following topics:

- Hardware Environment
- Error Handling
- Parallel Port Service functions

### **Hardware Environment**

### Introduction

The ABIOS Parallel Port Service is associated with hardware interrupt request 7. The ABIOS supports a parallel port that can transfer eight bits of data at standard TTL levels. The parallel port can be called port 1 through 8, must be IBM PS/2-compatible, and must have a bidirectional mode, supporting both input and output. The parallel port also supports level-sensitive interrupts and a readable interrupt pending status.

# Parallel port addresses

The following table lists the parallel port addresses for the most frequently used parallel ports. The I/O port addresses for parallel ports 4 through 8 vary among different systems.

Parailei Port Number	Data Address	Status Address	Control Address
1	03BCh	03BDh	03BEh
2	0378h	0379h	037Ah
3	0278h	0279h	027Ah

### Parallel port extended mode

The extended mode of the parallel port can be selected through the system-based POS registers. The extended mode adds a bidirectional interface.

# **Error Handling**

### Parallel Port Service errors

If the parallel port is busy when the caller invokes an ABIOS Parallel Port Service function, Return Code 8000h Device In Use is returned. The caller must then re-invoke the function, except when using function 09h Print Block. See the function 09h Print Block description for more information about re-invoking function 09h Print Block.

### How errors are reported

ABIOS signals the status (Successful, Resume Stage after Interrupt, etc.) of each ABIOS request by returning a one word Return Code at offset 0Ch in the Request Block.

If Bit 15 of the Return Code field is set, the Parallel Port Service function requested has an error. The caller's Return Code handler routine should then test Bits 14, 13, 12, and 8 to determine the class of error that has occurred. The return code handler routine should then test the remaining bits to determine the precise nature of the error.

# Function: 00h — Default Interrupt Handler

# Description

This function is a single-staged or multistaged request that handles unexpected hardware interrupts by resetting the interrupt at the device level. It is invoked through the interrupt routine.

### When invoked

This function is invoked by calling the interrupt routine with a function code of 0000h. It is only invoked if a given Logical ID has no outstanding Request Blocks waiting for an interrupt.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (10h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0000h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out

# **Return Code**

Code	Description
0000h	Successful Operation
0005h	Not My Interrupt, Resume Stage after Interrupt
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 01h — Return Logical ID Parameters

# Description

This function is a single-staged request that returns the parameters for the specified Logical ID.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (20h)	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (0001h)	]
08h	Word	Reserved (initialize to 0000h)	]
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte		Hardware Interrupt Level (07h)
11h	Byte		Arbitration Level (FFh)
12h	Word		Device ID (0005h)
14h	Word		Count of Units
16h	Word		Logical ID Flags
·			Bits 15-4 = Reserved Bit 3 = 0 No overlap across units = 1 Overlap across units supported Bit 2 = 0 Reserved Bits 1-0 = Transfer Data Pointer Mode 01 = Logical Pointer Required
18h	Word		Request Block Length (for other functions)
1Ah	Byte	Reserved (initialize to 0000h)	Secondary Device ID
1Bh	Byte		Revision Level
1Ch	Word	Reserved (initialize to 0000h)	
1Eh	Word	Reserved (initialize to 0000h)	][

# Function: 01h — Return Logical ID Parameters, Continued

### Return Code

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Function: 0Ah — Reserved

Function: 03h — Read Device Parameters

### Description

This function is a single-staged request that returns the parameters of the specified Logical ID.

# Input field values

The value in the Time to Wait for Printer Initialization field is the same as the value in the Time To Wait Before Continuing Request (microseconds) field returned by the Reset/Initialize Parallel Port function (05h).

The value in the Printer Interrupt Time-out field is the wait time for an interrupt at the device level returned by the Print Block function (09h).

# **Request Block Structure**

Offset	Size	Input:	Output:	
00h	Word	Request Block Length		
02h	Word	Logical ID		
04h	Word	Unit		
06h	Word	Function (0003h)		
08h	Word	Reserved (initialize to 0000h)		
0Ah	Word	Reserved (initialize to 0000h)		
0Ch	Word	Return Code	Return Code	
0Eh	Word		Time-out	
16h	Word	Reserved (Initialize to 0000h)		
20h	DWord		Time to Wait for Printer Initialization (microseconds)	
29h	Byte		Interrupt Level	
2Ah	Word		Printer Interrupt Time-out	
			Bits 15-3 = Time-out (in seconds) Bits 2-0 = Reserved	

# **Return Codes**

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 04h — Set Device Parameters

# Description

This function is a single-staged request that sets device specific information as specified in the Request Block.

# Input parameters

The ABIOS uses the parameters input in this function until they are changed by another function 04h request for this service.

The value in the Time To Wait Before Continuing Request field returned by the Reset/Initialize Parallel Port function (05h) can be entered into the Time to Wait for Printer Initialization field at offset 20h.

# **Request Block Structure**

Size	Input:	Output:
Word	Request Block Length	
Word	Logical ID	
Word	Unit	
Word	Function (0004h)	
Word	Reserved (initialize to 0000h)	
Word	Reserved (initialize to 0000h)	]
Word	Return Code	Return Code
Word		Time-out
Word	Reserved (Initialize to 0000h)	
DWord	Time to Wait for Printer Initialization (microseconds)  Note: This field must not be 0	
Word	Printer Interrupt Time-out Bits 15-3 = Time-out (in seconds) Bits 2-0 = Reserved	
	Word Word Word Word Word Word Word Word	Word Word Word Word Word Word Word Word

# **Return Codes**

Code	Description
0000h	Successful Operation
8000h	Device In Use If the Parallel Port is busy, this Code is returned and the function is terminated.
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C006h	Invalid Time To Wait The Time to Wait for Printer Initialization field must not be zero. If it is zero, this Return Code is generated, no update is performed, and the function is terminated.
FFFFh	Return Code Field Not Valid

# Function: 05h — Reset/Initialize Parallel Port

# Description

This function is a discrete multistaged request that initializes or resets the parallel printer.

### **Printer Busy Status**

After completing this function, the printer may indicate a Busy status because it is performing a self test. Bit 7 (Busy) of the Printer Status at offset 28h in the Request Block indicates this condition.

# **Output considerations**

The Time To Wait Before Continuing Request field value is returned only when the Return Code is 0002h Resume Stage after Time Delay. The value in this field may not be valid if the Return Code is not 0002h.

The Printer Status field and all other output fields are not valid unless this function has completed.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (0005h)	]
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
16h	Word	Reserved (Initialize to 0000h)	
20h	DWord		Time To Wait Before Continuing Request (microseconds)
28h	Byte		Printer Status
			Bit 7 = Busy Bit 6 = Acknowledge Bit 5 = End of paper Bit 4 = Selected Bit 3 = I/O error Bit 2 = Interrupt Bits 1, 0 = Reserved

# Function: 05h — Reset/Initialize Parallel Port, Continued

### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
0002h	Resume Stage after Time Delay
8000h	Device In Use
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Functions: 06h - 08h - Reserved

Function: 09h — Print Block

# Description

This function is a discrete multistaged request that sends the block of characters pointed to by Data Pointer 1 to the parallel port.

# Using the Print Block function

The following steps must be completed before the Print Block function can be invoked:

- 1. Invoke function 01h Read Device Parameters to determine the Data Pointer Mode (logical for Parallel Port Data Pointers). If there is an outstanding Print Block function already enabled, function 0Bh Cancel Print Block must be invoked before function 9Fh is invoked.
- 2. Invoke function 09h Print Block
- 3. Check the Printer Status. The Printer Status field data is valid only if this function is completed. The ABIOS does the following, depending on the Printer Status bit settings:

If	and	then ABIOS
the Printer Status is Busy (Bit 7) and the ABIOS reads the Printer Status field for 91.2 microseconds	the Status is still Busy,	returns 8001h and terminates.
the printer is switched offline during a Print Block (Bit 2) and the ABIOS reads the Printer Status field for 91.2 microseconds	the Status is still Interrupt on,	returns 8001h and terminates.
the printer is out of paper, has an I/O error, or is not selected (Bits 3,4, or 5) and the ABIOS reads the Printer Status field for 91.2 microseconds	either Bits 3, 4, or 5 of the Printer Status are still on,	returns 9000h and terminates.

4. The caller can then complete the Print Block function as described below.

# Completing a Print Block Request after an unexpected termination

If this function is terminated, the Number of Characters Printed field contains the part of the print block that has already been printed, in bytes.

The unprinted portion of the print block can be printed by invoking function 09h Print Block again after correcting the condition that caused the termination of the initial Print Block function. The number of characters remaining to be printed is equal to the original print block length minus the value in the Number of Characters Printed field.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0009h)	][
08h	Word	Reserved (initialize to 0000h)	][
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Word	Reserved (Initialize to 0000h)	
12h	DWord	Data Pointer 1 (Logical Pointer)	]
16h	Word	Reserved (Initialize to 0000h)	][
18h	Word	Reserved (Initialize to 0000h)	]
1Ah	DWord	Reserved	
1Eh	Word	Reserved (Initialize to 0000h)	]
24h	Word	Number of Characters to Print	
26h	Word		Number of Characters Printed
28h	Byte		Printer Status
			Bit 7 = Busy Bit 6 = Acknowledge Bit 5 = End of paper Bit 4 = Selected Bit 3 = I/O error Bit 2 = Interrupt Bits 1, 0 = Reserved

Function: 09h - Print Block, Continued

# **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
0005h	Not My Interrupt, Resume Stage after Interrupt
8000h	Device in Use
8001h	Device Busy If the printer does not indicate that it is ready to accept data within 91.2 microseconds, the Printer Status field is updated, the printer interrupt is disabled, and control is returned to the caller with this Code.
9000h	Printer Error Printer I/O error, out of paper, paper jam, or printer not selected.
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Function: 0Ah — Reserved

# Function: 0Bh — Cancel Print Block

# Description

This function is a single-staged request that cancels an outstanding function 09h Print Block by disabling the Printer Interrupt at the device level and changing the Return Code.

The Printer Status field is valid only if this function has successfully completed.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Bh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
16h	Word	Reserved (Initialize to 0000h)	
26h	Word		Number of Characters Printed
28h	Byte		Printer Status
			Bit 7 = Busy Bit 6 = Acknowledge Bit 5 = End of paper Bit 4 = Selected Bit 3 = I/O error Bit 2 = Interrupt Bits 1, 0 = Reserved

# Function: 0Bh — Cancel Print Block, Continued

# **Return Codes**

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 0Ch — Return Printer Status

# Description

This function is a single-staged or multistaged request that returns the printer status.

The printer status data is valid only if the function is completed successfully (the Return Code is 0000h).

# **Request Block Structure**

Offset	Size	Input:	Output:
. 00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Ch)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
16h	Word	Reserved (Initialize to 0000h)	
28h	Byte		Printer Status  Bit 7 = Busy Bit 6 = Acknowledge Bit 5 = End of paper Bit 4 = Selected Bit 3 = I/O error Bit 2 = Interrupt Bits 1, 0 = Reserved

# Function: 0Ch - Return Printer Status, Continued

# **Return Codes**

Code	Description
0000h	Successful Operation
0002h	Resume Stage after Time Delay
8000h	Device in Use
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid



# Chapter 14 ABIOS System Timer Service

# Overview

# Description

The ABIOS System Timer Service provides access to the PS/2-compatible System Timer. The System Timer Interrupt is handled through function 00h Default Interrupt Handler.

# Summary of System Timer Service functions

Function	Description
00h	Default Interrupt Handler
01h	Return Logical ID Parameters
02h-0Ah	Reserved

### In this chapter

In this chapter, the following topics are discussed:

- Hardware Environment
- Error Handling
- ABIOS System Timer Service functions

# Hardware Environment

### Introduction

PS/2-compatible operation of the Programmable Timer is similar to the operation of the Intel 8254A Programmable Interval Timer. Unlike the 8254A, the PS/2 programmable timer provides no channel 1 and adds a channel 3 with limited functionality.

# Programmable Timer

The PS/2-compatible Programmable Timer is a counter and timer that provides three channels. All channels are driven by a 1.19 MHz oscillator signal. Each "tick" of channel 0 generates hardware interrupt request 0.

### Timer channel differences

There are some differences between the three timer channels:

Counters 0 and 2:

- are independent 16-bit counters,
- a can be preset, and
- can count in BCD (binary coded decimal) or in binary.

Counter 3 (associated only with channel 0):

- is only 8 bits,
- can be preset,
- counts in binary only, and
- can only count downward.

# **Error Handling**

### How errors are reported

ABIOS signals the status (Successful, Resume Stage after Interrupt, etc.) of each ABIOS request by returning a one word Return Code at offset 0Ch in the Request Block.

If Bit 15 of the Return Code field is set, the System Timer Service function requested has an error. The caller's Return Code handler routine should then test Bits 14, 13, 12, and 8 to determine the class of error that has occurred. The return code handler routine should then test the remaining bits to determine the precise nature of the error.

# Function: 00h — Default Interrupt Handler

### Description

This function is a single-staged or multistaged request that handles unexpected hardware interrupts by resetting the interrupt at the device level. This function is only invoked if a given Logical ID has no outstanding Request Blocks waiting for an interrupt.

If successful, this function resets the Timer 0 channel at I/O port 0061h and returns to the caller with a Return Code of 0000h.

If another interrupt routine is entered by any other caller while this function is being processed, Return Code 0005h is generated.

### Request Block structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length (10h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0000h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code Return Code	
0Eh	Word	Time-out	

### **Return Codes**

Code	Description	
0000h	Successful Operation	
0005h	Not My Interrupt, Resume Stage after Interrupt	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
FFFFh	Return Code Field Not Valid	

# Function: 01h — Return Logical ID Parameters

# **Description**

This function is a single-staged request that returns information about the specified Logical ID.

# **Request Block structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (20h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0001h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte		Hardware Interrupt Level (00h)
11h	Byte		Arbitration Level (FFh)
12h	Word		Device ID (0007h)
14h	Word		Count of Units (0000h)
16h	Word		Logical ID Flags (0000h)
			Bits 15-4 = Reserved Bit 3 = 0 No overlap across units Bit 2 = 0 Reserved Bits 1-0 = Transfer Data Pointer Mode 00 = No Pointers Required
18h	Word		Request Block Length (for other functions)
1Ah	Byte	Reserved (initialize to 0000h) Secondary Device ID	
1Bh	Byte	Revision Level	
1Ch	Word	Reserved (initialize to 0000h)	
1Eh	Word	Reserved (initialize to 0000h)	

# Function: 01h — Return Logical ID Parameters, Continued

# **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description	
0000h	Successful Operation	
0005h	Not my interrupt, Resume Stage after Interrupt	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
FFFFh	Return Code Field Not Valid	

Functions: 02h - 0Ah - Reserved

# Chapter 15 ABIOS Real Time Clock Service

### Overview

### Introduction

The ABIOS Real Time Clock Service provides access to the system's real time clock (RTC) functions.

# Real time clock interrupt types

This service controls the operation of the following RTC interrupt types:

### ■ Alarm interrupt

An interrupt that is activated at intervals of from once per second to once per day.

# ■ Periodic interrupt

An interrupt that is activated at a prespecified interval, which can be from .5 second to 30.517 ms.

### ■ Update-Ended interrupt

An interrupt that is activated every time the system clock is updated, or once per second.

See the Time-of-Day Service chapter in CBIOS for IBM PS/2 Computers and Compatibles in the Addison-Wesley Phoenix Technical Reference Series for more information on these interrupt types.

# Summary of ABIOS Real Time Clock Functions

Code	Description	
00h	Default Interrupt Handler	
01h	Return Logical ID Parameters	
02h	Reserved	
03h	Read Device Parameters	
04h	Set Device Parameters	
05h-0Ah	Reserved	
0Bh	Set Alarm Interrupt	
0Ch	Cancel Alarm Interrupt	
0Dh	Set Periodic Interrupt	
0Eh	Cancel Periodic Interrupt	
0Fh	Set Update-Ended Interrupt	
10H	Cancel Update-Ended Interrupt	
11h	Read Time and Date	
12h	Write Time and Date	

# In this chapter

This chapter presents information on the following topics:

- Hardware Environment
- Real Time Clock Data Definitions
- Error Handling
- Real Time Clock functions.

# **Hardware Environment**

### MC146818A real time clock

The ABIOS Real Time Clock Service supports a real time clock compatible with a Motorola MC146818A. It is associated with interrupt request 8. NMIs are disabled any time the ABIOS Real Time Clock service accesses system CMOS RAM (first 64 bytes of CMOS RAM). The real time clock is assumed to be battery-backed so that the time and date are maintained when the computer is powered off.

# Accessing the Real Time Clock CMOS RAM

To write to the Real Time Clock CMOS RAM:

- inhibit interrupts.
- write the CMOS RAM address to which the data is to be written to I/O port 0070h.
- write the data to be written to I/O port 0071h.

To read from RTC CMOS RAM:

- inhibit interrupts.
- write the CMOS RAM address from which the data is to be read to I/O Port 0070h.
- read from I/O port 0071h.

### RTC CMOS RAM Addresses

The following table lists the I/O port addresses used to access RTC CMOS RAM:

I/O Address	Length	Description
0070h	1 Byte	CMOS RAM address, where:  Bit 7 = 1 NMI disabled  Bits 6-0 = 0 CMOS RAM address
0071h	1 Byte	CMOS RAM data port

# Real time clock data definitions

Real time clock information uses CMOS RAM addresses 00h-0Eh. These data definitions are presented below in offset order.

Location	Size	Description	
00h	1 Byte	Current second in binary coded decimal (BCD)	
01h	1 Byte	Second alarm in BCD	
02h	1 Byte	Current minute in BCD	
03h	1 Byte	Minute alarm in BCD	
04h	1 Byte	Current hour in BCD	
05h	1 Byte	Hour alarm in BCD	
06h	1 Byte	Current day of week in BCD	
07h	1 Byte	Current date in BCD	
08h	1 Byte	Current month in BCD	
09h	1 Byte	Current year in BCD	
0Ah	1 Byte	Status register A, where:  Bit 7 = 1 Update in progress  Bits 6-4 = Divider identifying the time-based frequency to use  Bits 3-0 = Rate selection bits that define output frequency and periodic interrupt rate	
0Bh	1 Byte	Status register B, where:  Bit 7 = 0 Run = 1 Halt  Bit 6 = 1 Enable periodic interrupt  Bit 5 = 1 Enable alarm interrupt  Bit 4 = 1 Enable update-ended interrupt  Bit 3 = 1 Enable square wave interrupt  Bit 2 = 1 Calendar is in binary format = 0 Calendar is in BCD format  Bit 1 = 1 24-hour mode = 0 12-hour mode  Bit 0 = 1 Enable Daylight Savings Time	
0Ch	1 Byte	Status register C, where:  Bits 7-4 = IRQF, PF, AF, and UF flags, respectively  Bits 3-0 = Reserved	
0Dh	1 Byte	Status register D, where:  Bit 7 = 1 Real time clock has power  Bits 6-0 = Reserved	

# Real Time Clock Data, Continued

# Real time clock data definitions, cont'd

Location	Size	Description
0Eh	1 Byte	Diagnostic status, where:  Bit 7 = 1 Real time clock lost power  Bit 6 = 1 CMOS RAM checksum is bad  Bit 5 = 1 Invalid configuration information found at POST  Bit 4 = 1 Memory size compare error at POST  Bit 3 = 1 Fixed disk or adapter falls initialization  Bit 2 = 1 CMOS RAM time found invalid  Bit 1 = 1 Adapters do not match configuration  Bit 0 = 1 Time-out reading an adapter ID

# **Error Handling**

# How errors are reported

ABIOS signals the status (Successful, Resume Stage after Interrupt, etc.) of each ABIOS request by returning a one word Return Code at offset 0Ch in the Request Block.

If Bit 15 of the Return Code field is set, the Real Time Clock Service function requested has an error. The caller's Return Code handler routine should then test Bits 14, 13, 12, and 8 to determine the class of error that has occurred. The return code handler routine should then test the remaining bits to determine the precise nature of the error.

# Function: 00h — Default Interrupt Handler

## Description

This function is a single-staged or multistaged request that handles unexpected hardware interrupts by resetting the interrupt at the device level.

#### When to invoke

This function is invoked by calling the interrupt routine with a function code of 0000h. It is only invoked if a given Logical ID has no outstanding Request Blocks waiting for an interrupt.

## **Request Block structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (10h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0000h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out

#### **Return Codes**

Code	Description	
0000h	Successful Operation	
0005h	Not My Interrupt, Resume Stage after Interrupt	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
FFFFh	Return Code Field Not Valid	

# Function: 01h — Return Logical ID Parameters

## Description

This function is a single-staged request that returns information about the specified Logical ID.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (20h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0001h)	
08h	Word	Reserved (Initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte		Hardware Interrupt Level (08h)
11h	Byte		Arbitration Level (FFh)
12h	Word		Device ID (0008h)
14h	Word		Count of Units (0000h)
16h	Word		Logical ID Flags (0000h)
			Bits 15-4 = Reserved Bit 3 = 0 No overlap across units Bit 2 = 0 Reserved Bits 1-0 = Transfer Data Pointer Mode 00 = No Pointers Required
18h	Word		Request Block Length (for other functions)
1Ah	Byte	Reserved (initialize to 0000h)	Secondary Device ID
1Bh	Byte		Revision Level
1Ch	Word	Reserved (initialize to 0000h)	
1Eh	Word	Reserved (initialize to 0000h)	

# Function: 01h — Return Logical ID Parameters, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Function: 02h — Reserved

## Function: 03h — Read Device Parameters

#### Description

This function is a multistaged request that returns the most recent interrupt settings and Real Time Clock Status for this device in the Request Block. NMIs are disabled when ABIOS accesses system CMOS RAM.

## Real Time Clock processing

The Periodic Interrupt Rate field is valid only if the periodic interrupt is enabled; the Alarm fields are valid only if the alarm interrupt is enabled.

## ABIOS test for update-in-progress

If the Return Code is 8000h Device in Use or 8001h Real Time Clock Not Started the real time clock is halted. This request is not processed until the real time clock is set.

# Function: 03h — Read Device Parameters, Continued

## Request Block structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0003h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Byte		Periodic Interrupt Rate,
11h	Byte		Bits 7-4= Reserved  Bits 3-0= Rate value set 0000b = None 0001b = 30.517 ms 0010b = 61.035 ms 0011b = 122.07 ms 0100b = 244.141 ms 0101b = 488.281 ms 0110b = 976.562 ms 0111b = 1.953125 ms 1000b = 3.90625 ms 1001b = 7.8125 ms 1010b = 15.625 ms 1011b = 31.250 ms 1101b = 31.250 ms 1100b = 62.500 ms 1101b = 125.00 ms 1101b = 250.00 ms 1110b = 250.00 ms 1111b = 500.00 ms
			Bit 7 = Set bit status 0 Clock started 1 Clock not started 1 Clock not started 1 Clock not started 1 Interrupt disabled 1 Interrupt enabled Bit 5 = Alarm interrupt bit 0 Interrupt disabled 1 Interrupt enabled Bit 4 = Update-ended interrupt bit 0 Interrupt disabled 1 Interrupt disabled 1 Interrupt disabled 1 Interrupt enabled Bits 3-2 = Reserved Bit 1 = Clock mode 0 12-hour clock 1 24-hour clock
12h	Byte	Function	Alarm Hour in BCD (00-23)
13h	Byte	Reserved (initialize to 0000h)	Alarm Minute in BCD (00-59)
14h	Byte	Reserved (initialize to 0000h)	Alarm Seconds in BCD (00-59)
16h	Word		
16h	Word	Reserved (initialize to 0000h)	,

# Function: 03h — Read Device Parameters, Continued

## **Return Codes**

Code	Description
0000h	Successful Operation If the Alarm Interrupt is disabled, a Return Code of 0000h is generated.
8000h	Device in Use
8001h	Real Time Clock Not Started If the real time clock is not started, this code is generated and no other fields are valid.
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 04h — Set Device Parameters

## Description

This function is a single-staged request that sets the Real Time Clock Hour Modes (either 12-hour clock or 24-hour clock), and the Daylight Savings Update field (either enabled or disabled). If the RTC is not functioning, ABIOS does not perform this function and generates Return Code 8001h, RTC Not Started. ABIOS disables NMIs when accessing system CMOS RAM.

## Request Block structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0004h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
16h	Word	Reserved (initialize to 0000h)	
19h	Byte	Real Time Clock Mode, where:  Bits 7-2 = Reserved  Bit 1 = Hour mode 0 12-hour clock 1 24-hour clock Bit 0 = Daylight Savings Update, where: 0 = Enabled 1 = Disabled	

# Function: 04h — Set Device Parameters, Continued

## **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Functions: 05h - 0Ah - Reserved

## Function: 0Bh — Set Alarm Interrupt

## Description

This function is a multistaged request that sets the time for an alarm interrupt. If the RTC is not functioning, ABIOS does not perform this function and generates Return Code 8001h RTC Not Started. ABIOS disables NMIs when accessing system CMOS RAM.

## ABIOS test for update-in-progress

If the Return Code is 8000h Device in Use or 8001h Real Time Clock Not Started the real time clock alarm is halted. This request is not processed until the real time clock alarm is set.

## Real time clock update cycle

In the IBM PS/2 BIOS, if the real time clock is in an update cycle when this function is requested, Return Code 8000h, Device Busy, Request Refused, is generated. The Phoenix BIOS aborts the clock update cycle and performs the function in this case.

## Setting the alarm

The following steps must be followed to set the alarm function:

- 1. If there is an outstanding Set Alarm Interrupt already enabled, function 0Ch Cancel Alarm Interrupt must be invoked before function 0Bh is invoked.
- 2. Invoke function 0Bh Set Alarm Interrupt.
- 3. Check the Return Code.
- 4. If the Return Code is 0001h, the Interrupt Pending Status field indicates the interrupts that occurred.
- 5. Query the Return Code just one time; make sure that all indicated interrupts are processed, sequentially.

# Function: 0Bh — Set Alarm Interrupt, Continued

## **Request Block structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Bh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
12h	1 Byte	Alarm Hour in BCD (00-23)	
13h	1 Byte	Alarm Minute in BCD (00-59)	
14h	1 Byte	Alarm Seconds in BCD (00-59)	
16h	DWord	Reserved (initialize to 0000h)	
1Ah	1 Byte		Interrupt Pending Status, where:
			Bit 7 = Reserved Bit 6 = 1 Periodic interrupt Bit 5 = 1 Alarm interrupt Bit 4 = 1 Update-ended interrupt Bits 3-0 = Reserved

#### **Return Codes**

Code	Description
0000h	Successful Operation
	Never returned by this function. If it is present, the request for this function has not been processed. The interrupt Pending Status indicates if an Update-Ended Interrupt has been set.
0001h	Resume Stage after Interrupt
0005h	Not My Interrupt, Resume Stage after Interrupt
8000h	Device in Use
8001h	Real Time Clock Not Started
8002h	Interrupt Aiready Enabled
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 0Ch — Cancel Alarm Interrupt

## Description

This function is a single-staged request that disables the alarm interrupt. ABIOS disables NMIs before performing this function.

## Request Block structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Ch)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
16h	Word	Reserved (initialize to 0000h)	

## **Return Codes**

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 0Dh — Set Periodic Interrupt

## Description

This function is a multistaged request that sets the interval for the periodic interrupt. If the RTC is not functioning ABIOS does not perform this function, and generates Return Code 8001h RTC Not Started. ABIOS disables NMIs when accessing system CMOS RAM.

#### Real time clock update cycle

In the IBM PS/2 BIOS, if the real time clock is in an update cycle when this function is requested, Return Code 8000h Device Busy Request Refused is generated. The Phoenix BIOS aborts the clock update cycle and performs the function in this case.

## Setting the periodic interrupt

The following steps must be followed to set the periodic function:

- 1. If there is an outstanding Set Periodic Interrupt already enabled, function 0Eh Cancel Periodic Interrupt must be invoked before function 0Dh.
- 2. Invoke function 0Dh Set Periodic Interrupt.
- 3. Check the Return Code.
- 4. If the Return Code is 0001h, the Interrupt Pending Status field indicates the interrupt that occurred.
- 5. Query the Return Code just one time; make sure that all indicated interrupts are processed sequentially.

#### Request Block structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Dh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out

# Function: 0Dh — Set Periodic Interrupt, Continued

## Request Block structure, cont'd

Offset	Size	Input:	Output:
10h	Byte	Periodic Interrupt Rate, Bits 7-4= Reserved Bits 3-0= Rate value set 0000b = None 0001b = 30.517 ms 0010b = 61.035 ms 0011b = 122.07 ms 0100b = 244.141 " 0101b = 488.281 " 0110b = 976.562 " 0111b = 1.953125 ms 1000b = 3.90625 ms 1001b = 7.8125 ms 1010b = 15.625 ms 1010b = 15.625 ms 1011b = 31.250 ms 1100b = 62.500 ms 1101b = 125.00 ms 1101b = 250.00 ms 1111b = 500.00 ms	
16h	DWord	Reserved (initialize to 0000h)	
1Ah	Byte		Interrupt Pending Status, where  Bit 7 = Reserved  Bit 6 = 1 Periodic interrupt  Bit 5 = 1 Alarm interrupt  Bit 4 = 1 Update-ended  interrupt  Bits 3-0 = Reserved

## **Return Codes**

Code	Description
0000h	Successful Operation
	Never returned by this function. If it is present, the request for this function has not been processed. The Interrupt Pending Status indicates if an Update-ended interrupt has been set.
0001h	Resume Stage after Interrupt
0005h	Not My Interrupt, Resume Stage after Interrupt
8000h	Device in Use
8001h	Real Time Clock Not Started
8002h	Interrupt Aiready Enabled
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 0Eh — Cancel Periodic Interrupt

## Description

This function is a single-staged request that disables the periodic interrupt. ABIOS disables NMIs before performing this function.

## Request Block structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Eh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
16h	Word	Reserved (initialize to 0000h)	

#### **Return Codes**

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 0Fh — Set Update-Ended Interrupt

## Description

This function is a multistaged request that enables the update-ended interrupt. The update-ended interrupt generates an interrupt that is activated every time the system clock is updated, or once per second. If the RTC is not functioning, ABIOS does not perform this function and generates Return Code 8001h RTC Not Started. ABIOS disables NMIs when accessing system CMOS RAM.

## Real time clock update cycle

In the IBM PS/2 ABIOS, if the real time clock is in an update cycle when this function is requested, Return Code 8000h Device Busy Request Refused is generated. The Phoenix ABIOS aborts the clock update cycle and performs the function in this case.

## Request Block cannot be changed

The Request Block field must not be changed during any intermediate stage of a request for this function.

## Setting the update-ended interrupt

The following steps must be followed to set the update-ended function:

- If there is an outstanding Set Update-Ended Interrupt already enabled, function 10h Cancel Update-Ended Interrupt must be invoked before function 0Fh is invoked.
- 2. Invoke function 0Fh Set Update-Ended Interrupt.
- 3. Check the Return Code.
- 4. If the Return Code is 0001h, the Interrupt Pending Status field indicates the interrupt that occurred.
- 5. Query the Return Code just one time; make sure that all indicated interrupts are processed sequentially.

## **Request Block structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Fh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
16h	DWord	Reserved (initialize to 0000h)	
1Ah	Byte		Interrupt Pending Status, where:
			Bit 7 = Reserved Bit 6 = 1 Periodic interrupt Bit 5 = 1 Alarm interrupt Bit 4 = 1 Update-ended interrupt Bits 3-0 = Reserved

## **Return Codes**

Code	Description
0000h	Successful Operation
	Never returned by this function. If it is present, the request for this function has not been processed. The Interrupt Pending Status indicates if an update-ended interrupt has been set.
0001h	Resume Stage after Interrupt
0005h	Not My Interrupt, Resume Stage after Interrupt
8000h	Device in Use
8001h	Real Time Clock Not Started
8002h	Interrupt Aiready Enabled
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 10h — Cancel Update-Ended Interrupt

## **Description**

This function is a single-staged request that disables the Update-Ended Interrupt. ABIOS disables NMIs before performing this function.

## **Request Block structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0010h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
16h	Word	Reserved (initialize to 0000h)	

## **Return Codes**

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 11h — Read Time and Date

## Description

This function is a multistaged request that reads the current setting of the real time clock. The output Time and Date fields are only valid if the Return Code is 0000h Successful Operation. ABIOS disables NMIs before performing this function. If the RTC is not functioning, ABIOS does not perform this function and generates Return Code 8001h RTC Not Started.

**Note:** Function 12h Write Date and Time must be called before this function is invoked.

#### ABIOS test for update-in-progress

If the Return Code is 8000h Device in Use or 8001h Real Time Clock Not Started the real time clock is halted. This request is not processed until the real time clock is set.

## Request Block structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (0011h)	]
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Word	Reserved (initialize to 0000h)	
12h	Byte		Alarm Hour in BCD (00-23)
13h	Byte	1	Alarm Minute in BCD (00-59)
14h	Byte		Alarm second in BCD (00-59)
15h	Byte		Century in BCD, where: 0 = 20th century 1 = 21st century
16h	Byte		Year in BCD (00-99)
17h	Byte	]	Month in BCD (01-12)
18h	Byte		Day in BCD (01-31)

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
8000h	Device In Use
8001h	Real Time Clock Not Started
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 12h — Write Time and Date

#### Description

This function is a single-staged request that starts the real time clock (if it is not already started) and sets the time and date information as specified. If the clock is already started, the clock update cycle is aborted, the new time and date are set, and a new clock update cycle is started. ABIOS disables NMIs before performing this function. If the RTC is not functioning, ABIOS does not perform this function and generates Return Code 8001h RTC Not Started.

#### Real time clock update cycle

In the IBM PS/2 BIOS, if the real time clock is in an update cycle when this function is requested, Return Code 8000h Device Busy Request Refused is generated. The Phoenix BIOS aborts the clock update cycle and performs the function in this case.

# Function: 12h — Write Time and Date, Continued

## **Request Block structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0012h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Word	Reserved (initialize to 0000h)	
12h	Byte	Hour in BCD (00-23)	
13h	Byte	Minute in BCD (00-59)	
14h	Byte	Second in BCD (00-59)	
15h	Byte	Century in BCD, where: 0 = 20th century 1 = 21st century	
16h	Byte	Year in BCD (00-99)	
17h	Byte	Month in BCD (01-12)	
18h	Byte	Day in BCD (01-31)	

## **Return Codes**

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid



# Chapter 16 ABIOS System Services

## Overview

#### Introduction

The ABIOS System Services provide functions that allow address mode switching, enable the system speaker, read system configuration information, and enable/disable Address Line 20.

# Summary of System Services functions

Function	Description
01h	Return Logical ID Parameters
02h	Reserved
03h	Read System Configuration
04h-0Ah	Reserved
0Bh	Switch to Real Mode
0Ch	Switch to Protected Mode
0Dh	Enable Address Line 20
0Eh	Disable Address Line 20
0Fh	Enable Speaker

## In this chapter

In this chapter, the following topics are discussed:

- Error Handling
- ABIOS System Services functions

## **Error Handling**

## How errors are reported

ABIOS signals the status (Successful, Resume Stage after Interrupt, etc.) of each ABIOS request by returning a one word Return Code at offset 0Ch in the Request Block.

If Bit 15 of the Return Code field is set, the System Services function requested has an error. The caller's Return Code handler routine should then test Bits 14, 13, 12, and 8 to determine the class of error that has occurred and then test the remaining bits to determine the nature of the error.

# Function: 01h — Return Logical ID Parameters

# Description

This function is a single-staged request that returns information about the specified Logical ID.

## **Request Block structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (20h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0001h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte		Hardware Interrupt Level (FFh)
11h	Byte		Arbitration Level (FFh)
12h	Word		Device ID (0009h)
14h	Word		Count of Units (0000h)
16h	Word		Logical ID flags (0000h)
			Bits 15-4 = Reserved Bit 3 = 0 No overlap across units = 1 Bit 2 = 0 Reserved Bits 1-0 = Transfer Data Pointer Mode 00 No Pointers Required
18h	Word		Request Block Length (for other functions)
1Ah	Byte	Reserved (initialize to 0000h)	Secondary Device ID
1Bh	Byte		Revision Level
1Ch	Word	Reserved (initialize to 0000h)	
1Eh	Word	Reserved (initialize to 0000h)	

# Function: 01h — Return Logical ID Parameters, Continued

#### **Return Codes**

Code	Description
0000h	Successful Operation
0005h	Not My Interrupt, Resume Stage after Interrupt
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 03h — Read System Configuration

## Description

This function is a single-staged request that returns information about the configuration of this system.

## **Processing**

ABIOS disables all interrupts, including NMIs while processing this request.

## Identifying PS/2 models

The following information about PS/2 model and submodel byte information is stored in the BIOS ROM data area (the motherboard ID can be read from the POS registers). These areas can be accessed from CBIOS.

This information identifies various PS/2 models. It should not be used to determine processor type, CMOS RAM size, the number of adapter slots in a system, memory register use, or other system-specific data. The Feature Configuration Table contains the above data.

Model	Submodel	Motherboard ID	Description
F8h	00h	FEFFh	Model 80
F8h	09h	FDFFh	Model 70
FCh	05h	F7FFh	Model 60
FCh	04h	FBFFh	Model 50
FAh	00h	N/A	Model 30
FAh	01h	N/A	Model 25
FFh	FFh	Any Other Value	Unknown System Board

## **Request Block structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0003h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
66h	Word	]	Base Memory in 1K Blocks
68h	Word	1	Expansion Memory in 1K Blocks
6Ah	Byte		POS Slot 5 Configuration Byte for Channel 3
6Bh	Byte	1	Copy of System Board POS 2 Slot
6Ch	Byte		Model Byte — set to FFh if the Adapter ID is an unknown type.
6Dh	Byte		Submodel Byte — set to FFh if the Adapter ID is an unknown type.

## **Return Codes**

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Functions: 04h - 0Ah - Reserved

Function: 0Bh — Switch to Real Mode

#### Description

This function is a single-staged or multistaged request that switches processing to the real mode of the 80286, 80386SX, or 80386 microprocessor and disables Address Line 20 to the microprocessor, which effectively denies access to any address above 1 MB.

#### **ROM BIOS Data Area pointer**

Data Pointer 0 in the real mode Common Data Area points to the ROM BIOS Data Area.

#### Interrupts disabled during processing

While processing this function, the ABIOS disables interrupts, including the NMI I/O Channel Check and Parity Check. The NMI Watchdog Timer Time-out and DMA Arbitration Bus Time-out cannot be disabled.

#### Successful completion

If all stages of the request are completed, the address mode of the processor is switched to real mode and out of ABIOS. The caller should have set AH to a nonzero value before calling this function. ABIOS clears AH when this function is successfully completed. Upon successful completion of this function, control is returned to the caller at the location pointed to by the Resume Pointer Field.

If AH is still a nonzero value, this function request has not been successfully completed.

Function: 0Bh - Switch to Real Mode, Continued

## Request between stages

If the request is between stages, a Return Code of 0005h is present and none of the Request Block parameters are changed yet.

## Request unsuccessful

If there is an invalid parameter in the request for this function (Return Code C00xh), ABIOS returns to the caller with the appropriate Return Code set. The caller must then process the error and request the function again.

It is the caller's responsibility to re-enable interrupts, including the NMI, upon return, either successful or unsuccessful, from a request for this function.

## Request Block structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	]
06h	Word	Function (000Bh)	]
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	]
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	DWord	Reserved (initialized to 0000h)	
60h	DWord	Resume Pointer	][
64h	Word	Selector to a Dummy Descriptor Field	

#### Error handling

This function does not update the Return Code Field unless there is an error in one of the input parameters. If there is an error in one of the input parameters, the ABIOS returns with all registers preserved. Otherwise, this function jumps to the address that the Resume Pointer points to with all registers changed and only CS:IP and AH containing meaningful information.

Set AH to a nonzero value before calling this function and then test AH for zero. A nonzero value indicates an error condition. See the System Services chapter in CBIOS for PS/2 Computers and Compatibles for more information on how to handle the error condition indicated in AH.

#### **Return Codes**

Code	Description
0000h	Successful Operation
0005h	Not My Interrupt, Resume Stage after Interrupt
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 0Ch — Switch to Protected Mode

#### Description

This function is a single-staged request that switches processing to the protected mode of the 80286, 80386SX, or 80386 microprocessor and enables Address Line 20 to the microprocessor.

## Interrupts disabled during processing

While processing this function, the ABIOS disables interrupts, including the NMI I/O Channel Check and Parity Check.

The NMI Watchdog Timer Time-out and DMA Arbitration Bus Time-out cannot be disabled.

## Caller responsibilities

The caller must have loaded the Global Descriptor Table and the Local Descriptor Table referred to in the Request Block before calling ABIOS. Selector 20h in the descriptor table references the caller's code.

## Function: 0Ch — Switch to Protected Mode, Continued

## **Function completion**

Upon completion of this function, control is returned to the caller at the location pointed to by the Resume Pointer Field, with ABIOS having changed the contents of CS:IP to point to a protected mode location instead of a real mode location.

**Note:** It is the caller's responsibility to re-enable interrupts, including the NMI, upon return from this function.

## Request Block structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Ch)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	DWord	Reserved (initialized to 0000h)	
48h	Word		Segment Descriptor Table Limit
4Ah	Word		Segment Descriptor Table Base — (Bits 0-15)
4Ch	Byte		Segment Descriptor Table Base — (Bits 16-23)
4Dh	Byte		Segment Descriptor Table Access Rights Byte
4Eh	Word		Segment Descriptor Table Reserved Bytes
4Fh	17 Bytes	Reserved (do not initialize)	
60h	DWord	Resume Pointer	
64h	15 Bytes	Reserved (do not initialize)	1

## Error handling

This function does not update the Return Code Field unless there is an error in one of the input parameters. If there is an error in one of the input parameters, the ABIOS returns with all registers preserved. Otherwise, this function jumps to the protected mode address pointed to by the Resume Pointer.

#### **Return Codes**

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 0Dh — Enable Address Line 20

## Description

This function is a single-staged request that enables Address Line 20 to the microprocessor, which permits access to any valid address above 1 MB.

## **Request Block structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Dh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	DWord	Reserved (initialized to 0000h)	

## **Return Codes**

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 0Eh - Disable Address Line 20

## Description

This function is a single-staged request that disables Address Line 20 to the microprocessor, denying access to any address above 1 MB.

#### Request Block structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Eh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	DWord	Reserved (initialized to 0000h)	

#### **Return Codes**

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 0Fh — Enable Speaker

## Description

This function is a single-staged request that enables the system speaker at the specified frequency for the specified duration upon successful completion of this function.

The system speaker is enabled by programming Mode 3 of System Timer Channel 2.

## Request Block structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (000Fh)	]
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	]
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	DWord	Reserved (initialize to 0000h)	
60h	Word	Frequency Divisor (1.19 MHz di- vided by the frequency = the frequency divisor). Ex: The frequency divisor is 1331, for a frequency of 886 Hz.	
66h	Byte	Duration Counter in sixty-fourths of a second	

#### **Return Codes**

Code	Description
0000h	Successful Operation If either the input frequency or duration is zero, the function is not performed and the Return Code is 0000h.
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Chapter 17

# ABIOS Nonmaskable Interrupt (NMI) Service

### Overview

#### Introduction

The ABIOS Nonmaskable Interrupt Service clears a nonmaskable interrupt at the NMI source, which is usually at the device level.

Note: This service clears the source of the interrupt after the source of the NMI is logged, but does not re-enable NMIs. The caller must reenable NMIs.

#### NMI processing

A Nonmaskable Interrupt (NMI) occurs because an error condition exists somewhere in the system.

## Types of NMI

The types of NMI are:

- System Board Memory Parity Check
- Adapter Card (I/O) Channel Check
- Watchdog Timer Time-out
- DMA Arbitration Bus Time-out

#### Summary of Nonmaskable Interrupt Service functions

Function	Description
01h	Return Logical ID Parameters
02h-05h	Reserved
06h	Enable NMI
07h	Disable NMI
08h	NMI Continuous Read

#### In this chapter

This chapter includes information about the following topics:

- Error Handling
- ABIOS Nonmaskable Interrupt Service functions

## **Error Handling**

#### How errors are reported

ABIOS signals the status (Successful, Resume Stage after Interrupt, etc.) of each ABIOS request by returning a one word Return Code at offset 0Ch in the Request Block.

If Bit 15 of the Return Code field is set, the Nonmaskable Interrupt Service function requested has an error. The caller's Return Code handler routine should test Bits 14, 13, 12, and 8 for the class of error that has occurred and then test the remaining bits to determine the nature of the error.

# Function: 01h — Return Logical ID Parameters

## Description

This function is a single-staged request that returns the parameters for the specified Logical ID.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (20h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0001h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte		Hardware Interrupt Level (FEh)
11h	Byte		Arbitration Level (FFh)
12h	Word		Device ID (0009h)
14h	Word		Count of Units (0000h)
16h	Word		Logical ID flags (0000h)
			Bits 15-4 = Reserved Bit 3 = 0 No overlap across units = 1 Bit 2 = 0 Reserved Bits 1-0 = Transfer Data Pointer Mode 00 No Pointers Required
18h	Word		Request Block Length (for other functions)
1Ah	Byte	Reserved (initialize to 0000h)	Secondary Device ID
1Bh	Byte		Revision Level
1Ch	Word	Reserved (initialize to 0000h)	
1Eh	Word	Reserved (initialize to 0000h)	7

# Function: 01h — Return Logical ID Parameters, Continued

#### **Return Code**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Functions: 02h - 05h - Reserved

## Description

This function is a single-staged request that enables the NMI for System Board Memory Parity Checks and Adapter Card I/O Channel Checks.

Note: The ABIOS cannot enable the DMA Arbitration Bus Time-out and the Watchdog Timer Time-out NMIs.

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0006h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
21h	Word	Reserved (initialize to 0000h)	

#### Return Code

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Function: 07h — Disable NMI

### Description

This function is a single-staged request that disables the NMI for System Board Memory Parity Checks and Adapter Card I/O Channel Checks.

**Note:** The ABIOS cannot disable the DMA Arbitration Bus Time-out and the Watchdog Timer Time-out types of NMIs.

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0007h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
21h	Word	Reserved (initialize to 0000h)	

#### Return Code

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 08h - NMI Continuous Read

## Description

This function is a continuous multistaged request. It sets up a permanently resident Request Block which is used by the NMI hardware interrupt routine and the caller to handle NMIs.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0008h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out (0000h)
10h	Word		Type of NMI
			00h = Reserved 01h = Parity Check 02h = Channel Check 03h = DMA Bus Time-out 04h = Watchdog Time-out
1Eh	Byte		DMA Arbitration Level that Initiated the DMA Bus Time-out
1Fh	Byte		Slot Number that Initiated the I/O Channel Check
21h	Word	Reserved (initialize to 0000h)	

# Function: 08h - NMI Continuous Read, Continued

#### **Return Codes**

Code	Description	
0000h	Successful Operation	
0001h	Resume Stage after Interrupt	
0005h	Not My Interrupt, Resume Stage after Interrupt	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
FFFFh	Return Code Field Not Valid	

# Chapter 18 ABIOS Pointing Device Service

#### Overview

#### Introduction

The ABIOS Pointing Device Service provides routines to handle pointing devices. A mouse is the most commonly used pointing device, but this service also handles other devices such as trackballs and touchpads.

## Summary of Pointing Device Service functions

Function	Description
00h	Default Interrupt Handler
01h	Return Logical ID Parameters
02h	Reserved
03h	Read Device Parameters
04h	Reserved
05h	Reset/Initialize Pointing Device
06h	Enable Pointing Device
07h	Disable Pointing Device
08h	Pointing Device Continuous Read
09h-0Ah	Reserved
0Bh	Set Sample Rate
0Ch	Set Resolution
0Dh	Set Scaling Factor
0Eh	Read Pointing Device Identification Code

## In this chapter

This chapter includes information about the following topics:

- Hardware Environment
- Error Handling
- ABIOS Pointing Device Service functions

#### **Hardware Environment**

The ABIOS Pointing Device Service is associated with hardware interrupt request 12. The ABIOS Pointing Device Service supports a Pointing Device and a Pointing Device/Keyboard Controller such as an appropriately programmed Intel 8042 or its equivalent.

## **Error Handling**

#### How errors are reported

ABIOS signals the status (Successful, Resume Stage after Interrupt, etc.) of each ABIOS request by returning a one word Return Code at offset 0Ch in the Request Block.

If Bit 15 of the Return Code field is set, the Pointing Device Service function requested has an error. The caller's Return Code handler routine should test Bits 14, 13, 12, and 8 to determine the class of error that has occurred and then test the remaining bits to determine the precise nature of the error.

## Function: 00h — Default Interrupt Handler

## Description

This function is a single-staged or multistaged request that handles unexpected hardware interrupts by resetting the interrupt at the device level.

#### When to invoke

This function is invoked by calling the interrupt routine with a function code of 0000h. It is only invoked if a given Logical ID has no outstanding Request Blocks waiting for an interrupt.

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (10h)	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (0000h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out

#### **Return Codes**

Code	Description
0000h	Successful Operation
0005h	Not My Interrupt, Resume Stage after Interrupt
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 01h — Return Logical ID Parameters

## Description

This function is a single-staged request that returns the parameters for the specified Logical ID.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (20h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0001h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte		Hardware Interrupt Level (0Ch)
11h	Byte		Arbitration Level (FFh)
12h	Word		Device ID (000Bh)
14h	Word		Count of Units (0000h)
16h	Word		Logical ID flags (0000h)
			Bits 15-4 = Reserved Bit 3 = 0 No overlap across units Bit 2 = 0 Reserved Bits 1-0 = Transfer Data Pointer Mode 00 = No Pointers Required
18h	Word		Request Block Length (for other functions)
1Ah	Byte	Reserved (initialize to 0000h)	Secondary Device ID
1Bh	Byte		Revision Level
1Ch	Word	Reserved (initialize to 0000h)	
1Eh	Word	Reserved (initialize to 0000h)	

## Function: 01h — Return Logical ID Parameters, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
0005h	Not My Interrupt, Resume Stage after Interrupt
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 03h — Read Device Parameters

## Description

This function is a single-staged or multistaged request that returns the Pointing Device Status for the specified Pointing Device.

## Request Block structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0003h)	
08h	Word	Reserved (initialized to 0000h)	]
0Ah	Word	Reserved (initialized to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Byte		Interface Status, where:
			Bits 7-6 = Reserved Bit 5 = Interface enable 0 Disabled 1 Enabled Bits 4-0 = Reserved
11h	Byte		Data Package Size (00h-08h)
12h	2 Bytes		Flag Word, where:  Bits 15-7 = Reserved Bit 6 = Mode
16h	Word		02h = 4 counts per mm 03h = 8 counts per mm Current Sample Rate, where: 0Ah = 10 reports/second
18h	DWord		14h = 20 reports/second 28h = 40 reports/second 3Ch = 60 reports/second 50h = 80 reports/second 64h = 100 reports/second C8h = 200 reports/second Time to Walt (in microseconds)
	Word		Before Resuming Requests
1Ch	Word	Reserved (initialize to 0000h)	

## Function: 03h — Read Device Parameters, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description	
0000h	Successful Operation	
0005h	Not My Interrupt, Resume Stage after Interrupt	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
FFFFh	Return Code Field Not Valid	

Function: 04h — Reserved

## Function: 05h — Reset/Initialize Pointing Device

#### Description

This function is a single-staged or multistaged request that resets and initializes a Pointing Device.

#### Pointing Device initialized state

When the pointing device is initialized,

- data package size is not changed,
- resolution is set to 4 counts per millimeter,
- sample rate is set to 100 reports per second,
- scaling factor is set to 1:1, and
- the pointing device is disabled.

### Using this function

The steps below must be followed before this function can be used:

- 1. invoke function 08h Continuous Read,
- 2. invoke function 06h Enable Pointing Device,
- 3. invoke function 05h Reset/Initialize Pointing Device, and
- 4. invoke functions 0Bh, 0Ch, 0Dh, or 0Eh, as needed.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0005h)	
08h	Word	Reserved (initialized to 0000h)	
0Ah	Word	Reserved (initialized to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Byte		Pointing Device Completion Code
11h	Byte		Pointing Device Identification Code
18h	Word		Time to Wait (in microseconds) Before Continuing Request
1Ch	Word	Reserved (initialize to 0000h)	

## **Return Codes**

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
0002h	Resume Stage after Time Delay
0005h	Not My Interrupt, Resume Stage after Interrupt
8000h	Device in Use
8001h	Resend
8002h	Two Consecutive Resends Found
8003h	System Lock
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 06h — Enable Pointing Device

## Description

This function is a single-staged or multistaged request that enables the Pointing Device.

## Using this function

The steps below must be followed before this function can be used:

- 1. invoke function 08h Continuous Read,
- 2. invoke function 06h Enable Pointing Device,
- 3. invoke function 05h Reset/Initialize Pointing Device, and
- 4. invoke functions 0Bh, 0Ch, 0Dh, or 0Eh, as needed.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0006h)	]
08h	Word	Reserved (initialized to 0000h)	
0Ah	Word	Reserved (initialized to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
18h	4 Bytes		Time to Wait (in microseconds) Before Continuing Request
1Ch	Word	Reserved (initialize to 0000h)	

#### **Return Codes**

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
0002h	Resume Stage after Time Delay
0005h	Not My Interrupt, Resume Stage after Interrupt
8000h	Device in Use
8001h	Resend
8002h	Two Consecutive Resends Found
8003h	System Lock
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 07h — Disable Pointing Device

## Description

This function is a single-staged or multistaged request that disables a pointing device.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	]
06h	Word	Function (0007h)	1
08h	Word	Reserved (initialized to 0000h)	]
0Ah	Word	Reserved (initialized to 0000h)	][
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
18h	DWord		Time to Wait (in microseconds) Before Continuing Request
1Ch	Word	Reserved (initialize to 0000h)	

## **Return Codes**

Code	Description	
0000h	Successful Operation	
0001h	Resume Stage after Interrupt	
0002h	Resume Stage after Time Delay	
0005h	Not My Interrupt, Resume Stage after Interrupt	
8000h	Device in Use	
8001h	Resend	
8002h	Two Consecutive Resends Found	
8003h	System Lock	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
FFFFh	Return Code Field Not Valid	

## Function: 08h — Pointing Device Continuous Read

#### Description

This function is a continuous multistaged request that reads a pointing device while the device remains disabled.

#### When to use

This function must be invoked before invoking any other Pointing Device Service function except function 01h.

## Using this function

The steps below must be followed before this function can be used:

- 1. invoke function 08h Continuous Read.
- 2. invoke function 06h Enable Pointing Device,
- 3. invoke function 05h Reset/Initialize Pointing Device, and
- 4. invoke functions 0Bh, 0Ch, 0Dh, or 0Eh, as needed.

# Function: 08h — Pointing Device Continuous Read, Continued

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0008h)	
08h	Word	Reserved (initialized to 0000h)	
0Ah	Word	Reserved (initialized to 0000h)	
0Ch	Word	Řeturn Code	Return Code
0Eh	Word		
10h	Byte	Data Package Size, where:	
		08h = 8 Bytes 00h = Reserved 01h = 1 Byte 02h = 2 Bytes 03h = 3 Bytes 04h = 4 Bytes 05h = 5 Bytes 06h = 6 Bytes 07h = 7 Bytes	
12h	4	Reserved (initialize to 0000h)	
1Ch	Bytes		Pointing Device Data, where:  BYTE 1 Bit 7 = 0 No Y Data Overflow = 1 Y Data Overflow Bit 6 = 0 No X Data Overflow = 1 X Data Overflow Bit 5 = 0 Y Data Sign is Positive = 1 Y Data Sign is Negative Bit 4 = 0 X Data Sign is Positive = 1 X Data Sign is Negative Bit 3 = 1 Reserved Bit 2 = 0 Reserved Bit 1 = 1 Right Button Pressed BYTE 2 = Pointing Device X Data BYTE 3 = Pointing Device Y Data BYTES 4-12 = Reserved  Note: X and Y refer to standard X/Y grid coordinates.

## Function: 08h — Pointing Device Continuous Read, Continued

## **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description	
0000h	Successful Operation	
0001h	Resume Stage after Interrupt	
0002h	Resume Stage after Time Delay	
0005h	Not My Interrupt, Resume Stage after Interrupt	
0009h	Attention, Data Available, Resume Stage after Interrupt	
8000h	Device in Use	
8003h	System Lock	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
C005h	Invalid Mouse Controller Parameter	
FFFFh	Return Code Field Not Valid	

Functions: 09h - 0Ah - Reserved

## Function: 0Bh — Set Sample Rate

## Description

This function is a single-staged or multistaged request that sets the sample rate for a pointing device.

#### Using this function

Invoke the following functions in the order given to use this function:

- 1. Function 08h Continuous Read
- 2. Function 06h Enable Pointing Device
- 3. Function 05h Reset/Initialize Pointing Device
- 4. Function 0Bh Set Sample Rate

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function(000Bh)	
08h	Word	Reserved (initialized to 0000h)	
0Ah	Word	Reserved (initialized to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
12h	Word	Sample Rate, where:  0Ah = 10 reports/second 14h = 20 reports/second 28h = 40 reports/second 3Ch = 60 reports/second 50h = 80 reports/second 64h = 100 reports/second C8h = 200 reports/second	
18h	DWord		Time to Wait (in microseconds) Before Continuing Request

## **Return Codes**

Code	Description	
0000h	Successful Operation	
0001h	Resume Stage after Interrupt	
0002h	Resume Stage after Time Delay	
0005h	Not My Interrupt, Resume Stage after Interrupt	
8000h	Device in Use	
8001h	Resend	
8002h	Two Consecutive Resends Found	
8003h	System Lock	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
FFFFh	Return Code Field Not Valid	

## Function: 0Ch - Set Resolution

## Description

This function is a single-staged request that sets the resolution for a pointing device by specifying the desired resolution rate in the Sample Rate field at offset 12h in the Request Block.

### Using this function

Invoke the following functions in the order given to use this function:

- 1. Function 08h Continuous Read
- 2. Function 06h Enable Pointing Device
- 3. Function 05h Reset/Initialize Pointing Device
- 4. Function 0Ch Set Resolution

#### Request Block Structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	]
06h	Word	Function (000Ch)	]
08h	Word	Reserved (initialized to 0000h)	]
0Ah	Word	Reserved (initialized to 0000h)	]
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
12h	Word	Sample Rate, where:  00h = 1 count per mm  01h = 2 counts per mm  02h = 4 counts per mm  03h = 8 counts per mm	
18h	DWord		Time to Wait (in microseconds) Before Continuing Request
1Ch	Word	Reserved (initialize to 0000h)	

Function: 0Ch — Set Resolution, Continued

#### **Return Codes**

Code	Description	
0000h	Successful Operation	
0001h	Resume Stage after Interrupt	
0002h	Resume Stage after Time Delay	
0005h	Not My Interrupt, Resume Stage after Interrupt	
8000h	Device in Use	
8001h	Resend	
8002h	Two Consecutive Resends Found	
8003h	System Lock	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
FFFFh	Return Code Field Not Valid	

## Function: 0Dh — Set Scaling Factor

#### Description

This function is a single-staged or multistaged request that sets the Scaling Factor for a pointing device by specifying the desired value in the Scaling Factor field at offset 10h in the Request Block.

## Using this function

Invoke the following functions in the order given to use this function:

- 1. Function 08h Continuous Read,
- 2. Function 06h Enable Pointing Device,
- 3. Function 05h Reset/Initialize Pointing Device, and
- 4. Function 0Dh Set Scaling Factor.

# Function: 0Dh — Set Scaling Factor, continued

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (000Dh)	]
08h	Word	Reserved (initialized to 0000h)	]
0Ah	Word	Reserved (initialized to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out (Not valid unless Return Code is 0002h).
10h	Byte	Scaling Factor, where: 00h = Reserved 01h = Set to 1:1 02h = Set to 2:1	
18h	DWord		Time to Wait (in microseconds) Before Continuing Request
1Ch	Word	Reserved (initialize to 0000h)	
28h	Byte		Retry Mode Enable (bit 5 on)
29h	Byte		Mouse Data Buffer Index
2Ah	Word		Retry Parameters
2Ch	Word		Reserved
2Eh	Byte		Count of Status Bytes in RB
2Fh	Byte		Current Interrupt Level (09h)
30h	Byte		Arbitration Level (0Ch)
31h	Word		Device ID
33h	Word		Keyboard Data Register (60h)
35h	Word		8042 Status Register (64h)
37h	Byte		Reserved
38h	Byte		Pointer to Beginning of Request Block Status Area (2Eh)

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
0002h	Resume Stage after Time Delay
0005h	Not My Interrupt, Resume Stage after Interrupt
8000h	Device in Use
8001h	Resend
8002h	Two Consecutive Resends Found
8003h	System Lock
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Function: 0Eh — Read Pointing Device Identification Code

#### Description

This function is a single-staged or multistaged request that returns the Pointing Device Identification Code from the pointing device/keyboard interface.

#### Using this function

Invoke the following functions in the order given to use this function:

- 1. Function 08h Continuous Read,
- 2. Function 06h Enable Pointing Device,
- 3. Function 05h Reset/Initialize Pointing Device, and
- 4. Function 0Eh Read Pointing Device Identification Code.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Eh)	
08h	Word	Reserved (initialized to 0000h)	
0Ah	Word	Reserved (initialized to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Byte	Auxiliary Device Identification Code	Not valid unless Return Code is 0002h.
18h	DWord		Time to Wait (in microseconds) Before Continuing Request
1Ch	Word	Reserved (initialize to 0000h)	
28h	Byte		Retry Mode Enable (bit 5 on)
29h	Byte		Mouse Data Buffer Index
2Ah	Word		Retry Parameters
2Ch	Word		Reserved
2Eh	Byte		Count of Status Bytes in RB
2Fh	Byte	]	Current Interrupt Level (09h)
30h	Byte		Arbitration Level (0Ch)
31h	Word		Device ID
33h	Word		Keyboard Data Register (60h)
35h	Word		8042 Status Register (64h)
37h	Byte		Reserved
38h	Byte		Pointer to Beginning of Request Block Status Area (2Eh)

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
0001h	Resume Stage after Interrupt
0002h	Resume Stage after Time Delay
0005h	Not My Interrupt, Resume Stage after Interrupt
8000h	Device in Use
8001h	Resend
8002h	Two Consecutive Resends Found
8003h	System Lock
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

## Chapter 19 ABIOS CMOS RAM Service

## Overview

#### Introduction

The ABIOS CMOS RAM service provides access to battery-backed CMOS memory. In addition, this service provides error checking through the Recompute Checksum function.

## Summary of ABIOS CMOS RAM Service functions

Function	Description	
01h	Return Logical ID Parameters	
02h	Reserved	
03h	Read Device Parameters	
04h-07h	Reserved	
08h	Read CMOS RAM	
09h	Write to CMOS RAM	
0Ah	Reserved	
0Bh	Recompute Checksum	

#### In this chapter

This chapter includes information about the following topics:

- Hardware Environment
- CMOS RAM Data Definitions
- Extended CMOS RAM Data Definitions
- Error Handling
- ABIOS CMOS RAM Service functions

## Hardware Environment

#### Introduction

Information may be stored in two areas of CMOS RAM. The table below describes the CMOS RAM areas.

#### Table of CMOS RAM areas

Data Area	I/O Location	Size	Description
CMOS RAM Data Area	070h & 071h	64 Bytes	These bytes are located on the Motorola MC146818A Real Time Clock CMOS chip (or its equivalent). All implementations of the BIOS make use of this area to store real time clock, POST, and system configuration data.
Extended CMOS RAM Data Area	074h, 075h, and 076h	2048 Bytes	When implemented on systems that employ more than four adapter slots, the BIOS requires an additional 2K of CMOS RAM. This extended CMOS RAM is primarily used to store POS data.

#### Introduction

The Motorola MC146818A Real Time Clock CMOS chip (or its equivalent) contains 50 bytes of CMOS RAM data. Addresses 00h-0Dh access Real Time Clock data, which are listed in Chapter 15. Addresses 0Eh-3Fh access CMOS RAM data and are documented in this chapter.

#### **CMOS RAM Definitions**

The CMOS RAM data contained in the MC146818A chip is accessed by both the ABIOS and the CBIOS. CMOS RAM definitions are listed here for the convenience of ABIOS users. This information is repeated in CBIOS for IBM PS/2 Computers and Compatibles.

**Note:** CMOS RAM locations 19h-30h are defined only for PS/2-Compatible models containing four or fewer adapter slots.

#### Configuration data definitions

The system configuration information data definitions use CMOS RAM addresses 0Eh-3Fh. They are:

Location	Size	Description
0Eh	1 Byte	Diagnostic status, where:  Bit 7 = 1 Real time clock lost power  Bit 6 = 1 CMOS RAM checksum is bad  Bit 5 = 1 Invalid configuration information found  at POST  Bit 4 = 1 Memory size compare error at POST  Bit 3 = 1 Fixed disk or adapter falls initialization  Bit 2 = 1 CMOS RAM time found invalid  Bit 1 = 1 Adapters do not match configuration  Bit 0 = 1 Time-out reading an adapter ID
0Fh	1 Byte	Reason for shutdown, where:  00h = Power on or soft reset 01h = Memory size pass 02h = Memory test pass 03h = Memory test fail 04h = POST end; boot system 05h = JMP DWord pointer with end-of-interrupt 06h = Protected tests pass 07h = Protected tests fail 08h = Memory size fail 09h = INT 15h Block Move 0Ah = JMP DWord pointer without end-of-interrupt 08h = Used by ABIOS

## Configuration data definitions, cont'd

Location	Size	Description
10h	1 Byte	Type of Diskette Drives:  Bits 7-4 = Drive type of drive 0, where:  0000b = No drive  0001b = 360K drive  0010b = 1.2 MB drive  0011b = 720K drive  0100b = 1.44 MB drive  Bits 3-0 = Drive type of drive 1, where:  0000b = No drive  0001b = 360K drive  0010b = 1.2 MB drive  0011b = 720K drive  0011b = 720K drive  0100b = 1.44 MB drive
11h	1 Byte	Type of fixed disk drive 0
12h	1 Byte	Type of fixed disk drive 1
13h	1 Byte	Password Configuration  Bits 7-5 = 0 Reserved  Bit 4 = 0 BIOS initializes keyboard to normal speed  1 BIOS initializes keyboard to fast speed  Bits 3-2 = Reserved  Bit 1 = 1 Network password installed  0 Network password not installed  Bit 0 = 1 Power-on password installed  0 Power-on password not installed
14h	1 Byte	Equipment installed, where:  Bits 7-6 = Number of diskette drives, where:  00b = 1 Diskette drives  01b = 2 Diskette drives  Bits 5-4 = Primary display, where:  00b = Reserved  01b = VGA in 40-column mode  10b = VGA in 80-column mode  11b = VGA in monochrome mode  Bits 3-2 = Reserved  Bit 1 = 1 80387 installed  Bit 0 = 0 Diskette drive installed
15h	1 Byte	Base memory in 1K, low byte
16h	1 Byte	Base memory in 1K, high byte
17h	1 Byte	Expansion memory in 1K, low byte
18h	1 Byte	Expansion memory in 1K, high byte
19h	1 Byte	Adapter ID for channel 0, low byte

offset 702h.

## Configuration data definitions, cont'd

Location	Size	Description
1Ah	1 Byte	Adapter ID for channel 0, high byte
1Bh	1 Byte	Adapter ID for channel 1, low byte
1Ch	1 Byte	Adapter ID for channel 1, high byte
1Dh	1 Byte	Adapter ID for channel 2, low byte
. 1Eh	1 Byte	Adapter ID for channel 2, high byte
1Fh	1 Byte	Adapter ID for channel 3, low byte
20h	1 Byte	Adapter ID for channel 3, high byte
21h	1 Byte	POS 2 configuration byte for channel 0
22h	1 Byte	POS 3 configuration byte for channel 0
23h	1 Byte	POS 4 configuration byte for channel 0
24h	1 Byte	POS 5 configuration byte for channel 0
25h	1 Byte	POS 2 configuration byte for channel 1
26h	1 Byte	POS 3 configuration byte for channel 1
27h	1 Byte	POS 4 configuration byte for channel 1
28h	1 Byte	POS 5 configuration byte for channel 1
29h	1 Byte	POS 2 configuration byte for channel 2
2Ah	1 Byte	POS 3 configuration byte for channel 2
2Bh	1 Byte	POS 4 configuration byte for channel 2
2Ch	1 Byte	POS 5 configuration byte for channel 2
2Dh	1 Byte	POS 2 configuration byte for channel 3
2Eh	1 Byte	POS 3 configuration byte for channel 3
2Fh	1 Byte	POS 4 configuration byte for channel 3
30h	1 Byte	POS 5 configuration byte for channel 3
31h	1 Byte	Copy of system board POS 2
32h	1 Byte	CRC for offsets 10-31, high byte
33h	1 Byte	CRC for offsets 10-31, low byte
34h	1 Byte	Miscellaneous information
		Bits 7-4 = Actual number of RS-232 ports installed Bits 3-0 = Block move status before reset to real mode

#### Configuration data definitions, cont'd

Location	Size	Description
35h	1 Byte	Low byte of actual expansion memory size
36h	1 Byte	High byte of actual expansion memory size
37h	1 Byte	Century in BCD
38h-3Eh	1 Byte	Power-on password
39h	1 Byte	Power-on password checksum

## **Extended CMOS RAM Data**

#### introduction

The BIOS uses an additional 2K of CMOS RAM to store Programmable Option Select (POS) data for MCA-compatible computer systems that include more than four expansion slots. Fixed disk parameter data for fixed disks other than those listed in the ROM BIOS Fixed Disk Parameter Table is also stored in this additional CMOS RAM.

#### Extended CMOS RAM data definitions

The table below outlines the contents of the extended CMOS RAM data area.

CMOS RAM Offset	Size	Description
0000h	1 Byte	LSB of adapter ID for channel 0
0001h	1 Byte	MSB of adapter ID for channel 0
0002h	1 Byte	Number of POS values used
0003h	1 Byte	POS 2 for channel 0
0004h	1 Byte	POS 3 for channel 0
0005h	1 Byte	POS 4 for channel 0
0006h	1 Byte	POS 5 for channel 0

## Extended CMOS RAM data definitions, cont'd

CMOS RAM Offset	Size	Description
0007-0022h		Reserved
0023h	1 Byte	LSB of adapter ID for channel 1
0024h	1 Byte	MSB of adapter ID for channel 1
0025h	1 Byte	Number of POS values used
0026h	1 Byte	POS 2 for channel 1
0027h	1 Byte	POS 3 for channel 1
0028h	1 Byte	POS 4 for channel 1
0029h	1 Byte	POS 5 for channel 1
002A-0045h		Reserved
0046h	1 Byte	LSB of adapter ID for channel 2
0047h	1 Byte	MSB of adapter ID for channel 2
0048h	1 Byte	Number of POS values used
0049h	1 Byte	POS 2 for channel 2
004Ah	1 Byte	POS 3 for channel 2
004Bh	1 Byte	POS 4 for channel 2
004Ch	1 Byte	POS 5 for channel 2
0040-0068h		Reserved
0069h	1 Byte	LSB of adapter ID for channel 3
006Ah	1 Byte	MSB of adapter ID for channel 3
006Bh	1 Byte	Number of POS values used
006Ch	1 Byte	POS 2 for channel 3
006Dh	1 Byte	POS 3 for channel 3
006Eh	1 Byte	POS 4 for channel 3
006Fh	1 Byte	POS 5 for channel 3
0070-008Bh		Reserved
008Ch	1 Byte	LSB of adapter ID for channel 4
008Dh	1 Byte	MSB of adapter ID for channel 4
008Eh	1 Byte	Number of POS values used
008Fh	1 Byte	POS 2 for channel 4

## Extended CMOS RAM data definitions, cont'd

CMOS RAM Offset	Size	Description
0090h	1 Byte	POS 3 for channel 4
0091h	1 Byte	POS 4 for channel 4
0092h	1 Byte	POS 5 for channel 4
0093-00AEh		Reserved
00AFh	1 Byte	LSB of adapter ID for channel 5
00B0h	1 Byte	MSB of adapter ID for channel 5
00B1h	1 Byte	Number of POS values used
00B2h	1 Byte	POS 2 for channel 5
00B3h	1 Byte	POS 3 for channel 5
00B4h	1 Byte	POS 4 for channel 5
00B5h	1 Byte	POS 5 for channel 5
00B6-00D1h		Reserved
00D2h	1 Byte	LSB of adapter ID for channel 6
00D3h	1 Byte	MSB of adapter ID for channel 6
00D4h	1 Byte	Number of POS values used
00D5h	1 Byte	POS 2 for channel 6
00D6h	1 Byte	POS 3 for channel 6
00D7h	1 Byte	POS 4 for channel 6
00D8h	1 Byte	POS 5 for channel 6
00D9-00F4h		Reserved
00F5h	1 Byte	LSB of adapter ID for channel 7
00F6h	1 Byte	MSB of adapter ID for channel 7
00F7h	1 Byte	Number of POS values used
00F8h	1 Byte	POS 2 for channel 7
00F9h	1 Byte	POS 3 for channel 7
00FAh	1 Byte	POS 4 for channel 7
00FBh	1 Byte	POS 5 for channel 7
00FC-0160h		Reserved

## Extended CMOS RAM Data, Continued

## Extended CMOS RAM data definitions, cont'd

CMOS RAM Offset	Size	Description
0161-0162h	1 Word	Set to a value to make POST's CRC for extended CMOS RAM locations 0-162 equal zero. Maintained by the Reference Diskette.
0163-0165h	3 Bytes	Actual extended memory size when over 65 MB
0166-0175h	16 Bytes	Fixed Disk Parameter Table for drive 0
0176-0185h	16 Bytes	Fixed Disk Parameter Table for drive 1
0186h	1 Byte	POST uses this offset to test whether extended CMOS RAM can be accessed correctly
0187h-0188h		Reserved
0189h-018Dh		Reserved for reference diskette POST use
018Eh	1 Byte	Number of Micro Channel slots.
018Fh-0388h		Reserved
0389h	1 Byte	Error Log Number (0-5)
038Ah	20 Bytes	Error Log Block 0
039Eh	20 Bytes	Error Log Block 1
03B2h	20 Bytes	Error Log Block 2
03C6h	20 Bytes	Error Log Block 3
03DAh	20 Bytes	Error Log Block 4
03EEh	20 Bytes	Error Log Block 5
0402h-06FFh	20 Bytes	Reserved
0700h-07FFh	20 Bytes	Reserved

## **Error Handling**

#### How errors are reported

ABIOS signals the status (Successful, Resume Stage after Interrupt, etc.) of each ABIOS request by returning a one word Return Code at offset 0Ch in the Request Block.

If Bit 15 of the Return Code field is set, the CMOS RAM Service function requested has an error. The caller's Return Code handler routine should test Bits 14, 13, 12, and 8 for the class of error that has occurred and then test the remaining bits to determine the nature of the error.

#### Error checking

The potential for error inherent in CMOS technology makes error checking advisable. Test the Return Code field after all CMOS RAM Service function requests. A defective battery causes Return Code 80FFh, CMOS RAM Battery Bad, and a checksum error causes Return Code 80FEh, CMOS RAM Checksum Invalid, but other Return Code values may occur.

## Function: 01h — Return Logical ID Parameters

## Description

This function is a single-staged request that returns the parameters for the specified Logical ID.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (20h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0001h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte		Hardware Interrupt Level (FFh)
11h	Byte		Arbitration Level (FFh)
12h	Word		Device ID (000Eh)
14h	Word		Count of Units
16h	Word		Logical ID flags
			Bits 15-4 = Reserved Bit 3 = 0 No overlap across units = 1 Overlap across units supported Bit 2 = 0 Reserved Bits 1-0 = Transfer Data Pointer Mode 01 = Logical Pointer Required
18h	Word		Request Block Length (for other functions)
1Ah	Byte	Reserved (initialize to 0000h)	Secondary Device ID
1Bh	Byte		Revision Level
1Ch	Word	Reserved (initialize to 0000h)	
1Eh	Word	Reserved (initialize to 0000h)	

## Function: 01h — Return Logical ID Parameters, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Function: 02h - Reserved

Function: 03h — Read Device Parameters

#### Description

This function, a single-staged request, returns the CMOS RAM Service device parameters. Specifically, the Read Device Parameters function returns the locations of extended CMOS RAM available to the user. The remaining areas of Extended CMOS RAM and all of CMOS RAM are reserved.

## Function: 03h — Read Device Parameters, Continued

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0003h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
16h	Word	Reserved (initialize to 0000h)	
22h	Word		Start of User RAM
24h	Word		Length of User RAM

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
80FEh	CMOS RAM Checksum Invalid
80FFh	CMOS RAM Battery Bad
C000h	Invalid Logical ID
C001h	Invalid Function Number
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid CMOS RAM Parameter
FFFFh	Return Code Field Not Valid

Functions: 04h - 07h - Reserved

Function: 08h — Read CMOS RAM

#### Description

This function, a multistaged request, returns the data stored in the CMOS RAM location pointed to by Data Pointer 1 or 2. The Transfer Data Pointer Mode, which determines the Data Pointer fields format, is returned in function 01h, Return Logical ID Parameters function.

**Note:** ABIOS disables nonmaskable interrupts while processing CMOS RAM accesses through functions 08h or 09h.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0008h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Word	Reserved (initialize to 0000h)	
12h	DWord	Data Pointer 1 (Logical Pointer)	
16h	Word	Reserved (initialize to 0000h)	
1Ah	DWord	Reserved	
20h	Word	Flag Word, where:	
		Bit 15 = 1 NMI disabled Bits 14-1 = Reserved Bit 0 = RAM type 0 CMOS RAM 1 Extended CMOS RAM	
22h	Word	Starting Address	
24h	Word	Number of bytes to transfer: If field value = 0, no action is taken; Return Code field Operation Completed successfully is set.	

## Function: 08h - Read CMOS RAM, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
80FEh	CMOS RAM Checksum Invalid
80FFh	CMOS RAM Battery Bad
C000h	Invalid Logical ID
C001h	Invalid Function Number
C003h	invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid CMOS RAM Parameter
	This field is set and no action is taken if the bytes in the Number of Bytes to Transfer field plus the byte count for the Starting RAM Address field in the Request Block is greater than the maximum amount of RAM. It could also mean that there is no Extended CMOS RAM.
FFFFh	Return Code Field Not Valid

#### Description

This function, a single-staged request, writes the number of bytes of data specified at offset 24h and pointed to by Data Pointer 1 or 2 to the CMOS RAM or extended CMOS RAM location specified at offset 22h, Starting Address. The Transfer Data Pointer Mode, which determines the Data Pointer fields format, is returned in function 01h, Return Logical ID Parameters function.

Note: ABIOS disables nonmaskable interrupts while processing CMOS RAM accesses through functions 08h or 09h.

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0009h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Word	Reserved (initialize to 0000h)	
12h	DWord	Data Pointer 1 (Logical Pointer)	
16h	Word	Reserved (initialize to 0000h)	
1Ah	DWord	Reserved	
20h	Word	Flag Word, where:	
		Bit 15 = 1 NMI disabled Bits 14-1 = Reserved Bit 0 = RAM type 0 CMOS RAM 1 Extended CMOS RAM	
22h	Word	Starting Address	
24h	Word	Number of bytes to transfer: If field value = 0, no action is taken and the Return Code field Operation Completed Successfully is set.	

Function: 09h — Write to CMOS RAM, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
80FEh	CMOS RAM Checksum Invalid
80FFh	CMOS RAM Battery Bad
C000h	Invalid Logical ID
C001h	Invalid Function Number
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid CMOS RAM Parameter
	This field is set and no action is taken if the bytes in the Number of Bytes to Transfer field plus the byte count for the Starting RAM Address field in the Request Block is greater than the maximum amount of RAM. It could also mean that there is no Extended CMOS RAM.
FFFFh	Return Code Field Not Valid

Function: 0Ah — Reserved

## Function: 0Bh — Recompute Checksum

### Description

This function recomputes the checksum for either CMOS RAM or extended CMOS RAM.

#### When to Use

Invoke this function following a function 08h, Read CMOS RAM or 09h, Write to CMOS RAM request.

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (000Bh)	]
08h	Word	Reserved (initialize to 0000h)	]
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Word	Reserved (initialize to 0000h)	]
12h	Dword	Reserved (initialize to 0000h)	]
16h	Word	Reserved (initialize to 0000h)	
1Ah	Dword	Reserved (initialize to 0000h)	]
20h	Word	Flag Word, where:	]
		Bit 15 = 1 for NMI disabled Bits 14-1 = Reserved Bit 0 = RAM type 0 CMOS RAM 1 Extended CMOS RAM	

## Function: 0Bh — Recompute Checksum, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
80FEh	CMOS RAM Checksum Invalid
80FFh	CMOS RAM Battery Bad
C000h	Invalid Logical ID
C001h	Invalid Function Number
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid CMOS RAM Parameter
FFFFh	Return Code Field Not Valid

## Chapter 20

# ABIOS Direct Memory Access (DMA) Service

#### Overview

#### Introduction

The ABIOS Direct Memory Access (DMA) Service allows programs to allocate arbitration levels and DMA channels, and initiate transfers through the ABIOS. It is unnecessary for the caller to program the DMA Controller directly.

#### DMA transfer operation steps

To complete a DMA transfer, the caller must

- Receive an arbitration level by invoking function 0Bh, Allocate Arbitration Level.
- Complete the Mode Control field (offset 1Ch in the Request Block) and the Transfer Control Bytes fields (offsets 1Dh and 1Eh in the Request Block) to specify the DMA controller functions for the request.
- 3. Prepare for a transfer to or from a device, using functions 10h, 11h, or 12h, by coding the appropriate input information.
- 4. Disable the arbitration level (function 0Dh Disable Arbitration Level).
- 5. Deallocate the arbitration level (function 0Ch Deallocate Arbitration Level).

## Summary of ABIOS DMA Service functions

Function	Description
01h	Return Logical ID Parameters
02h	Reserved
03h	Read Device Parameters
04h-0Ah	Reserved
0Bh	Allocate Arbitration Level
0Ch	Deallocate Arbitration Level
0Dh	Disable Arbitration Level
0Eh	DMA Transfer Status
0Fh	Abort DMA Operation
10h	DMA Transfer from Memory to I/O
11h	Read from I/O and Write to Memory
12h	Load DMA Controller Parameters

## In this chapter

The following topics are discussed in this chapter:

- Hardware Environment
- Error Handling
- ABIOS DMA Service functions

#### **Hardware Environment**

#### **DMA** functionality

The hardware environment for DMA transfers is described here in order to explain the background against which the DMA ABIOS functions operate. The ABIOS, however, serves as a shield between underlying hardware and requests of the operating system, eliminating the need for the caller to access the DMA controller directly.

Direct Memory Access (DMA) allows large amounts of data to be transferred from a physical device to system memory or vice versa without microprocessor involvement. A program may initiate a DMA transfer and have no need to copy each byte or word individually, freeing the processor for more complex tasks. DMA transfers are typically from/to a fixed I/O port address to/from a continually incremented memory address.

DMA functionality in Micro Channel systems is a superset of the functionality of two Intel 8237 DMA Controllers, one addressed at every port, starting with Port 0000h, and one addressed at every other port, starting at port 00C0h. Access to 8237-compatible DMA functions and to additional functions for all channels is provided at I/O ports 0018h and 001Ah. Data output to port 0018h selects the channel and function, and data output to or input from 001Ah goes to or from the selected internal register.

#### **Bus sharing**

The system microprocessor and any currently-transferring DMA users can share the bus by taking turns directing bus cycles (driving the Micro Channel's address lines and certain control signals). An arbitration process determines which of these possible bus masters is ready to direct a cycle. Competing bus masters (DMA devices) are assigned varying priorities, which are weighed during arbitration. Each bus master gets control of the bus for a number of cycles as determined by the arbitration process.

#### DMA device

A DMA device (or bus master) is one that enters into arbitration for the channel. If it wins, it receives addresses and control signals from the DMA controller so it can read or write data.

#### **DMA Controller**

A DMA controller is a device that monitors the arbitration process and gives addresses and control signals to the device that won the bus through arbitration. The controller does not enter into the arbitration itself. PS/2-compatible Micro Channel-based systems provide a DMA controller that supports DMA transfers to/from up to eight devices at once.

#### DMA hardware registers

The DMA controller maintains several hardware registers for each DMA channel. The key registers are:

- a memory address where the next byte or word will be transferred to or from.
- a count of the remaining bytes to transfer ((transfer count),
- a flag (mode) controlling the transfer direction (to memory or to the device), and
- transfer status flags for each channel (status).

## DMA hardware registers

The DMA Controller has ten sets of registers, summarized below:

Register	Size (bits)	Number of Registers	How Allocated	
Memory Address	24	8	1 per Channel	
I/O Address	16	8	1 Per Channel	
Transfer Count	16	8	1 Per Channel	
Temporary Holding	16	1	All Channels	
Mask	4	2	1 for Channels 7-4 1 for Channels 3-0	
Arbus	4	2	1 for Channel 4 1 for Channel 0	
Mode	8	8	1 per Channel	
Status	8	2	1 for Channel 7-4 1 for Channel 3-0	
Function	8	1	All Channels	
Refresh	9	1	Independent of DMA	

#### Hardware Environment. Continued

#### Mode Control Field

The Mode Control field provides an opportunity for the caller to use the Autoinitialization and Programmed I/O (PIO) features of the DMA Controller.

#### ■ Autoinitialization

Specifies if the DMA Controller will initialize automatically when the transfer reaches the terminal count.

#### ■ Programmed I/O

Specifies that the I/O address is to be programmed to the DMA Controller, driving the I/O address on the bus during the DMA cycles.

#### Transfer Control Bytes

These fields provide an opportunity for the caller to specify the physical address of the memory and I/O fields for ABIOS DMA Service functions 10h, 11h, and 12h.

#### **■** Count Control

Specifies if the physical address is decremented or incremented during a transfer.

#### ■ Device Size

Specifies whether this is an 8-bit or 16-bit transfer.

#### Microprocessor and DMA

It is possible for the microprocessor to address the DMA controller and access the DMA registers. The microprocessor can control the DMA modes, transfer addresses, transfer counts, channel masks, and page registers.

#### **Direct DMA Controller access**

Reading directly from or writing directly to any DMA Controller port may cause unpredictable results.

#### DMA data transfer

After a DMA device wins the arbitration bus and the DMA controller is programmed to service the request, a transfer can take place.

#### DMA transfers can be:

- single transfer,
- multiple transfer (burst mode), or
- read verification.

#### **Burst mode**

Burst mode is a method of DMA transfer that allows a device to remain inactive for long periods and then send large amounts of data in a short time. Some peripheral devices, e.g. a fixed disk, transfer their data in bursts that are frequently separated by long periods of inactivity. Burst mode is a way of making these devices more efficient. The device asks to be serviced only when it has data to transfer and then does so in large quantities.

#### Arbitration process

Arbitration is a process through which devices compete for control of the Micro Channel on a prioritized basis. Arbitration is organized in levels of priority, and on each level there can be a number of competing devices.

#### Hardware Environment, Continued

#### **Arbitration levels**

Arbitration levels are predefined or programmable levels of priority assigned to devices that compete for possession of the channel.

Central Arbitration Control is a hardware function that allows intelligent peripherals to share and control access to the system.

Arbitration Levels are numbered from 00h to 0Fh, and include -1, and -2. In addition, there are Arbitration Levels -1 and -2, which exist only on the system board. Of the former set, Arbitration Level 00h has the highest priority; Level 0Eh has the lowest. All arbitration level priorities are assigned sequentially; 00h through 0Eh are the highest through lowest priorities. Level 0Fh is reserved for use by the microprocessor.

The ABIOS DMA Service reads the fixed disk arbitration level from the CBIOS extended data area at ABIOS initialization and uses this arbitration level throughout the ABIOS session.

#### Arbitration levels table

The following table summarizes the arbitration levels:

Arbitration Levels	Primary Assignment	
FEh	Memory Refresh	
FFh	NMI	
00h	DMA Channel 0*	
01h	DMA Channel 1	
02h	DMA Channel 2	
03h	DMA Channel 3	
04h	DMA Channel 4*	
05h	DMA Channel 5	
06h	DMA Channel 6	
07h	DMA Channel 7	
08h	Reserved	
09h	Reserved	
0Ah	Reserved	
0Bh	Reserved	
0Ch	Reserved	
0Dh	Reserved	
. 0Eh	Reserved	
0Fh	Reserved for System Microprocessor	
* These DMA Channels can be programmed to any arbitration level		

ABIOS functions allow these arbitration levels to be allocated, deallocated or disabled (except levels -1, -2, and 0Fh, which are permanently allocated).

#### Hardware Environment. Continued

#### DMA channel flags

Additional channel flags control whether

- a transfer is to be repeated forever.
- the memory address is to be decremented or incremented after each cycle,
- the DMA controller maintains I/O address (this is hardwired in most devices that use DMA), or
- a byte or a word is transferred at each cycle.

#### Physical and Virtual DMA channels

DMA channels can be either physical or virtual. A physical channel can only have one arbitration level, but a virtual channel can be programmed to own any arbitration level not currently assigned to a different channel. Thus, a virtual DMA channel can have many arbitration levels.

Functionally, there is no difference between physical and virtual channels. Priority is determined by the arbitration level only, where level 00h is the highest priority and level 0Eh the lowest.

#### Virtual DMA Channels and the Arbus register

The arbitration level assignment for channels 0 and 4 can be programmed using the two 4-bit Arbus registers. The Arbus registers permit dynamic reassignment of the arbitration ID value by which the DMA controller responds to DMA requests for bus arbitration. Channels 0 and 4 can then service devices at any arbitration level.

#### **DMA** channels

See Section 2 for a complete list of I/O port addresses for DMA channels. The DMA channel addresses are from 0000h-001Fh and from 0080h-00DFh.

#### DMA extended mode

An extended mode register is available for each programmable DMA channel and is used when a DMA channel requests a DMA data transfer. DMA channels must match the transfer size of the DMA slave, which is programmed by Bit 6 of the extended mode register. DMA read transfers of 16 bits from 8-bit memory or 8-bit memory-mapped I/O devices are not supported.

The following table describes the DMA extended mode register:

Bit Number	Description	
7	= 0 Reserved	
6	= 0 8-bit transfer = 1 16-bit transfer	
5	= 0 Reserved	
4	= 0 Reserved	
3	= 0 Read memory transfer = 1 Write memory transfer	
2	= 0 Verify = 1 Transfer data	
1	= 0 Reserved	
0	= 0 I/O address 00h = 1 User programs the I/O address	

## **Error Handling**

#### How errors are reported

ABIOS signals the status (Successful, Resume Stage after Interrupt, etc.) of each ABIOS request by returning a one word Return Code at offset 0Ch in the Request Block.

If Bit 15 of the Return Code field is set, the DMA Service function requested has an error. The caller's Return Code handler routine should then test Bits 14, 13, 12, and 8 to determine the class of error that has occurred and then test the remaining bits to determine the precise nature of the error.

## Function: 01h — Return Logical ID Parameters

## Description

This function is a single-staged request that returns information about the specified Logical ID.

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (20h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0001h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte		Hardware Interrupt Level (FFh)
11h	Byte		Arbitration Level (FFh)
12h	Word		Device ID (000Fh)
14h	Word		Count of Units (0001h)
16h	Word		Logical ID Flags  Bits 15-4 = Reserved  Bit 3 = 0 No overlap across units
18h	Word		Request Block Length (for other functions)
1Ah	Byte	Reserved (initialize to 0000h)	Secondary Device ID
1Bh	Byte		Revision Level
1Ch	Word	Reserved (initialize to 0000h)	
1Eh	Word	Reserved (initialize to 0000h)	

# Function: 01h — Return Logical ID Parameters, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Function: 02h — Reserved

# Function: 03h — Read Device Parameters

#### Description

This function is a single-staged request that returns the DMA Parameters for the specified Logical ID and Unit.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0003h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Word	]]	Maximum Address in Megabytes
12h	Byte		Maximum DMA Transfer Size in Kilobytes
14h	Byte	1	Number of Arbitration Levels
15h	Byte	1	Number of DMA Channels
16h	Word	Reserved (initialize to 0000h)	

#### **Return Codes**

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

Function: 0Bh — Allocate Arbitration Level

#### Description

This function is a single-staged request that allocates an arbitration level. The Allocate Arbitration Level function can be used to exclude other well-behaved tasks from using this Arbitration Level while a DMA transfer is performed. Valid arbitration levels are 00h through 0Eh. 0Fh is reserved.

#### Request Block Structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	]
06h	Word	Function (000Bh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	]
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
16h	Word	Reserved (initialize to 0000h)	
1Fh	Byte	Arbitration Level to Allocate	

# Function: 0Bh — Allocate Arbitration Level, continued

#### **Return Codes**

Code	Description
0000h	Successful Operation
8001h	Arbitration Level Not Available
8006h	No Channel Available
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 0Ch — Deallocate Arbitration Level

#### Description

This function is a single-staged request that frees an arbitration level and its associated DMA channel so another task can use it.

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Ch)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
16h	Word	Reserved (initialized to 0000h)	
1Fh	Byte	Arbitration Level to deallocate	

#### **Return Codes**

Code	Description
0000h	Successful Operation
8002h	Arbitration Level Not Allocated
8004h	Transfer in Process No Channel Available
8007h	Arbitration Level Not Disabled
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 0Dh — Disable Arbitration Level

#### Description

This function is a single-staged request that disables the specified arbitration level for the specified device. It may be called after a DMA transfer is complete.

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	][
04h	Word	Unit	]
06h	Word	Function (000Dh)	][
08h	Word	Reserved (initialize to 0000h)	]
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
16h	Word	Reserved (initialized to 0000h)	
1Fh	Byte	Arbitration Level to disable	

#### **Return Codes**

Code	Description
0000h	Successful Operation
8002h	Arbitration Level Not Allocated
8004h	Transfer in Process
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

### Function: 0Eh — DMA Transfer Status

#### Description

This function is a single-staged request that returns the number of bytes that remain to be transferred from the DMA controller.

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	][
04h	Word	Unit	]
06h	Word	Function (000Eh)	]]
08h	Word	Reserved (initialize to 0000h)	]]
. 0Ah	Word	Reserved (initialize to 0000h)	]
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
16h	Word	Reserved (initialized to 0000h)	
18h	DWord		Number of Bytes Still to be Transferred
1Fh	Byte	Arbitration Level to Check	

#### **Return Codes**

Code	Description
0000h	Successful Operation
8002h	Arbitration Level Not Allocated
8003h	Arbitration Level Disabled
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 0Fh — Abort DMA Operation

#### Description

This function is a single-staged request that disables a DMA operation on an arbitration level and returns the number of bytes to be transferred and the address of the bytes to be transferred.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Fh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	DWord		The Physical Address at the Time the Abort was Issued
16h	Word	Reserved (initialized to 0000h)	
18h	DWord		Data Count Not Transferred When Abort Was Issued
1Fh	Byte	Arbitration Level to Abort the Operation On	

#### **Return Codes**

Code	Description
0000h	Successful Operation
8002h	Arbitration Level not Allocated
8003h	Arbitration Level Disabled
8005h	No Transfer in Process
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid DMA Parameter
FFFFh	Return Code Field Not Valid

# Function: 10h — DMA Transfer from Memory to I/O

# Description

This function is a single-staged request that programs the DMA controller with the values specified in the Request Block and transfers the specified number of bytes from the specified memory location to the specified I/O port address (0018h or 001Ah).

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0010h)	
08h	Word	Reserved (initialize to 0000h)	]
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	DWord	Physical Address of Memory	
14h	DWord	Physical Address of I/O	
18h	DWord	Count of Data to Transfer (in bytes)	
1Ch	Byte	Mode Control, where:	]
		Bits 7-3 = Reserved Bit 2 = Programmable I/O Bit 1 = Reserved Bit 0 = Auto initialization	
1Dh	Byte	Transfer Control Byte 1, where:  Bits 7-3 = Reserved Bit 2 = Count control = 0 Increment = 1 Decrement Bit 1 = Reserved Bit 0 = Device size = 0 8-bit = 1 16-bit	
1Eh	Byte	Transfer Control Byte 2, where:  Bits 7-1 = Reserved Bit 1 = Device size = 0 8-bit = 1 16-bit	
1Fh	Byte	Arbitration Level to Use	

# Function: 10h — DMA Transfer from Memory to I/O, Continued

#### **Return Codes**

Code	Description
0000h	Successful Operation
8002h	Arbitration Level Not Allocated
8004h	Transfer in Process
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid DMA Parameter
FFFFh	Return Code Field Not Valid

# Function: 11h — Read from I/O and Write to Memory

# Description

This function is a single-staged request that reads the specified number of bytes from the specified I/O port address (0018h or 001Ah) and writes the bytes to the specified memory location.

#### **Request Block Structure**

Offset	Size	Input:	Output:	
00h	Word	Request Block Length		
02h	Word	Logical ID	]	
04h	Word	Unit		
06h	Word	Function (0011h)	]	
08h	Word	Reserved (initialize to 0000h)	]	
0Ah	Word	Reserved (initialize to 0000h)		
0Ch	Word	Return Code	Return Code	
0Eh	Word		Time-out	
10h	DWord	Physical Address of Memory		
14h	DWord	Physical Address of I/O		
18h	DWord	Count of Data to Transfer (in bytes)		
1Ch	Byte	Mode Control, where:	]	
		Bits 7-3 = Reserved Bit 2 = Programmable I/O Bit 1 = Reserved Bit 0 = Auto initialization		
1Dh	Byte	Transfer Control Byte 1, where:	1	
		Bits 7-3 = Reserved Bit 2 = Count control 0 increment 1 Decrement Bit 1 = Reserved Bit 0 = Device size 0 8-bit 1 16-bit		
1Eh	Byte	Transfer Control Byte 2, where:		
		Bits 7-1 = Reserved Bit 1 = Device size 0 8-bit 1 16-bit		
1Fh	Byte	Arbitration Level to Use		

# Function: 11h - Read from I/O and Write to Memory, Continued

#### **Return Codes**

Code	Description
0000h	Successful Operation
8002h	Arbitration Level Not Allocated
8004h	Transfer in Process
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 12h — Load DMA Controller Parameters

# Description

This function is a single-staged request that programs the DMA Controller with the specified input values.

# Request Block structure

Offset	Size	Input:	Output:		
00h	Word	Request Block Length			
02h	Word	Logical ID			
04h	Word	Unit	]		
06h	Word	Function (0012h)	]		
08h	Word	Reserved (initialize to 0000h)	]		
0Ah	Word	Reserved (initialize to 0000h)			
0Ch	Word	Return Code	Return Code		
0Eh	Word		Time-out		
10h	DWord	Physical Address of Memory	]		
14h	DWord	Physical Address of I/O			
18h	DWord	Count of Data to Transfer (in bytes)			
1Ch	Byte	Mode Control, where:	]		
		Bits 7-3 = Reserved Bit 2 = Programmable I/O Bit 1 = Reserved Bit 0 = Autoinitialization			
1Dh	Byte	Transfer Control Byte 1, where:  Bits 7-3 = Reserved Bit 2 = Count control			
1Eh	Byte	Transfer Control Byte 2, where:  Bits 7-1 = Reserved Bit 0 = Device size 0 8-bit 1 16-bit			
1Fh	Byte	Arbitration Level to Use			

# Function: 12h — Load DMA Controller Parameters, Continued

#### **Return Codes**

Code	Description
0000h	Successful Operation
8002h	Arbitration Level Not Allocated
8004h	Transfer in Process
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Chapter 21

# ABIOS Programmable Option Select Service

#### Overview

#### Description

The ABIOS Programmable Option Select (POS) Service provides functions that access and manipulate the eight POS registers on each adapter card and the system board and provide access to the CMOS RAM associated with the POS feature.

#### Identifying the correct CMOS RAM locations

The ABIOS Programmable Option Select Service determines if CMOS RAM and Extended CMOS RAM are available in the system. It examines the POS System ID byte, which identifies the machine type. This test is performed for every function call to this service.

#### **Programmable Option Select**

POS is designed to eliminate switches from the system board and adapter cards. In place of switches, POS provides eight programmable registers. These registers are set by information contained in Adapter Descriptor Files supplied by adapter card manufacturers.

#### **Adapter Description Files**

Adapter Description Files (ADFs) are provided by the adapter card manufacturer for each adapter card. A reference diskette reads a unique adapter ID number from each card, matches it with an ADF file, and configures the system according to the information provided by the ADF.

#### Summary of Programmable Option Select Service functions

Function	Description
00h	Default Interrupt Handler
01h	Return Logical ID Parameters
03h-0Ah	Reserved
0Bh	Read Stored POS Data from CMOS RAM
0Ch	Write Stored POS Data from CMOS RAM
0Dh	Read POS Data from an Adapter
0Eh	Write Dynamic POS Data from Adapter

#### In this chapter

This chapter includes information about the following topics:

- Hardware Environment
- Error Handling
- ABIOS POS Service functions

#### **Hardware Environment**

#### Introduction

The ABIOS POS Service assumes that the system is based on IBM's Micro Channel or its equivalent. POS is an integral part of the Micro Channel Architecture (MCA).

#### Adapter slots

ABIOS supports systems with up to eight adapter cards (or more with customization). ABIOS will work with any system regardless of the number of adapter slots available.

#### Adapter card identification

Each adapter card must have a unique 2-byte identifier.

#### Adapter description files

POS data is accumulated in adapter description files (ADFs) for each adapter. A reference diskette reads .ADF files, which are created by adapter manufacturers, and stores configuration information in CMOS RAM. The BIOS POST routine reads the CMOS RAM and writes the configuration information to the POS registers of the adapters and the system board.

# Programmable option select I/O Ports

The following table lists the POS I/O port addresses:

I/O Port	Read/Write Status	Description
0094h	R/W	System Board Setup Enable Register, where:  Bit 7 = 0 Setup system board functions 1 Enable system board function  Bit 6 = Reserved  Bit 5 = 0 Setup VGA 1 Enable VGA Bits 4-0 = Reserved
0095h	N/A	Reserved
0096h	R/W	Channel Position Select Register, where:  00h = No channel selected 08h = Channel 1 selected 09h = Channel 2 selected 0Ah = Channel 3 selected 0Bh = Channel 4 selected 0Ch = Channel 5 selected 0Ch = Channel 6 selected 0Ch = Channel 7 selected 0Eh = Channel 7 selected 0Fh = Channel 8 selected 0Fh = Channel 8 selected 80h = Channel reset Note: Bits 4,5, and 6 are set to 1 when read
0097h	N/A	Reserved
0100h	R/O	POS Register 0 — Adapter Identification Byte (Least Significant Byte)
0101h	R/O	POS Register 1 — Adapter Identification Byte (Most Significant Byte)
0102h	R/W	POS Register 2 — Option Select Data Byte 1 Bits 7-1 = Reserved Bit 0 = 1 Card enable
0103h	R/W	POS Register 3 — Option Select Data Byte 3
0104h	R/W	POS Register 4 — Option Select Data Byte 4
0105h	R/W	POS Register 5 — Option Select Data Byte 4, where:  Bit 7 = 1 Channel Check active Bit 6 = 0 Channel Check exception status available in POS registers 6 and 7 = 1 No status available Bits 5-0 = Reserved
0106h	R/O	POS Register 6 — Subaddress extension (LSB)
0107h	R/O	POS Register 7 — Subaddress Extension (MSB)

# **Error Handling**

#### How errors are reported

ABIOS signals the status (Successful, Resume Stage after Interrupt, etc.) of each ABIOS request by returning a one word Return Code at offset 0Ch in the Request Block.

If Bit 15 of the Return Code field is set, the Programmable Option Select Service function requested has an error. The caller's Return Code handler routine should test Bits 14, 13, 12, for the class of error that has occurred and then test the remaining bits to determine the nature of the error.

# Function: 01h — Return Logical ID Parameters

# Description

This function is a single-staged request that returns information about the specified Logical ID.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (20h)	
02h	Word	Logical ID	4
04h	Word	Unit	_
06h	Word	Function (0001h)	
08h	Word	Reserved (initialize to 0000h)	_
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte		Hardware Interrupt Level (FFh)
11h	Bvte		Arbitration Level (FFh)
12h	Word		Device ID (0010h)
14h	Word		Count of Units (01)
16h	Word		Logical ID Flags
			Bits 15-4 = Reserved Bit 3 = 0 No overlap across units Bit 2 = 0 Reserved Bits 1-0 = Transfer Data Pointer Mode 00 = No Pointers Required
18h	Word		Request Block Length (for other functions)
1Ah	Byte	Reserved (initialize to 0000h)	Secondary Device ID
1Bh	Byte		Revision Level
1Ch	Word	Reserved (initialize to 0000h)	
1Eh	Word	Reserved (initialize to 0000h)	

# Function: 01h — Return Logical ID Parameters, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description	
0000h	Successful Operation	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
FFFFh	Return Code Field Not Valid	

Functions: 02h - 0Ah - Reserved

Function: 0Bh — Read Stored POS Data from CMOS RAM

#### **Description**

This function is a single-staged request that places the two POS Adapter Identification bytes from CMOS RAM into the Request Block at offset 12h. It also moves the contents of the POS Option Select Data Bytes 1-4 from CMOS RAM to the address specified by the data buffer pointer at offset 16h in the Request Block.

# **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Bh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Byte	Slot Number, where:  Bits 7-4 = Reserved Bits 3-0 = Slot Number, where:  0000b = System board 0001b = Slot 1  0010b = Slot 2  0011b = Slot 3  0100b = Slot 4  0101b = Slot 5  0110b = Slot 6  0111b = Slot 7  1000b = Slot 8	
11h	Byte	Reserved (initialize to 0000h)	
12h	Word		Adapter ID data
14h	Word	Reserved (initialize to 0000h)	
16h	DWord	Pointer to Data Buffer	Option Select Data Bytes 1-4
1Ch	Word	Reserved (initialize to 0000h)	

#### **Return Codes**

Code	Description
0000h	Successful Operation
80FEh	CMOS RAM Checksum Invalid
80FFh	CMOS RAM Has Bad Battery
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

#### Function: 0Ch — Write Stored POS Data from CMOS RAM

#### Description

This function is a single-staged request that copies the Adapter ID data from offset 12h in the Request Block to CMOS RAM. It also copies the first four bytes of the contents of the data buffer at the address specified in offset 16h of the Request Block to POS Registers 2–5 (Option Select Data Bytes 1–4) in CMOS RAM.

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Ch)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Byte	Slot Number, where:  Bits 7-4 = Reserved  Bits 3-0 = Slot Number, where:  0000b = System board  0010b = Slot 1  0010b = Slot 2  0011b = Slot 3  0100b = Slot 4  0101b = Slot 5  0110b = Slot 5  01110b = Slot 6  0111b = Slot 7  1000b = Slot 8	
11h	Byte	Reserved (initialize to 0000h)	
12h	Word	Adapter ID	Adapter ID data from CMOS
14h	Word	Reserved (initialize to 0000h)	
16h	DWord	Pointer to Data Buffer	Option Select Data Bytes 1-4
1Ch	Word	Reserved (initialize to 0000h)	

Function: 0Ch — Write Stored POS Data from CMOS RAM, Continued

#### Return Codes

Code	Description
0000h	Successful Operation
80FEh	CMOS RAM Checksum Invalid
80FFh	CMOS RAM Has Bad Battery
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 0Dh — Read POS Data from an Adapter

#### Description

This function is a single-staged request that reads the POS Adapter Identification bytes directly from I/O ports 0100h and 0101h and enters this data in the Request Block at offset 12h. It also copies the POS Registers 2-5 (Option Select Data Bytes 1-4) from I/O ports 0102h-0105h to the data buffer pointed to by the address in offset 16h of the Request Block.

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Ch)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Byte	Slot Number, where:  Bits 7-4 = Reserved Bits 3-0 = Slot Number, where:  0000b = System board 0001b = Slot 1  0010b = Slot 2  0011b = Slot 3  0100b = Slot 4  0101b = Slot 5  0110b = Slot 5  0110b = Slot 6  0111b = Slot 7  1000b = Slot 8	
11h	Byte	Reserved (Initialize to 0000h)	
12h	Word		Adapter Card ID
14h	Word	Reserved (initialize to 0000h)	
16h	DWord	Pointer to Data Buffer	Option Select Data Bytes 1-4
1Ch	Word	Reserved (initialize to 0000h)	

# Function: 0Dh - Read POS Data from an Adapter, Continued

#### **Return Codes**

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Function: 0Eh — Write Dynamic POS Data from an Adapter

### Description

This function is a single-staged request that writes the first four bytes of data found at the address specified in the Request Block at offset 16h to I/O ports 0102h-0105h (POS Registers 2-5 containing Option Select Data Bytes 1-4).

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Eh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Byte	Slot Number, where:   Bits 7-4 = Reserved	
11h	Byte	Reserved (initialize to 0000h)	
14h	Word	Reserved (initialize to 0000h)	
16h	DWord	Pointer to Data Buffer	
1Ch	Word	Reserved (initialize to 0000h)	

# Function: 0Eh — Write Dynamic POS Data from an Adapter, Continued

#### Return Code

Code	Description
0000h	Successful Operation
C000h	Invalid Logical ID
C001h	Invalid Function
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
FFFFh	Return Code Field Not Valid

# Chapter 22 ABIOS Keyboard Security Service

#### Overview

#### Introduction

The ABIOS Keyboard Security Service consists of a set of functions that allow the caller to implement the security features of PS/2-compatible systems. Security features include password-controlled access to the system.

#### Types of password

Micro Channel-based PS/2-compatible systems may support two types of passwords: a power-on password, and a keyboard security password. Password security is controlled through a reference diskette utility.

#### Power-on password

The power-on password limits access to a PS/2-compatible system by testing for a password when the system is first turned on. Passwords are controlled by the end user through the reference diskette. The power-on password is stored in nonvolatile CMOS RAM.

#### Keyboard security password

The keyboard security password limits access to a PS/2-compatible system by testing for a password when the first attempt to use the keyboard is made. Passwords are controlled by the end user through a reference diskette. The keyboard security password is stored in 8042 RAM.

#### Password storage

The Keyboard Security password is stored in 8042 RAM and is thus volatile. Initially, the BIOS uses the power-on password as the keyboard security password. The power-on password is stored in nonvolatile CMOS RAM (at 38h) and is transferred to the 8042 during the BIOS POST initialization.

#### How passwords are set

The Reference Diskette controls the passwords for both the power-on password and the keyboard security password. See the manual which accompanies your reference diskette for more information about system password protection.

#### Summary of ABIOS Keyboard Security Service functions

Function	Description
01h	Return Logical ID Parameters
02h	Reserved
03h	Read Device Parameters
04h-05h	Reserved
06h	Enable Keyboard Security
07h-0Ah	Reserved
0Bh	Write Password
0Ch	Write Invocation Byte
0Dh	Write Match Byte
0Eh	Write Filter Byte 1
0Fh	Write Filter Byte 2

# Overview, Continued

#### In this chapter

This chapter includes information about the following topics:

- Hardware Environment
- System Scan Codes
- Error Handling
- ABIOS Keyboard Security Service functions

#### Hardware Environment

#### Introduction

The ABIOS Keyboard Security Service interfaces with the features of an appropriately programmed Intel 8042 (or equivalent) intelligent keyboard controller.

#### Storage of Keyboard Security data in 8042

The following table shows where the Keyboard Security function bytes are stored in the 8042 and the values to which they are initialized.

8042 RAM Location	Keyboard Security Function	Initialized Value
33h	Invocation Byte	0
34h	Match Byte	0
36h	Filter Byte 1	Left Shift Key
37h	Filter Byte 2	Right Shift Key

# **System Scan Codes**

The following system scan codes, including multiple byte codes, can be used for the Write Password, Write Invocation and Write Match Byte functions.

# Typewriter/Function Keys

Key#	U.S. Keyboard Legend	System Scan Codes (hex)
1	1~	0E
2	1!	16
3	2@	1E
4	3#	26
5	4\$	25
6	5%	2E
7	6	36
8	7&	3D
9	8*	3E
10	9(	46
11	0)	45
12		4E
13	=+	55
15	Backspace	66
16	Tab	0D
17	Q	15
18	W	1D
19	E	24
20	R	2D
21	Т	2C
22	Υ	35
23	U	3C
24	ı	43
25	0	44

Key#	U.S. Keyboard Legend	System Scan Codes (hex)
26	P	4D
27	}]	54
28	1 }	5B
29	101-key only	5D
30	Caps Lock	58
31	Α	1C
32	S	- 1B
33	D	23
34	F	2B
35	G	34
36	Н	33
37	J	3B
38	К	42
39	L	4B
40	; :	4C
41	, ,	52
42	102-key only	5D
43	Enter	5A
44	L Shift	12
45	102-key only	61
46	Z	1A
47	x	22
48	С	21
49	V	2A

Typewriter/Function Keys, cont'd

	• •	
Key#	U.S. Keyboard Legend	System Scan Codes (hex)
50	В	32
51	N	31
52	М	3A
53	, <	41
54	. >	49
55	1?	4A
57	R Shift	59
58	L Ctrl	14
60	L Alt	11
61	Space	29
62	R Alt	E0-11
64	R Ctrl	E0-14
90	Num Lock	77
91	7 Home	6C
92	4 Left	6B
93	1 End	69
96	8 Up	75
97	5	73
98	2 Down	72
99	0 Ins	70
100	*	7C

Key#	U.S. Keyboard Legend	System Scan Codes (hex)	
101	9 PgUp	7D	
102	6 Right	74	
103	3 Page Down	7A	
104	. Del	71	
105	-	7B	
106	+	79	
108	Enter	EO-5A	
110	Esc	76	
112	F1	05	
113	F2	06	
114	F3	04	
115	F4	0C	
116	F5	03	
117	F6	0B	
118	F7	83	
119	F8	0A	
120	F9	01	
121	F10	09	
122	F11	78	
123	F12	07	
125	Scroll Lock	7E	

# Other keys

The rest of the keys send a series of codes that depend on the state of the shift keys (Ctrl, Alt, and Shift) and the Num Lock key (On or Off). Since the base scan code is the same as that for another key, an additional code (hex E0) is added to the base code so that it is unique. The following four tables summarize the scan codes for these other keys.

#### **Cursor/Control Keys**

Key#	U.S. Keyboard Legend	Base Case or Shift + Num Lock	Shift Case*	Num Lock on
75	Insert	E0-70	E0 F0 12 E0 70	E0 12 E0 70
76	Delete	E0-71	E0 F0 12 E0 71	E0 12 E0 71
79	Left	E0-6B	E0 F0 12 E0 6B	E0 12 E0 6B
80	Home	E0-6C	E0 F0 12 E0 6C	E0 12 E0 6C
81	End	E0-69	E0 F0 12 E0 69	E0 12 E0 69
83	Up	E0-75	E0 F0 12 E0 75	E0 12 E0 75
84	Down	E0-72	E0 F0 12 E0 72	E0 12 E0 72
85	Page Up	E0-7D	E0 F0 12 E0 7D	E0 12 E0 7D
86	Page Down	E0-7A	E0 F0 12 E0 7A	E0 12 E0 7A
89	Right	E0-74	E0 F0 12 E0 74	E0 12 E0 74

<sup>\*</sup> With the Left Shift key down, the F0 12 shift code is added to the other scan codes sent. With the Right Shift key down, F0 59 is added. When both keys are down, both sets of codes are sent with the rest of the scan code.

# "/" Key on Numeric Keypad

Key#	U.S. Keyboard Legend	System Scan Codes (hex)	Shift Case*
95	/	E0 4A	E0 F0 12 E0 4A

<sup>\*</sup> With the Left Shift key down, the F0 12 shift code is added to the other scan codes sent. With the Right Shift key down, F0 59 is added. When both keys are down, both sets of codes are sent with the rest of the scan code.

# System Scan Codes, Continued

#### Print Screen/Sys Req Key

Key#	U.S. Keyboard Legend	System Scan Codes (hex)	Ctrl Case Shift Case	Alt Case
124	Print Screen	E0 12 E0 7C	E0 7C	84

#### Pause/Break Key

Key#	U.S. Keyboard Legend	System Scan Codes (hex)	Ctrl Key Pressed
126	Pause	E1 14 77 E1 F0 14 F0 77	E0 7E E0 F0 7E

# **Error Handling**

#### How errors are reported

ABIOS signals the status (Successful, Resume Stage after Interrupt, etc.) of each ABIOS request by returning a one word Return Code at offset 0Ch in the Request Block.

If Bit 15 of the Return Code field is set, the Keyboard Security Service function requested has an error. The caller's Return Code handler routine should test Bits 14, 13, 12, and 8 for the class of error that has occurred and then test the remaining bits to determine the precise nature of the error.

# Function: 01h — Return Logical ID Parameters

## Description

This function is a single-staged request that returns the parameters for the Logical ID associated with the keyboard hardware.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (20h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0001h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word	Reserved (initialize to 0000h)	
10h	Byte		Hardware Interrupt Level (FFh)
11h	Byte		Arbitration Level (FFh)
12h	Word		Device ID (0016h)
14h	Word		Count of Units
16h	Word		Logical ID flags
			Bits 15-4 = Reserved Bit 3 = 0 No overlap across units = 1 Overlap across units supported Bit 2 = 0 Reserved Bits 1-0 = Transfer Data Pointer Mode 00 No Pointers Required
18h	Word		Request Block Length (for other functions)
1Ah	Byte		Secondary Device ID
1Bh	Byte		Revision Level
1Ch	Word	Reserved (initialize to 0000h)	
1Eh	Word	Reserved (initialize to 0000h)	

## Function: 01h — Return Logical ID Parameters, Continued

#### Return Code

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description	
0000h	Successful Operation	
0005h	Not My Interrupt, Resume Stage after Interrupt	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
FFFFh	Return Code Field Not Valid	

Function: 02h — Reserved

## Function: 03h — Read Device Parameters

## **Description**

This single-staged function returns the maximum password length (1-7 bytes).

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (0003h)	]
08h	Word	Reserved (initialize to 0000h)	]
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte		Maximum Password Length
11h	Byte	Reserved (initialize to 0000h)	

#### **Return Codes**

Code	Description	
0000h	Successful Operation	
0005h	Not My Interrupt, Resume Stage after Interrupt	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
FFFFh	Return Code Field Not Valid	

Functions: 04h - 05h - Reserved

## Function: 06h — Enable Keyboard Security

### Description

This single-staged function enables keyboard security. It is called after the Write Password, Write Invocation Byte, Write Match Byte, and Write Filter Byte functions have initialized the password entry procedure.

#### Request Block structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0006h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
11h	1 Byte	Reserved (initialize to 0000h)	

# Function: 06h — Enable Keyboard Security, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description
0000h	Successful Operation
8000h	Device Busy
8003h	Device Inhibited
C000h	Invalid Logical ID
C001h	Invalid Function Number
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Keyboard Security Parameter
FFFFh	Return Code Field Not Valid

Functions: 07h - 0Ah - Reserved

#### Function: 0Bh — Write Password

#### Description

This single-staged function sets the password or changes an existing password. Write Password writes a string of system scan codes from 1-7 bytes long to 8042 RAM (see the System Scan Code tables in this chapter).

#### A password example

The password, ABC, is stored in the 8042 as follows:

1Eh 30h 2Eh 1Ch 00h

#### where

- 1Eh is the system scan code for A
- 30h is the system scan code for B
- 2Eh is the system scan code for C
- 1Ch is the system scan code for the Return key
- The 00h is set by the ABIOS

The routine using this function matches each character as it is received from the keyboard. When the return key scan code is received, it is matched, which signals the end of the password.

#### Password storage

The Keyboard Security password is stored in 8042 RAM and is thus volatile. Initially, the BIOS uses the power-on password as the keyboard security password The power-on password is stored in nonvolatile CMOS RAM (at 38h) and is transferred to the 8042 during the BIOS POST initialization.

## **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0008h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Byte	Password Length in bytes	
11h	Byte	Reserved (initialize to 0000h)	7
12h	Byte	First Scan Code	
13h	Byte	Second Scan Code	
14h	Byte	Third Scan Code	
15h	Byte	Fourth Scan Code	
16h	Byte	Fifth Scan Code	
17h	Byte	Sixth Scan Code	
18h	Byte	Seventh Scan Code	

#### **Return Codes**

Code	Description
0000h	Successful Operation
8000h	Device Busy
8003h	Device Inhibited
C000h	Invalid Logical ID
C001h	Invalid Function Number
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Keyboard Security Parameter This value is set and no action is taken if the Password Length field is 0 or greater than 7 bytes
FFFFh	Return Code Field Not Valid

## Function: 0Ch - Write Invocation Byte

#### Description

This single-staged function sets or changes the Invocation Byte. The Invocation Byte may contain any system scan code. The byte is stored at location 33h in 8042 RAM. The default value for this scan code is zero.

#### Invocation Byte usage

This byte acts as a signal from the 8042 to the caller indicating that a valid password has been loaded and that password security has been enabled. The Invocation Byte is returned to the caller to invoke security. If the Invocation Byte is zero, keyboard security is not enabled.

#### Request Block Structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (000Ch)	]]
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte	Invocation Byte Scan Code	
11h	Byte	Reserved (initialize to 0000h)	

#### **Return Codes**

Code	Description
0000h	Successful Operation
8000h	Device Busy
8003h	Device Inhibited
C000h	Invalid Logical ID
C001h	Invalid Function Number
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Keyboard Security Parameter
FFFFh	Return Code Field Not Valid

## Function: 0Dh — Write Match Byte

#### Description

This function sets or changes the Match Byte. The byte is stored in location 34h of 8042 RAM. The default value is zero.

#### Match Byte usage

This byte is used as a signal from the 8042 to the caller that keyboard security has been disabled now that the keyboard input matches the system scan code(s) in the password field. The 8042 sends this byte to the caller using a keyboard interrupt. If the Match Byte is zero, it will not be used to signal the keyboard security disabled status to the caller.

#### Request Block Structure

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Dh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Byte	Scan Code	
11h	Byte	Reserved (initialize to 0000h)	

Function: 0Dh — Write Match Byte, Continued

#### **Return Codes**

Code	Description
0000h	Successful Operation
8000h	Device Busy
8003h	Device Inhibited
C000h	Invalid Logical ID
C001h	Invalid Function Number
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid Keyboard Security Parameter
FFFFh	Return Code Field Not Valid

## Function: 0Eh — Write Filter Byte 1

#### Description

This function sets or changes Filter Byte 1. This byte contains a system scan code that is ignored if it is encountered during password validation. Filter Byte 1 is initialized to left shift key.

## Usage of Filter Bytes

If unaltered, Filter Bytes 1 and 2 together ensure that keyboard security input is not case-sensitive.

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	]
04h	Word	Unit	
06h	Word	Function (000Eh)	1
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	]
0Ch	Word	Return Code	Return Code
0Eh	Word		Time-out
10h	Byte	Filter Byte 1	
11h	Byte	Reserved (initialize to 0000h)	1

#### **Return Codes**

Code	Description	
0000h	Successful Operation	
8000h	Device Busy	
8003h	Device Inhibited	
C000h	Invalid Logical ID	
C001h	Invalid Function Number	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
C005h	Invalid Keyboard Security Parameter	
FFFFh	Return Code Field Not Valid	

## Function: 0Fh — Write Filter Byte 2

#### Description

This function sets or changes Filter Byte 2. This byte contains a system scan code that is ignored if it is encountered during password validation. Filter Byte 2 is initialized to right shift key.

## Usage of Filter Bytes

If unaltered, Filter Bytes 1 and 2 together ensure that keyboard security input is not case-sensitive.

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (000Fh)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte	Filter Byte 2	
11h	Byte	Reserved (initialize to 0000h)	

#### **Return Codes**

Code	Description	
0000h	Successful Operation	
8000h	Device Busy	
8003h	Device Inhibited	
C000h	Invalid Logical ID	
C001h	Invalid Function Number	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
C005h	Invalid Keyboard Security Parameter	
FFFFh	Return Code Field Not Valid	

# Chapter 23 ABIOS Error Log Service

#### Overview

#### Introduction

The ABIOS Error Log Service is used by the operating system to read and write error messages to the system error log area in extended CMOS RAM.

This service can only be used by systems that have extended CMOS RAM.

#### **ABIOS** start routines

Requests for the ABIOS Error Log Service should use only the ABIOS start routine. There is no need to use the interrupt or time-out routines.

## Summary of Error Log Service functions

Function	Description
01h	Return Logical ID Parameters
02h-07h	Reserved
08h	Read Error Log
09h	Write to Error Log
0Ah	Reserved

## In this chapter

In this chapter, the following topics are discussed:

- Hardware environment
- Error handling
- ABIOS Error Log Service functions

#### **Extended CMOS RAM**

#### Introduction

The ABIOS Error Log Service assumes that at least 2K of Extended CMOS RAM is available in the system.

#### **CMOS RAM Error Log Area**

Up to six 20-byte error log blocks can be stored in Extended CMOS RAM

**Note:** If all error log block positions contain error information, as a new error log block is read in, the oldest error log block is overwritten.

#### Extended CMOS RAM Error Block data area

Location	Description	
389h	ERRNUM — Number of Error Log entries — can be 0-6	
38Ah	Error Log Block 0	
39Eh	Error Log Block 1	
3B2h	Error Log Block 2	
3C6h	Error Log Block 3	
3DAh	Error Log Block 4	
3EEh	Error Log Block 5	

#### **Using ERRNUM**

ERRNUM is a pointer to the next available error log block. It is maintained by the operating system.

#### Pending error log blocks

The operating system must keep track of the total number of active error log blocks pending.

If more than six error log blocks are written to extended CMOS RAM, synchronization errors may occur unless the error log blocks are tracked by the operating system.

## **Error Log Block format**

Offset	Length	Description
00h	1 Byte	Error ID Byte
01h	1 Byte	Interrupt Level
02h	1 Byte	Arbitration Level
03h	1 Byte	Device ID
04h	10 Bytes	Device-Specific Parameters
0Eh	1 Byte	Current Seconds (BCD)
0Fh	1 Byte	Current Minutes (BCD)
10h	1 Byte	Current Hours (BCD)
11h	1 Byte	Current Day (BCD)
12h	1 Byte	Current Month (BCD)
13h	1 Byte	Current Year (BCD)

## I/O ports

The ABIOS Error Log Service accesses the following I/O port addresses to access CMOS RAM locations.

I/O Address	Read/Write Status	Description
0074h	W	Extended CMOS RAM address register port, least significant byte
0075h	W	Extended CMOS RAM address register port, most significant byte
0076h	R/W	Extended CMOS RAM data register port

## **Error Handling**

#### How errors are reported

ABIOS signals the status (Successful, Resume Stage after Interrupt, etc.) of each ABIOS request by returning a one word Return Code at offset 0Ch in the Request Block.

If Bit 15 of the Return Code field is set, the Error Log Service function requested has an error. The caller's Return Code handler routine should test Bits 14, 13, 12, and 8 to determine the class of error that has occurred and then test the remaining bits to determine the precise nature of the error.

# Function: 01h — Return Logical ID Parameters

## Description

This function is a single-staged request that returns information about the specified Logical ID.

## **Request Block structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length (20h)	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0001h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte		Hardware Interrupt Level (FFh)
11h	Byte		Arbitration Level (FFh)
12h	Word		Device ID (00011h)
14h	Word		Count of Units (0001h)
16h	Word		Logical ID Flags (0000h)
			Bits 15-4 = Reserved Bit 3 = 0 No overlap across units Bit 2 = 0 Reserved Bits 1-0 = Transfer Data Pointer Mode 00 = No Pointers Required
18h	Word		Request Block Length (for other functions)
1Ah	Byte	Reserved (initialize to 0000h)	Secondary Device ID
1Bh	Byte		Revision Level
1Ch	Word	Reserved (initialize to 0000h)	
1Eh	Word	Reserved (initialize to 0000h)	1

# Function: 01h — Return Logical ID Parameters, Continued

#### **Return Codes**

This list contains only the most common Return Codes for this function. Test all valid bits in the Return Code field to ensure proper performance.

Code	Description	
0000h	Successful Operation	
C000h	Invalid Logical ID	
C001h	Invalid Function	
C003h	Invalid Unit Number	
C004h	Invalid Request Block Length	
FFFFh	Return Code Field Not Valid	

Functions: 02h - 07h - Reserved

Function: 08h — Read Error Log

#### Description

This function, a single-staged request, returns the most current error log block from extended CMOS RAM. After the error log entry is read, the memory location it was stored in is cleared to zero. Up to six active error log entries can exist at one time.

#### Device-specific parameters

The operating system must determine the contents and format of the 10 bytes of device-specific parameters that are input at offset 14h of the Request Block in Function 09h, Write Error Log. Each device type should have a different set of device-specific parameters.

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0008h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return Code	Return Code
0Eh	Word		
10h	Byte		Error ID
11h	Byte		Interrupt Level
12h	Byte		Arbitration Level
13h	Byte		Device ID
14h	10 Bytes		Device-Specific Parameters
1Eh	Byte		Current Seconds (in BCD)
1Fh	Byte		Current Minutes (in BCD)
20h	Byte		Current Hours (in BCD)
21h	Byte		Current Day (in BCD)
22h	Byte		Current Month (in BCD)
23h	Byte		Current Year (in BCD)

## Function: 08h — Read Error Log, Continued

#### **Return Codes**

Code	Description
0000h	Successful Operation
80FEh	CMOS RAM Checksum Invalid
80FFh	CMOS RAM Battery Bad
C000h	Invalid Logical ID
C001h	Invalid Function Number
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	Invalid CMOS RAM Parameter  This field is set and no action is taken if the bytes in the Number of Bytes to Transfer field plus the byte count for the Starting RAM Address field in the Request Block is greater than the maximum amount of RAM.
FFFFh	Return Code Field Not Valid

## Function: 09h — Write to Error Log

#### Description

This function, a single-staged request, writes a 20-byte error log block to the next available error log entry in the external CMOS RAM error log block data area.

#### Device-specific parameters

The operating system must determine the format and contents of the ten bytes of device-specific parameters that are input at offset 14h of the Request Block. Each device type should have a different set of device-specific parameters.

#### **Request Block Structure**

Offset	Size	Input:	Output:
00h	Word	Request Block Length	
02h	Word	Logical ID	
04h	Word	Unit	
06h	Word	Function (0009h)	
08h	Word	Reserved (initialize to 0000h)	
0Ah	Word	Reserved (initialize to 0000h)	
0Ch	Word	Return code	Return code
0Eh	Word		
10h	Byte	Error ID Byte (must be 00h-0Dh)	
11h	Byte	Interrupt Level	
12h	Byte	Arbitration Level	
13h	Byte	Device ID	
14h	10 Bytes	Device-specific Parameters	
1Eh	Byte	Reserved	Current Seconds (in BCD)
1Fh	Byte	Reserved	Current Minutes (in BCD)
20h	Byte	Reserved	Current Hours (in BCD)
21h	Byte	Reserved	Current Day (in BCD)
22h	Byte	Reserved	Current Month (in BCD)
23h	Byte	Reserved	Current Year (in BCD)

Function: 09h — Write to Error Log, Continued

#### **Return Codes**

Code	Description
0000h	Successful Operation
80FEh	CMOS RAM Checksum Invalid
80FFh	CMOS RAM Battery Bad
C000h	Invalid Logical ID
C001h	Invalid Function Number
C003h	Invalid Unit Number
C004h	Invalid Request Block Length
C005h	invalid CMOS RAM Parameter  This field is set and no action is taken if the bytes in the Number of Bytes to Transfer field plus the byte count for the Starting RAM Address field in the Request Block is greater than the maximum amount of RAM.
FFFFh	Return Code Field Not Valid

A

# Appendix A ABIOS Return Codes

#### Overview

#### Description

The following tables list common ABIOS Return Codes, the description of the Return Code, the ABIOS Service that generated the code, and a summary of the Return Code field bit setting meaning. See Chapter 6 for more detailed information about Return Codes.

#### Return Code bit settings

Any program or routine that uses the ABIOS should check the bit settings for bits 15, 14, 13,12, 7, 6, 5, 4, 3, 2, 1, and 0 in every Return Code. ABIOS is open and can be modified in many ways. Any code that is an extension of the ABIOS is able to set a combination of Return Code bit settings that would have a new and different meaning than those listed in the following tables.

It is also possible for bits 7-0 to take on different meanings depending on the settings of Bits 15, 13, 12, and 8. These meanings will be device—specific error indications that are listed in the service chapters (Chapters 8-23).

## Return Codes that Indicate Action is Required

The following Return Codes indicate that a new stage in a multistaged request has occurred. The caller must handle the conditions indicated by these messages in order to continue processing. It is possible for other combinations of Bits 0, 1, 2, and 7 to occur. The caller's Return Code handling routine should test each meaningful bit of the Return Code field each time a Return Code is processed.

Return Code	Description	Action Required	
0001h	Incomplete — resume stage after interrupt		
0002h	Resume stage after time delay	A stage in a multistaged request has been reached; after the appropriate time delay, the caller should resubmit this Request Block.	
0005h	Incomplete — not my interrupt, resume stage after interrupt	A stage in a multistaged request has been completed; the operation is not complete, the interrupt that just occurred is not for this device, at the next interrupt on this device, the caller should resubmit this Request Block.	
0009h	Attention, resume stage after interrupt	A stage in a multistaged request has been completed; the device needs attention, at the next interrupt on this device, the caller should resubmit this Request Block.	
0081h	Unexpected interrupt reset	The interrupt for this device has been reset, restart the Request Block.	

## **Return Codes that Indicate Termination**

#### Non-error Return Codes

There are two conditions that may occur in a Return Code field that do not indicate an error:

- 0000h Successful Operation. The request has been completed.
- FFFFh Return Code Field Not Valid. The request has not been processed by ABIOS yet.

#### Return Code table

The following Return Codes indicate that the request has been terminated, either successfully or unsuccessfully. All Return Codes listed below (except 0000h and FFFFh) indicate an error. If Bit 15 is on, the Return Code is always an error.

Return Code	Description	Originating ABIOS Service	Meaning
0000h	Successful Operation	Any	Successful operation
8000h	Device Busy, Request Refused	Any	Unsuccessful operation, see additional return codes.
8001h	Resend	Mouse	Unsuccessful operation
8001h	Device Busy	Parallel	Unsuccessful operation
8001h	Arbitration Level Not Available	DMA	Unsuccessful operation
8001h	Real Time Clock Not Started	RTC	Unsuccessful operation
8002h	Interrupt Already Enabled	RTC	Unsuccessful operation
8002h	Arbitration Level Not Allocated	DMA	Unsuccessful operation
8002h	Two Consecutive Resends Found	Mouse	Unsuccessful operation
8003h	System Lock	Mouse	Unsuccessful operation
8003h	Arbitration Level Disabled	DMA	Unsuccessful operation
8003h	Write-Protected Diskette	Diskette	Unsuccessful operation
8003h	Security Enabled, Key- Board Inhibited — Request Refused	Keyboard	Unsuccessful operation
8003h	Keyboard Locked, Request Refused	Keyboard Security	Unsuccessful operation

continued

ABIOS Return Codes 619

## Return Code table, cont'd

Return Code	Description	Originating ABIOS Service	Meaning
8004h	Keyboard Locked, Request Refused	Keyboard	Unsuccessful operation
8004h	Transfer In Process	DMA	Unsuccessful operation
8005h	No Transfer In Process	DMA	Unsuccessful operation
8006h	Media Changed	Diskette	Unsuccessful operation
8006h	No Channel Available	DMA	Unsuccessful operation
8007h	Arbitration Level Not Disabled	DMA	Unsuccessful operation
800Dh	Media Not Present	Diskette	Unsuccessful operation
800Eh	Change Signal Not Available	Diskette	Unsuccessful operation
800Fh	Invalid CMOS Value	CMOS RAM	Unsuccessful operation
800Fh	DMA Arbitration Level Out Of Range	Fixed Disk	Unsuccessful operation
80FEh	Invalid CMOS Checksum	CMOS RAM	Unsuccessful operation, device error
80FFh	Bad CMOS Battery	CMOS RAM	Unsuccessful operation, device error
9000h	Bad Com Port	Serial	Unsuccessful operation device error
9000h	Keyboard Controller Always Busy	Keyboard	Unsuccessful operation device error
9000h	Printer Error	Serial	Unsuccessful operation device error
9000h	Printer Error	Parallel	Unsuccessful operation device error
9001h	Bad Command	Parallel	Unsuccessful operation device error
9001h	Keyboard Falled Reset	Keyboard	Unsuccessful operation device error
9002h	Address Mark Not Found	Parallel	Unsuccessful operation device error
9002h	Resend Error	Parallel	Unsuccessful operation device error
9003h	Keyboard Parity Error	Keyboard	Unsuccessful operation device error

## Return Code table, cont'd

Return Code	Description	Originating ABIOS Service	Meaning
9004h	Record Not Found	Keyboard	Unsuccessful operation device error
9004h	General Hardware Time-out	Keyboard	Unsuccessful operation device error
9005h	Reset Failed	Fixed Disk	Unsuccessful operation device error
9006h	Undefined Mode From Keyboard	Keyboard	Unsuccessful operation device error
9007h	Controller Parameter Activity Failed	Fixed Disk	Unsuccessful operation device error
9009h	Controller Failure During Reset	Keyboard	Unsuccessful operation device error
900Ah	Defective Sector	Fixed Disk	Unsuccessful operation device error
900Bh	Bad Track	Fixed Disk	Unsuccessful operation device error
900Dh	Invalid Sector On Format	Fixed Disk	Unsuccessful operation device error
900Eh	CAM Detected During Read Or Verify	Fixed Disk	Unsuccessful operation device error
9010h	Uncorrectable ECC Or CRC Error	Fixed Disk	Unsuccessful operation device error
9020h	Bad Controller	Fixed Disk Diskette	Unsuccessful operation device error
9021h	Equipment Check	Fixed Disk	Unsuccessful operation device error
9040h	Bad Seek	Fixed Disk	Unsuccessful operation device error
9080h	Device Did Not Respond	Fixed Disk, Diskette	Unsuccessful operation device error
90AAh	Drive Not Ready	Fixed Disk	Unsuccessful operation device error
90BBh	Undefined Error	Fixed Disk	Unsuccessful operation device error
90CCh	Write Fault	Fixed Disk	Unsuccessful operation device error

continued

ABIOS Return Codes 621

## Return Code table, cont'd

Return Code	Description	Originating ABIOS Service	Meaning
90CCh	Keyboard Controller Always Busy	Keyboard	Unsuccessful operation device error
90FFh	Incomplete Sense Operation	Fixed Disk	Unsuccessful operation device error
9100h	Controller Fallure	Mouse	Unsuccessful operation device error
9100h	Keyboard Controller Always Busy	Keyboard	Unsuccessful operation device error
9101h	Keyboard Failed Reset	Keyboard	Unsuccessful operation device error
9101h	Bad Command	Parallel	Unsuccessful operation device error
9102h	Address Mark Not Found	Diskette	Unsuccessful operation device error
9102h	Resend Error	Keyboard	Unsuccessful operation retryable device error
9102h	Resend Error	Parallel	Unsuccessful operation device error
9103h	Keyboard Parity Error	Keyboard	Unsuccessful operation device error
9103h	Parity Error	Fixed Disk	Unsuccessful operation device error
9104h	General Device Time-out	Keyboard	Unsuccessful operation device time-out error
9104h	Requested Sector Not Found	Diskette	Unsuccessful operation retryable device error
9105h	Reset Falled	Fixed Disk	Unsuccessful operation retryable device error
9107h	Controller Parameter Activity Failed	Fixed Disk	Unsuccessful operation retryable device error
9108h	DMA Overrun On Operation	DMA,Fixed Disk Diskette	Unsuccessful operation retryable device error
9110h	Bad CRC On Diskette Read	Diskette	Unsuccessful operation retryable device error
9120h	Controller Fallure	Diskette, Fixed Disk	Unsuccessful operation retryable device error

## Return Code bit table, cont'd

Return Code	Description	Originating ABIOS Service	Meaning
9121h	Equipment Check	Fixed Disk, Diskette	Unsuccessful operation retryable device error
9140h	Seek Operation Failed	Diskette, Fixed Disk	Unsuccessful operation retryable device error
9180h	Device Did Not Respond	Diskette, Fixed Disk	Unsuccessful operation retryable device error
91AAh	Drive Not Ready	Fixed Disk	Unsuccessful operation retryable device error
91BBh	Undefined Error	Fixed Disk	Unsuccessful operation retryable device error
91CCh	Write Fault	Fixed Disk	Unsuccessful operation retryable device error
91FFh	Incomplete Sense Operation	Fixed Disk	Unsuccessful operation retryable device error
A000h	Time-out	Fixed Disk	Unsuccessful operation retryable device error
A001h	Bad Command	Fixed Disk	Unsuccessful operation retryable device error
A002h	Address Mark Not Found	Fixed Disk	Unsuccessful operation retryable device error
A004h	Record Not Found	Fixed Disk	Unsuccessful operation time-out error
A005h	Reset Falled	Fixed Disk	Unsuccessful operation time-out error
A007h	Parameter Activity Failed	Fixed Disk	Unsuccessful operation time-out error
A00Ah	Defective Sector	Fixed Disk	Unsuccessful operation time-out error
A00Bh	Bad Track	Fixed Disk	Unsuccessful operation time-out error
A00Dh	Invalid Sector On Format	Fixed Disk	Unsuccessful operation time-out error
A00Eh	CAM Detected During Read Or Verify	Fixed Disk	Unsuccessful operation time-out error
A010h	Uncorrectable ECC Or CRC Error	Fixed Disk	Unsuccessful operation time-out error

continued

ABIOS Return Codes 623

## Return Code table, cont'd

Return Code	Description	Originating ABIOS Service	Meaning
A011h	ECC-corrected Data Error	Fixed Disk	Unsuccessful operation time-out error
A020h	Bad Controller	Fixed Disk	Unsuccessful operation time-out error
A021h	Equipment Check	Fixed Disk	Unsuccessful operation time-out error
A040h	Bad Seek	Fixed Disk	Unsuccessful operation time-out error
A080h	Device Did Not Respond	Fixed Disk	Unsuccessful operation time-out error
A0AAh	Drive Not Ready	Fixed Disk	Unsuccessful operation time-out error
AOBBh	Undefined Error	Fixed Disk	Unsuccessful operation time-out error
A0CCh	Write Fault	Fixed Disk	Unsuccessful operation time-out error
A0FFh	Incomplete Sense Operation	Fixed Disk	Unsuccessful operation time-out error
A100h	Time-out Occurred — No Other Error	Fixed Disk	Unsuccessful operation time-out error
A105h	Reset Falled	Fixed Disk	Unsuccessful operation device time-out error
A107h	Controller Parameter Activity Falled	Fixed Disk	Unsuccessful operation device time-out error
A120h	Controller Fallure	Diskette, Fixed Disk	Unsuccessful operation retryable time-out error
A121h	Equipment Check	Fixed Disk	Unsuccessful operation retryable time-out error
A140h	Bad Seek	Fixed Disk	Unsuccessful operation retryable time-out error
A180h	Device Did Not Respond	Fixed Disk	Unsuccessful operation retryable time-out error
A1AAh	Drive Not Ready	Fixed Disk	Unsuccessful operation retryable time-out error
A1BBh	Undefined Error	Fixed Disk	Unsuccessful operation retryable time-out error

## Return Code table, cont'd

Return Code	Description	Originating ABIOS Service	Meaning
A1CCh	Write Fault	Fixed Disk	Unsuccessful operation retryable time-out error
A1FFh	Incomplete Sense Operation	Fixed Disk	Unsuccessful operation retryable time-out error
B001h	Bad Command	Fixed Disk	Unsuccessful operation retryable time-out error
B001h	Keyboard Error	Keyboard	Unsuccessful operation retryable device time-out error
B020h	Controller Failure	Diskette	Unsuccessful operation retryable time-out error
B020h	Bad Controller	Fixed Disk	Unsuccessful operation retryable device time-out error
B021h	Equipment Check	Fixed Disk	Unsuccessful operation retryable device time-out error
B080h	Device Did Not Respond	Fixed Disk	Unsuccessful operation retryable device time-out error
B101h	Bad Command	Fixed Disk	Unsuccessful operation device time-out error
B101h	Keyboard Error	Keyboard	Unsuccessful operation device time-out error
B120h	Controller Fallure	Diskette	Unsuccessful operation device time-out error
B120h	Bad Controller	Fixed Disk	Unsuccessful operation retryable device time-out error
B121h	Equipment Check	Fixed Disk	Unsuccessful operation retryable device time-out error
B180h	Device Did Not Respond	Fixed Disk	Unsuccessful operation retryable device time-out error
B0BBh	Undefined Error	Fixed Disk	Unsuccessful operation retryable device time-out error

continued

ABIOS Return Codes 625

## Return Codes that Indicate Termination, Continued

## Return Code table, cont'd

Return Code	Description	Originating ABIOS Service	Meaning
B0FFh	Sense Falled	Fixed Disk	Unsuccessful operation retryable device time-out error
B1BBh	Undefined Error	Fixed Disk	Unsuccessful operation retryable device time-out error
B1FFh	Sense Falled	Fixed Disk	Unsuccessful operation retryable device time-out error
C000h	Invalid Logical ID	Any	Unsuccessful operation parameter error
C001h	Invalid Function	Any	Unsuccessful operation parameter error
C003h	invalid Unit Number	Any	Unsuccessful operation parameter error
C004h	Invalid Request Block Length	Any	Unsuccessful operation parameter error
C005h	Invalid Parameter	Any	Unsuccessful operation parameter error
C006h	Invalid Time To Wait	Parallel	Unsuccessful operation parameter error
C00Ch	Unsupported Media Type/Unestablished Media	Diskette	Unsuccessful operation parameter error
FFFFh	Return Code Not Valid	Any	Request block not processed

# Glossary

#### ABIOS

Advanced BIOS. The BIOS designed to support multitasking operating systems such as OS/2. It comes packaged with a traditional Compatibility BIOS (CBIOS).

### **ABIOS Service**

Each ABIOS service controls a hardware device. Each ABIOS Service can only be associated with one Device ID.

### **Adapter Card**

A circuit board that can be installed into one of the expansion slots inside a PS/2-compatible computer in order to expand the capabilities of the computer.

## Adapter Description Files (ADFs)

Text files supplied on a diskette by manufacturers of PS/2-compatible adapter cards. The ADFs contain information such as what resources are needed to use the card. The ADFs must be copied to a working copy of the Reference Diskette after the adapter card is installed.

### **Adapter ROM**

The read-only memory on the adapter, which contains code to control the adapter device. An adapter is a peripheral card that extends the operation of the system. For example, a fixed disk drive controller is an adapter that may have an adapter ROM. Adapter ROM code may include an ABIOS ROM extension.

#### **Address Bus**

A set of signals which select a certain cell of memory or a certain device from the microprocessor to all parts of the system.

#### **Anchor Pointer**

A segment or selector with an assumed offset of zero, which is passed to the ABIOS on each request made of the ABIOS. It points to the real mode Common Data Area.

#### Arbitration

Arbitration is a process through which devices compete for possession of the channel on a prioritized basis.

#### **Arbitration Level**

Arbitration levels are the levels of priority assigned to devices that compete for possession of the channel.

### **Bimodal Operation**

Refers to the ability of a program to operate in both the real address mode and the protected address mode of the 80286, 80386SX, or 80386 microprocessor. ABIOS services are bimodal; they operate in either real or protected mode.

#### BIOS

Basic Input/Output System. Systems software that interfaces between the operating system and hardware.

#### **Boot**

Process of starting the computer.

#### **Burst Mode**

Burst mode is a method of DMA transfer that allows a device to remain inactive for long periods and then send large amounts of data in a short time.

#### Bus

One or more lines (conductors) that carry signals or power.

## Byte

Eight contiguous bits; a bit is the smallest item of information that a computer can process.

#### Cache

Method of using a fast device to speed up access to a slow device.

#### **CBIOS**

Compatibility BIOS. The traditional single-tasking portion of a PS/2-compatible BIOS.

#### **CBIOS Service**

A software routine that services a given peripheral device, and provides an interface between the operating system and the hardware. These services are single task, call/return functions, as opposed to the device services offered by ABIOS.

#### **CMOS**

Acronym for Complementary Metal Oxide Semiconductor. In PS/2 compatibles, it is low-power memory that is battery-backed and therefore not lost when the computer is turned off.

### Common Data Area

Contains a master list of pointers to the Function Transfer Table, Device Block, and Data Area (if any) associated with each ABIOS device service.

#### Configuration

The process of setting up all the parts of the computer so they run effectively.

### **Continuous Multistaged Requests**

ABIOS functions that never reach a completion point but are continually repeated. They can be thought of as standing function calls. An example is the ABIOS Keyboard Service Get Key Function.

### Cyclic Redundancy Check (CRC)

A method of redundancy check where the check key is produced by a cyclic or repeating algorithm. A common means of error checking.

#### Default

A value, setting, or option that is assigned by the program or system.

### **Device Block**

A permanent work area for each ABIOS device, containing hardware port addresses, interrupt levels, and device status information.

#### Device ID

Each type of device is identified to the system by a device ID.

### **Direct Memory Access (DMA)**

Direct Memory Access is a means for I/O devices to transfer data directly to and from system memory without the intervention of the microprocessor. This significantly decreases I/O processing by the microprocessor.

## **Discrete Multistaged Requests**

An ABIOS function that requires a significant amount of time while waiting for a hardware interrupt or time interval to occur returns control to the processor between stages of servicing a request. An example is the ABIOS Diskette Service Diskette Read Function.

#### **DMA Controller**

A DMA controller is a device which gives addresses and control signals to the device that has won the bus through arbitration. The controller does not enter into the arbitration itself.

#### **DMA Device**

A DMA device enters into arbitration for the channel. If it wins, it receives addresses and control signals from the DMA controller so it can read or write data.

#### DOS

Acronym for Disk Operating System and short for PC-DOS and MS-DOS. DOS, like other operating systems, organizes the files and memory for other programs.

#### **Error Handler**

An invisible program on the Reference Diskette that reads the POST error log. If an error is found, a cause and solution type message about the error is displayed.

## **Expanded Memory**

For AT-compatible systems, up to 32 MB of additional "paged" memory above the DOS 640K limit. Application programs written according to LIM EMS or AST EEMS specifications can use this type of memory. Examples of such programs are Lotus 1-2-3, Symphony and Framework.

### **Expanded Memory Specification (EMS)**

For AT-compatible systems, a specification and protocol established by a consortium of computer manufacturers, principally Lotus, Intel, and Microsoft (LIM), which establishes a set of rules for organizing and accessing expanded memory.

### Extended Expanded Memory Specification (EEMS)

A specification and protocol established by a consortium of computer and software manufacturers, principally AST, Quadram, and Ashton-Tate, which establishes a set of rules for organizing and accessing expanded memory.

### **Extended Memory**

The memory above 1 MB. XENIX and IBM's VDISK can use this memory, but DOS and almost all application programs cannot, since use of the protected mode of the Intel 80286 or 80386 microprocessor is required.

### Fixed Disk (Hard Disk)

A magnetic storage device consisting of a drive mechanism with permanently installed metallic disks; a "filing cabinet" for the computer.

#### **Function Transfer Table**

A data structure that contains a list of pointers to the entry routines and function start addresses of one ABIOS service. There is a Function Transfer Table for each ABIOS service.

#### **Hardware**

The physical equipment and components in the computer system.

#### Initialization Table

An ABIOS common data structure that defines initialization data for each device in the system. It is referred to when initializing each Device Block and Function Transfer Table.

### Interrupt

The suspending of microprocessor program execution by a demand for attention coming from a peripheral device. After the interrupt has been serviced, the suspended microprocessor task can be resumed where it was broken off by the interrupt.

### Kilobytes (K)

1024 bytes.

#### **Known State**

When a device is initialized or reset, and then set to a particular preestablished condition, it is said to be in a known state.

## **Logical Device**

A conceptual, as opposed to physical, identification of a hardware device by an operating system, so as to allow the latter a greater degree of device independence. Operating systems commonly identify physical devices with an operating system-assigned Logical ID number. Contrast with Physical Device.

## Logical ID

An identifier for a device controller used by ABIOS. There may be several devices (units) attached to a Logical ID. The Logical Device ID (Logical ID/LID) is used by the operating system as an index into the Common Data Area to locate the Device Block pointer and Function Transfer Table pointer pair with which each ABIOS service is associated.

#### Low Level Format

Electronic equivalent of drawing a detailed street map on the fixed disk. The electronic markings tell the system at what points to start and end reads and writes.

## Main Memory

The memory between 0 and 1 MB.

### Megabyte (MB)

One million bytes.

## Memory

A device that can store data recorded in it and from which the data can be retrieved.

### Micro Channel

Information is exchanged between the computer system board and the adapter cards which are plugged into it by means of the "bus." Micro Channel refers to the particular bus design in a PS/2-compatible computer. It is also referred to as MCA, for Micro Channel Architecture.

#### Microprocessor

Central processing unit, or "brain" of the computer.

### Multitasking

Multitasking programs execute multiple program modules simultaneously. Information input into one module does not need to be processed completely before information can be input into another module. ABIOS supports multiple concurrent requests.

#### Offset

A method of addressing that defines an address as relative to the beginning of a memory segment.

## **Operating System**

Generic systems software which controls the execution of applications software.

continued

Glossary 633

### **Option Diskette**

The diskette provided by manufacturers of adapter cards that contains adapter description files (ADFs), which are written to the Reference Diskette and used by it to configure the system.

### **Parameter**

Value, option, or setting that can be set in two or more ways.

### Physical Device

A hardware device that physically exists in a system configuration. Physical devices are identified by a device ID. Contrast with logical device.

### Power-on Self Test (POST)

A program that tests all parts of the computer every time you turn on the computer.

### **Private Data**

The ABIOS data structures contain areas (private data) which have information that is not available to ABIOS callers. This information includes hardware device support levels, ABIOS internal routines, and ABIOS internal parameters.

### **Program**

A set of instructions defining the operations of a computer in order to achieve the desired results.

### Programmable Option Select (POS)

A way of setting up peripheral devices on a PS/2 machine via the poweron self test (POST), in which values are placed in registers on the devices. This software set up routine replaces the traditional switches and jumpers on devices.

### Protected Virtual Address Mode (Protected Mode)

One of two 80286 or three 80386 memory addressing modes. In protected virtual address mode, the 80386/80286 uses all address lines. This allows addressing of up to 16 megabytes of physical memory in an 80286 and 4 GB in an 80386. The 80286 processor's internal memory management allows addressing of an additional 1 gigabyte of virtual memory in protected mode (the 80386 up to 64 Terabytes). Protected mode addresses are specified in selector:offset format. ABIOS data structures support protected mode access of all ABIOS services.

### PS/2-Compatible Computer

Any computer that can run software programs written for an IBM PS/2 computer. IBM PS/2 systems come in two basic varieties: Models 25 and 30 versus Models 50, 60, and 80. The former systems do not implement the Micro Channel Architecture (MCA).

#### **Public Data**

That part of an ABIOS data structure which is accessible by the calling program (or the operating system).

#### **RAM Extension**

An extension to ABIOS that exists as files that will be located and initialized into system RAM during the overall ABIOS ROM initialization process. It can add or replace whole ABIOS services or individual functions.

#### Real Address Mode

One of two 80286 memory addressing modes (the 80386 has three). In real address mode, the 80286 and 80386 microprocessors use 20 address lines, thus allowing memory addressing of up to 1 megabyte of physical memory (2<sup>20</sup>). Real address mode does not support virtual memory addressing. Real mode addresses are specified in segment:offset format. ABIOS data structures support real mode access of all ABIOS services.

#### Reentrant Code

Reentrant code allows one copy of a given routine to be entered multiple times. Input #1 need not be completely processed before input #2 is allowed. Input #2 need not be completely processed before input #3 is allowed, and so on. All ABIOS code is reentrant.

continued

Glossary 635

#### Reference Diskette

In PS/2-compatible MCA-based systems, POST error recovery, access to system utilities, and system configuration are all controlled by a utility diskette, the Reference Diskette. The Reference Diskette can automatically configure a system, resolving conflicts between adapter card settings, and optimally configuring the system.

## **Revision Level**

The ABIOS ROM contains a ROM revision number that identifies the revision level of the ABIOS device services contained in the ROM. By convention, ABIOS extensions must examine the Device ID/Secondary Device ID pair associated with the service they are extending. It is the extension's responsibility to insure that only the service with the highest revision number is initialized.

### **ROM Extension**

An extension to ABIOS that exists in the same peripheral card ROM that contains its CBIOS counterparts. It contains manufacturer-specific ABIOS device services, and is located and initialized as part of the overall ABIOS ROM initialization process.

## **Secondary Device**

An additional field used by the ABIOS to make sure that the selected device's hardware level is supported.

### Secondary Device ID

When more than one physical device is associated with a device ID, the two physical devices can be differentiated with a Secondary Device ID. When a unique ABIOS Service is required for each physical device, the two services must be differentiated via their Secondary Device ID.

## Segment

A unit of contiguous, one-dimensional address space. In real mode, these address blocks are 64K in size, referenced by one byte. In protected mode, programs can allocate segments of any size they require up to 64K.

#### Selector

A value contained in a segment register (such as the CS, DS, SS, or ES segment registers) when in protected mode. This value determines what segment is currently being used; e.g., with CS, what segment is being used for executing code.

### Single-Tasking

Single-tasking programs can only execute one program module or routine at a time. Information input into a module or routine must be processed completely before information can be input into another module.

#### Software

A comprehensive term used to identify all of the nonhardware components of a computer. Software includes computer programs and data.

### System Board

A large circuit board that holds most of the main electronic parts of the computer.

## System Board ROM

Read-only memory chips that reside on the system board and provide control information for various system components.

### System Parameter Table

A common ABIOS data structure 20h bytes long that describes the number of devices available in the system, the ABIOS common entry points, and system stack requirements.

#### Task

In an 80386, a task is the execution of a single process or set of instructions to perform a particular function. It is not the same as an operating system task.

#### Time-Out

When the interval of time expected for a certain process (an interrupt) to occur is exceeded.

## Virtual 8086 Mode (80386 only)

A way of emulating the 8086 or 8088 microprocessors on the 80386. The 8086 program runs in protected mode as a task that can run with multiple 8086 virtual tasks, as well as alongside other multiprogrammed 80386 tasks.

Glossary 637

# **Additional Resources**

The following books provide additional material related to the ABIOS:

Dettman, Terry R. DOS Programmer's Reference. Carmel, IN: Que® Corporation, 1988.

Duncan, Ray. Advanced MS-DOS Programming. Redmond, WA: Microsoft Press, 1986.

Duncan, Ray. *IBM® ROM BIOS*. Redmond, WA: Microsoft Press, 1988.

International Business Machines Corporation. *IBM® Personal System/2™ and Personal Computer BIOS Interface Technical Reference*. Boca Raton, FL: IBM, 1987.

International Business Machines Corporation. *IBM® Personal System/2™ Model 30 Technical Reference*. Boca Raton, FL: IBM, 1987.

International Business Machines Corporation. *IBM Personal System/2™ Model* 50 and 60 Technical Reference. Boca Raton, FL: IBM, 1987.

Norton, Peter and Wilton, Richard. The New Peter Norton Programmer's Guide to the IBM® PC and PS/2®. Redmond, WA: Microsoft Press, 1988.

Wadlow, Thomas A. *Memory Resident Programming on the IBM PC*. Reading, MA: Addison-Wesley Publishing Co., Inc., 1987.

Wilton, Richard. *Programmer's Guide to PC® and PS/2™ Video Systems*. Redmond, WA: Microsoft Press, 1987.

Additional Resources 639

# Index

#### Α Abbreviations, xxiii-xxiv for fixed disk systems, 233 for I/O ports, 61-79 ABIOSCall service, 2, 19, 23, 131, parallel, 39, 70-71, 74-75, 417 151, 155 POS. 67. 69-70, 572 ABIOSCommonEntry service, 2, serial, 40, 71-73, 77-79, 361 19-22, 131, 151-154 for PICs, 56 for system control functions, 58-59 ABIOS.SYS file, 27, 160 for video RAM, 309 Abort DMA Operation service, 561-562 ADF (adapter description files) for POS data, 34, 55, 570-571 Access, See Program access Alarm interrupts, 441 ACK byte from keyboard controller. canceling of, 457 300 setting of, 454-456 Acronyms, xxiii-xxiv Allocate Arbitration Level DMA service, 556-557 Action, return codes requiring, 618 Alt key, 266-267, 587 Adapters card identification for, 55 Alternate Reset Fixed Disk System CMOS RAM for, 527-530 function, 232 description files for, 34, 55, 570-571 Analog monitor support, 37, 308 and POS data, 69, 579-582 Anchor pointer ROM extension for, 108 to CDA, 85-86 slots for, 55 and program access, 19-20, 151 ADD extension class, 163, 165, 174 relationship of, to other structures, 14 Address fields for diskettes, 214 Arbitration levels Address line 20 allocation of, 556-557 disabling of, 482 and bus sharing, 545 enabling of, 481 deallocation of, 558 Address modes. See Protected addisabling of, 559 dress mode: Real address mode for DMA, 51-53, 548-550 for multiple instances of devices, Addresses 115-116 for CMOS RAM, 443-445 register for, 67 changing

Global Descriptor Table and pro-

tected mode, 478

Arbus register in DMA controller, 49,

53, 551

## A, cont'd

Arithmetic calculations, coprocessor for, 32

Assignment of interrupt requests, 57
Attention register, fixed disk adapter, 74

Attention return code, 25, 141, 618

Attribute bytes, video, 314 controller for, 36, 307 and palette register, 312, 345, 347 registers for, 75

Autoinitialization of DMA controller, 49, 547

Auxiliary device, enabling and disabling of, 296

## B

Banks, RAM, 37

Base memory, CMOS RAM for, 526

Battery-backed CMOS RAM. See CMOS RAM

Battery Bad return code, 532

Baud rate generator of, 41, 362 setting of, 378-379

Bimodal support for interrupt handlers, 146

BIOS extensions, 157 ROM, 1

Blocks, print printing of, 427–431

Blocks, video of color registers, reading of, 354-355

Booting and initialization, 12, 95 Break Interrupt for serial ports, 392 Break key, 267, 589 Buffers, serial port receive, 389-391, 393-396 transmit, 379-382, 384-386, 399

Buffers, video video, size parameters for, 321

Build Initialization Table function, 13, 96, 100–102 for RAM extensions, 178–179 for ROM extensions, 177

Build System Parameters Table function, 13, 96, 98–99 for RAM extensions, 179 for ROM extensions, 177

Burst mode DMA transfer, 51, 548
Bus sharing for DMA, 47, 545
BUSY signal, math coprocessor, 32-33

## C

CALL for control transfer, 17, 134 Calling of functions, 127 and ABIOSCall, 155 and ABIOSCommonEntry, 152-154 control transfer, 134-135 Default Interrupt Handler for. 147-148 by handlers, 9 hardware interrupt handlers for, 142-146 processing model for, 128-131 and program access, 151 and Request Block initialization, 132-133 return code handling in, 139-141 time-out handlers for, 149-150 and transfer conventions, 136-138

Cancel Alarm Interrupt Real Time Clock Service, 457

Cancel Periodic Interrupt Real Time Clock Service, 461

Cancel Print Block Parallel Port Service, 430-431

## C, cont'd

Cancel Serial Communications Service, 407–408

Cancel Update-Ended Interrupt Real Time Clock Service, 464

Capacity, diskette, 193

Card selected feedback register, DMA, 67

#### **CBIOS**

accessibility to, 2 and compatibility, 1 and Diskette Service, 189–190 extensions for, 158 and Fixed Disk Service, 232, 245 and serial ports, 367 structures of, compared to ABIOS,

CDA. See Common data area

Central Arbitration Control for DMA controller, 549 with Micro Channel, 33, 51

CGA (Color Graphics Adapter) compatibility with, 309-310, 325 and palette register, 312

Change Line Status signal, 191 emulation of, 186–188 reading of, 226–227 testing of, 204

Channel extension connectors, 33

Channel position select register, POS, 67

Channels, DMA, 54, 551 flags for, 53, 551

Character Block Specifier field, 319-320

Character block to load field, 327

Character block to select field, 328

Characters

blocks of, selection of, 337-338

and fonts, 314
generators of, 313
serial support for number of,
40, 361

### Checksum

power-on, CMOS RAM for, 528 recomputation of, 540-541

Checksum Invalid return code, 532

Clear Byte Pointer, DMA, 61, 69

Clear Mask Register, DMA, 62, 69

Clear video buffer flag, 326

Clock generator chip, 42

Clock interrupts, 441

#### **CMOS RAM**

ADF file data stored on, 34, 55 areas for, 46 device ID for, 4, 153 data for, 525-527 error handling for, 532 for Error Log Service, 607-608 extended, 528-531 hardware environment for, 524 and NMIs, 449 port addresses for, 66 and POS. 569, 575-582 for power-on password, 60, 583 reading of, 45 for real time clock, 45, 443, 524-525 return codes for, 620 services for, 523 Read CMOS RAM, 536-537 Read Device Parameters, 534 Recompute Checksum, 540-541 Return Logical ID Parameters, 533-534

writing to, 45
Color Graphics Adapter
compatibility with, 309-310, 325

and palette register, 312

Write to CMOS RAM, 538

Index

## C, cont'd

Color register reading of, 349-350, 354-355 writing to, 351-353, 356-358

Colors, video, 309-311, 325

default, 313

Common Data Area, 10, 84-86 and Anchor Pointer, 19 building of, 103-105 and control transfer, 18, 135-136 data pointers in, 85-86, 103, 107, 109, 113, 475 in DB and FTT initialization routines, 108 device data pointers in, 107 and extensions, 173-174 and initialization, 11-13, 95 and Initialization Table, 100-101 Logical IDs in, 15, 152 null entries in, 85, 112 and program access, 151 and protected mode, 110-112 relationship of, to other structures. 14.82 and REPLACE extensions, 164 for stack frame loading, 137

Common Entry Routines, 9 17-18 and control transfer, 18, 134-135 device service for, 109 with function calling, 131 logical ID for, 104-105

Common Interrupt Routine, 9 address of, 113 with function calling, 131 pointer for, 98 for time-out handlers

Common Start Routine, 9 address for, 113 and control transfer, 18 with function calling, 131 pointer for, 98

Common Time-out Routine, 9 address of, 113

with function calling, 131 pointer for, 98

Compatibility, 1-2 diskette, 194-195 video display, 36 video RAM, 308

Configuration for CMOS RAM, 525-531 diskette drive, 35 system, reading of, 473-474

Configuration control register, diskette controller, 77

Conforming Bit for pointers, 111

Connectors for Micro Channel, 34

Continuous Keyboard Read service, 280-281

Continuous multistaged functions, 6 processing model of, 128

Continuous read, NMI, 492-493

Control. See Transfer conventions

Control addresses for parallel ports, 39, 417

Control keys, 266, 588

Control Port, address for, 71, 74-75

Control register, fixed disk adapter, 73

Control word register, PIT, 65

Controllers CRT, 36, 74, 76, 307 diskette, 35, 193 DMA, 545-546 fixed disk, 35, 57, 235 keyboard, 38, 261 serial port, 361

Coprocessors, 32-33 interrupt request for, 57 port address for, 69

Count control for DMA controller, 50, 546-547

## C. cont'd

CPU for fixed disk systems, 235 clock generator for, 42 Date and functions, 5 CRT controller, 36, 307 index register for, 76 port addresses for, 74, 76 Current Serial Port Status field for receive, 389-390, 392-396 for transmit, 380, 382-386 Cursor in graphics modes, 310, 326 keys for, 266, 588 size of, and fonts, 342 Cylinders, fixed disk, 236-237 D DAC. See Digital-to-analog converter Data addresses for parallel ports, 39, 70, 74-75, 417 Data length, changing of, 202 Data pointers in CDA, 85-86, 103, 107, 109, 113, 475 for CMOS RAM, 536, 538 in Initialization Table, 101 relationship of, to other structures. 14 in Request Block structure table, 123-124 Data registers, diskette controller, 76 Data string length for keyboard controller, 295 Data structures, 10-11, 81-83, 94 Common Data Area, 84-86 Device Block, 89-93

reading of, 465-466 writing of, 466-467 Daylight Savings Update field, 452 DB. See Device Blocks Deallocate Arbitration Level DMA Service, 558 Default colors, 313 Default fonts, 310, 314, 325, 327-328 Default Interrupt Handlers, 4, 144, 147-148 for Diskette Service, 196 for Fixed Disk Service, 239 for Keyboard Service, 269 for Parallel Port Service, 419 for Pointing Device Service, 498 for Real Time Clock Service, 446 for Serial Communications Service. 364 for System Timer Service, 438 for Video Service, 316 Default sector size, changing of, 202 Defect map, fixed disk, 236-237 Delay, typematic, 286-288 Descriptors, selector, 111 DevHlp services, 2, 19-23, 131, 151 Device Blocks, 10, 82, 89-93 and ADD extensions, 165 and control transfer, 18, 135-136 for extensions, 26, 159, 173-175 initialization of, 11-13, 96, 106-109, 113 and Initialization Table, 100-101 and MODIFY extensions, 167 for multiple instances of devices, 115-116 pointers to, 84-86 characteristics of, 111 initialization of, 103

Data transfer

Function Transfer Table, 87-88

diskette rates for, 193

with DMA devices, 50

D. cont'd

and Logical IDs, 15 protected mode, 110 relationship of, to other structures,

for REPLACE extensions, 164

Device Control Flag, 326, 356

Device Error return code, 25, 141

Device Error With Time-out return code, 25, 141

Device IDs, 15, 21 and ABIOSCommonEntry, 152 CDA for, 85 in Device Block, 90, 93 for extensions, 169 in Initialization Table, 100 in Return Logical ID Parameters function, 20

Device In Use return code, 25, 141

#### **Devices**

bit size of, and DMA controller, 50 CDA data pointers for, 85 data area for, in Device Block, 92 extensions for, 162 memory for, 14 multiple instances of, 115-116 return codes for, 25, 139-141 supported, 4, 21 See also Device Blocks: Device IDs: Read Device Parameters functions

Diagnostic status for CMOS RAM, 525

Digital input register, diskette controller, 77

Digital output register, diskette controller, 76

Digital-to-analog converter, 36-37, 307-308 and palette register, 312, 345, 347 port addresses for, 75

reading of color register in. 349-350 writing to color register in, 351-353, 356-358

Direct Memory Access Service, 47. 50. 543-544 device ID for, 4, 153 error handling for, 552 for fixed disks, 231 hardware environment for, 545-552 return codes for, 619-620, 622 services for, 553-568 Abort DMA Operation, 561-562 Allocate Arbitration Level. 556-557 Deallocate Arbitration Level, 558 Disable Arbitration Level, 559 DMA Transfer from Memory to I/O, 563-564 DMA Transfer Status, 560 Load DMA Controller Parameters. 567-568 Read Device Parameters, 555 Read from I/O and Write to Memory, 565-566 Return Logical ID Parameters. 553-554

See also DMA controller

Disable Address Line 20 System Services, 482

Disable Arbitration Level DMA Service, 559

Disable Diskette Service, 206-207

Disable Keyboard Service, 278-279

Disable NMI Service, 491

Disable Pointing Device Service. 507-508

Disable standard function. 4

Discrete multistaged functions, 6, 128

## D, cont'd

Diskette Change Line signal, 191 emulation of, 186–188 reading of, 226–227 testing of, 204

#### Diskettes

change line emulation for, 186-188 CMOS RAM for, 526 controller registers for, 76-77 device ID for, 4, 153 hardware for, 35, 193 error handling for, 195 interrupt request for, 57 return codes for, 619-626 services for, 189-192 Default Interrupt Handler, 196 Disable Diskette, 206-207 Format Diskette, 214-217 Interrupt Status, 229-230 Read Change Line Signal Status. 226-227 Read Device Parameters. 199-201 Read Diskette, 208-210 Read Media Parameters, 221-222 Reset/Initialize Diskette Subsystem, 203-205 Return Logical ID Parameters. 197-198 Set Device Parameters, 202-203 Set Media Type for Format. 223-225 Turn Diskette Motor Off, 228-229 Verify Diskette Sectors, 218-220 Write to Diskette, 211-213 support for, 116

Divisor latch, serial port, 71, 77

DMA controller, 47–54, 545–546 arbitration levels for, 33, 52 direct accessing of, 50, 547 port addresses for, 61, 66, 68–69 See also Direct memory access DMA Transfer from Memory to I/O, 563-564

DMA Transfer Status, 560

Door, diskette, and Diskette Change Line signal, 191

DOS, ROM BIOS interrupt vectors for, 157

DOS compatibility box, 22-23, 154-155

Double density diskettes, 194

Drive types, diskette, 194

Dynamic reassignment of arbitration levels, 53, 551

## E

EGA (Enhanced Graphics Adapter) compatibility with, 309–310, 325 and palette register, 312

**Emulation** 

of Change Line Status signal, 186–188 of video modes, 310, 325

Enable Address Line 20 System Services, 481

Enable FIFO Control Serial Communications Service, 412–413

Enable Keyboard Service, 276-277

Enable Keyboard Security Service, 593-594

Enable NMI Service, 490

Enable Pointing Device Service, 505-506

Enable Speaker System Services, 483–484

Enable standard function, 4

## E. cont'd

Enabling of transmit interrupts, 379

End-of-interrupt processing, 144

Enhanced Graphics Adapter compatibility with, 309–310, 325 and palette register, 312

Enhanced Load Text Mode Font Video Service, 342–344

Entry pointers for control transfer, 17, 134

Entry points for extensions, 168–169 vectors to, 87–88

Entry routines for transferring control, 9. 17. 131

Environment. See Hardware environment

EOI (end-of-interrupt) processing, 144

Equipment installed, CMOS RAM for, 526

ERRNUM pointer, 607

Error handling

for CMOS RAM Service, 532

of DBs and FTTs, 108

for Direct Memory Access Service, 552

for Diskette Service, 195

for Error Log Service, 609

for Fixed Disk Service, 238

for Keyboard Security Service, 589

for Keyboard Service, 268

for math coprocessor, 32-33

for Nonmaskable Interrupt Service, 487

and operating system transfer convention, 138

for Parallel Port Service, 418

for Pointing Device Service, 497

for POS Service, 573

for Real Time Clock Service, 445

for Serial Communications Service, 363

for switching to protected mode, 480

for switching to real mode, 477

for System Services, 470

for System Timer Service, 437

for Video Service, 315

Error Log Service

CMOS RAM for, 531

device ID for, 4, 153

error handling for, 609

extended CMOS RAM for, 607-608

services for, 605-606

Read Error Log, 612-613

Return Logical ID Parameters, 610-611

Write to Error Log, 614-615

ESDI fixed disk controller, 35

Expansion memory, CMOS RAM for, 526, 528

Extended CMOS RAM

data area for, 46, 524

for Error Log Service, 607-608

port address for, 66

for POS Service, 569

services for, 528-531

Extended function execute register, DMA, 62

Extended function register, DMA, 62

Extended mode

DMA, 54, 552

parallel port, 39, 417

Extensions, 26-27, 157-161

Device Block and FTT routines for, 173-175

examples, 180-188

b = = d = = (= = 400 470

headers for, 168-170

and initialization, 108-109, 117

Initialization Table entry routine for, 171–172

non-intrusive interception, 181-183

## E. cont'd

nonstaged function, redirection of, 184–185 RAM, 178–179 recommendations for, 162–167 ROM, 176–17 service code for, 176 staged function, redirection of, 186–187

## F

Feature Configuration Table, 473
Feature control register, VGA, 74-76
FIFO control, 412-413
serial port register for, 72, 78

File headers for extensions, 26, 159, 168–169

Filter bytes, writing of, 601-604

Fixed Disk Interrupt Status service, 257–258

Fixed disks adapters for, 73-74 CMOS RAM for, 526 controller for, 35, 57, 235 device ID for, 4, 153 DMA arbitration level for, 549 error handling for, 238 extensions for, 163 hardware environment for, 235 parameters table for, 236-237 port address for, 70 return codes for, 620-626 services for, 231-234 Default Interrupt Handler, 239 Fixed Disk Interrupt Status, 257-258 Read Device Parameters. 242-244 Read Fixed Disk, 249-250

Reset/Initialize Fixed Disk, 244-248 Return Logical ID Parameters, 240 Verify Fixed Disk Data, 255-256 Write and Verify Fixed Disk, 253-254 Write to Fixed Disk, 251-252

#### Flags

Device Control, 326 in DMA controller, 48, 53, 546, 551 for DOS compatibility box, 22, 154 for Start Routines, 143

Floating point numbers, coprocessor for, 32-33

#### **Fonts**

default, 310, 314, 325, 327–328 extension for, 184–185 retrieval of information about, 331–332 ROM-resident, 313–314, 327 text mode, 325, 339–344

Format Diskette Service, 214-217

Framing errors for serial ports, 392
FTT. See Function Transfer Tables
Function count in FTT, 88
Function Pointers, relationship of, 14
Function Transfer Tables, 10, 82, 87–88
and control transfer, 135
for extensions, 26, 173–175
initialization of, 11–13, 103.

106-109, 113
and Logical IDs, 15
pointers to, 17-18, 84-85
and ADD extensions, 165
characteristics of, 111
and control transfer, 18, 136
for extensions, 159, 162, 173-175
and initialization, 95

## F. cont'd

and Initialization Table, 100-101 Logical ID 2 entry in, 114 and MODIFY extensions, 167 and protected mode, 111-112 relationship of, to other structures, 14 for REPLACE extensions, 164 relationship of, to other structures, 14

Functional parameters, Request Block, 121–123

Functions
address pointers to, 82
entry points for, extensions control
of, 26
relationship of, to other structures,
14
and request blocks, 15, 122
standard, 4
suspension of, 5, 22–23, 154
transferring control to, 17–18

See also Calling of functions

## G

Game port address, 70

Gap length, changing of, 202

Graphics controller, 36, 307

Graphics registers, VGA, 75

Gray scale summing flag, 326, 356

## H

Handlers, calling by, 9
Hardware devices
as physical devices, 15
relationship of, to other structures,
14

Hardware environment, 29-30

for CMOS RAM Service, 46, 524 for Direct Memory Access Service. 545-552 for Diskette Service, 193-195 DMA controller, 47-54 for Fixed Disk Service, 235 I/O devices, 35-42 I/O port list, 61-79 for Keyboard Security Service, 585 for Keyboard Service, 261 math coprocessors, 32-33 Micro Channel, 33-34 microprocessors, 31 NMI masks, 60 for Parallel Port Service, 39, 417-418 for Pointing Device Service, 497 for POS Service, 571-572 power-on passwords, 60 Programmable Interrupt Controller, 56-57 Programmable Option Select, 55 for Real Time Clock Service, 443 for Serial Communications Service, 40-41, 361-363 system control port definitions. system time-related devices, 42-46 for System Timer Service, 436-437 for Video Service, 36-37, 307-308

Hardware interrupts
for Diskette Service, 193
for fixed disks, 35
handlers for, 142–146
maskable, PICs for, 56
for multistaged functions, 7–8,
129–130
for parallel ports, 39
by PIT, 43
sharing of, 144–145

Hardware time-out for function driving, 130 vs. time period stages, 8

#### H. cont'd building of, 13, 96, 100-102 Headers for extensions, 26, 159, for extensions, 26, 159, 168, 168-169 171-172 Heads first Device ID entry for, 114 fixed disk, 236-237 number of, in disk formatting, 214 Initialize DAC to default values flag. 326 High density diskettes, 194 INMOS G171 DAC chip, 36, 307 Input rules for Request Blocks, 16. 133 Identification code Input status register, VGA, 74, 76 for keyboard, 272 Intel 8042 keyboard controller, for pointing devices, 519-521 38, 261 Identity BIOS service. CBIOS vs. for keyboard security, 585 ABIOS, 11 for Pointing Device Service, 497 port address for, 66 Idle CPU time, 5 Intel 8237 DMA Controller, 47, IDs. See Device IDs: Logical IDs 545-546 Initialization, 95-97, 117 Intel 8254A Programmable Interval ABIOS, 11-16 Timer, 42-44, 436 of Common Data Area, 96, 103-105 Intel 8259A Programmable Interrupt of DAC color registers, 349, 351 Controller, 56-57 of Device Blocks and FTTs, 11-13. Intel 80286/80386/80386SX 96, 106–109, 113 microprocessors, 31 of Initialization Table, 96, 100-102 of logical ID 2, 113-115 Intel 80287/80387 math coprocessor, and multiple instances of devices, 32 115-116 Intel 82284 clock generator, 42 of palette register, 345 of Pointing Device Service, 503 Internal calls of protected mode tables, 96, device ID for, 4, 153 and Logical ID 2, 113 110-112 of RAM extensions, 178-179 logical IDs for, 104 of Request Block, 11, 132-133 Interrupt Status Diskette Service, of return code fields, 143 229-230 of ROM extensions, 176-177 Interrupt status field, fixed disk, 257 of serial ports, 361 of stack frames, 20, 23 Interrupt Status Register, fixed disk of System Parameters Table, 96. adapter, 74 98-99 Interrupts, 9, 131 of video hardware, 324-330 assignment of requests for, 57 Initialization Command Words, PIC, 63 diskette handlers for, 196 Initialization Table enable register for, 71, 77

Index 651

## l, cont'd

· 医克勒克氏 医水杨素 医多克克氏 医克克氏 电电路电路

and extensions, 162 identification register for, 71, 77 levels of, 33, 39–40, 56, 261, 361 mask register for, 63–64 for multiple instances of devices, 115 operating system handling of, 138 pointer to, 87–88, 98 for real time clock, 441 for serial port, 361 and service registers, PIC, 62 and staged function redirection, 186 update–ended, 462–464 See also Hardware interrupts; Nonmaskable interrupts

Invalid Function return code, 25, 141

Invalid Logical ID return code, 25, 141

Invalid Request Block Length return code, 25, 141

Invalid Service-Specific Parameter return code, 25, 141

Invalid Unit Number return code, 25, 141

Invocation byte, writing of, 597-598

I/O address width with Micro Channel, 33

I/O ports

for CMOS RAM, 45, 66

for diskette, 76-77

for DMA controller, 47, 66, 68-69

for error logs, 608

for fixed disk, 70, 73-74

for game port, 70

for keyboard, 65-66

for manufacturing checkpoint port,

for math coprocessor, 69

for parallel port, 70-71, 74, 75

for POS, 67, 69, 572

for PIC, 62-64, 68, 572

for PIT, 64-65 for serial port, 71-73, 77-79 for video, 74-76 See also Parallel ports; Serial ports

I/O privileges, 112

Isolation, BIOS for, 1

Italicizing fonts, extension for, 184–185

## K

Keyboard device ID for, 4, 153 error handling for Keyboard Service, 268 error handling for Keyboard Security Service, 589 hardware environment for Keyboard Security Service, 585 hardware for, 38, 261 hardware environment for Keyboard Service, 261 interrupt request for, 57 layout of, 262 return codes for, 619-622, 625 services for Keyboard Security Service, 583-584 Enable Keyboard Security, 593-594 Read Device Parameters, 592 Return Logical ID Parameters. 590-591 Write Filter Byte 1, 601-602 Write Filter Byte 2, 603-604 Write Invocation Byte, 597-598 Write Match Byte, 599-600 Write Password, 595-596 services for Keyboard Service, 259-260 Continuous Keyboard Read, 280-281 Default Interrupt Handler, 269 Disable Keyboard, 278-279

## K, cont'd

Enable Keyboard, 276-277 Read Keyboard ID Bytes, 272-273 Read Keyboard LED Status. 282-283 Read Keyboard Scan Mode, 289-291 Reset/Initialize Keyboard, 274-275 Return Logical ID Parameters, 270 Set Keyboard LED Status. 284-285 Set Keyboard Scan Code Mode. 292-295 Set Typematic Rate and Delay, 286-288 Write Command(s) and Data to Keyboard, 300-303 Write Command(s) to Keyboard Controller, 295-299 scan codes for Keyboard Service, 263-267, 586-587 system scan codes for Keyboard Security Service, 586-588 and time-out handling, 149

#### .

Landing zone, fixed disk, 236–237

LED, keyboard, status of, 282–285

Length
data string, for keyboard controller, 295
of extensions, 168
in Request Block structure, 122

Level-sensitive interrupts
with Micro Channel, 33
for parallel port, 39
and PICs, 56
and serial port, 40, 361

Levels of priority for DMA controller, 549

Keyboard/auxiliary data port, 65

Lifespan of Request Blocks, 15, 132

Line control register for, 72, 78 setting of, 375–377

Line status register, 73, 79

Load DMA Controller Parameters service, 567–568

Load Text Mode Font Video Service, 339-341

Local Descriptor Table and protected mode, 478

Locate BIOS function and service, CBIOS vs. ABIOS, 11

Logical devices vs. physical devices, 15

Logical ID 2, initialization of, 109, 113-114

Logical IDs, 15 and ABIOSCommonEntry, 20, 152 and ADD extensions, 165 assignment of, 103 in bimodal environment, 146 and CDA, 85-86, 104-105 and control transfer, 135 and Default Interrupt Handlers, 147 in Device Blocks, 90-93 for diskette drives, 190, 197-198 for fixed disk systems, 232 FTT pointer for, 87 and hardware interrupt handlers. 142 in Initialization Table, 100 interrupts for, 144-145 and MODIFY extensions, 167 for multiple instances of devices, 115 relationship of, to other structures, 14

## L. cont'd

in Request Block structure table, 122 for serial ports, 40

See also Device IDs; Return Logical ID Parameters functions

## M

Manufacturers, fixed disk, 236-237

Manufacturing checkpoint port, 79

Mask register, DMA, 61, 68

Maskable hardware interrupts, PICs for, 56

Masks, NMI, 60

Master Clear, DMA, 61, 69

Match byte, writing of, 599-600

Math coprocessors, 32-33 interrupt request for, 57 port address for, 69

MDA (Monochrome Display Adapter), compatibility with, 309-310, 325

### Memory

for CDA, 103, 110 device, 14, 84 for Initialization Table, 102 transferring data from, 563-564 transferring data to, 565-566 video, 36-37, 307-308, 314

Memory address registers, DMA, 61, 68, 546

Memory refresh, arbitration level for, 52

Messages, error. See Return Codes, Appendix A

Micro Channel, 33-34 arbitration levels for, 51

Microprocessor mode and hardware interrupts, 146

Microprocessors, 31

address line 20, 481-482 and DMA, 50, 547 system, arbitration level for, 52

Miscellaneous output register, VGA, 75-76

Mode control field for DMA controller, 49. 547

Mode Register, DMA, 61, 69

Model byte for extensions, 169

Models, PS/2, identification of, 473

Modem Status Serial Communications Service, 404–406

#### Modems

control register for, 72, 78 controlling of, 374–375 line status of, 409 status register for, 73, 79 See also Serial ports

#### Modes

keyboard scan, 289-294
real time clock, 452
system timer, 43
video, 309-313, 324-330
See also Protected address mode;
Real address mode

MODIFY extension class, 163, 166-167, 174

Monitor support, 37, 308, 311-313

Monochrome Display Adapter, compatibility with, 309-310, 325

Motherboard IDs, reading of, 473 See also system board

Motor, diskette, 204, 228-229

Motorola MC146818A Real Time Clock, 45-46, 443, 524-525

Mouse, 495

interrupt request for, 57 return codes for, 619, 622

Multi-byte scan codes, 264-265, 586

Multiple instances of devices, 115-116

## M, cont'd

Multiscan monitor support, 37, 308

Multistaged functions, 7–8 driving of, 129 time-period handling of, 130

Multistaged processing/multitasking operating systems, 5-6

Multitasking operating system, 31

## N

National Semiconductor 8250/16640/16650 serial port controller, 40-41, 361

NEC 765 diskette controller, 35, 193

NMI. See Nonmaskable interrupts

NMI Continuous Read service, 492-493

Non-intrusive interception by extensions, 181–183

Nonmaskable interrupts
arbitration level for, 52
and CMOS RAM access, 449
device ID for, 4, 153
error handling for, 487
mask for, 60
services for, 485–486
Disable NMI, 491
Enable NMI, 490
NMI Continuous Read, 492–493
Return Logical ID Parameters, 488

Nonstaged function, redirection of, 184–185

Not My Interrupt return code, 25, 141, 143-144, 618

Not set state for Diskette Change Line signal, 191

Null CDA entries, 85, 112

Null stripping serial port mode, 392

Number of Initialization Table Entries for extensions, 168–169 in Systems Parameters Table, 98–99

Numbering of logical IDs, 104

Numeric exception error handling interrupt, 33

Numeric keypad, 267, 588

## O

Operating system
CDA building by, 103-104
and DBs and FTTs, 106, 109
isolation of, by BIOS, 1
transfer convention of, 18, 137-138

Out of paper error, Parallel Printer Service, 427

Output rules for Request Blocks, 16, 133

Overrun errors for serial ports, 392

## P

Page table address registers, 66

Palette register and DAC, 312 reading of, 345–346 writing to, 347–348

Parallel ports
addresses for, 39, 70–71, 74–75,
417
device ID for, 4, 153
error handling, 153

hardware environment for, 39, 417-418

interrupt request for, 57 return codes for, 619-620, 622, 626

services for, 415-416 Cancel Print Block, 430-431

## P. cont'd

Default Interrupt Handler, 419
Print Block, 427–429
Read Device Parameters,
421–422
Reset/Initialize Parallel Port, 425
Return Logical ID Parameters,
420–421
Return Print Status, 432–433
Set Device Parameters, 423–424

Parallel-to-serial conversions, 41. 362

#### **Parameters**

errors in, 140
Request Block, 121
table of, for Fixed Disk Service, 236-237

Parity, serial support for, 40, 361, 392

Pass parameters, CBIOS vs. ABIOS, 11

#### **Passwords**

CMOS RAM for, 526, 528 with keyboard, 296, 583-584 power-on, 60 writing of, 595-596

Patching, recommendations for, 162

Pause key, 267, 589

PC-type adapters and Micro Channel, 33

Periodic Interrupt Rate field, 449

Periodic interrupts, clock timer, 441 canceling of, 458–460 setting of, 461

Phoenix 8042 Advanced Keyboard/ Mouse Controller Firmware, 289, 292

Physical addresses, conversion of, 109

Physical devices vs. logical devices, 15 supported, 153

Physical DMA channels, 53, 551

PhysToVirt call, 22

PIC. See Programmable Interrupt Controller, 56-57

PIO (programmed I/O) for DMA controller, 49, 547

PIT. See Programmable Interval Timer

Pointer field definitions, 379, 389

#### **Pointers**

and CDA, 84-86, 103, 107, 109, 113, 475 for data area, 103 to functions, 82 pushing of, onto stack, 134 receive, 389-391, 393-396 transmit, 379-382, 384-386, 391, 399

See also Anchor pointer; Device Blocks, pointers to; Function Transfer Tables, pointers to

Pointing Device Continuous Read, 509-511

#### Pointing devices

controller for, 38
device ID for, 4, 153
error handling for, 497
hardware environment for, 497
services for, 495–496
Continuous Read, 509–511
Default Interrupt Handler, 498
Disable Pointing Device, 507–508
Enable Pointing Device, 505–506
Read Device Parameters,
500–501

Read Pointing Device Identification Code, 519-521

## P. cont'd

Reset/Initialize Pointing Device, 503-504
Return Logical ID Parameters, 499-500
Set Resolution, 514-515
Set Sample Rate, 512-513
Set Scaling Factor, 516-518

Polling of Request Block, 142-143

Port pairs, logical ID, in device block, 91

Portability, interface for, 30

#### **Ports**

for CMOS RAM, 45, 66 for diskette, 76–77 for DMA controller, 47, 66, 68–69 for error logs, 608 for fixed disk, 70, 73–74 for game port, 70 for keyboard, 65–66 for manufacturing checkpoint port, 79

for math coprocessor, 69 for parallel port, 70–71, 74, 75 for POS, 67, 69, 572 for PIC, 62–64, 68, 572 for PIT, 64–65 for serial port, 71–73, 77–79

for video, 74-76 See also Parallel ports; Serial ports

POS. See Programmable Option Select

Power-on passwords, 60 for keyboard security, 583

Power-on self test (POST)

ADF files read during, 34, 55

password access during, 60

Print Block Parallel Port Service, 427–429

Print screen key, 267, 589

Printer, resetting of, 425

Printer Interrupt Time-out field, 421

Printer Status, 425, 427, 430 returning of, 432-433

Private data in Device Block, 90

Privileges, I/O, 112

Processing model, 5-9, 128-131

Program access
with ABIOSCall, 2, 19, 23, 131,
151, 155
with ABIOSCommonEntry, 19-22,

131, 151-154

Programmable baud rate generator, 41, 362

Programmable Interrupt Controller, 56-57 port addresses for, 62-64, 67-68

Programmable Interval Timer, 42-44, 436

port addresses for, 64-65

Programmable Option Select, 55
CMOS RAM for, 527-530
device ID for, 4, 153
error handling of, 573
hardware environment for, 571-572
with Micro Channel, 33-34
parallel port extended mode,
39, 417
port addresses for, 67, 69-70

services for, 569-570
Read POS Data from an Adapter,
579-580

Read Stored POS Data from CMOS RAM, 575-576

Return Logical ID Parameters, 574-575

Write Dynamic POS Data from an Adapter, 581-582

Write Stored POS Data from CMOS RAM, 577-578

Programmed I/O for DMA controller, 49, 547

## P. cont'd

Protected address mode, 31 and CDA, 84 environments for, building of, 13 and math coprocessor, 32 switching to, 478–480 tables for, building of, 110–112

Public data in Device Block, 89 PUSH for control transfer, 17, 134

## R

RAM extensions, 27, 160 area for, 180 header for, 169 initialization of, 108, 178–179 See also CMOS RAM; Memory

Raw system scan codes, 280

Read Block of Color Registers Video Service, 354-355

Read Change Line Signal Status Diskette Service, 226-227

Read CMOS RAM Service, 536-537

Read DAC Color Register Video Service, 349–350

Read Device Parameters functions, 4 for CMOS RAM Service, 534

for Direct Memory Access Service, 555

for Diskette Change Line signal, 191

for Diskette Service, 199-201

for Fixed Disk Service, 242-244

for Keyboard Security Service, 592

for Parallel Port Service, 421-422

for Pointing Device Service, 500-502

for Real Time Clock Service, 449-451

for Serial Communications Service, 367–369

for Video Service, 319-322

Read, Diskette Service, 208-210 and Diskette Change Line signal, 191

Read, Error Log Service, 612-613

Read, Fixed Disk Service, 249-250

Read from I/O and Write to Memory, DMA Service, 565-566

Read Keyboard ID Bytes, Keyboard Service, 272–273

Read Keyboard LED Status, Keyboard Service, 282–283

Read Keyboard Scan Mode, Keyboard Service, 289–291

Read Media Parameters Diskette Service, 221–222

Read Palette Register Video Service, 345–346

Read Pointing Device Identification Code. 519-521

Read POS Data from an Adapter, 579-580

Read standard function, 4

Read Stored POS Data from CMOS RAM. 575-576

Read System Configuration, System Services, 473–474

Read Time and Date, Real Time Clock Service, 465–466

Read/write counters, PIT, 64-65 Reading from CMOS RAM, 45 of system control ports, 58

Real address mode, 31 and CDA, 84 for initialization, 12, 95 and math coprocessor, 32 switching to, 475–477

## R, cont'd

Real time clock, 45-46, 524-525 data for, 444-445 device ID for, 4,153 error handling for, 445 hardware environment for, 443 interrupt request for, 57 return codes for, 619 services for, 495-496 Cancel Alarm Interrupt, 457 Cancel Periodic Interrupt, 461 Cancel Update-Ended Interrupt. 464 Default Interrupt Handler, 446 Read Device Parameters. 449-451 Read Time and Date, 465-466 Return Logical ID Parameters, 447-448 Set Alarm Interrupt, 454-456 Set Device Parameters, 452 Set Periodic Interrupt, 458-460 Set Update-Ended Interrupt, 462-463 Write Time and Date, 466-467

Receive Serial Communications Service, 389–398

Recompute Checksum CMOS RAM Service, 540–541

#### Redirection

of cascade, interrupt request for, 57 of nonstaged functions, 184–185 of staged functions, 186–188

Reference diskette ADF files read by, 34, 55 for passwords, 583–584

Relative Block Addresses for fixed disk systems, 233

REPLACE extension class, 163-164, 174

Request Blocks, 10, 94, 119-120, 125, 128

and ABIOSCommonEntry, 20, 152 and control transfer, 18, 136 and Default Interrupt Handlers. 147-148 and function requests, 132-133 for hardware interrupt handling. 142-145 and initialization, 11, 15-16, 97, 117, 132–133 in Initialization Table, 101 lifespan of, 15, 132 parameters for, 121 for Receive function, 390, 393-396 return codes in, 24, 129, 140 structure of, 122-124 and time-out handlers, 149-150 for Transmit function, 380, 382-386 use of, 16

Reserved data pointers, initialization of, 113

Reserved fields in Request Blocks, 16 Reset Diskette System function, 190

Reset/Initialize functions, 4
for Diskette Service, 190, 203-205
for Fixed Disk Service, 244-248
for Keyboard Service, 274-275
for Parallel Port Service, 425
for Pointing Device Service,
503-504
for Serial Communications Service.

370–372

### Resolution

and default fonts, 314 for pointing devices, 514-515 video, 309-310, 325

Restore Video Environment, Video Service, 335–336

Resume Stage after Interrupt return code, 25, 141, 618

Resume Stage after Time Delay return code, 25, 141, 150, 618

659

## R, cont'd

Retryable Device Error return code, 25, 141

Retryable Device Error With Time-out return code. 25. 141

Retryable diskette errors, 195

Retryable errors, 25, 140-141, 238

Retryable fixed disk errors, 238

Retryable Time-out Error return code, 25, 141

Return Code Field Not Valid return code, 25, 141

Return codes, 24-25, 129, 139-142, 617

action-required, 618

for Default Interrupt Handler, 148

for Diskette Service, 195

for Fixed Disk Service, 238

initialization of, 143

for Keyboard Service, 268

for Parallel Port Service, 418

for Real Time Clock Service, 445

for Request Blocks, 16, 123, 125

for Serial Communications Service, 363

for System Timer Service, 437 termination-indicating, 619-626

for Video Service, 315

Return Line Status, Serial Communications Service, 409

Return Logical ID Parameters functions, 4, 20, 152

for CMOS RAM Service, 533-534 and Default Interrupt Handlers, 147

for Direct Memory Access Service, 553

for Diskette Service, 197-198

for Error Log Service, 610-611

for Fixed Disk Service, 240

for Keyboard Security Service, 590-591

for Keyboard Service, 270

for Nonmaskable Interrupt Service, 488

for Parallel Port Service, 420-421

for Pointing Device Service, 499-500

for POS Service, 574-575

for Real Time Clock Service, 447-448

for Serial Communications Service, 365–366

for System Services, 471-472

for System Timer Service, 439

for Video Service, 317

Return Modem Status Serial Communications Service, 410–411

Return Print Status Parallel Port Service, 432-433

Return ROM Fonts Information Video Service, 331–332

RGB data format, 356

RLL fixed disk controller, 35

Rogue interrupts, 144

**ROM** 

ABIOS vs. CBIOS, 31 fonts resident in, 313-314

ROM extensions, 27, 160 header for, 168 initialization of, 176–177 signature for, 168

ROMCritSection and DOS compatibility box, 22-23, 154

Rows, video, and fonts, 342

## S

Sample rate for pointing devices, 512–513

Save Video Environment, Video Service, 333-334

Scaling factor for pointing devices, 516-517

## S, cont'd

Scan codes for Keyboard Service, 263-267, 586-589 reading of, 280-281

Scratch register, serial port, 73, 79

Secondary device ID in Initialization Table, 100-101

Sector number and size in diskette formatting, 214, 223

Sectors per track, fixed disk, 236-237

Security. See Keyboard, security services for

Select Character Generator Block Video Service, 337–338

Selector descriptors, 111

Sequencer, video, 36, 307

Serial buffer head pointer receive, 389 transmit, 379, 382 port address for, 75

Serial buffer tail pointer receive, 389-390 transmit, 379-380, 382

Serial Port Service, support by, 115

Serial ports addresses for, 40, 71-73, 77-79,

361
Device Block for, 367
device ID for, 4, 153
error handling for, 363
hardware environment for, 361–363
interrupt request for, 57
and keyboard controller, 261
return codes for, 620
services for, 359–360
Cancel, 407–408

Default Interrupt Handler, 364 Enable FIFO Control, 412-413 Modem Status, 404–406
Read Device Parameters,
367–369
Receive, 389–398
Reset/Initialize Serial Port,
370–372
Return Line Status, 409
Return Logical ID Parameters,
365–366
Return Modem Status, 410–411
Set Baud Rate, 378
Set Line Control, 375–377
Set Modem Control, 374

Transmit and Receive, 399-403

Serial Receive Buffer, 71, 77, 389-391, 393-396

Transmit, 379-388

Serial Receive Head Pointer, 389-391, 393-396

Serial Receive Tail Pointer, 389-391, 393-396

Serial-to-parallel conversions, 41, 362

Service codes for extensions, 26, 159, 176

Service-specific Entry Routines, 17 for control transfer, 134-135

Service-Specific Interrupt Routine, 149

Service-specific parameters, Request Block, 121, 123-124

Service-Specific Unsuccessful Operation return code, 25, 141

Services, relationship of, to other structures, 14

Set Alarm Interrupt Real Time Clock Service, 454–456

Set Baud Rate Serial Communications Service, 378

Index 661

## S. cont'd

Set Device Parameters function, 4 for Diskette Service, 202–203 for Parallel Port Service, 423–424 for Real Time Clock Service, 452

Set Keyboard LED Status service, 284–285

Set Keyboard Scan Mode Code, Keyboard Service, 292–295

Set Line Control, Serial Communications Service, 375–377

Set Media Type for Format, Diskette Service, 223–225

Set Modem Control, Serial Communications Service, 374

Set Periodic Interrupt, Real Time Clock Service, 458-460

Set Resolution, Pointing Device Service, 514-515

Set Sample Rate, Pointing Device Service, 512-513

Set Scaling Factor, Pointing Device Service, 516-518

Set state for Diskette Change Line signal, 191

Set Typematic Rate and Delay, Keyboard Service, 286–288

Set Update-Ended Interrupt, Real Time Clock Service, 462-463

Set Video Mode, Video Service, 324-330

Sharing of hardware interrupts, 144-145

Shift key, 266-267, 587

Shutdown, CMOS RAM, 525

Signatures for extensions, 168

Single-staged functions, processing model of, 128

Single-staged processing/singletasking operating systems, 5-6 Single-tasking operating system, 31

Slashes, 267, 588

Speaker, enabling of, 483-484

Speeds, microprocessor, 31

ST506 fixed disk adapter, 35, 235

Stacks and stack frame and ABIOSCall, 23, 155 and ABIOSCommonEntry, 20, 152 and extensions, 162 loading of, 137 pushing of pointers onto, 17, 134 for System Parameter Table, 98

Staged functions, redirection of, 186–188

Standard functions, 4

Start Routines, 9, 131
flags for, 143
pointer for, 87–88, 98, 605
and return codes, 24
and staged function redirection, 186

#### Status

of function calls, 25-26 modem, 404-406, 410 of parallel ports, 39, 71, 74-75, 417 printer, 432-433

Status registers diskette controller, 76 DMA, 61, 68 fixed disk adapter, 73

Stop bits, serial support for, 40, 361

Stored pointer method of frame loading, 137

Structures. See Data structures

Subaddress extension, POS, 70

Successful return code, 25, 141

Suspension of functions, 5, 22–23, 154–155

## S, cont'd

Switch to Protected Mode, System Services, 478–480

Switch to Real Mode System Services, 475–477

Sys Req key, 267, 589

System board ROMs, initialization of, 108

System board setup enable register, 67

System configuration, reading of, 47–474

System control port definitions for, 5-59 port addresses or, 65-67

System microprocessor, arbitration level for, 52

System Parameters Table, building of, 13, 96, 98–99

System scan codes, 280 for Keyboard Security Service, 586-589 for Keyboard Service, 264-267

System Services, 469 device ID for, 4, 153 error handling for, 470 for Watchdog Timer, 44 services for, 471–484

> Disable Address Line 20, 482 Enable Address Line 20, 481 Enable Speaker, 483–484 Read System Configuration, 473–474

Return Logical ID Parameters, 471-472

Switch to Protected Mode, 478–480

Switch to Real Mode, 475-477

System Timer Service and devices, 42-46, 435 Default Interrupt Handler, 438 device ID for, 4, 153 hardware environment for, 436-437 Return Logical ID Parameters, 439

## T

Termination, return codes indicating, 619-626

Text modes and character blocks, 314 fonts for, 325, 339–344 resolution of, 310, 325 scan lines for, 327

Time

reading of, 465–466 writing of, 466–467 See also System Timer Service and devices

Time-out errors, 140 and keyboard, 268 return code for, 25, 141

Time-out parameter in Request Block structure table, 123

Time-out routines, 8-9, 149-150, 162 for function calling, 131 pointer for, 87-88, 98 and staged function redirection, 186

Time-period handlers, 7-8, 130

Time-related devices, 42

Time to Wait Before Continuing Request field, 421, 423

Time to Wait for Printer Initialization field, 421, 423

Timer channels, 43-44

Timer services. See System Timer Service and devices

Timer tick, interrupt request for, 57 Touchpads, 495

Track number in diskette formatting, 214, 223

## T. cont'd

Track switching, diskette, 204
Trackballs,495

Transfer Control bytes field for DMA controller, 50, 547

Transfer conventions, 17–18, 94
ABIOS 136
for function calling, 131, 134–136
and initialization, 117
operating system, 18, 137–138
and Request Block, 125
with time-out handlers, 149

Transfer count registers, DMA, 61, 68

Transfer Data Pointer Mode for CMOS RAM, 536, 538

Transfer rates, diskette, 193

Transfer status, DMA, 546, 560

Transmit and Receive, Serial Communications Service, 399-403

Transmit Buffer, 379–382, 384–386, 399

Transmit Head Pointer, 379-382, 384-386, 391, 399

Transmit Holding Register, 71, 77, 383. 385

Transmit, Serial Communications Service, 379–388

Transmit Tail Pointer, 379-382, 384-386, 391, 399

Turn Diskette Motor Off, Diskette Service, 228–229

200 scan-line video, 310-311, 325 Typematic rate and delay, 286-288

## U

Unexpected Reset return code, 25, 141, 618

Unit in Request Block structure table, 122

Unit-unique areas in Device Block, 92

Update-ended interrupts, 441 canceling of, 464 setting of, 462-463

## V

Verify Diskette Data, Diskette Service, 191

Verify Diskette Sectors, Diskette Service, 218–220

Verify Fixed Disk Data, Fixed Disk Service, 255-256

VGA

adapter for, 305 chip for, 307-308 and palette register, 312 port addresses for, 74-76 support for, 36

Video

device ID for, 4, 153
error handling for, 315
extension for, 184–185
hardware for, 36–37
hardware environment for, 307–308
modes for, 309–313, 324–330
monitor support for, 311–312
ROM-resident fonts for, 313–314
services for, 305–306
Default Interrupt Handler, 316
Enhanced Load Text Mode Font,
342–344

Load Text Mode Font, 339-341 Read Block of Color Registers, 354-355

Read DAC Color Register, 349-350

Read Device Parameters, 319–322

Read Palette Register, 345-346

## V. cont'd

Restore Video Environment, 335-336

Return Logical ID Parameters, 317 Return ROM Fonts Information, 331–332

Save Video Environment, 333–334 Select Character Generator Block, 337–338

Set Video Mode, 324-330 Write Block of DAC Color Regis-

write Block of DAC Color Regis ters, 356–358

Write DAC Color Register, 351–353

Write Palette Register, 347-348

Video Mode field, 326

Video subsystem register, VGA, 75 Virtual DMA channels, 53, 551

## W

WAIT signal, math coprocessor, 32

Wait states, 5, 31

Watchdog Timer, 44

Work area in Request Block structure table, 124

Write and Verify, Fixed Disk Service, 253-254

Write Block of DAC Color Registers, Video Service, 356–358

Write Command(s) and Data to Keyboard, Keyboard Service, 300-303

Write Command(s) to Keyboard Controller, Keyboard Service, 295–299

Write DAC Color Register, Video Service, 351–353

Write Dynamic POS Data from an Adapter, 581-582

Write Filter Byte 1, Keyboard Security Service, 601-602

Write Filter Byte 2, Keyboard Security Service, 603-604

Write Invocation Byte, Keyboard Security Service, 597-598

Write mask register, DMA, 62, 69

Write Match Byte, Keyboard Security Service, 599-600

Write Palette Register, Video Service, 347–348

Write Password, Keyboard Security Service, 595-596

Write precompensation, fixed disk, 236-237

Write standard function, 4

Write Stored POS Data from CMOS RAM, POS Service, 577-578

Write Time and Date, Real Time Clock Service, 466-467

Write to CMOS RAM, CMOS RAM Service, 538

Write to Diskette, Diskette Service, 211–213

and Diskette Change Line signal, 191

Write to Error Log, Error Log Service, 614–615

Write to Fixed Disk, Fixed Disk Service, 251–252

Writing

to CMOS RAM, 45 to system control ports, 58-59



# The Phoenix Technical Reference Series

Phoenix Technologies Ltd.

ABIOS for IBM® PS/2® Computers and Compatibles is an indispensable guide to the ABIOS, the part of the PS/2 BIOS that supports multitasking operating systems such as OS/2®. It is written for anyone needing a detailed understanding of the system software resident in their IBM PS/2 or compatible computer—applications programmers, operating system developers, hardware manufacturers, and students of PC architecture. This reference is the most complete source of information available on ROM-based system software for OS/2.

Key information includes:

- an ABIOS theory of operation section, that includes information on initialization, data structures and standard calling procedures
- a complete description of procedures for modifying ABIOS, with several examples
- descriptions of undocumented IBM BIOS features
- a description of how to access ABIOS services through OS/2
- programming tips for using ABIOS functions more productively
- descriptions of key hardware commands, including DMA, POS, and the Micro Channel.™

The information in this book is applicable to all Micro Channel Architecture-based IBM PS/2 and compatible computers.

**Phoenix Technologies Ltd.** of Norwood, Massachusetts is the industry leader in providing ROM BIOS products for IBM PC and PS/2 compatibles.

The Phoenix Technical Reference Series includes two other technical reference volumes on BIOS software—*CBIOS for IBM PS/2 Computers and Compatibles: The Complete Guide to ROM-Based System Software for DOS and System BIOS for IBM PC/XT/AT Computers and Compatibles: The Complete Guide to ROM-Based System Software.* 

Applications				
OS/2	DOS			
ABIOS	CBIOS	System BIOS		
PS/2 Ha	PC/XT/AT Hardware			



Addison-Wesley Publishing Company, Inc.

ISBN 0-201-51805-8