


7970E


HP-IB INTERFACE MANUAL

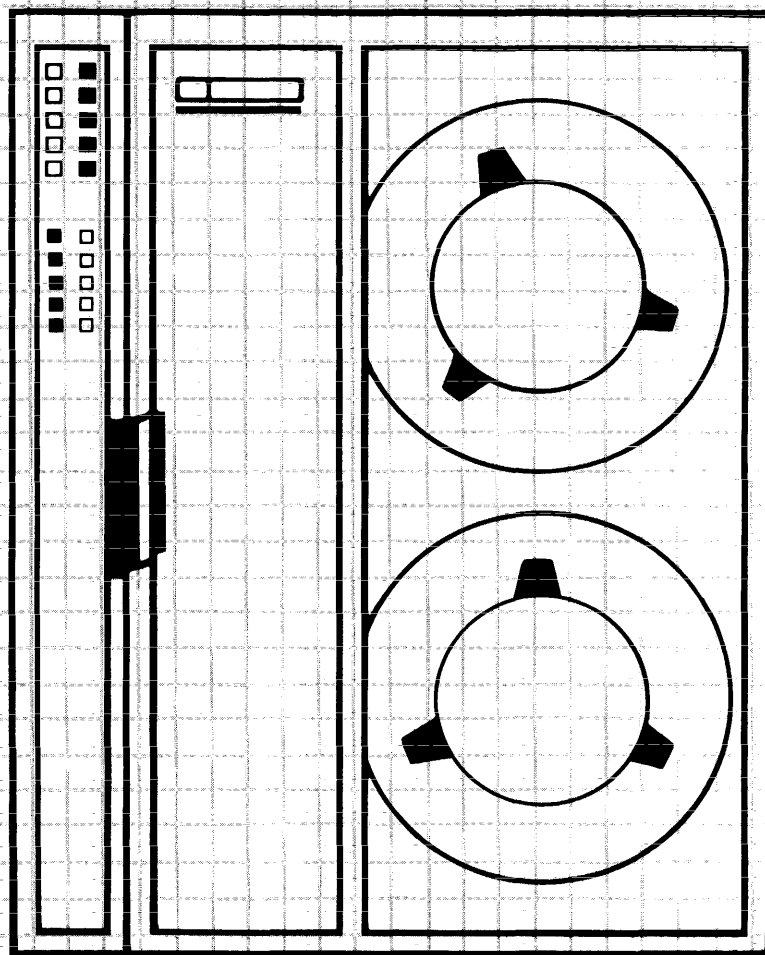

Programming and Service

7970E HP-IB INTERFACE MANUAL

Manual Part Number 07970-90919
Microfiche Part Number 07979-90920



This document was created using
the following HP products:
IDS/3000-IFS/3000-HPDRAW-TDP/3000
and was printed on an HP 2680 Page Printer
11/82



HEWLETT
PACKARD

Publication History

Changes in text to document updates subsequent to the initial release are supplied in manual update notices and/or complete revisions to the manual. The history of any changes to this edition of the manual is given below. The last update itemized reflects the machine configuration documented in the manual.

Any changed pages supplied in an update package are identified by an update number adjacent to the page number. Changed information is specifically identified by a vertical line (revision bar) on the outer margin of the page.

First EditionNOVEMBER 1982

NOTICE

The information contained in this document is subject to change without notice.

HEWLETT-PACKARD MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied or reproduced without the prior written consent of Hewlett-Packard Company.

Copyright 1982 by Hewlett-Packard Company

7970E HP-IB INTERFACE MANUAL

TABLE OF CONTENTS

Title	Page
I GENERAL INFORMATION	
1-1 INTRODUCTION.....	1-1
1-2. DESCRIPTION.....	1-1
1-3. IDENTIFICATION.....	1-2
1-4. SPECIFICATIONS.....	1-2
II PROGRAMMING	
2-1. INTRODUCTION.....	2-1
2-2. HP-IB DESCRIPTION.....	2-1
2-3. HP-IB FUNCTIONS.....	2-4
2-4. PROGRAMMING REQUIREMENTS.....	2-4
2-5. Command Sequence.....	2-5
2-6. Parallel Poll Response Conditions.....	2-6
2-7. Buffer Requirements.....	2-8
2-8. Transferring Data To Tape.....	2-8
2-9. Transferring Data From Tape.....	2-13
2-10. Power On and Identify.....	2-17
2-11. Loopback.....	2-17
2-12. SECONDARY LISTEN COMMAND GROUP.....	2-18
2-13. Data Transfer (Write).....	2-18
2-14. Tape Commands.....	2-18
2-15. End Command.....	2-22
2-16. Device Clear.....	2-24
2-17. Loopback.....	2-25
2-18. SECONDARY TALK COMMAND GROUP.....	2-25
2-19. Data Transfer (Read).....	2-25
2-20. Status.....	2-25
2-21. Status Register #1.....	2-26
2-22. Status Register #2.....	2-28
2-23. Status Register #3.....	2-30
2-24. Byte Count.....	2-31
2-25. Device Specified Jump (DSJ).....	2-32
2-26. Loopback.....	2-32
2-27. RESET COMMANDS.....	2-32
2-28. Interface Clear.....	2-32
2-29. Device Clear/Selected Device Clear.....	2-33
2-30. Untalk/Unlisten.....	2-33

7970E HP-IB INTERFACE MANUAL

III THEORY

3-1.	INTRODUCTION.....	3-1
3-2.	CONTROL AND LOGIC.....	3-1
3-3.	BUFFER.....	3-1
3-4.	CHI.....	3-3
3-5.	WRITE FORMATTER.....	3-3
3-6.	POWER SEQUENCE.....	3-3

IV MAINTENANCE

4-1.	INTRODUCTION.....	4-1
4-2.	CABLE CONNECTION.....	4-2
4-3.	SLAVE OPERATION.....	4-2
4-4.	INSTALLATION AND REMOVAL.....	4-3
4-5.	TROUBLESHOOTING.....	4-3
4-6.	MAINTENANCE MODE.....	4-4
4-7.	Maintenance Operation.....	4-5
4-8.	Maintenance Mode Switch Description.....	4-7
4-9.	LED INDICATORS.....	4-10

V REPLACEMENT PARTS AND DIAGRAMS

5-1.	INTRODUCTION.....	5-1
5-2.	DESCRIPTION OF PARTS LISTS.....	5-1
5-3.	PARTS ORDERING PROCEDURE.....	5-2
5-4.	PARTS AND DIAGRAMS.....	5-2

APPENDICES

APPENDIX A	- TABLES.....	A-1
APPENDIX B	- BACKDATING INFORMATION.....	B-1

ILLUSTRATIONS

2-1.	Hewlett-Packard Interface Bus Diagram.....	2-2
3-1.	7970E HP-IB Interface Block Diagram.....	3-2
3-2.	Power Sequence Circuitry Block Diagram.....	3-4
3-3.	Power Sequence Timing Diagram.....	3-4
4-1.	HP-IB Cable Connection.....	4-1
4-2.	7970E HP-IB Multiunit Configuration.....	4-2
4-3.	Maintenance Mode Switch Setting.....	4-6
4-4.	LED Signal Names.....	4-12
5-1.	HP-IB Interface Assembly (07970-62456), Exploded View.....	5-3
5-2.	Switch Adaptor PCA (07970-62372), Parts Location.....	5-4

7970E HP-IB INTERFACE MANUAL

5-3.	Switch Adaptor PCA (07970-62372), Schematic.....	5-5
5-4.	HP-IB Connector (J6).....	5-6
5-5.	Connector Adaptor PCA (07970-62453), Diagram.....	5-7
5-6.	Control PCA (07970-62454), Parts Location.....	5-8
5-7.	Control PCA (07970-62454), Schematic (Sheet 1 of 3)...	5-11
5-8.	Formatter PCA (07970-62455), Parts Location.....	5-15
5-9.	Formatter PCA (07970-62455), Schematic.....	5-16
B-1.	HP-IB Interface Assembly (07970-62417), Exploded View.....	B-3
B-2.	Control PCA (07970-62416), Parts Location.....	B-4
B-3.	Control PCA (07970-62416), Schematic.....	B-7
B-4.	Formatter PCA (07970-62370), Parts Location.....	B-10
B-5.	Formatter PCA (07970-62370), Schematic.....	B-13
B-6.	Power Sequence PCA (07970-62407), Parts Location.....	B-16
B-7.	Power Sequence PCA (07970-62407), Timing Diagram.....	B-17
B-8.	Power Sequence PCA (07970-62407), Schematic.....	B-17

TABLES

1-1.	Specifications.....	1-3
2-1.	General Command Sequence.....	2-5
2-2.	HP-IB Address and DIO Line Number Relationship.....	2-6
2-3.	Single Burst Or Block Mode Command Sequence To Tape.....	2-10
2-4.	Burst Mode Command Sequence To Tape.....	2-11
2-5.	Single Burst Or Block Mode Command Sequence From Tape.....	2-14
2-6.	Burst Mode Command Sequence From Tape.....	2-15
2-7.	Status Information.....	2-26
5-1.	HP-IB Interface Assembly (07970-62456), Parts List....	5-2
5-2.	Switch Adaptor PCA (07970-62372), Parts List.....	5-4
5-3.	Control PCA (07970-62454), Parts List.....	5-9
5-4.	Formatter PCA (07970-62455), Parts List.....	5-14
A-1.	Tape Unit Identify Bytes.....	A-2
A-2.	Listen Secondary Commands.....	A-2
A-3.	Talk Secondary Commands.....	A-3
A-4.	Tape Command Secondary Data Byte.....	A-3
A-5.	End Command Secondary Data Byte.....	A-4
A-6.	DSJ Command Secondary Data Byte.....	A-4
A-7.	Status Command Secondary Data Bytes.....	A-5
B-1.	Backdating Information.....	B-1
B-2.	HP-IB Interface Assembly (07970-62417), Parts List....	B-2
B-3.	Control PCA (07970-62416), Parts List.....	B-5
B-4.	Formatter PCA (07970-62370), Parts List.....	B-11
B-5.	Power Sequence PCA (07970-62407), Parts List.....	B-18

7970E HP-IB INTERFACE MANUAL

SECTION I. GENERAL INFORMATION

1-1. INTRODUCTION

This manual provides general information for the 7970E Magnetic Tape Unit HP-IB Interface and a programming section, a brief theory of operation and maintenance information.

This section covers general information which includes a general description, identification, and specifications for the 7970E HP-IB Interface.

1-2. DESCRIPTION

The 7970E HP-IB Interface allows a user to operate a 7970E (45 IPS, 1600 bpi, 9TK, PE) Magnetic Tape Drive on a Hewlett-Packard Interface Bus system. It provides the necessary control between the 7970E Magnetic Tape Unit and the HP-IB system controller. Slave operation is also available with the HP-IB option allowing the connection of multiple tape drives to a system through a single HP-IB interface contained in the master tape unit.

The 7970E HP-IB Interface is a factory installed option but it is also available for field installation (using the 26072A HP-IB Conversion Kit).

NOTE

The HP-IB interface does not respond correctly if the tape unit contains Read Motherboard PCAs numbered 07970-62040; the HP-IB interface requires the 07970-63392 Read Motherboard PCA.

7970E HP-IB INTERFACE MANUAL

The HP-IB Interface consists of a Control PCA, Write Formatter PCA, a back panel, a Back Panel/Switch PCA, and miscellaneous cables (see figure 5-1, HP-IB Interface Assembly, Exploded View). The Control and Write Formatter PCAs contain the necessary electronics for tape motion and data transfer control.

1-3. IDENTIFICATION

Printed circuit assemblies (PCAs) are identified by a part number and an alphanumeric code consisting of a letter, a series code, and a division code stamped or etched on the assembly (A-1716-46). The letter identifies the version of the etched trace pattern of the unloaded printed circuit board. The four digit series code pertains to the electrical characteristics (circuit design) of the loaded PCA. The division code identifies the Hewlett-Packard division that manufactured the assembly.

1-4. SPECIFICATIONS

The HP 7970E HP-IB Interface is listed by Underwriter's Laboratories, Inc. in the following categories with respective guide designations: Electronic Data Processing Equipment (EMRT), Teaching and Instruction Equipment (WYFW), and Office Appliance and Business Equipment (QOAT).

The Canadian Standards Association has certified this 7970E HP-IB Interface as Data Processing Equipment.

This Tape Unit was designed to meet most European Safety and RFI/EMC standards for Electronic Data Processing Equipment effective prior to 1 July 1978. Any questions concerning regulatory agency compliance should be directed to the local Hewlett-Packard Sales and Service Offices.

The Specifications for the 7970E HP-IB Interface are listed in Table 1-1.

7970E HP-IB INTERFACE MANUAL**TABLE 1-1. SPECIFICATIONS**

*** Electrical Characteristics**

Power required: +5v @ 2.5 amps
+12v @ 75 ma
-12v @ 50 ma

All power comes from the standard 7970E power
115 or 230 (+/- 10%) Vac;
50 to 66 hz, single phase;
400 VA, maximum (on high line).

*** Mechanical Characteristics**

Size: Approx. 36 cm x 18 cm (14 in x 7 in) PCA's

Weight: Less than 0.9 kg (2 lb.)

Compatability: This interface requires an HP-IB Read Motherboard
PCA (part no. 07970-62392) for proper operation.

Interface Cable: 6 metre cable

*** Environmental Specifications**

Operating Temp: 0 to 55 Deg. C (32 to 131 Deg. F)

Relative Humidity: 20 to 80% (Non-condensing)

7970E HP-IB INTERFACE MANUAL

SECTION II. PROGRAMMING

2-1. INTRODUCTION

This section contains a brief description of the Hewlett-Packard Interface Bus (HP-IB), the magnetic tape HP-IB functions, and programming information. The programming information includes a description of the 7970E HP-IB programming requirements, secondary talk and listen commands, and the reset commands for the tape unit.

If the user is unfamiliar with 7970E HP-IB interface programming, refer to paragraph 2-4, Programming Requirements, for a brief description of 7970E HP-IB Interface programming basics. This section references most of the other programming sections and can act as a guide to the more detailed programming information in the remainder of the section.

2-2. HP-IB DESCRIPTION

The Hewlett-Packard Interface Bus (HP-IB) is a carefully defined instrumentation interface which simplifies the integration of instruments, calculators, and computers into systems. It minimizes compatibility problems between devices and has sufficient flexibility to accommodate future products.

The Hewlett-Packard Interface Bus employs a 16 line bus which is composed of three handshake lines to control data transfer timing, five management lines to control bus operations, and eight data lines for data transfer.

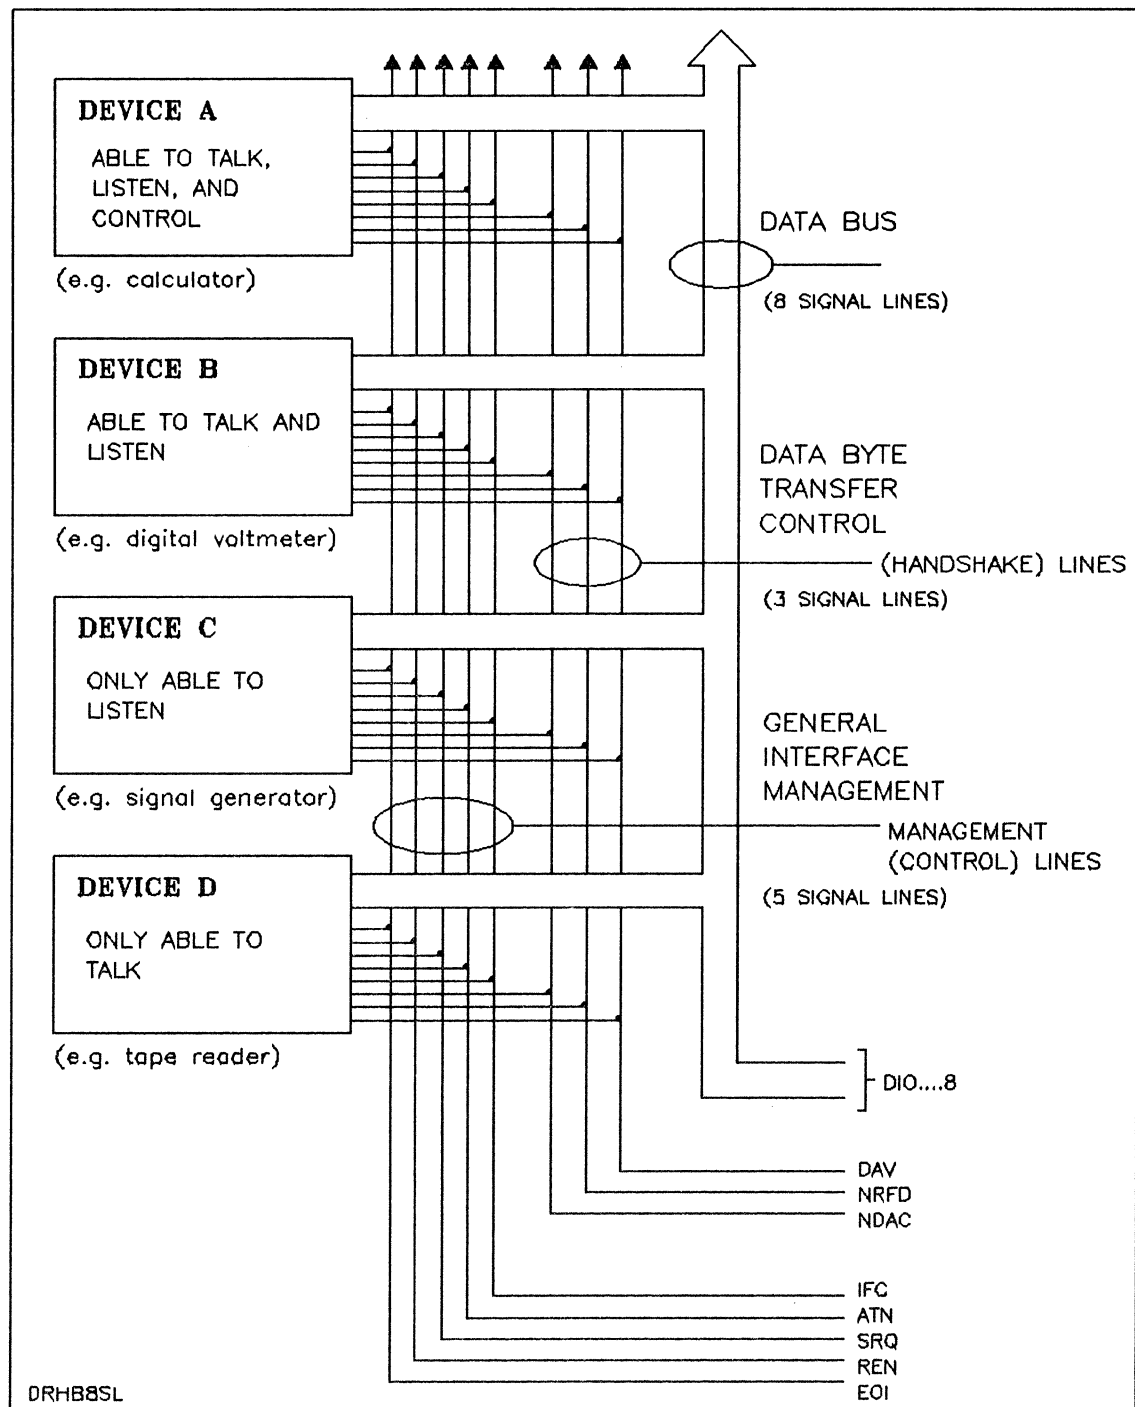
7970E HP-IB INTERFACE MANUAL

Figure 2-1. Hewlett-Packard Interface Bus Diagram

7970E HP-IB INTERFACE MANUAL

To operate a device on the HP-IB requires the device be in one of three HP-IB communication modes (functions): talker, listener, or controller. A controller is a device capable of controlling HP-IB operations. It determines which bus device is serviced and when to service it. Once the controller has determined which device to service, it issues a primary command to that device. The primary command can be either a My Talk Address (MTA) or a My Listen Address (MLA) command. The My Talk Address configures the device to be a talker which enables it to transmit data to the bus and the My Listen Address configures the device to be a listener allowing it to accept data. In these two modes the device is referred to as either a talker (data transmitter) or a listener (data receiver).

Immediately following the primary command the HP-IB controller issues a secondary command. The secondary command, referred to as My Secondary Address (MSA), informs the bus device how to interpret the data bytes that follow the secondary command (refer to table A-2 or A-3). Some secondary commands have a modifier data byte (sent across the bus as data) which is sent immediately following the secondary command to further define the secondary command. The secondary commands are grouped into secondary talk and secondary listen command groups and are sent to the device when it is in the talk or listen mode, respectively.

NOTE

The state of the HP-IB bus ATN (attention) management (control) line determines the status of the DATA lines (DIO 1 through 8). When the ATN line is low (true), the eight data lines are in the command mode; when ATN is high, the data lines are in the data mode. In command mode the information placed on the data lines is considered an HP-IB bus command and when in the data mode the information is considered data.

The HP-IB provides two ways for a bus device to request service. The first method, serial polling (not used in this interface), is initiated when a bus device, requiring service, asserts the Service Request (SRQ) control line. When the controller sees the SRQ line low, it begins a serial poll sequence. This sequence involves selecting (addressing) each device on the bus, one at a time, to find the device that requires service. With this polling method the bus operates with up to 30 devices but, is somewhat slow in that the bus controller must address each device on the bus, one at a time, to locate the one requiring service. A second polling method, parallel

7970E HP-IB INTERFACE MANUAL

polling (used by the tape interface), limits the number of devices on a bus to eight and is much faster locating devices requiring service. Each device's bus address (0 through 7) corresponds to one of the eight DIO lines (8 through 1). When the bus controller polls (the bus controller initiates a parallel poll) the bus, any device requiring service asserts the DIO line corresponding to its address. This immediately provides the bus controller with the address(es) of the device(s) requiring service.

All bus devices are provided with a bus address, referred to as the fundamental address, which identifies the device location on the bus. These addresses range from 0 through 7 for parallel polling and 0 through 30 for serial polling. When the controller polls the bus, the devices requiring service respond with their bus address. The controller then embeds the received address of a device requiring service in the primary command (MLA or MTA) that is sent across the bus to address and service that device. For a device to become an active talker or listener the embedded address in the primary command must equal the address of the bus device.

2-3. 7970E HP-IB FUNCTIONS

In addition to the standard handshake capability (Source and Acceptor) the 7970E HP-IB Interface recognizes the Extended talker, Parallel Poll and Device Clear functions. Functions not incorporated are Service Request (SRQ), Remote/Local, Device Trigger, and Controller.

2-4. PROGRAMMING REQUIREMENTS

The following paragraphs describe the general HP-IB software requirements for interfacing a 7970E HP-IB Magnetic Tape Unit to a Hewlett-Packard Interface Bus system. The basic procedure which must be followed when creating a 7970E tape unit system driver is provided.

7970E HP-IB INTERFACE MANUAL

2-5. Command Sequence

The sequence of HP-IB commands sent across the bus, between the system controller and the HP-IB interface, is shown in figure 2-1 (General Command Sequence). This sequence occurs for either talk or listen mode message sequence. The listen sequence and the talk sequence are discussed briefly in the following paragraphs.

The sequence of HP-IB messages for transferring commands, status, or data is shown in table 2-1.

TABLE 2-1. GENERAL COMMAND SEQUENCE

IFC	- Interface Clear (Untalk or Unlisten may also be used if the previous state of the unit was a talker or listener) is used to unaddress the tape controller (CHI chip).
MLA	- My Listen Address (MLA) or My Talk Address (MTA)
or	(primary commands) commands configure the interface
MTA	to the listen or talk mode.
MSA	- My Secondary Address, is one of several possible secondary commands to define the meaning of the data or modifier byte(s) that follow the secondary command.
DAB	- Data byte(s), associated with the secondary command, consist of one or more bytes and include the tape commands, status, data, loopback, or byte count information.
DAB	count information.
UNL	- Unlisten or Untalk is sent to unaddress the tape
or	controller.
UNT	

For the system controller to transmit commands and status to the HP-IB interface, the HP-IB interface state must be a listener, therefore the system controller must issue the My Listen Address (MLA) primary command. If the device was previously addressed as a talker it must receive an Untalk (UNT) or an Interface Clear (IFC) command before the My Listen Address. Following the listen address (primary command), one of five secondary listen commands (refer to table A-2, Listen Secondary Commands): Tape commands, Data Transfer command, End commands, Device Clear, or Loopback command is sent. Following the secondary the bus should be placed into the data mode and the secondary's data byte(s) (if any) placed on the bus. The data byte(s) contain the actual command to be performed by the

7970E HP-IB INTERFACE MANUAL

interface/tape (execution commences upon transfer of the data byte, if used) or the data to be written to tape.

In order for the system controller to receive status and data from the HP-IB interface, the HP-IB interface state must be a talker, therefore the system controller must issue the My Talk Address (MTA) primary command. If the HP-IB interface was previously addressed as a listener, it must receive an Unlisten (UNL) message or an Interface Clear before the My Talk Address (MTA). Following the MTA (primary command), one of the five secondary talk commands (refer to table A-3, Secondary Talk Commands) which include Status, Data Transfer, Byte Count, Device Specified Jump, and Loopback, is sent. Following the secondary command the bus is placed into the data mode and the secondary data byte(s) are placed on the bus. These data byte(s) (refer to tables A6 and A7) contain the actual status information or data to be transferred by the HP-IB interface to the system controller.

2-6. Parallel Poll Response Conditions

If the HP-IB interface requires service, it responds to a parallel poll from the bus controller by asserting the DIO line (8 through 1) which corresponds to its HP-IB address (0 through 7). Table 2-2 shows the relationship of HP-IB addresses to DIO line numbers.

TABLE 2-2. HPIB ADDRESS AND DIO LINE NUMBER RELATIONSHIP

HP-IB ADDRESS	-	0	1	2	3	4	5	6	7
DIO LINE	-	8	7	6	5	4	3	2	1

The following conditions result in a parallel poll response (request for service) by the 7970E HP-IB Interface.

- * Power restored - For any master drive in which the HP-IB interface is connected
- * Drive placed on-line (if Auto-Select, End command, DIO line 3 set).
- * Rewind or Rewind/Go Off-Line command received.
- * Completion of the following commands:

7970E HP-IB INTERFACE MANUAL

1. Rewind (Only if End command bit 3 is set. No rewind poll response is issued for a Rewind/Off-Line command completion.)
 2. Forward Space/Backspace a Record/File
 3. Write Gap
 4. Read Record
 5. Read Record Backward
 6. Write Record
 7. Write File Mark
 8. Unit Select
- * Command rejected
 - * Interface busy (a response to issuance of a tape command.)
 - * Data transfer required (reading or writing and half full buffer condition exists).
 - * Tape runaway (6.7 sec. in which no data is encountered on the tape)
 - * DEVICE CLEAR

After each poll response has been recognized by the user, the response must be cleared by reading the Device Specified Jump (DSJ) status (which also clears the DSJ register); or, the poll response and DSJ register may be cleared by using End commands (refer to paragraph 2-15, End Commands). For maximum speed it is recommended that the user read the DSJ.

End commands are used to modify the poll response conditions and include commands to clear the poll response, clear the DSJ register, inhibit poll responses for read bursts during a read operation, and enable poll responses for rewind completion and for placing the tape unit on-line (Auto-Select). These modifications to the poll response conditions are explained in more detail in paragraph 2-15, End commands.

2-7. Buffer Requirements

The HP-IB interface buffer is a 128 byte FIFO (first in, first out) buffer designed to handle burst transfers of 64 bytes or to handshake one byte at a time across the bus at the read/write rate of the tape unit. Handshaking bytes across the bus at the tape unit read/write rate is slow and does not utilize the maximum HP-IB data transfer rate. Burst mode transfers 64 data bytes at a time to the tape unit HP-IB interface buffer to utilize the maximum HP-IB data transfer rate. For a tape read operation using burst mode, the data from tape begins filling the HP-IB interface buffer. When the buffer reaches half-full (64 bytes) a flag (the half-full flag) sets in the HP-IB interface to indicate a poll response condition (data transfer request). The system controller must respond and transfer the 64 bytes from the buffer before the tape read operation fills the remaining 64 bytes of the buffer. If the system controller does not respond, the tape read operation continues to fill the buffer. When the buffer is filled (128 bytes) and data continues coming, a buffer overrun condition results, producing a Timing error. During a tape write operation the system controller sends two consecutive 64 byte bursts to fill the 128 byte buffer. As the tape write operation empties 64 bytes from the buffer, the buffer half-full flag sets, to enable a poll response to request another 64 byte data burst. The system controller must send this next burst before the write operation of the tape unit empties the buffer, otherwise a buffer underrun condition results, producing a timing error condition.

The time to fill or empty half (64 bytes) of the buffer by a tape unit read or write operation is referred to as the critical response time (CRT). The critical response time for a 45 ips tape unit reading or writing 1600 bpi is 890 microseconds.

The system controller must respond to a tape unit data transfer request condition and transfer the next 64 byte data burst within the critical response time in order to avoid a Timing (buffer overrun or underrun) error.

2-8. Transferring Data To Tape

To transfer data to tape (refer to table 2-3 for single burst or block mode command sequence or table 2-4 for burst mode command sequence transfer to tape), the tape interface must be a listener, then the user must initiate a write record operation by sending the listen Tape Command secondary with the Write Record data byte (refer to paragraph 2-14, Tape Commands, Write Record). After the Write Record command has been received by the HP-IB interface but before the tape motors are up to speed, a poll response is asserted with the Device Specified Jump (DSJ) status set to 0, indicating data should

7970E HP-IB INTERFACE MANUAL

now be sent. The tape interface should be placed into the talk mode, the DSJ secondary sent (to read the DSJ status) and then the tape interface placed back into the listen mode. The user has approximately 8 msec (for a 45 ips drive) before data must be placed on the bus after the data request poll response is asserted by the HP-IB interface. (This timing requirement applies to the first burst of a burst mode or the start of a block mode data transfer.) If data is not available to the tape unit after the unit has written its preamble, a timing error results. Following the poll response (for data) the Data Transfer (Write) secondary should be issued, and the data placed on the bus within the required time. The data may be transferred to tape in either burst mode or block mode (block mode is the preferred method of transfer).

In burst mode, data is transferred in bursts of 64 bytes (see figure 2-4). Each time the HP-IB interface is ready to accept a data burst, a poll response is issued with the Device Specified Jump (DSJ) status equal to 0. The user has the responsibility of clearing the poll response either by reading the DSJ (preferred method) or by issuing the End command (refer to paragraph 2-15, End Command, DIO line 1 Clear Poll Response and DIO line 5 Clear DSJ). After the response is cleared, the user must issue the Data Transfer (Write) secondary followed by the data burst. The first data byte (of the burst) must be furnished within the critical response time (refer to paragraph 2-7, Buffer Requirements) otherwise a buffer underrun occurs resulting in a Timing error. The first two data bursts are sent one right after the other to fill the buffer. The final data burst, containing 64 or fewer bytes, has the last byte tagged with EOI (End-Of-Information).

In block mode (see table 2-3), data is transferred as a continuous string of data of any length (8192 bytes maximum recommended). The initial 128 bytes are transferred at 1.2 microsec/byte; all successive bytes are transferred at tape drive speed: 13.9 microsec./byte (at 45 ips). Like burst mode, the first data byte (of the burst) must be furnished within the critical response time after the poll response is issued by the interface. But, in block mode, any poll responses (requests for more data) which might occur after the initial poll response should be ignored. Following the last data byte, tagged with EOI, the Clear Poll Responses, End command (DIO Line 1) should be used to clear the data request (poll response, if any) that had been ignored earlier and, the DSJ should also be cleared with the Clear DSJ Register, End command (DIO line 5 set). Poll responses that follow should again be recognized (the write record completed poll response should be recognized next).

7970E HP-IB INTERFACE MANUAL

TABLE 2-3. SINGLE BURST OR BLOCK MODE COMMAND SEQUENCE
TO TAPE

HP-IB Interface Response (*)	PROGRAM MESSAGE SEQUENCE	COMMENTS	Table Reference (Appendix)
	UNT or IFC	Clearing interface for new sequence	
	MLA	LISTEN	
	MSA	Tape Command	A-2
	DAB	Write Record	A-4
	UNL		
* HP-IB Interface Service Request		Request for data. Send within critical response time.	
	MTA	TALK	
	MSA	Request DSJ	A-3
* DAB		Tape controller returns DSJ	A-6
	UNT		
	MLA	LISTEN	
	MSA	Data Transfer	A-2
	DAB	Data -	
	.	Up to 64 data bytes for burst	
	.	mode or up to 8192 bytes for	
	.	block mode. During a block mode	
	.	transfer, data (Service) requests	
	.	which occur here should be	
	.	ignored.	
	DAB	Last byte tagged with EOI.	A-2
	MSA	End Command (Optional- for	
		block mode)	
	DAB	Clear Poll Responses	A-5
	UNL		
* HP-IB Interface Service Request		Write Record command completed. Final poll response.	
	MTA	TALK	
	MSA	Request DSJ	A-3
* DAB		Tape controller returns DSJ	A-6
	UNT		

7970E HP-IB INTERFACE MANUAL

TABLE 2-4. BURST MODE COMMAND SEQUENCE TO TAPE (Page 1 of 2)

HP-IB Interface Response (*)	PROGRAM MESSAGE SEQUENCE	COMMENTS	Table Reference (Appendix)
	UNT or IFC		
	MLA	LISTEN	
	MSA	Tape Command	A-2
	DAB	Write Record	A-4
	UNL		
* HP-IB Interface Service Request		Request for data. Send within critical response time.	
	MTA	TALK	
	MSA	Request DSJ	A-3
* DAB		Tape controller returns DSJ	A-6
	UNT		
	MLA	LISTEN	
	MSA	Data Transfer	A-2
	DAB		
	.		
	.		
	.	1st Data Burst (64 bytes)	
	.		
	.		
	DAB	End of 1st burst	
	UNL		
* HP-IB Interface Service Request		Request for data.	
	MTA	TALK	
	MSA	Request DSJ	A-3
* DAB		Tape controller returns DSJ	A-6
	UNT		
	MLA	LISTEN	
	MSA	Data Transfer	A-2

7970E HP-IB INTERFACE MANUAL

TABLE 2-4. BURST MODE COMMAND SEQUENCE TO TAPE (Page 2 of 2)

HP-IB Interface Response (*)	PROGRAM MESSAGE SEQUENCE	COMMENTS	Table Reference (Appendix)
	DAB		
	.		
	.		
	.	2nd Data Burst (64 bytes).	
	.		
	.		
	DAB	End of 2nd burst	
	UNL		
* HP-IB Interface Service Request		Request for data.	
	MTA	TALK	
	MSA	Request DSJ	A-3
*	DAB	Tape controller returns DSJ	A-6
	UNT		
	MLA	LISTEN	
	MSA	Data Transfer	A-2
	DAB		
	.		
	.		
	.	Nth Data Burst (64 or less bytes).	
	.		
	.		
	DAB	Last byte tagged with EOI.	
	MSA	End Command (Optional)	A-2
	DAB	Clear poll response (DIO 1)	A-5
	UNL		
* HP-IB Interface Service Request		Write Record command completed. Final Poll Response.	
	MTA	TALK	
	MSA	Request DSJ	A-3
*	DAB	Tape controller returns DSJ	A-6
	UNT		

7970E HP-IB INTERFACE MANUAL

For both modes, the Write Record Completed poll response occurs within 16.8 ms., beginning after EOI has been accepted by the interface. Next, the user should read the DSJ: if DSJ=0, no errors were found; if the DSJ=1, an error or unusual status is indicated and the status should be read and the appropriate action taken (refer to paragraph 2-20, Status).

2-9. Transferring Data from Tape

To transfer data from tape (refer to table 2-5 for the single burst or block mode command sequence or table 2-6 for burst mode command sequence), the user must first place the tape into the listen mode (with the My Listen Address), then initiate a tape read operation by sending the Read Record Tape Command secondary (refer to paragraph 2-14, Tape Command, Read Record). The tape unit reads data from the tape and transfers it to the buffer. When the buffer reaches half full, the HP-IB interface responds to a poll (DSJ set to 0), indicating a data transfer is required. Following this response, the tape unit should be placed into the talk mode, the DSJ secondary issued to read the status, and then the Data Transfer (Read) secondary should be sent to direct the HP-IB interface to place data on the bus. The user must initiate the transfer within the critical response time (refer to paragraph 2-7, Buffer Requirements) after the controller buffer is half full. If data transfer is not initiated within the critical response time, a timing error results indicating a buffer overrun. Data transfer may be accomplished using either burst mode or block mode (block mode is the preferred method).

In burst mode (refer to table 2-6), each time the buffer has 64 bytes ready to burst, the HP-IB interface responds to a poll with the Device Specified Jump (DSJ) status set to 0 (indicating data transfer is required). The user must read the DSJ and issue the Data Transfer (refer to paragraph 2-13, Data Transfer) secondary to begin data transfer (within the critical response time). This sequence is repeated for each 64 byte burst. The last burst consists of 64 or less bytes with the last byte tagged with EOI.

In block mode (refer to figure 2-5) the user must still initiate data transfer within the CRT after the first data transfer poll request has been made. The interface can then transfer data continuously at 1.2 microsec./byte for approximately the first 128 bytes (depending on the response time), then at the tape drive rate of 13.9 microsec./byte. for the remaining portion of the record. The last byte is tagged with EOI.

Following the byte tagged with EOI, in either burst or block mode, the user should send the Clear Poll Response, End command (DIO Line 1 set) to clear the "ignored" data poll response (especially for block

7970E HP-IB INTERFACE MANUAL

mode). A poll response must be set within 11.7 msec., after the EOI transfer, to indicate completion of the operation. It is now up to the user to read the DSJ; if the DSJ = 0, no errors occurred in the read operation, if the DSJ = 1, it is recommended that the user read the status to determine if a retry is necessary.

TABLE 2-5. SINGLE BURST OR BLOCK MODE COMMAND SEQUENCE FROM TAPE

HP-IB Interface Response (*)	PROGRAM MESSAGE SEQUENCE	COMMENTS	Table Reference (Appendix)
	UNT or IFC		
	MLA	LISTEN	
	MSA	Tape Command	A-2
	DAB	Read Record	A-4
	UNL		
* HP-IB Interface Service Request		Request for data. Send within critical response time.	
	MTA	TALK	
	MSA	Request DSJ	A-3
* DAB		Tape controller returns DSJ	A-6
MSA		Data Transfer (Read)	A-2
* DAB		Data -	
* .		Up to 64 data bytes for burst	
* .		mode or up to 8192 bytes for	
* .		block mode. During a block mode	
* .		transfer, data (Service) requests	
* .		which occur here should be	
* .		ignored.	
* DAB		Last byte tagged with EOI.	
	UNT		
	MLA	LISTEN	
	MSA	End Command (Optional)	A-2
	DAB	Clear Poll Responses	A-5
	UNL		
* HP-IB Interface Service Request		Read Record command completed. Final poll response.	
	MTA	TALK	
	MSA	Request DSJ	A-3
* DAB		HP-IB interface returns DSJ	A-6
	UNT		

7970E HP-IB INTERFACE MANUAL

TABLE 2-6. BURST MODE COMMAND SEQUENCE FROM TAPE (Page 1 of 2)

HP-IB Interface Response (*)	PROGRAM MESSAGE SEQUENCE	COMMENTS	Table Reference (Appendix)
	UNT or IFC		
	MLA	LISTEN	
	MSA	Tape Command	A-2
	DAB	Read Record	A-4
	UNL		
* HP-IB Interface Service Request		Request for data. Send within critical response time.	
	MTA	TALK	
	MSA	Request DSJ	A-3
* DAB		Tape controller returns DSJ	A-6
MSA		Data Transfer (Read)	A-2
* DAB		1ST BURST	
*	.		
*	.		
*	.	64 data bytes	
*	.		
*	.		
*	.		
* DAB		End of 1st data burst (64 bytes)	
	UNL		
* HP-IB Interface Service Request		Read Record command request for next burst.	
	MTA	TALK	
	MSA	Request DSJ	A-3
* DAB		Tape controller returns DSJ	A-6

7970E HP-IB INTERFACE MANUAL

TABLE 2-6. BURST MODE COMMAND SEQUENCE FROM TAPE (Page 2 of 2)

HP-IB Interface Response (*)	PROGRAM MESSAGE SEQUENCE	COMMENTS	Table Reference (Appendix)
	MSA	Data Transfer (Read)	A-2
*	DAB	2nd BURST	
*	.		
*	.		
*	.	64 Data Bytes	
*	.		
*	.		
*	DAB	End of 2nd data burst	
	UNL		
* HP-IB Interface Service Request		Read Record request for next data burst.	
	MTA	TALK	
	MSA	Request DSJ	A-3
*	DAB	Tape controller returns DSJ	A-6
	MSA	Data Transfer (Read)	A-2
	MSA	Data Transfer (Read)	A-2
*	DAB	Nth BURST	
*	.		
*	.		
*	.	64 or less data bytes	
*	.		
*	.		
*	DAB	Last byte tagged with EOI.	
	UNT		
	MLA	LISTEN	
	MSA	End Command (Optional)	A-2
	DAB	Clear Poll Responses	A-5
	UNL		
* HP-IB Interface Service Request		Final poll response - Read Record command completed.	
	MTA	TALK	
	MSA	Request DSJ	A-3
*	DAB	Tape controller returns DSJ	A-6
	UNT		

7970E HP-IB INTERFACE MANUAL**2-10. Power On and Identify**

The tape unit powers up in a reset state. The DIO line corresponding to the device's fundamental address is asserted (poll response) for a parallel poll after interface initialization has been completed. The system controller should acknowledge the device's request and subsequently issue an Identify request (TE function).

The Identify command informs the system controller that the device connected at this address is a 7970E tape storage device. The command sequence for Identify is:

- * UNL/IFC - Unlisten or clear the interface
- * MTA - Issue special primary talk which contains device bus address of 31 (octal)
- * MSA - Issue Identify secondary
- * DAB - Data byte 1 = 10000001
- * DAB - Data byte 2 = 10000011

2-11. Loopback

Loopback verifies the operation of the HP-IB communication link. The Loopback commands, listen mode (refer to paragraph 2-17, Loopback Listen) and talk, (refer to paragraph 2-26, Loopback Talk), are used to transfer known data to the HP-IB interface. The HP-IB interface then transfers the same data back to the system controller. The system controller compares the received data to that which was sent and, if they are not identical, the system controller assumes an error exists on the bus. With loopback it is possible to detect "stuck" data or control lines as well as faulty processor chips. Loopback operation exercises the bus at the maximum data transfer rate and on the HP-IB interface it exercises the CHI, bus transceivers, buffer microprocessor, and handshake logic at operating speed. The message sequence for the loopback secondary is similar to the message listing explained under Command Sequence (see paragraph 2-5, Loopback).

7970E HP-IB INTERFACE MANUAL

2-12. SECONDARY LISTEN COMMAND GROUP

The 7970E HP-IB Interface responds to five secondary listen commands (MSA). These secondaries, listed below (also see table A-2), are explained in the following paragraphs.

- * DATA TRANSFER (Write)
- * TAPE COMMAND
- * END COMMAND
- * DEVICE CLEAR
- * LOOPBACK (Listen)

2-13. Data Transfer (Write)

The Data Transfer (Write) secondary (X1100000) directs the interface to prepare for data bytes to be transferred to tape (refer to paragraph 2-8, Transferring Data To Tape). Following this command the bus should be placed in the data mode and the data bytes for storage should be placed on the bus. Prior to issuing this command the tape unit, it must be ready to write (refer to paragraph 2-14, Write Record).

2-14. Tape Commands

The Tape Command secondary (01100001) informs the HP-IB interface that the following data byte represents a command to be performed by the 7970E Tape Unit. These 15 tape commands (in octal) include:

- | | | | |
|-------------------|------|--------------------------|------|
| * Select Unit 0 | - 1 | * Forward Space Record | - 11 |
| * Select Unit 1 | - 2 | * Backspace Record | - 12 |
| * Select Unit 2 | - 3 | * Forward Space File | - 13 |
| * Select Unit 3 | - 4 | * Backspace File | - 14 |
| * Write Record | - 5 | * Rewind | - 15 |
| * Write File Mark | - 6 | * Rewind and Go Off-Line | - 16 |
| * Write Gap | - 7 | * Read Record Backward | - 17 |
| * Read Record | - 10 | | |

If a non-tape command (byte value not equal to one of those listed above) is sent, the HP-IB interface simply ignores the command, set Command Reject status, set the DSJ=1, and assert a poll response. If the drive is rewinding, off-line, or busy, this same response occurs if a motion (any Read, Write, or spacing command) command is issued to the tape drive. If the interface is busy and any tape command is issued, it will be rejected.

7970E HP-IB INTERFACE MANUAL

Also, note that all tape commands, with exception of the Rewind and Go Off-Line command, complete their sequence with a poll response. Rewind and Rewind/Go Off-Line issue a poll response when the tape unit begins rewinding. Following the poll response DSJ should be read: if equal to 0, the task was successfully completed; if equal to 1, unexpected status occurred and the user should read the status. The tape commands are explained below for the indicated octal value of the tape command data byte.

a. 1 - Unit Select 0

The Unit Select 0 command (00000001) selects tape unit 0, as indicated by the operator UNIT SELECT switches 0 through 3 (located on the tape drive front panel), for operation. This command also assigns the status information in Status Register #1 and #2 to unit 0 and disables all poll responses from other tape units. It is also possible to automatically select a tape unit when it is placed on-line by issuing the Rewind Completed/Auto-Select, End command (refer to paragraph 2-15, End Commands, DIO line 3).

b. 2 - Unit Select 1

The Unit Select 1 command (00000010) is identical to Unit Select 0 except that unit 1 is selected (refer to 1 - Unit Select 0).

c. 3 - Unit Select 2

The Unit Select 2 command (00000011) is identical to Unit Select 0 except that unit 2 is selected (refer to 1 - Unit Select 0).

d. 4 - Unit Select 3

The Unit Select 3 command (00000100) is identical to Unit Select 0 except that unit 3 is selected (refer to 1 - Unit Select 0).

e. 5 - Write Record

The Write Record command (00000101) begins tape motion and initializes the tape unit for a write operation. This allows the user to write data to tape during a data transfer. This command is issued prior to a Data Transfer secondary (refer to paragraph 2-8, Transferring Data To Tape). At the completion of this command tape motion stops and a poll response is asserted.

7970E HP-IB INTERFACE MANUAL

f. 6 - Write File Mark (EOF)

The Write File Mark command (00000110) causes a file mark to be written on tape. The EOF bit in the status word (Register #1) is set to 1 to confirm this operation has completed.

g. 7 - Write Gap

The Write Gap command (00000111) allows the user to forward space and erase approximately 4 inches of tape. This is useful if a section of tape is found where multiple retries fail for a write operation. The user can then skip over that portion of tape and proceed with the write operation. Upon completion of this command the HP-IB interface responds to a poll with the DSJ set 0 to indicate the Write Gap has completed with no errors.

h. 10 - Read Record

The Read Record command (00001000) initiates a tape read operation. A read operation reads data from the tape and places it into the interface buffer (refer to paragraph 2-9, Transferring Data), until a data record or file mark (EOF) is found. After the record is read (indicating the Read Record is completed), the HP-IB interface responds to a poll with the DSJ equal to 0 if no errors occurred. This poll response is the final response indicating the Read Record is complete.

i. 11 - Forward Space Record

The Forward Space Record command (00001001) moves tape in the forward direction until an end-of-record is detected. When an end-of-record is detected, a poll response is asserted with the DSJ set to 0. If a file mark (EOF) is encountered, the DSJ is set to 1 and a poll response for the EOF is asserted when motion stops. Tape motion stops when an end-of-record or EOF is detected but continues running when an EOT is encountered.

j. 12 - Backspace Record

The Backspace Record command (00001010) moves tape in the backward direction until an end-of-record is detected. If the end-of-record is detected, a poll response is asserted with the DSJ equal to 0 and tape motion stops. If a beginning-of-tape (load point) or file mark (EOF) is encountered, the DSJ is set to 1, a poll response is issued, and tape motion stops.

7970E HP-IB INTERFACE MANUAL**k. 13 - Forward Space File**

The Forward Space File command (00001011) moves tape in the forward direction until a file mark is detected and stops. The final position of the tape head is immediately following the end-of-file mark just read and just preceding the next record or file mark. The DSJ is set to 0 and the poll response asserted. If an EOT is detected the DSJ is set to 1, the EOT status is set, and motion continues (no poll response is issued). If an end-of-record is encountered, the DSJ is not affected and motion continues until either a file mark is found or enough tape (without data) has passed for the tape runaway condition to be met. The status bit is updated accordingly.

l. 14 - Backspace File

The Backspace File command (00001100) moves tape in the reverse direction and stops after the first file mark or when beginning-of-tape (load point) is detected. When tape motion stops, a poll response is asserted and the DSJ is set to 0 if a file mark was encountered or the DSJ is set to 1 if a BOT was detected.

m. 15 - Rewind

The Rewind command (00001101) causes the transport to start rewinding at 160 ips. A poll response is asserted to acknowledge that the rewind command was received. When BOT is detected, the tape is positioned at load point and halted. If the Enable Rewind Completion Response/Auto-Select, End command (refer to paragraph 2-15, End Command) has been issued to the HP-IB interface, a poll response is issued at BOT. The rewinding status bit is updated during the next idle state of the HP-IB interface. The interface is now available to control other tape units after the command received poll has been acknowledged.

n. 16 - Rewind and Go Off-Line

The Rewind and Go Off-Line command (00001111) is similar to the Rewind command except that the selected unit is taken off-line after the rewind is completed. No poll response is issued at the completion of this command.

7970E HP-IB INTERFACE MANUAL

o. 17 - Read Record Backward

The Read Record Backward command (00001111) reads the tape in the reverse direction until an end-of-record or file mark (EOF) or BOT is detected. After an end-of-record or file mark is read (indicating the Read Record Backward is completed) the tape controller responds to a poll. The user should read the DSJ. If a BOT or an EOF was detected the DSJ is set to 1. If this command is issued at load point, the HP-IB interface responds to a poll with the DSJ set to 1. It should be emphasized that the actual data that is read, is opposite to that which was read in the forward direction, that is, bytes 1,2,3,...,n-1, n read in the forward direction are read as n,n-1,...,3,2,1 in the reverse direction. The bits within the bytes do not change.

2-15. End Command

The End secondary (X1100111) is used to modify the HP-IB interface poll response conditions. It uses a data byte (which follows the End command) select of one of the four End command features. One or any combination of the four End commands may be selected by setting the DIO line corresponding to the feature. These commands, listed below, are explained in the following paragraphs.

- * Clear Poll Responses (DIO Line 1)
- * Inhibit Poll Responses For Read Bursts (DIO Line 2)
- * Enable Rewind Completion Response/Auto-Select (DIO Line 3)
- * Clear DSJ Register (DIO Line 5)
- * Abort Current Tape Operation (DIO Line 6)

All commands, with the exception of DIO line 3, yield an immediate result. (DIO lines 4,7, and 8 are not used and if set represents an invalid command.)

a. 1 - Clear Poll Response

The Clear Poll Response command, enabled when DIO line 1 is set to 1, clears the poll response for the selected tape unit. This command when used in conjunction with the Clear DSJ Register (End command, DIO line 5 set to 1) can be used as an alternative to reading the DSJ (reading the DSJ clears the DSJ register and the poll response). The Clear Poll Response command can be used to clear ignored poll responses issued during a block mode data transfer.

7970E HP-IB INTERFACE MANUAL**b. 2 - Inhibit Poll Responses For Read Data Transfers.**

The Inhibit Poll Responses For Read Data Transfers command, enabled when DIO line 2 is set to 1, inhibits poll responses for read data transfers during a tape read operation. When sent, anytime after the Read command has been issued, it allows the user to recognize the data received prior to the command and ignore all subsequent data in the record. This allows the user to read some portion of the first part of a record and then ignore the remainder. A poll response is asserted at the end of the record with the DSJ set to reflect the appropriate action for the entire record. A timing error will not result for the terminated portion of the record; however, if a timing error did occur in the received portion of the record it is indicated. This command remains valid for the current read record operation only.

c. 3 - Enable Rewind Completion Response/Auto-Select

The Enable Rewind Completion Response/Auto-Select command, selected by setting DIO line 3 to 1, enables the HP-IB interface to issue one poll response for any tape unit (master/slave) that completes a rewind or is placed on-line. When a tape unit is placed on-line with this command enabled, the HP-IB interface automatically selects (auto-select) that unit, provide a poll response for the unit placed on-line, clear the Tape-Unit-X-Has-Been-Placed-On-Line bit in Status Register 3, and set the DSJ to 1. If this End command is issued after a unit has already been placed on-line but has not been selected (serviced), the unit can still be auto-selected.

If the unit completes a rewind with the Enable Rewind Complete Response/Auto-Select command enabled, the HP-IB interface responds to a poll with the DSJ set to 0.

To clear this command either a rewind completion, an auto-select, or one of the select unit commands must occur. The resulting poll response must be acknowledged by reading both the DSJ and the Status secondary (with no commands in between). If this sequence is not observed the same response is repeated for the same tape unit the next time a Enable Rewind Completion Response/Auto-Select, End command is issued.

The HP-IB interface is designed to save both a rewind completed response and a tape-unit-has-been-placed-on-line operation for each of up to four tape units. (The tape-unit placed-on-line action is saved and, when the End command with DIO line 3 set is received, the unit is auto-selected). If the poll response for rewind completion or auto-select are not serviced by the HP-IB

7970E HP-IB INTERFACE MANUAL

interface they will be saved for servicing later on. It is possible to save a total of eight responses. Only one command may be issued at a time, until a response is made, then another command may be issued for the next response.

When servicing these "saved" responses the user may have to read up to four DSJs to clear out all possible responses (if desired). Both the rewind completion and the unit-placed-on-line responses are cleared when the unit has been selected. The responses are not returned in the order of their occurrence: rewind completion responses (in the order of units 0 through 3) are returned first, then Auto-Select responses (for units 0 through 3). This priority is always observed for "saved" End (DIO line 3 set) command response servicing.

d. 5 - Clear DSJ Register.

The Clear DSJ Register command, with DIO line 5 set to 1, clears the DSJ register. This command may be used in conjunction with Clear Poll Response, End, command to emulate reading the DSJ (that is, clear the poll response and reset the DSJ register). However, when the End commands are used in this manner the execution time is greater than when the DSJ secondary is used.

e. 6 - Abort Current Tape Operation

The Abort Current Tape Operation command, selected by setting DIO line 6 to 1, stops all tape motion (except rewind). The currently selected unit remains selected and the "saved" poll responses are retained, but the status is reset. No poll response is issued for this command.

2-16. Device Clear

The Device Clear secondary (X1110000) and its data byte are accepted by the HP-IB interface but have no affect on its state. If this command is sent to the HP-IB interface, the data byte may be any value (refer to paragraph 2-29, Device Clear/Selected Device Clear) as it is ignored.

2-17. LOOPBACK

The Loopback (listen) secondary (X1111110) configures the HP-IB interface to accept 256 data bytes of any pattern and store the first 128 bytes in the internal buffer. The remaining data bytes (129 to 256) are discarded. After the 256th byte has been received, the HP-IB interface responds to a poll indicating the transfer is complete (refer to paragraph 2-11, Bus Loopback Test).

2-18. SECONDARY TALK COMMAND GROUP

The HP-IB interface responds to five secondary talk commands. These commands, listed below, are explained in the following paragraphs.

- * Data Transfer (Read)
- * Status
- * Byte Count
- * Device Specified Jump
- * Loopback (Talk)

2-19. Data Transfer

The Data Transfer (Read) secondary (11100000) directs the tape controller to prepare for transferring data to the bus. Following this command the bus should be placed into the data mode. Data may then be transferred in either block (preferred method) or burst mode (refer to paragraph 2-9, Transferring Data From Tape).

2-20. Status

The Status secondary (01100001) directs the HP-IB interface to transfer the contents of its three status registers. Status registers 1 and 2 reflect the status for the selected tape unit and status register 3 reflects HP-IB interface information. The status contained in registers 1, 2, and 3 is transferred in the three data bytes 1, 2, and 3, respectively, that follow the Status secondary. The status information for each register data byte is shown in table 2-7.

7970E HP-IB INTERFACE MANUAL

TABLE 2-7. STATUS INFORMATION

Register #1 (Data Byte 1)	Register #2 (Data Byte 2)	Register #3 (Data Byte 3)
On-Line	Interface Busy	Tape Unit 0
Multiple Track Error	Tape Unit Busy	Placed On-Line
File Protected	Rewinding	Tape Unit 1
Command Rejected	Tape Runaway	Placed On-Line
Single-track Error	Data Error	Tape Unit 2
End-Of-Tape	Selected Unit LSB	Placed On-Line
Load Point	Selected Unit MSB	Tape Unit 3
End-Of-File		Placed On-Line
		Command Parity Error
		Power Restored

The following bits are automatically reset after the status has been read: MTE, Command Rejected, STE, Tape Runaway, Command Parity Error, Timing Error, and Power Restored.

2-21. STATUS REGISTER #1

The status bits for status register 1 are explained below. The number associated with the status bit description identifies the DIO line which when set to 1 indicates that status (also see table A-7).

a. 1 - On-Line

The On-Line status bit (DIO line 1), when set to 1, indicates the on-line/off-line status of the selected (indicated by status bits 6 and 7 in register #2) tape unit. This bit is set to 1 when the unit is on-line and to 0 when the unit is off-line.

b. 2 - Multiple-Track Error (MTE)

The Multiple-Track Error (MTE) status bit (DIO line 2), when set to 1, indicates that two or more data tracks were in error during a read or write operation. The MTE status is ignored by the controller until the data transfer is complete. After the last byte is transferred and tape motion halted, the MTE status is set, the DSJ is set to 1, and a poll response asserted.

7970E HP-IB INTERFACE MANUAL

Generally, a single-track error (STE) occurs whenever an MTE occurs. But, it is possible during both read and write operations to have only an MTE error occur when the tape format is incorrect (for example, trying to read an 800 bpi NRZI tape). The Multiple-Track Error Status bit is reset after the status is read.

c. 3 - File Protect

The File Protected bit (DIO line 3), when set to 1, indicates that the tape reel on the selected tape unit does not have a write ring installed. If a write is attempted when the File Protect status bit is set, the DSJ is set to 1, the poll response is asserted, the Command Reject status bit is set to 1, and the write operation is not attempted. The File Protect status is valid for the selected tape unit if it is on-line. This bit is reset when the status is read.

d. 4 - Command Rejected

The Command Rejected bit (DIO line 4), when set to 1, indicates that the command issued to the HP-IB interface has been rejected. If any tape command is issued to the tape unit while the Interface Busy status bit is set, the command will be rejected. Any attempt to perform a motion operation on a selected device while a rewind or other operation is in progress causes a command to be rejected. Also, if a write operation is attempted on a file protected drive, the command is rejected. When a command is rejected, the DSJ is set to 1 and the poll response asserted for this error. The Command Rejected status bit is reset when the status is read.

e. 5 - Single-Track Error (STE)

The Single-Track Error (STE) bit (DIO line 5), when set to 1, indicates a parity error was detected in one track on tape. A Single-Track Error during a read operation is corrected by the tape unit. The STE status and DSJ bits are set to 1. A poll response is asserted at the end of the read/write operation (after the EOI has been received). After a write operation with an STE, the actual data on tape is in error. Although the tape electronics can correct this error during a read operation, the chances for a multiple-track error are increased. It is recommended that the record be rewritten whenever an STE is detected after a write operation. The STE status bit is reset after the status is read.

7970E HP-IB INTERFACE MANUAL

f. 6 - End-Of-Tape (EOT)

The End-Of-Tape (EOT) bit (DIO line 6), when set to 1, indicates the End-Of-Tape marker has been detected. When an EOT is detected on the selected drive, the EOT status bit is set to 1, and the DSJ status bit is set to 1 for the final poll response, tape motion normally continues after the EOT has been read. The EOT bit remains asserted and the DSJ is set to 1 until the EOT marker is read during a reverse motion operation or a rewind operation is executed.

g. 7 - Load Point (LP)

The Load Point (LP) bit (DIO line 7), when set to 1, indicates the selected device is at Load Point. If load point is detected during a backspace or a read backward operation, the DSJ is set to 1. This bit is reset when the tape moves off the beginning-of-tape (BOT) marker.

h. 8 - End-Of-File (EOF)

The End-Of-File (EOF) bit (DIO line 8), when set to 1, indicates that the selected unit detected a file mark. The DSJ status bit is set to 1 if a Read, Forward Space Record, or Backspace Record command has been issued or if a Forward Space File or Backspace File command was issued the DSJ is set to 0. The EOF bit is reset when the status is read.

2-22. STATUS REGISTER #2

The status bits for status register 1 are explained below. The number associated with the status bit description identifies the DIO line which when set to 1 indicates that status (also see table A-7).

a. 1 - Interface Busy

The Interface Busy bit (DIO line 1), when set to 1, indicates that the HP-IB interface is busy executing another command. When the currently selected device is executing a motion command other than rewind, the HP-IB interface is considered busy. If a rewind is in progress for the selected device, the user may select a different device and initiate motion. If a motion command is

7970E HP-IB INTERFACE MANUAL

issued to a device currently in a rewind mode, the command rejected bit is set to 1, the DSJ is set to 1, and the poll response asserted. The user can request status regardless of the setting of the interface busy bit.

b. 2 - Tape Unit Busy

The Tape Unit Busy bit (DIO line 2), when set to 1, indicates that a tape motion command is in progress. This bit can be used to determine when the drive is available for additional commands. It is reset when the tape unit completes the current command.

c. 3 - Rewinding

The Rewinding bit (DIO line 3), when set to 1, indicates that a Rewind command has been received and is being executed by the tape unit. The bit is reset when the transport is at load point (BOT) and ready to accept additional commands or is off-line (possibly because of Rewind and Rewind/Go Off-Line command).

d. 4 - Tape Runaway

The Tape Runaway bit (DIO line 4), when set to 1, indicates that the selected device has read approximately 7.6 meters (25 ft) of tape without detecting a byte of data. At that point tape motion stops, the DSJ sets to 1, the Tape Runaway status bit is set to 1, and a poll response is asserted. Tape runaway is detected for Read/Write Record and Forward or Backward Space Record/File commands. This bit is reset automatically after the status has been read.

e. 5 - Data Timing Error (DTE)

The Data Timing Error (DTE) bit (DIO line 5), when set to 1, indicates that a data buffer overrun or underrun condition has occurred (refer to paragraph 2-7, Buffer Requirements). That is, the tape controller was required to accept or provide data on the bus and data was not available or not previously accepted by the user. If a timing error occurs during a read operation, it is possible for the last byte (tagged with EOI) to be deleted. This could cause a data transfer timeout to occur on the bus because of the lost EOI. The DSJ is set to 1 for the final poll response issued for the read/write completion. The DTE is reset automatically after status has been read.

7970E HP-IB INTERFACE MANUAL

- f. 6 - Selected Tape Unit (Least Significant Bit)
- 7 - Selected Tape Unit (Most Significant Bit)

The Selected Tape Unit bits (DIO lines 6 & 7) represent, in binary, the tape unit that is currently selected (0 through 3). All of the status bits in registers 1 and 2 reflect the status of the selected tape unit. If no unit is selected these Selected Tape Unit bits remain 0, indicating unit 0 is selected which is not the case. Status register 1 (byte 1) indicates whether a unit is selected.

2-23. STATUS REGISTER #3

The status bits for status register 1 are explained below. The number associated with the status bit description identifies the DIO line which when set to 1 indicates that status (also see table A-7).

- a. 1 - Tape-Unit-0-Placed-On-Line

The Tape-Unit-0-Placed-On-Line bit (DIO line 1), when set to 1, indicates that tape unit 0 (or unit 1, 2, or 3) has been placed on-line but has not been selected (serviced) since it came on-line. As soon as the unit is selected this bit is reset to 0.

If the Enable Rewind Complete Response/Auto-Select, End (DIO line 3 set) command has been issued and the operator places a tape on-line (anytime after receipt of this End command), the HP-IB controller auto-selects the unit and the tape units unit select number is indicated by Status Register #2 (bits 6 and 7). This auto-select occurs as soon as the HP-IB interface becomes idle. Since the unit has been selected the HP-IB interface responds to a poll with the DSJ equal to 1. When reading the DSJ, the status must also be read (refer to paragraph 2-15, End Commands, Enable Rewind Complete Poll Response/Auto-Select).

- b. 2 - Tape-Unit-1-Placed-On-Line

The Tape-Unit-1-Placed-On-Line bit (DIO line 2) is similar to Tape-Unit-0-Placed-On-Line except that tape unit 1 has been placed on-line (refer to DIO line 1 -Tape-Unit-0-Placed-On-line).

7970E HP-IB INTERFACE MANUAL

c. 3 - Tape-Unit-2-Placed-On-Line

The Tape-Unit-2-Placed-On-Line bit (DIO line 3) is similar to Tape-Unit-0-Placed-On-Line except that tape unit 2 has been placed on-line (refer to DIO line 1 -Tape-Unit-0-Placed-On-Line).

d. 4 - Tape-Unit-3-Placed-On-Line

The Tape-Unit-3-Placed-On-Line bit (DIO line 4) is similar to Tape-Unit-0-Placed-On-Line bit except that tape unit 3 has been placed on-line (refer to DIO line 1 -Tape-Unit-0-Placed-On-Line - above).

e. 5 - Command Parity Error

The Command Parity Error bit (DIO line 5) is set to 1 whenever DIO lines 1 through 8 contain even parity as received by the tape controller for a bus command transaction. (parity is not observed for data transfers). Normal command parity is odd (on DIO lines 1 through 8). A command parity error sets the DSJ to 1 and a poll response is asserted. This bit is reset after the status is read.

f. 6 - Power-Has-Been-Restored

The Power-Has-Been-Restored bit (DIO line 6) is set to 1 whenever power is applied to the interface, either during the normal power up sequence with the on/off switch or during a power fail/recovery sequence. In either case, when power is restored to the HP-IB interface, a poll response is asserted with the DSJ set to 1. When the status is read by the user, this bit is reset. This status bit could also be used to indicate that an IDENTIFY (refer to paragraph 2-10, Power On and Identify) should be performed by the user.

2-24. Byte Count

The Byte Count secondary (X1100010) provides the number of data bytes read from or written to the tape during a read or write operation. Two data bytes are returned for this secondary. The first byte represents the most significant value of the byte count and the second byte represents the least significant value.

2-25. Device Specified Jump (DSJ)

The Device Specified Jump (DSJ) secondary (X1110000) is a summary of the detailed three-byte status (from the status registers). It provides a quick indicator for the correct completion or failure of a command operation. The DSJ data byte value is either 0 or 1. When a value of 0 is returned, it indicates that no errors have occurred for the command in progress or the just-completed command and additional status is not necessary. When a value of 1 is returned, a prior command has resulted in an error, abnormal termination, or unexpected results (for example EOT or BOT was encountered for Forward Space/Backspace Record/File). If the DSJ data byte is equal to 1, the three-byte status should be read for a more specific error indication.

2-26. Loopback (Talk)

The Loopback secondary (X1111110) when received in the talk mode, configures the HP-IB interface to return the first 128 data bytes received during Loopback listen. An additional 129th byte with a fixed value (octal 177) is also sent as the last byte.

2-27. RESET COMMANDS

The reset commands return the tape to a reset or idle state, waiting for the next operation to start. Each command resets a different portion of the HP-IB interface. Three reset commands, Interface Clear, Device Clear/Selected Device Clear, and Untalk/Unlisten, are explained in the following paragraphs.

2-28. Interface Clear

The Interface Clear (IFC) command is used only to unlisten or untalk the HP-IB interface (unaddress the CHI). It is not used to reset any of the HP-IB interface hardware. If a reset of the HP-IB interface is desired (hardware and firmware) the IFC must be followed by a Selected Device Clear (or Device Clear).

2-29. Device Clear/Selected Device Clear

The Device Clear/Selected Device Clear (DCL/SDC) commands are used to initialize the HP-IB interface to a predefined state (Power-Up). Both, Device Clear and Selected Device Clear, have the same meaning to the HP-IB interface. The hardware and firmware are reset upon receipt of the DCL or SDC commands. Upon completion of a Device Clear or Selected Device Clear command, the interface asserts a poll response. The DCL does not affect the the current state (talk/listen) of the CHI.

2-30. Untalk/Unlisten

The Untalk and Unlisten commands (similar to IFC) are used to untalk or unlisten the tape unit. This involves unaddressing the CHI chip, but does not reset any of the HP-IB interface electronics.

7970E HP-IB INTERFACE MANUAL

SECTION III. THEORY OF OPERATION

3-1. INTRODUCTION

There are four major areas within the interface, control and logic, CHI, buffer, and write formatter (see figure 3-1). Each section interacts with the others to allow transfer of drive commands, status information, and data to and from the HP-IB bus for 7970E operation. The following description assumes some knowledge of HP-IB and HP 300 protocol.

3-2. CONTROL AND LOGIC

The microprocessor (NANO) provides control for interface/tape operations by interpreting bus commands and monitoring interface and tape operations. The processor maintains in its 16 internal registers the operating status, programmed activity, buffer information and data routing information. This information, together with HP-IB bus commands received from the CHI, and program instructions contained in the PROM, allow the microprocessor to generate the required instructions for interface/tape operation. The processor provides the timing for certain operations (Gap, Interrecord Gap, ramp times, ect...) by sampling the output of a crystal controlled timing circuit. The control section I/O registers provide interfacing to the tape drive through the Control and Status PCA (FWD, REV, HSFWD, SELECT, ect...), the Read Motherboard PCA (TM, EOB, STE, IDB, ect.), and the Write Motherboard PCA (SWS, WC, ect.).

3-3. BUFFER

The buffer provides 128 bytes of storage to allow equalization of the different data transfer rates between the HP-IB bus and the tape unit. The tape unit (45 ips at 1600 bpi), can handle data at 72 KHz while the bus transfer rate is 800 KHz. When data is transferred from the bus to the tape unit for storage, the buffer is initially

7970E HP-IB INTERFACE MANUAL

filled with one 128 byte burst at 800 KHz. The tape begins removing this data from the full buffer. The remaining data is transferred across the bus at 72 KHz, keeping the FIFO buffer full until the last byte is transferred. The last data byte is tagged with an EOI to indicate the end of data transfer. Movement of data from the tape storage to the bus is the reverse of the above procedure, that is, the buffer is filled by the tape and emptied by the bus.

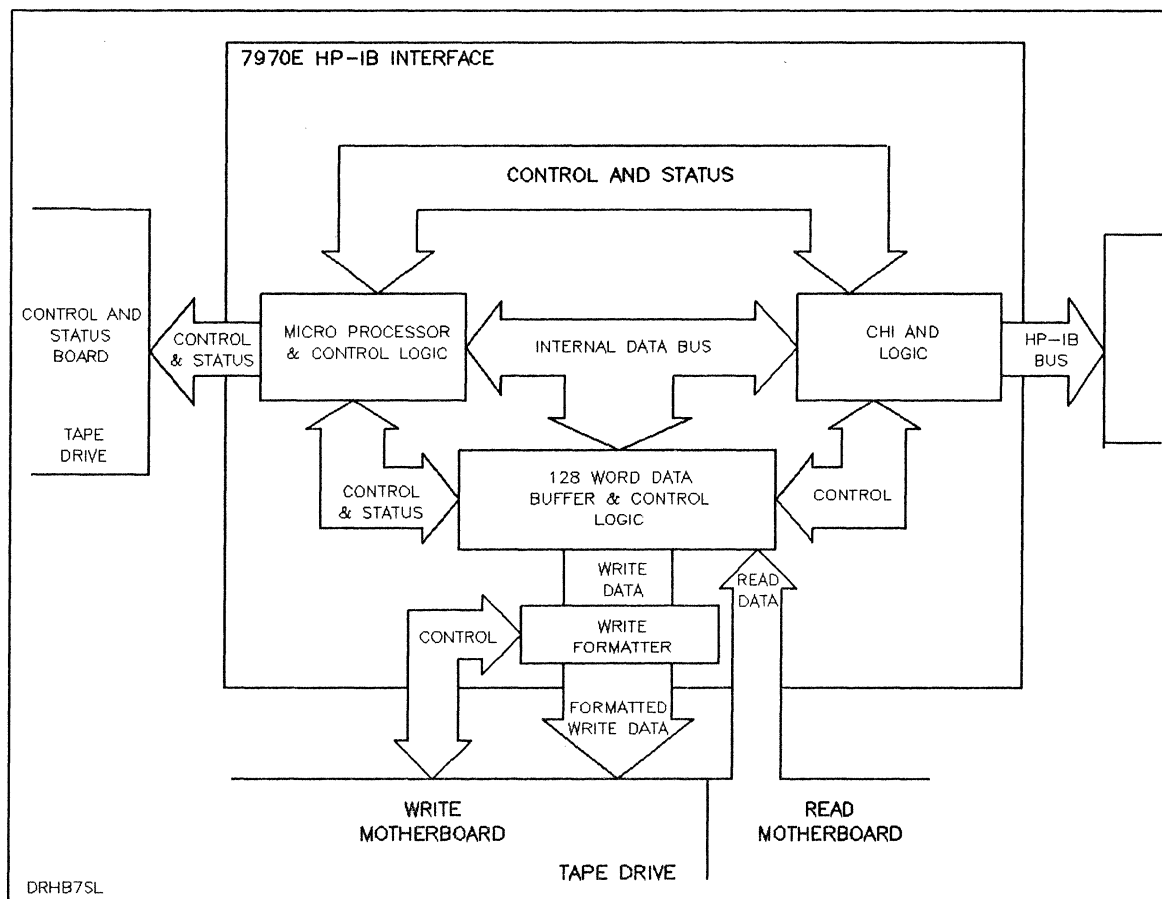


Figure 3-1. 7970E HP-IB Interface Block Diagram

7970E HP-IB INTERFACE MANUAL**3-4. CHI**

The CHI (chip for HP-IB interfacing) interfaces the HP-IB interface assembly to the HP-IB bus. It controls the handshake operation which verifies each data or command byte sent across the bus. It should be noted that the word "data" may refer to either data information for storage on tape or command data which includes commands and status information used for the operation of the tape unit. The CHI directs the transfer of data (data to or from storage on tape), after initialization by the processor, to the buffer or automatically relay HP-IB bus commands and data (tape commands) to the processor. The CHI provides service requests when the interface has been addressed and a level of interpretation to the HP-IB commands on the bus.

3-5. WRITE FORMATTER

The write formatter circuitry, located on the Formatter PCA, provides timing signals for the processor and tape unit, accepts write commands from the processor, generates identification bursts, pre-and postambles, Tape Marks on command, and provides write formatter status signals for the processor. The synchronization timing signals consist of Write Clock (WC) timing signal for the tape unit and a 900 KHz clock signal for the processor. The write command signals from the processor consist of Write Enable, Write Identification Burst, Write Tape Mark, Write Preamble, and End-Of-Data signals. The status signals applied to the HP-IB interface consist of Ready signals and Data Accepted signals.

3-6. POWER SEQUENCE

The power sequence circuitry, located on the Control PCA, ensures that the HP-IB interface does not compromise tape integrity as a result of power failures. To prevent possible data loss due to power failure, the power sequence circuitry shuts down the interface processor and takes the tape unit off-line at the first sign of a possible power fluctuation. To provide this, the power sequence circuit monitors the +12, -12, and +5 supply voltages from the Power Distribution Assembly. These voltages are fed into the +12, -12, and +5 volt comparators (refer to figure 3-2. Power Sequence Block Diagram) on the Control PCA. If these voltages drop below acceptable levels, the comparator output goes low. A low output from any comparator activates the sequence control circuits to assert an interrupt (see figure 3-3, Power Sequence Waveform Timing Diagram) to the microprocessor on the interface and set the Off-Line signal to low which transfers the tape unit to the off-line state (the ON-LINE light on the operator control panel on the tape unit goes out).

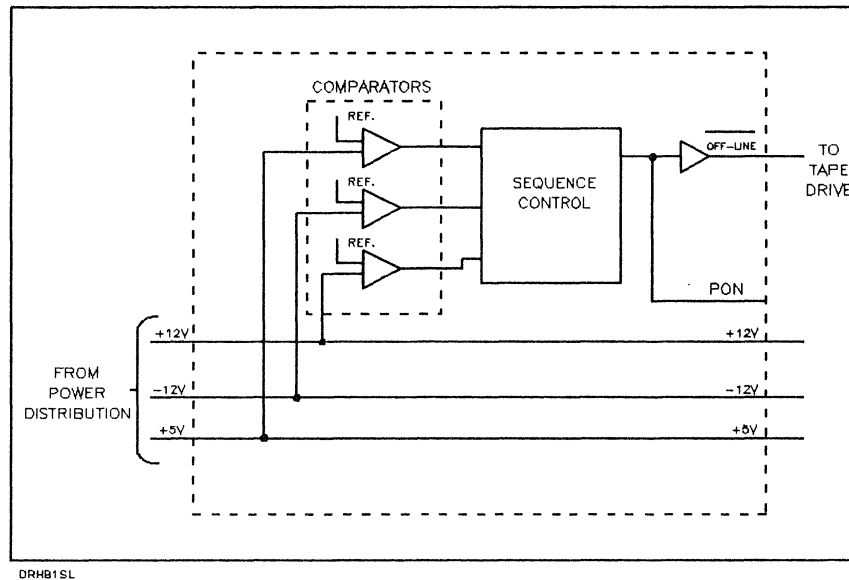
7970E HP-IB INTERFACE MANUAL

Figure 3-2. Power Sequence Circuitry Block Diagram

When all three voltages (+12, -12, and +5) return to acceptable levels, the power sequence circuitry eliminates the power-on interrupt to the interface and then switches the Off-Line signal high again. The operator must manually load and place the tape unit back on-line by pressing the ON-LINE switch on the 7970E operator control panel.

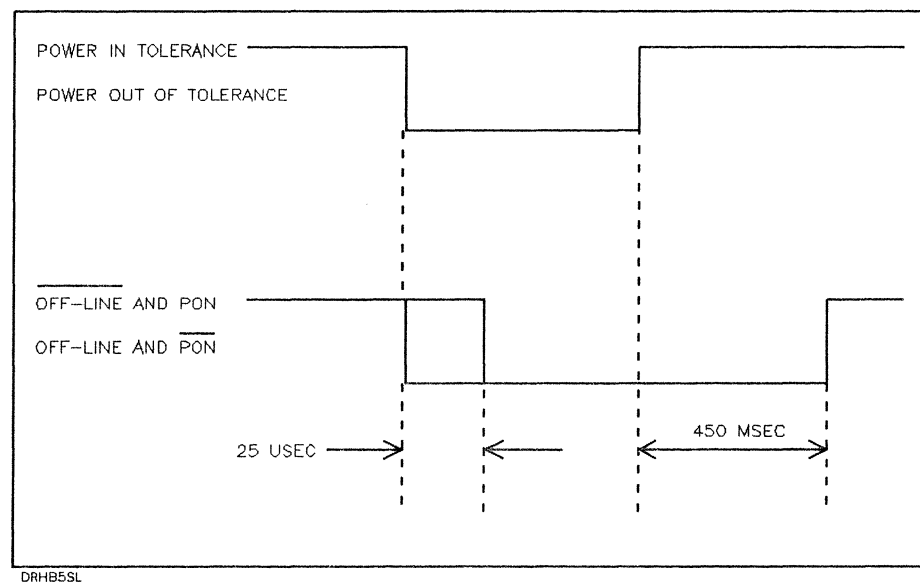


Figure 3-3. Power Sequence Waveform Timing Diagram

SECTION IV. MAINTENANCE

4-1. INTRODUCTION

This section covers maintenance information for the 7970E HP-IB Interface. This information includes cable connection, slave operation, installation and removal of the interface assembly from the tape unit, troubleshooting, maintenance mode information, and LED display information.

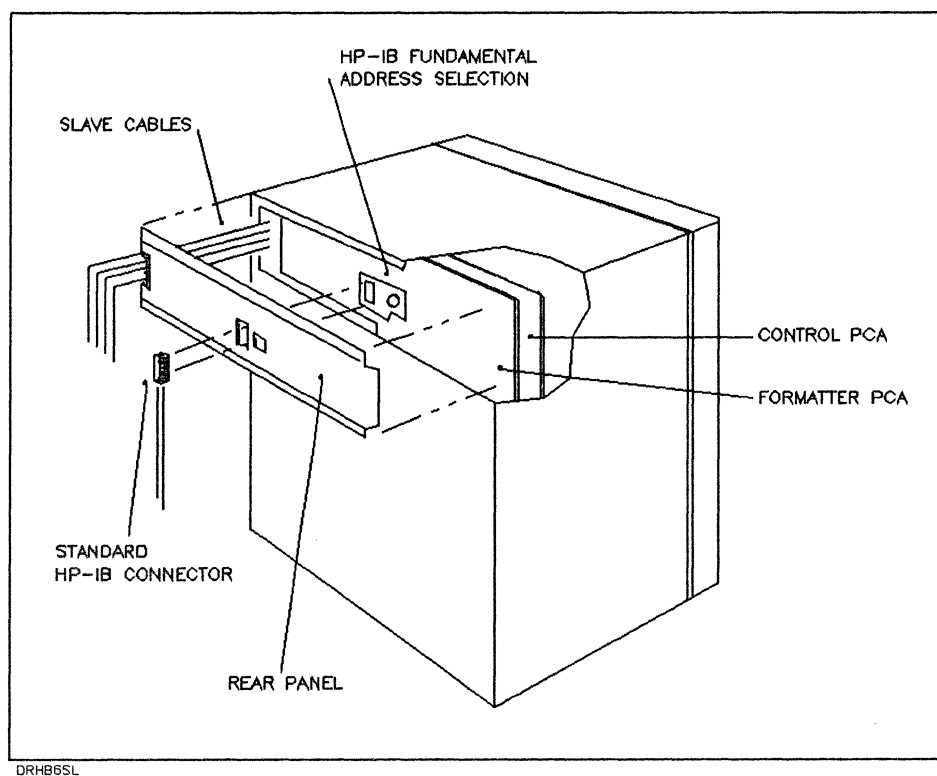


Figure 4-1. HP-IB Cable Connection

7970E HP-IB INTERFACE MANUAL


4-2. CABLE CONNECTION

The HP-IB cable is attached to the back of the interface assembly which is accessible from the back of the tape unit (see figure 4-1). To connect the cable, insert it into the HP-IB connector (J6) and tighten the two thumb screws.

Up to six metres of cable can be used to connect the HP-IB tape unit to the system controller. If more six metres of cable is installed, possible data loss can result and/or a reduction in data transfer rate. Do not exceed six metres of cable in any installation.

4-3. SLAVE OPERATION

The 7970E HP-IB Interface Assembly performs the standard unit select function to allow the connection of multiple drives to the master unit. When connecting cables between tape units refer to the appropriate cabinet manual for information concerning cable routing. Figure 4-2 shows a multiunit cable connection with two read-after-write slaves connected to a master (cabinets are rotated to illustrate lo-boy cabinet installation).

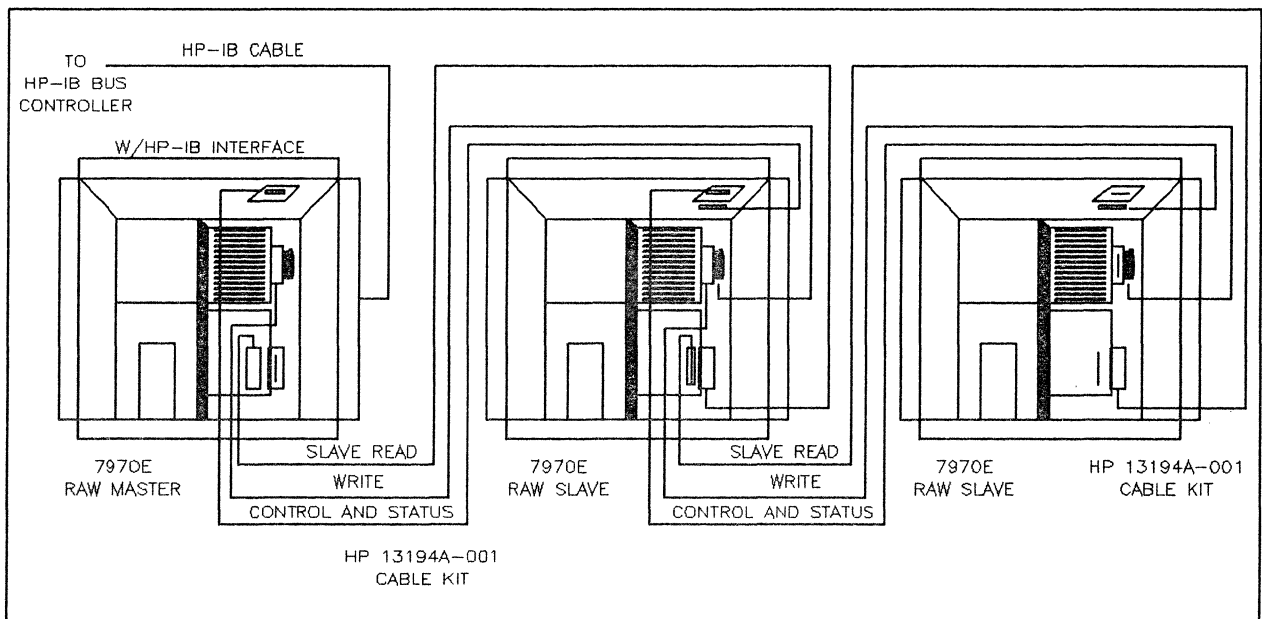

DRHB5SL

Figure 4-2. 7970E HP-IB Multiunit Configuration

7970E HP-IB INTERFACE MANUAL**4-4. INSTALLATION AND REMOVAL**

The interface PCAs and the backplane assembly are connected together and installed into the tape unit as a unit. To remove the HP-IB interface (07970-62456) complete the following steps.

- a. Disconnect power to the tape unit by setting the tape unit cabinet breaker to off (0) or, if the cabinet does not provide disconnect capabilities remove the ac line plug from the ac line receptacle.
- b. Open the tape unit casting door (upright cabinets only).
- c. Remove the HP-IB cable from the rear of the unit and if installed, disconnect the slave cables from the tape unit.
- d. Remove the HP-IB interface power cable from the Control PCA connector J5.
- e. Remove the hold-down screw from the Control PCA (located above the Read Motherboard Assembly).
- f. Remove the control and status ribbon cable (and the Connector Adaptor PCA) from the Control and Status PCA.
- g. Release the barbed standoffs and swing the Control PCA up and out of the way. The barb portion of the standoff consists of a single barb. To release the barb press it in while pulling outward on the Control PCA.
- h. Remove the ribbon cables (and Connector Adaptor PCAs) from the Write Motherboard Assembly and the Read Motherboard Assembly.
- i. From the rear of the tape unit remove the screws at the four corners of the HP-IB panel and pull the HP-IB assembly from the tape unit.

Install the HP-IB assembly in reverse order of the above removal procedure. When an HP-IB assembly is installed into a 7970E tape unit make sure that the two jumpers, located at the upper left corner of the Read Motherboard Assembly (07970-62392), are installed.

4-5. TROUBLESHOOTING

Due to the complexity of the 7970E HP-IB Interface Assembly component level field troubleshooting is difficult. If the operation of the interface is in question, PCA level substitution should be made.

7970E HP-IB INTERFACE MANUAL

If the interface is suspected of containing an error, first make a visual check of the interface. Check the following items:

- a. Make sure all cable connections are aligned correctly and securely seated.
- b. Ensure that the HP-IB address switch is set to the correct address number.
- c. Check the +5 volts on the Control PCA at the +5 test point.
- d. Use maintenance mode (refer to paragraph 4-6, Maintenance Mode) to assist in identifying the error by running the various tests with the stop-on-error condition set.

4-6. Maintenance Mode

The HP 7970E HP-IB Interface Assembly (07970-62456) is equipped with a maintenance mode feature to allow the user to perform certain tape operations off-line. These operations include read and write record, identification burst, file, gap, and forward space and backspace file or record. Maintenance mode tests allow the user to test the 7970E Magnetic Tape Unit perform most of the operations previously performed by the 7970E test accessory PCAs, thus, in most cases eliminating the need for these PCAs (the 7970E test accessory PCA can still be used if desired). (Maintenance mode exercises most of the HP-IB interface).

Maintenance mode is accessed by means of an eight-switch DIP switch (S1) located on the Control PCA. Operation of maintenance mode and a detailed description of the switch selections is provided in the following paragraphs.

CAUTION

When finished using maintenance mode and the tape unit is returned to system operation, make certain the maintenance mode enable switch (S1-1) is set to off (open), and the tape unit is powered off, and then back to on. If this procedure is not followed possible data loss can result when the tape unit is returned to service.

Maintenance mode can be used to provide signals for troubleshooting malfunctions in the tape unit. Using an oscilloscope the user can trace signals using standard troubleshooting techniques.

4-7. Maintenance Mode Operation

Maintenance mode operation is described in the following steps.

- a. Set the tape unit (master drive) power to off (0).
- b. Load a blank (scratch) tape onto the tape unit to be tested.
- c. Set the Unit Select switch to 3 (on the tape unit to be tested).
- d. Set the Enable Maintenance Mode switch (S1-1) to 1 (closed) and select the desired maintenance mode configuration and test selection switches (see paragraph 4-8).
- e. Set the tape unit (master drive) power to on (and set the power to on for the drive to be tested if other than the master unit).
- f. Place the tape unit on-line (press ON-LINE) and the maintenance mode test should begin.

To switch from one maintenance mode test to another take the master tape unit off-line (press RESET), select the new test number on the test selection switches, and place the unit back on-line (press ON-LINE). When in single-step mode and it is desired to perform the test again or to continue testing after the stopping on an error (switch S1-2 set to 1), take the tape unit off-line (press RESET) and then place it back on-line (press ON-LINE).

Single-track errors, multiple-track, and tape runaway are identified by maintenance mode as errors. If these errors occur in the tape unit they will be detected by maintenance mode (testing stops if the stop-on-error is set to 1).

To observe status, if a oscilloscope is not being used it may be convenient to install a 7970E Read Test Accessory PCA to observe the LED indicators.


7970E HP-IB INTERFACE MANUAL

NOTE

Ramps can be checked and adjusted by selecting operation 12 (WRT/BSR) and looping (switch S1-4 set to 0). Also, the read preamplifiers can be checked and adjusted by performing operation 1 (write 1600 frpi).

It is possible to erase the entire tape by selecting operation 7 (GAP).

Any improperly written blocks on a tape can be found by selecting the read function with the stop-on-error condition set.

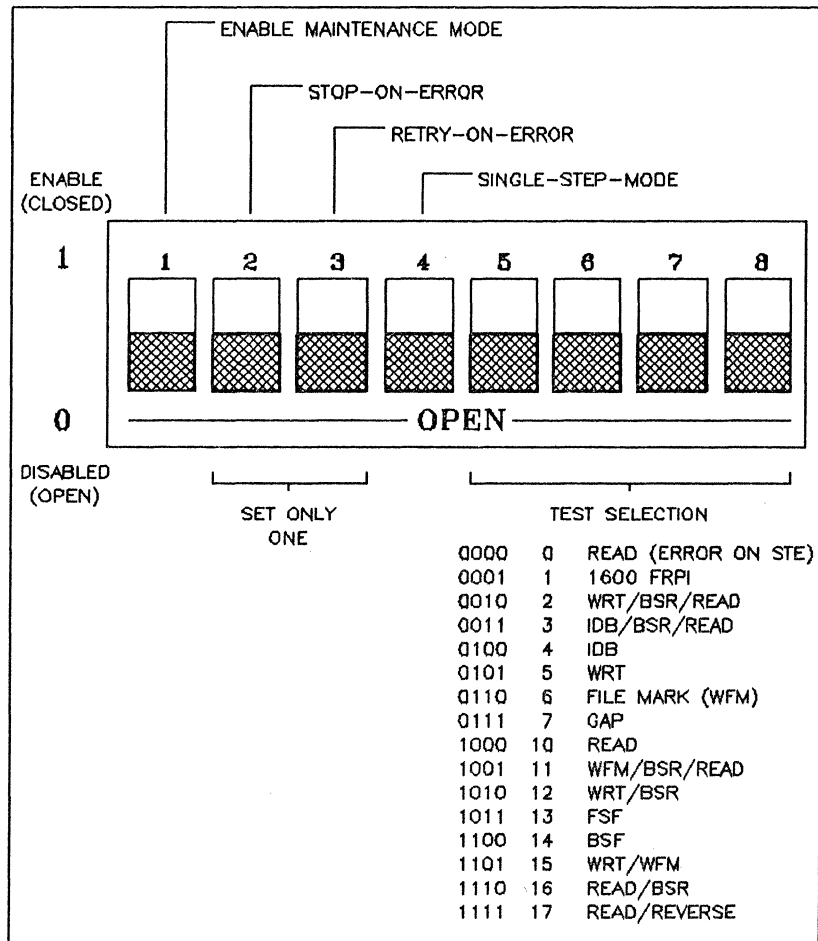

DRHB4SL

Figure 4-3. Maintenance Mode Switch

4-8. Maintenance Mode Switch Description

A detailed description of the maintenance mode switches is provided below.

a. Switch 1 - Maintenance Mode

The Maintenance Mode switch, when set to 1 (closed), enables maintenance mode. This is accomplished by setting the tape unit power off, setting the maintenance mode switch to 1 (on), and then applying power to the tape unit (refer to paragraph 4-7).

b. Switch 2 - Stop-On-Error

When the Stop-On-Error switch (S1-2) is set to 1 (closed) and an error (see explanation for switch 3) is detected operation terminates and tape motion stops. To continue the operation press the RESET and ON-LINE operator switches.

When the switch is set to 0 (open) the selected operation is completed without regard to the occurrence of errors.

c. Switch 3 - Retry-On-Error

When the Retry-On-Error switch (S1-3) is set to 1 (closed) then, when an error (MTE for read or STE and MTE for write operations) is detected the tape unit repositions the tape and performs the write or read operation again. There is no limit to the number of retries, as long as the error occurs the operation tries to read or write the record, file mark, or identification burst again. If the stop on error switch (S1-2) is set, do not set the retry-on-error switch; only one of these modes should be enabled at a time.

When the Retry-On-Error switch is set to 0 (open) the selected operation does not retry if an STE or MTE is detected (retry is not valid for tape spacing or gap operations).

d. Switch 4 - Single-Step Mode

When the Single-Step switch is set to 1 (closed) any selected operation is performed once. If an error is detected the operation can continue, stop on the error, or retry depending on the setting of switches 2 and 3. To perform the operation again

7970E HP-IB INTERFACE MANUAL

take the tape unit off-line (press RESET) and then place it back on-line (press ON-LINE).

When the Single-Step switch is set to 0 (open) maintenance mode loops on the currently selected operation.

e. Switches 5-8 - Operation Selection

Switches 5 through 8 are used to select (in octal) one of sixteen possible operations (0 through 15). To enable any of these tests or operations set the switches (refer to figure 4-3) to the desired octal test number. A description of each test is given below.

1. TEST 00 - READ

Test 00 reads one record. If either a single-track error or a multiple-track error is detected the operation stops on the error (provided S1-2 is set). Normally, during a read operation, when a single-track error is detected it is corrected and the read operation continues.

2. TEST 01 - 1600 FRPI

Test 01 is a write operation which writes 1600 flux reversals per inch (FRPI) in all nine tracks. This operation ignores the settings of the maintenance mode configuration switches (S1-2, 3, and 4).

3. TEST 02 - WRT/BSR/READ

Test 02 writes a 5K record of all the same byte (the byte value can vary and depends on the first byte encountered from the buffer) then backspaces over the record (BSR) and reads it.

4. TEST 03 - IDB/BSR/READ

Test 03 writes an identification burst (IDB), backspaces (BSR) over it, and then reads it to set the IDB status.

5. TEST 04 - IDB

7970E HP-IB INTERFACE MANUAL

Test 04 writes one identification burst which consists of writing 3.5 inches of all 0s in the parity channel.

6. TEST 05 - Write

Test 05 writes a 5K record of the same byte (the byte value varies and is determined by the value of the first byte read from the buffer). If an error (STE, MTE, tape runaway) is detected the appropriate action is taken as determined by the setting of the configuration switches.

7. TEST 06 - File Mark

Test 06 writes a file mark. A file mark writes 112 flux reversals in channels P, 0, 2, 5, 6, and 7.

8. TEST 07 - Gap

Test 07 initiates a tape gap operation. The gap consists of the tape unit ramping up and erasing approximately four inches of tape. Since no error status exists for the gap operation the retry switch function does not apply to this operation.

9. TEST 10 - Read

Test 10 reads one record. If a multiple-track error is detected and considered a maintenance mode error, the appropriate action will be taken. If a single-track error is detected it is corrected as in normal operation of the tape unit and the operation completed. Single-track errors are not considered errors for read operations.

10. TEST 11 - WFM/BSR/Read

Test 11 writes a file mark (WFM), backspaces (BSR) over it, and then reads it to check the file mark status.

11. TEST 12 - WRT/BSR

Test 12 writes (WRT) a 5K record of all one byte (the byte value can vary and depends on the first byte encountered from the buffer) then the unit back spaces over the record (BSR) and stops.

7970E HP-IB INTERFACE MANUAL

12. TEST 13 - FSF

Test 13 forward spaces one file (FSF). This operation can be used to locate a specific file with the retry configuration switch in single step and taking the tape unit off-line (press RESET) and then on-line (press ON-LINE) by using the operator panel switches.

13. TEST 14 - BSF

Test 14 back spaces one file (BSF). A retry is not valid for a spacing operation.

14. TEST 15 - WRT/WFM

Test 15 writes (WRT) a 5K record of all the same byte (the byte value varies depending on the first byte encountered from the buffer), then it writes a file mark (WFM).

15. TEST 16 - Read/BSR

Test 16 reads one record and then backspaces (BSR) over the record.

16. TEST 17 - Read Reverse

Test 17 reads tape in the reverse direction. If the beginning-of-tape (BOT) is detected the tape unit goes off-line.

4-9. LED INDICATORS

Two four-LED arrays are located on the Control PCA. These eight LEDs are used primarily for factory testing but might prove to be of some assistance field troubleshooting. The function of each LED is shown in figure 4-4 and an explanation of each LED is given below.

a. Talk

The Talk LED illuminates when the tape interface is addressed as a talker (to transmit data and status).

7970E HP-IB INTERFACE MANUAL**b. Listen**

The Listen LED illuminates when the tape interface is addressed as a listener (to receive data or commands).

c. Receive Ready

The Receive Ready LED illuminates when the tape interface first-in-first-out (FIFO) buffer is ready to receive data.

d. Transmit Ready

The Transmit Ready LED illuminates when the tape interface FIFO buffer is ready to transmit data.

e. Parallel Poll

The Parallel Poll LED illuminates when the tape unit requires service for some reason (to receive or transmit data, report an error condition, report units placed on-line or rewind complete).

f. On-Line

The On-Line LED illuminates when the tape unit is on-line.


g. MTE

The MTE LED illuminates when a multiple-track error is detected.

h. Interface Ready

The Interface Ready LED illuminates when the interface is not busy or is in the idle state monitoring on-line and rewind status.

7970E HP-IB INTERFACE MANUAL

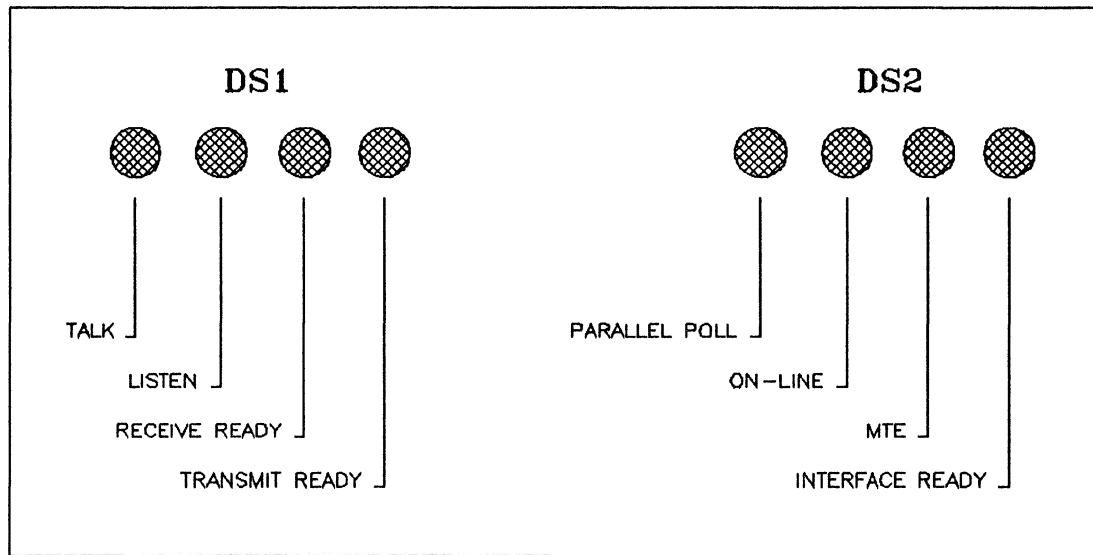

DRHB3SL

Figure 4-4. LED Signal Names

SECTION V. PARTS AND DIAGRAMS

5-1. INTRODUCTION

This section of the manual contains location diagrams, illustrated parts breakdowns (IPB's), and replaceable parts lists for the 7970E HP-IB Interface. Special product configurations or changes made since the printing of this manual are described by updating supplements supplied with this manual.

5-2. DESCRIPTION OF PARTS LIST

The heading for each parts list contains all assembly parts numbers (with applicable series codes) covered by that list. The first entry of the parts list indicates the main assembly on which the list is based. The columns in the parts list furnish the following information for each part:

a. REF. DES./INDEX NO.

This column lists the reference designator or index number (callout number) which identifies each part in the appropriate logic diagram, parts location diagram, or IPB. Asterisks are entered to the left of any entry which varies from the basic parts lists. Entries are arranged alphanumerically.

b. DESCRIPTION.

This column gives the name and a brief description of the part.

c. HP PART NO.

This column lists the Hewlett-Packard part number for each part.

7970E HP-IB INTERFACE MANUAL

5-3. PARTS ORDERING PROCEDURE

To order parts from Hewlett-Packard, or to obtain further information about parts, address the order or inquiry to the nearest Hewlett-Packard Sales and Service Office. When ordering from Hewlett-Packard give the following information on each part:

- a. Model and serial number
- b. Hewlett-Packard part number
- c. Description of part
- d. Circuit reference designator or index number, if applicable
- e. If the part is installed on a PCA, give the series code which is stamped or etched on the PCA

5-4. PARTS AND SCHEMATICS

The HP-IB Interface Assembly Parts Lists, Parts Location, and Schematics are provided on the following pages of this section.

TABLE 5-1. HP-IB INTERFACE ASSMEBLY (07970-62465), PARTS LIST

REF.DES./ INDEX NO.	DESCRIPTION	PARTS NO.
1	ASSY: CONTROL	07970-62454
2	ASSY: FORMATTER	07970-62455
3	PCA: CONN ADAPTOR	07970-62453
4	PCA: SWITCH ADAPTOR	07970-62372
5	PANEL: HPIB BACK	07970-01293
6	ASSY: CABLE	8120-3417
7	CABLE ASSY: HPIB INT	8120-3701
8	CABLE ASSY: INTERCONN	8120-3699
9	CABLE ASSY: WRT MOTHERBD	8120-3700
10	CABLE ASSY: HPIB CONTROL	8120-3702
11	CABLE: HPIB POWER CON	07970-62379
12	WASHER: FL#6 .156"D	3050-0228
13	SCREW: 6-32x.312POS	2360-0115
15	STANDOFF: HEX M/FM	0380-0644
16	WASHER: #10SPL LOCK	2190-0034
17	STANDOFF: 6-32	0380-2250
U48	IC;NANO PROC 8-B	1820-1692


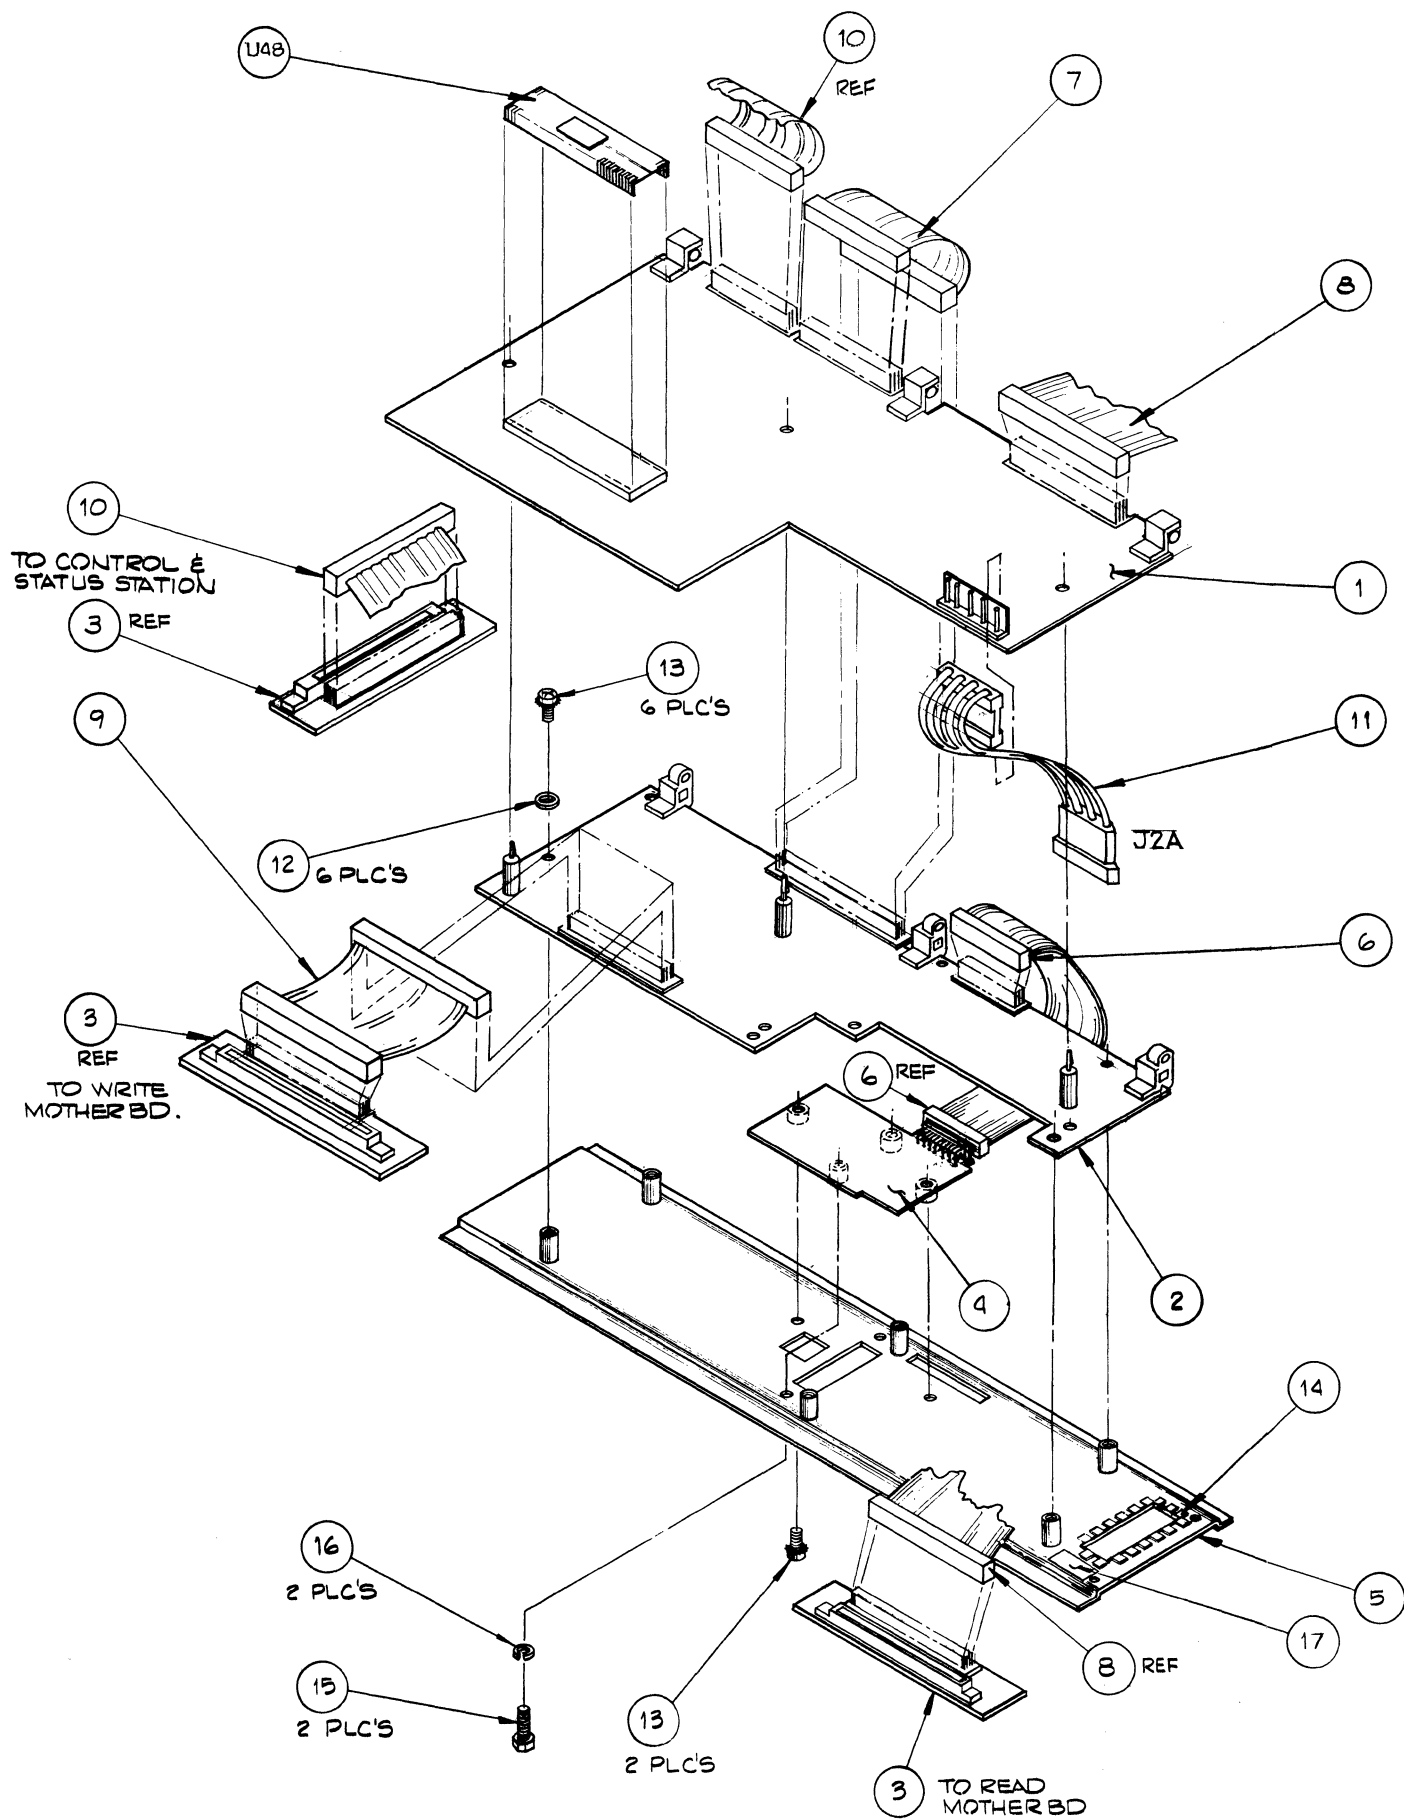


Figure 5-1. HP-IB Interface Assembly (07970-62456), Exploded View



REF. DES./ INDEX NO.	DESCRIPTION	PART NO.
1	PCB SWITCH	07970-82372
2	SPCR:RVT #6X.250	0380-0111
3	STDF:RVT #6X.188	0380-0390
J4	CONN 26-PIN M	1251-5448
J6	CONN:24 PIN F	1251-4040
R1	N:R 16X3K/6.2K	1810-0408
S1	SW:THWHL 1-MOD	3100-3480

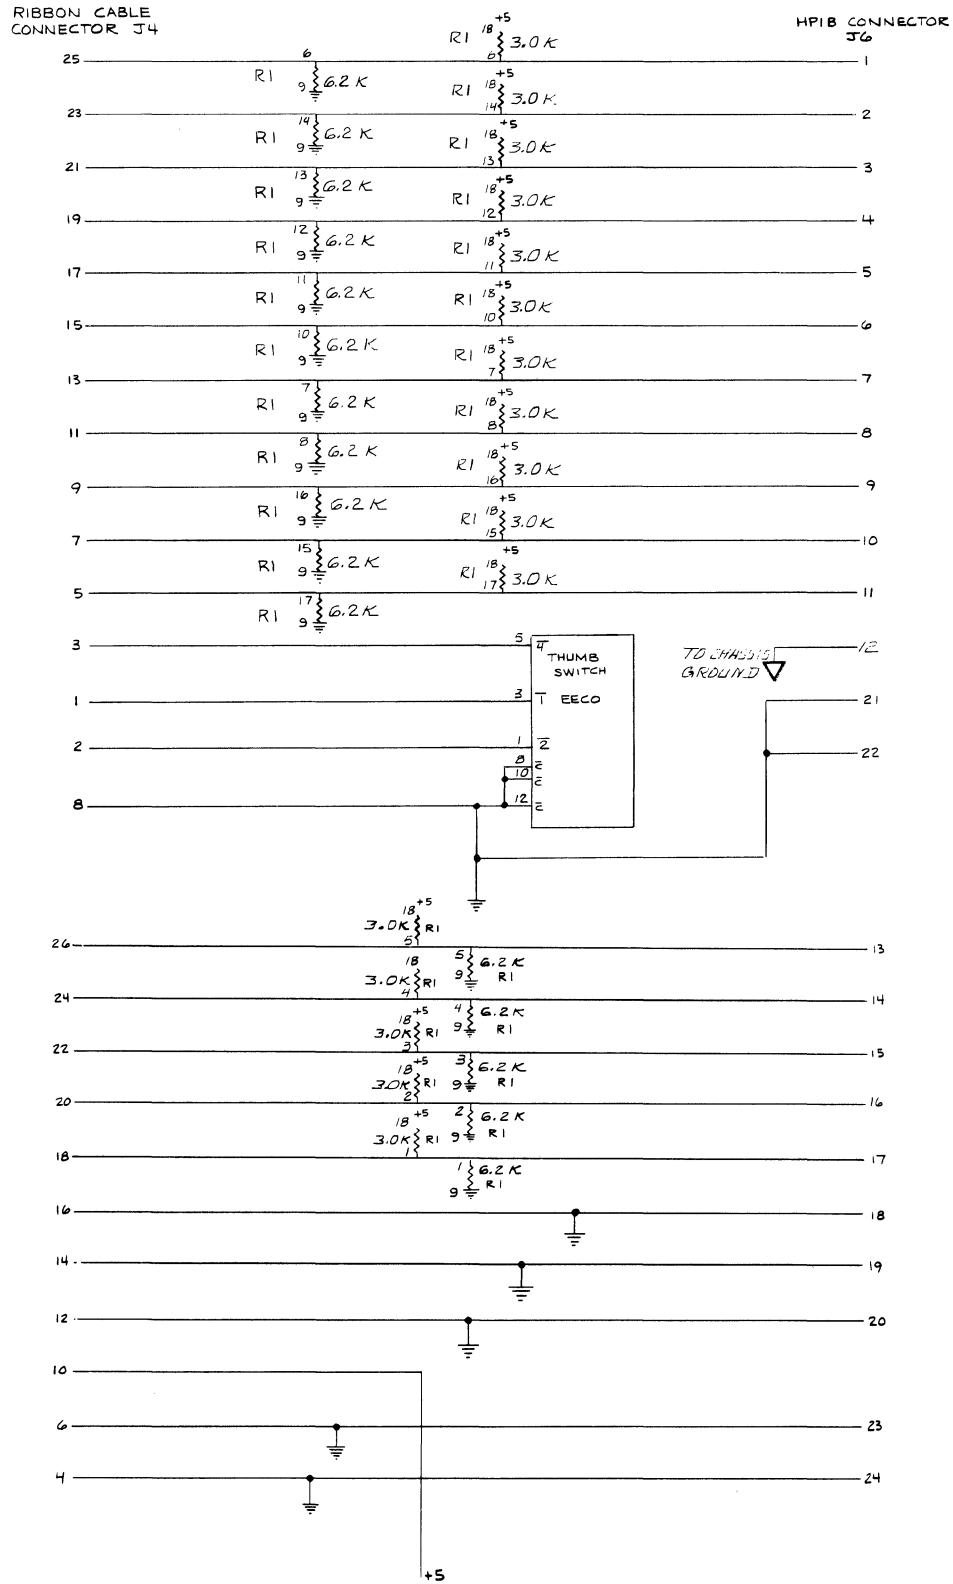


Figure 5-3. Switch Adaptor PCA (07970-62372), Schematic


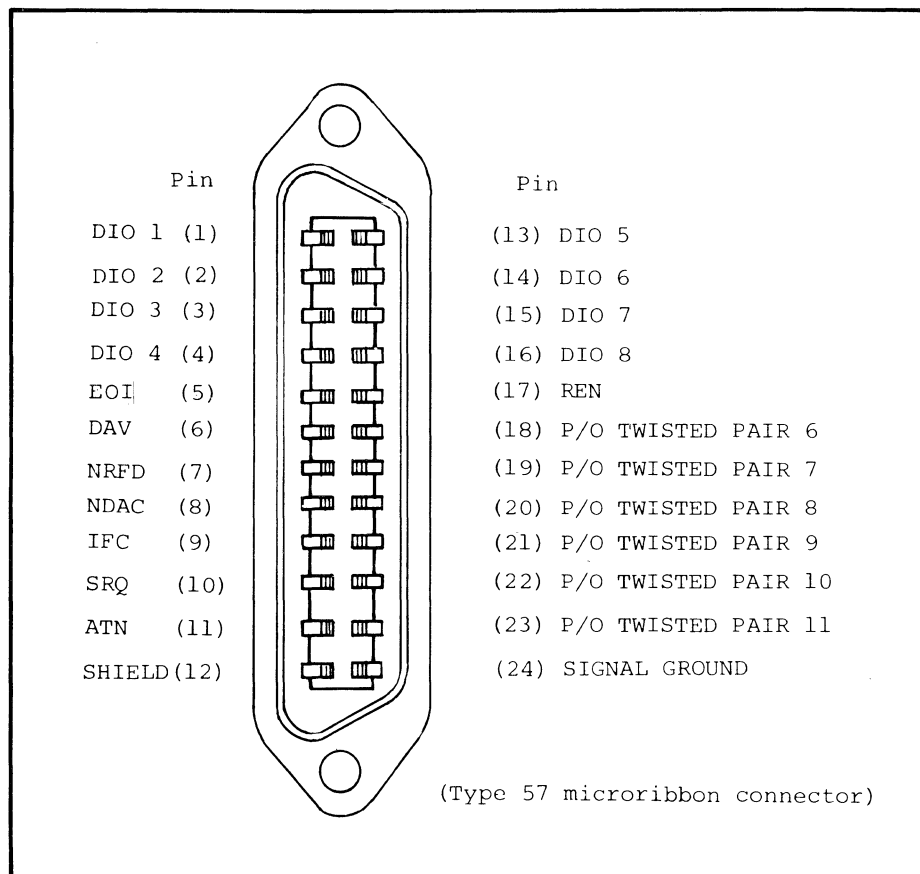


Figure 5-4. HP-IB Connector (J6)

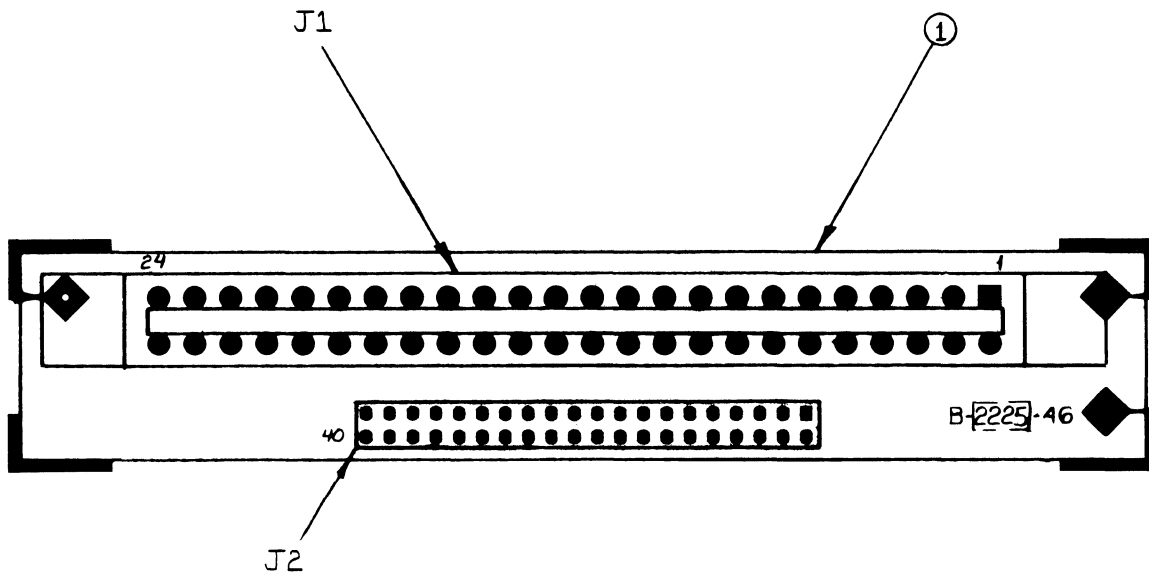

07970-62453 SCHEMATIC

THE 07970-62453 PCA CONNECTS THE FOLLOWING PINS TOGETHER:

J2-	TO	J1-
1		1X
2		1
3		2X
4		2
5		3X
6		3
7		4X
8		4
9		5X
10		5
11		6X
12		7X
13		8X
14		8
15		9X
16		9
17		10X
18		10
19		11X
20		11
21		12X
22		12
23		13X
24		13
25		14X
26		14
27		15X
28		15
29		16X
30		16
31		17X
32		17
33		18X
34		19X
35		20X
36		21X
37		22X
38		23X
39		23
40		24X

Figure 5-5. Connector Adaptor PCA (07970-62453), Diagram

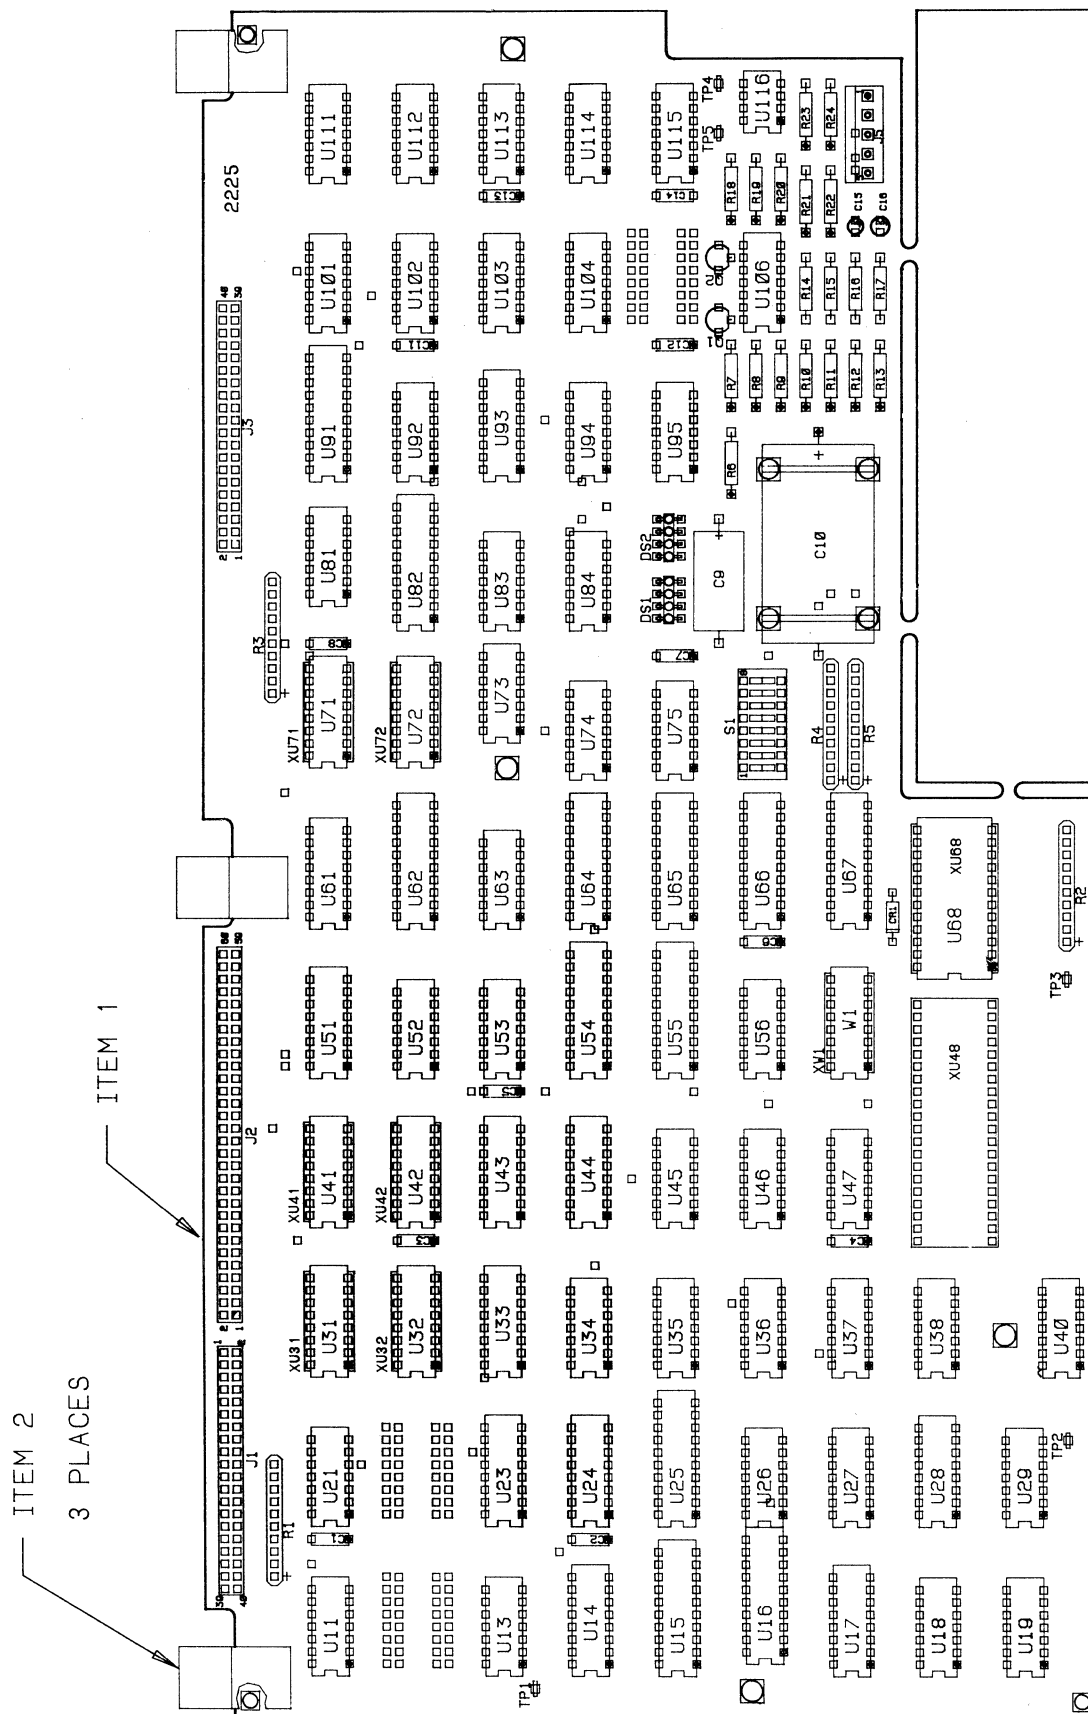


Figure 5-6. Control PCA (07970-62454), Parts Location

TABLE 5-3. CONTROL PCA (07970-62454), PARTS LIST

REF. DES. / INDEX NO.	DESCRIPTION	PART NO.
1	PCB:CONTROL	07970-82454
2	HINGE	5040-7787
C1-8,11-14	C:F.01UF20% DIP	0160-5298
C9	C:F100UF 10V 10%	0180-2207
C10	CAPACITOR-FIXED	0180-3235
C15	C:F2.2UF20%15VDC	0180-0575
C16	C:F3.3UF20%35VDC	0180-2794
CR1	DIO:SW 1N4150	1901-1098
DS1,2	LED-LMP ARY 5MA	1990-0652
J1,J3	CONN:40 PIN	1251-7895
J2	CONN:60 PIN	1251-7894
J5	CONN 5-PIM M	1251-5506
Q1	XSTR:PNP 2N3906	1853-0036
Q2	XSTR:NPN 2N3904	1854-0215
R1,3,4	N:R9X1.5K2%.125W	1810-0276
R2,5	N:R9X10K 2%.125W	1810-0280
R6	R:F 3900 5% .25	0683-3925
R7	R:F 560 5% .25W	0683-5615
R8,20-22,24	R:F 4.64K 1%.125	0698-3155
R9	R:F 16.2K1%.125W	0757-0447
R10	R:F 22 5% .25W	0683-2205
R11,19	R:F 680K 5% .25W	0683-6845
R12	R:F 316K 1% .125	0698-3457
R13	R:F 1K1% .125W F	0757-0280
R14	R:F 237K 1% .125	0698-3266
R15,16	R:F28.7K 1% .125	0698-3449
R17	R:F 1.47K1%.125W	0757-1094
R18	R:F 47K 5% .25	0683-4735
R23	R:F 34.8K 1%.125	0757-0123
S1	SW:RKR 8-1A .05A	3101-1983
TP1-5	TERM:TST PT-BRAS	0360-0535
U11,21,84	IC:SN7407N BUFFR	1820-0668
U13,45,94,102	IC:SN74LS04N	1820-1199
U14,23,24	IC:SN74LS138N	1820-1216
U15,25,54,55,91	IC:SN74LS273N	1820-1730
U16,62,66,82	IC:SN74LS244N	1820-2024
U17,28,51,61	IC:SN74LS257AN	1820-1438
U18,19,27,29	IC:SN74LS393N	1820-2096

TABLE 5-3. CONTROL PCA (07970-62454), PARTS LIST Cont.

REF. DES. / INDEX NO.	DESCRIPTION	PART NO.
U26,34-36,40, 73-75,81,111, 112,114,115	IC:SN74LS74N	1820-1112
U31,32,41,42, 71,72	IC NMOS4K 4096-B	1818-0093
U33,43,44,93	IC SN74LS395	1820-1446
U37	IC:SN74LS20N GAT	1820-1204
U38	IC:SN74LS10N	1820-1202
U46	IC:SN74LS14N	1820-1416
U47,56	IC:SN74LS38N BFR	1820-1209
U52,104	IC:SN74LS11 GATE	1820-1203
U53,83	IC:SN74LS00N	1820-1197
U63,95,103	IC:SN74LS08N	1820-1201
U64,65	IC:SN74LS374N	1820-1997
U67	IC:SN74LS245N	1820-2075
U68	PROM ASSY	07970-62457
U92,101	IC:SN74LS51N GAT	1820-1210
U106	IC:339 CMPTR-GP	1826-0138
U113	IC:SN74LS54N GAT	1820-1285
U116	IC:MC1403U V-REG	1826-0544
W1	N:COND MDL 16-P	1810-0307
XU31,32,41,42, 71,72	SCKT IC 16-CONT	1200-0607
XU48	SCKT-IC 40-CONT	1200-0883
XU68	SCKT:24 PIN IC	1200-0541



APPENDIX A. PROGRAMMING TABLES

A-1. INTRODUCTION

Appendix A summarizes programming information from section II (Programming) into tables for easy reference. The type of information contained in each table is listed below, along with the table reference.

- * Tape Unit Identify Bytes. A-1
- * Listen Secondary Commands A-2
- * Talk Secondary Commands A-3
- * Tape Command Secondary, Data Byte A-4
- * End Command Secondary, Data Byte. A-5
- * DSJ Command Secondary Data Byte A-6
- * Status Command Secondary, Data Byte A-7

TABLE A-1. TAPE UNIT IDENTIFY BYTES

DIO LINE	8	7	6	5	4	3	2	1
BYTE 1	1	1	0	0	0	0	0	1
BYTE 2	1	0	0	0	0	0	0	1

TABLE A-2. LISTEN SECONDARY COMMANDS

SECONDARY COMMAND	VALUE (DIO LINES)	DESCRIPTION
DATA TRANSFER	X1100000	Data bytes to follow represent data to be written to tape.
TAPE COMMAND	X1100001	Data bytes to follow represent a tape command to be performed by the tape unit.
END COMMAND	X1100111	Data byte to follow represents an End command (see table A-5).
DEVICE CLEAR	X1110000	This command resets the interface, any data bytes that may follow are accepted by the interface, but are ignored.
LOOPBACK	X1111111	Data bytes that follow represent data (64 bytes) to be saved for loopback transfer back to the system controller.

X = Parity Bit

TABLE A-3. TALK SECONDARY COMMANDS

SECONDARY COMMAND	VALUE (DIO LINES)	DESCRIPTION
DATA TRANSFER	X1100000	Data bytes to follow represent data to be read from tape.
STATUS COMMAND	X1100001	Three data bytes that follow represent the status from the three status registers.
BYTE COUNT	X1100010	The two data bytes that follow represent the number of bytes read/written for the last record. The first data byte is the most significant value.
DSJ STATUS	X1110000	The data byte that follows represents the Device Specified Jump status (see table A-7).
LOOPBACK	X1111110	Data bytes that follow represent the loopback bytes sent to the sent to the interface with the Loopback talk command.

X = Parity Bit

TABLE A-4. TAPE COMMAND SECONDARY, DATA BYTE

VALUE (OCTAL)	COMMAND	VALUE (OCTAL)	COMMAND
0	RESERVED	10	READ RECORD
1	SELECT UNIT 0	11	FORWARD SPACE RECORD
2	SELECT UNIT 1	12	BACKSPACE RECORD
3	SELECT UNIT 2	13	FORWARD SPACE RECORD
4	SELECT UNIT 3	14	BACKSPACE FILE
5	WRITE RECORD	15	REWIND
6	WRITE FILE MARK (EOF)	16	REWIND AND GO OFF-LINE
7	WRITE GAP	17	READ RECORD BACKWARD

TABLE A-5. END COMMAND SECONDARY, DATA BYTE

DIO LINE	COMMAND
1	CLEAR POLL RESPONSE
2	INHIBIT POLL RESPONSES FOR READ BURSTS
3	ENABLE REWIND COMPLETION RESPONSE OR AUTO-SELECT
4	RESERVED
5	CLEAR DSJ
6,7,8	RESERVED

The command is enabled when the DIO line corresponding to the command is set to 1.

TABLE A-6. DSJ COMMAND SECONDARY DATA BYTE

BYTE VALUE	DESCRIPTION
0	NO SPECIAL ACTION REQUIRED
1	UNEXPEDTED RESULTS; READ STATUS

TABLE A-7. STATUS COMMAND SECONDARY DATA BYTE

STATUS BYTE 1 - REGISTER 1

DIO LINE	STATUS
1	ON-LINE
2	MULTIPLE TRACK ERROR(S) (MTE)
3	FILE PROTECTED (Not Write Enabled; no write ring)
4	COMMAND REJECTED
5	SINGLE-TRACK ERROR
6	END-OF-TAPE (EOT)
7	LOAD POINT (LP) (Beginning-of-tape - BOT)
8	END-OF-FILE (EOF)

STATUS BYTE 2 - REGISTER 2

DIO LINE	STATUS
1	INTERFACE BUSY
2	TAPE UNIT BUSY
3	REWINDING
4	TAPE RUNAWAY
5	DATA ERROR (TIMING)
6	SELECTED TAPE UNIT LSB
7	SELECTED TAPE UNIT MSB
8	RESERVED

STATUS BYTE 3 - REGISTER 3

DIO LINE	STATUS
1	TAPE UNIT 0 HAS BEEN PLACED ON-LINE
2	TAPE UNIT 1 HAS BEEN PLACED ON-LINE
3	TAPE UNIT 2 HAS BEEN PLACED ON-LINE
4	TAPE UNIT 3 HAS BEEN PLACED ON-LINE
5	COMMAND PARITY ERROR
6	POWER HAS BEEN RESTORED
7	RESERVED
8	RESERVED

When the DIO line is set 1, the corresponding status is indicated

APPENDIX B. BACKDATING INFORMATION

B-1. INTRODUCTION

Appendix B provides backdating information for older versions of the 7970E HP-IB Interface Assembly. The information included here covers replacement parts, parts location diagrams, and schematics for older versions of the assembly. Table B-1, below identifies the various older interface assemblies described in this section and references them to the current assembly part numbers.

TABLE B-1. BACKDATING INFORMATION

ASSEMBLY	CURRENT PART NO.*	OLDER VERSION PART NO.*	NOTES
TOP LEVEL	62456	62417, 62381	For 62381, refer to 62417
CONTROL PCA	62454	62416, 62369	For 62369, refer to 62416
FORMATTER PCA	62455	62370	
SWITCH ADAPTOR PCA	62372	62372	Older version is similar to current version, refer to 62372, section 5
POWER SEQUENCE PCA		62407	Current version is been incorporated onto the 62454 PCA

* - The "07970-" part number prefix has been deleted from the listed part numbers.

TABLE B-2. HP-IB INTERFACE ASSEMBLY (07970-62417), PARTS LIST

REF. DES. / INDEX NO.	DESCRIPTION	PART NO.
1	PCA:HPIB CONTROL	07970-62416
2	PCA:WRT FORMATER	07970-62370
3	PCA:CONN ADPTR	07970-62371
4	PCA:SW ADAPTER	07970-62372
5	PNL:HPIB BACK	07970-01293
6	ASSY:CABLE	8120-3417
7	ASSY:CABLE	8120-3408
8	ASSY:CABLE	8120-3405
9	ASSY:CABLE	8120-3407
10	ASSY:CABLE	8120-3406
11	CBL:HPIB PWR CON	07970-62379
13	SCR:6-32X.312POZ	2360-0115
15	STDOFF:HEX M/FM	0380-0644
16	WSHR:#10SPL LOCK	2190-0034
17	STANDOFF, 6-32	0380-1150
19	N:COND MDL 16-P	1810-0307
20	GROM-CHN .085GRV	0400-0207
U39	CHI	1AA7-6003
U91	IC:NANO PROC 8-B	1820-1692
XS1	SHUNT-DIP 7 POS	1251-4292
W1,2	SUNT:1-PIN ST.1L	1258-0124

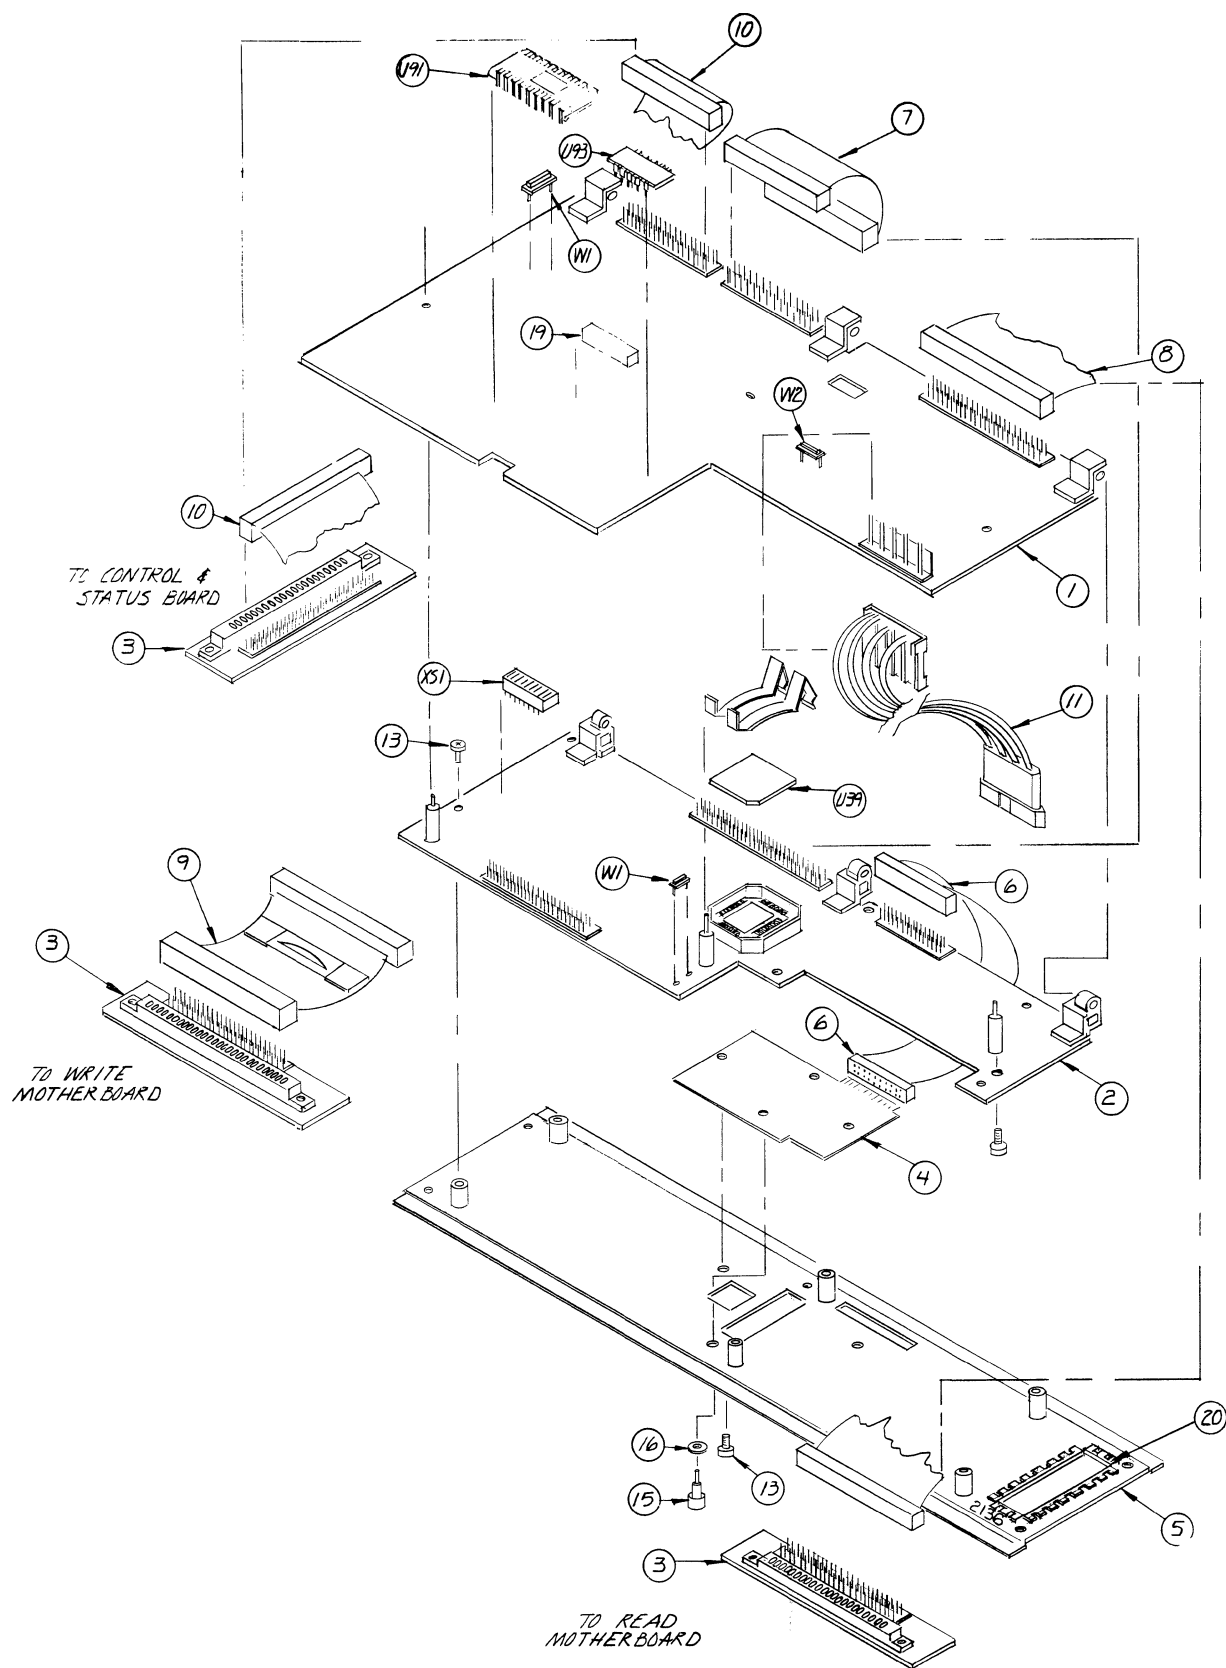


Figure B-1. HP-IB Interface Assembly (07970-62417), Exploded View

Figure B-2. Control PCA (07970-62416), Parts Location

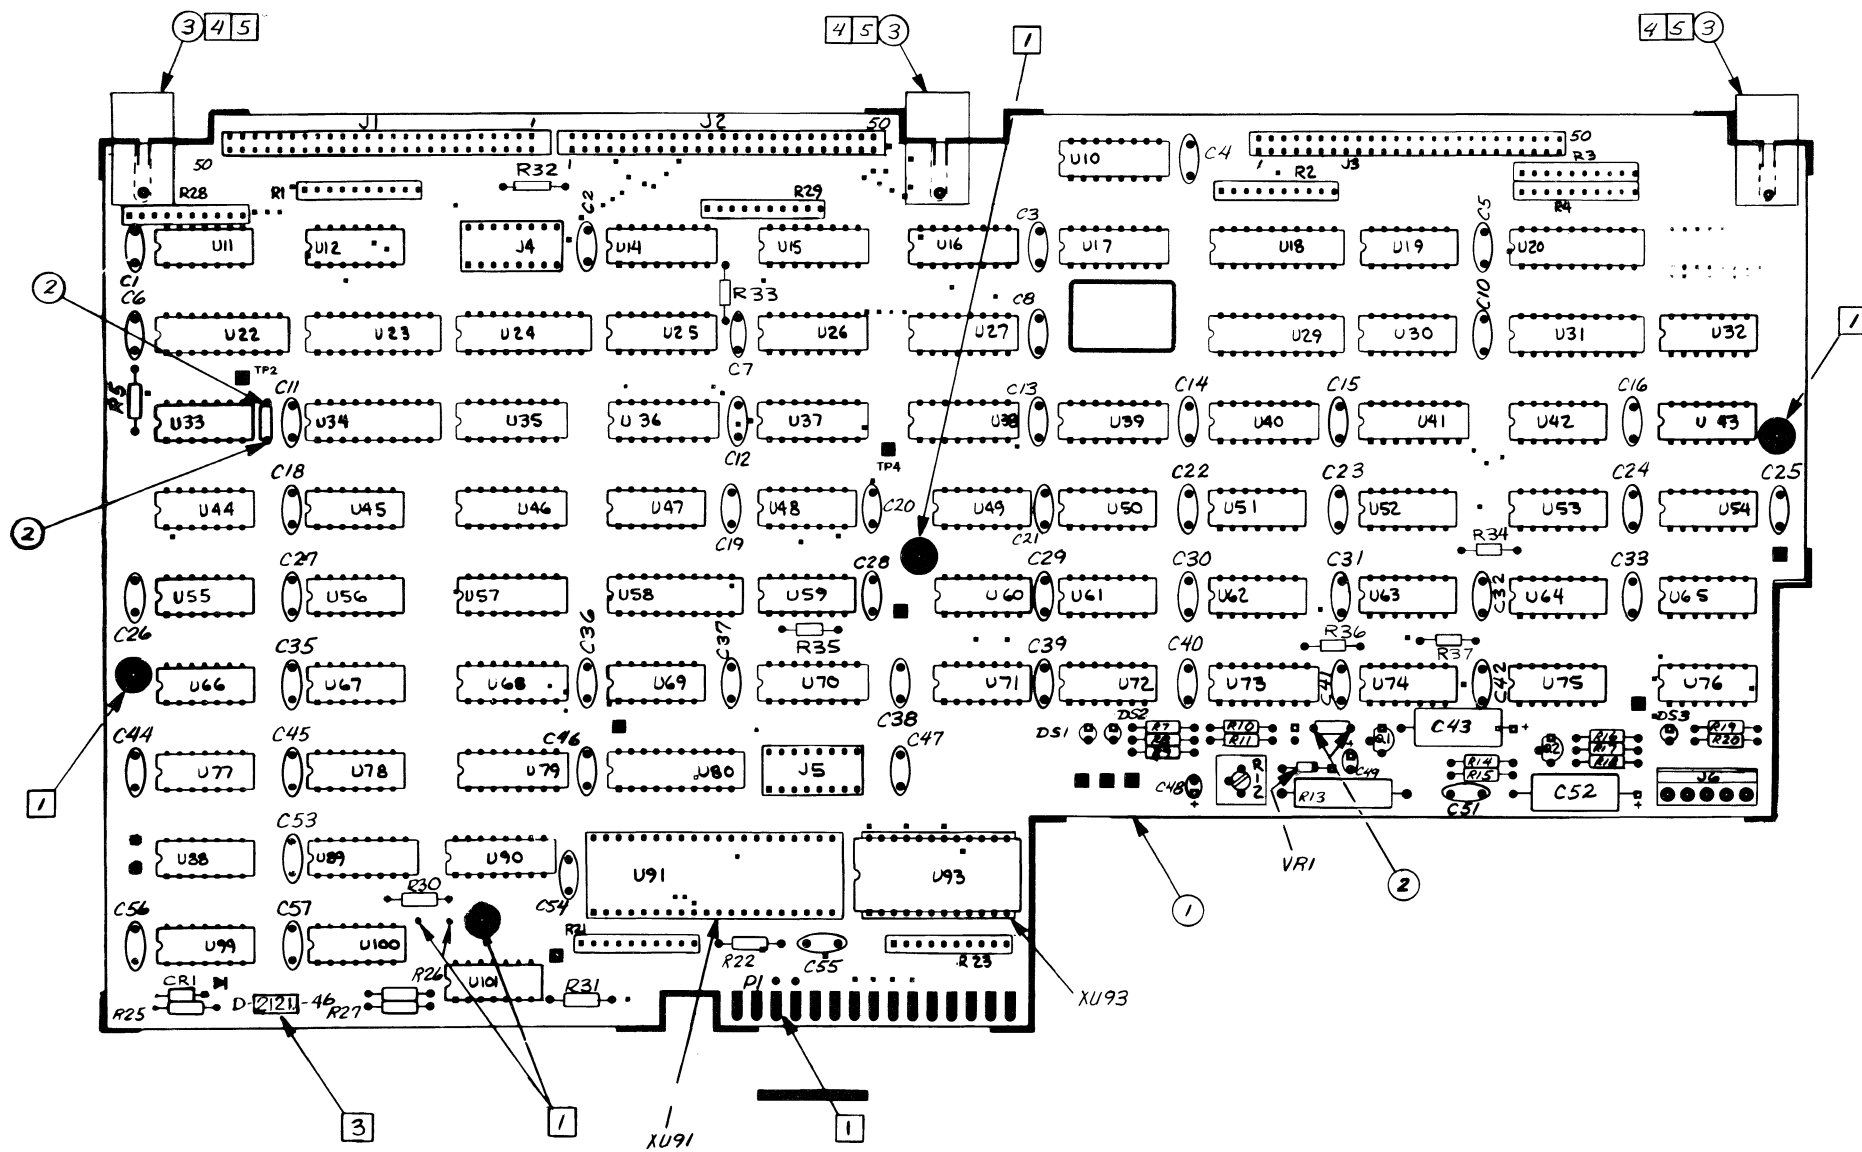


TABLE B-3. CONTROL PCA (07970-62416), PARTS LIST

REF. DES./ INDEX NO.	DESCRIPTION	PART NO.
1	HPIB PCB	07970-82416
2	CNNCTR-SGL CNTCT	1251-5440
4	HINGE	5040-7787
C1-8,10-16, 18-33,35-42, 44-47,51,53-57	C:F.01UF+80%100V	0160-2055
C43	C:F100UF 10V 10%	0180-2207
C48-49	C:F3.3UFTANT 15V	0180-2664
C52	C:F68UF10%15VDC	0180-2692
CR1	DIO:SW 1N4150	1901-1098
J1,2,3	CONN 50-PIN M	1251-5544
J4,5	SOCKET IC 16-CON	1200-0423
J6	CONN 5-PIM M	1251-5506
Q1	XSTR:PNP 2N3906	1853-0036
Q2	XSTR:NPN 2N3904	1854-0215
R1-4,21,23,28, 29	N:R9X10K 2%.125W	1810-0280
R5,9-11,19,22, 25-27,30,31, 33-37	R:F 10K5% .25W	0683-1035
R7,8,20	R:F 220 5% .25W	0683-2215
R12	R:V TRMR 1K 10%	2100-3211
R13	R:F 1.21K 1% .5W	0757-0821
R14,18	R:F 1K5% .25W	0683-1025
R15	R:F 2.2K5% .25W	0683-2225
R16	R:F 1.5K 5% .25W	0683-1525
R17	R:F 4.7K5% .25W	0683-4725
R32	R:F 3900 5% .25	0683-3925
S1,2,3	LED:LAMP 50MA RD	1990-0404
TP1-9,GND1-3	CONN-SGL CONT	0360-1813
U10,17,38-41	IC NMOS4K 4096-B	1818-0093
U11,12,19,30	IC:SN7407N BUFFR	1820-0668
U14,15,25,26,35, 46,57,68,79	IC SN74LS395	1820-1446
U16,27	IC:SN74LS157	1820-1470
U18,22-24,34	IC:SN74LS273N	1820-1730
U20,29,31,58	IC:SN74LS244N	1820-2024
U33,42,53,59,60	IC:SN74LS04N	1820-1199

TABLE B-3. CONTROL PCA (07970-62416), PARTS LIST Cont.

REF. DES. / INDEX NO.	DESCRIPTION	PART NO.
U36,37	IC:SN74LS257AN	1820-1438
U43-45,56,62, 64-67,74,75,78	IC:SN74LS74N	1820-1112
U47,48,69	IC: SN74393N	1820-1464
U49,51	IC:SN74LS51N GAT	1820-1210
U50,32,55,72	IC:SN74LS11 GATE	1820-1203
U52,54	IC:SN74LS08N	1820-1201
U61,76,77	IC:SN74LS38N BFR	1820-1209
U63,100,101	IC:SN74LS00N	1820-1197
U70,73	IC: SN74LS390N	1820-1991
U71	IC:SN74LS21N	1820-1205
U80	IC:SN74LS245N	1820-2075
U88	IC:SN74LS14N	1820-1416
U89,90	IC:SN74LS138N	1820-1216
U99	IC:SN74LS05	1820-1200
VR1	DIO:ZNR6.19V 5%	1902-0049
XU91	SCKT-IC 40-CONT	1200-0883
XU93	SCKT:24 PIN IC	1200-0541

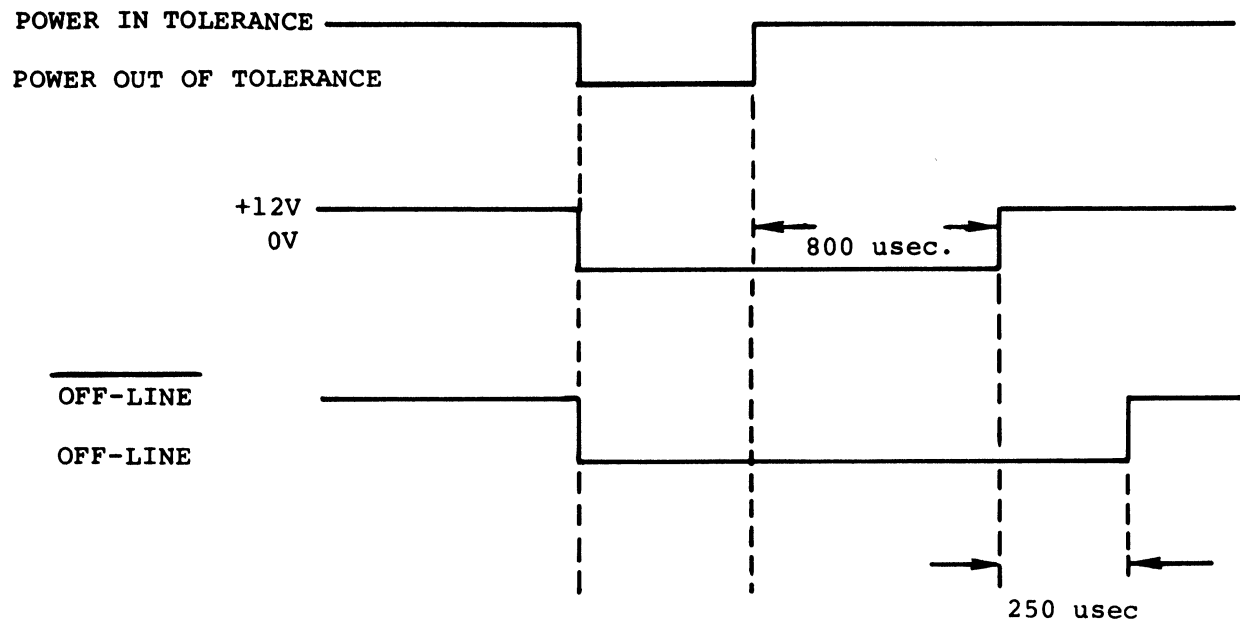


Figure B-7. Power Sequence PCA (07970-62407), Timing Diagram

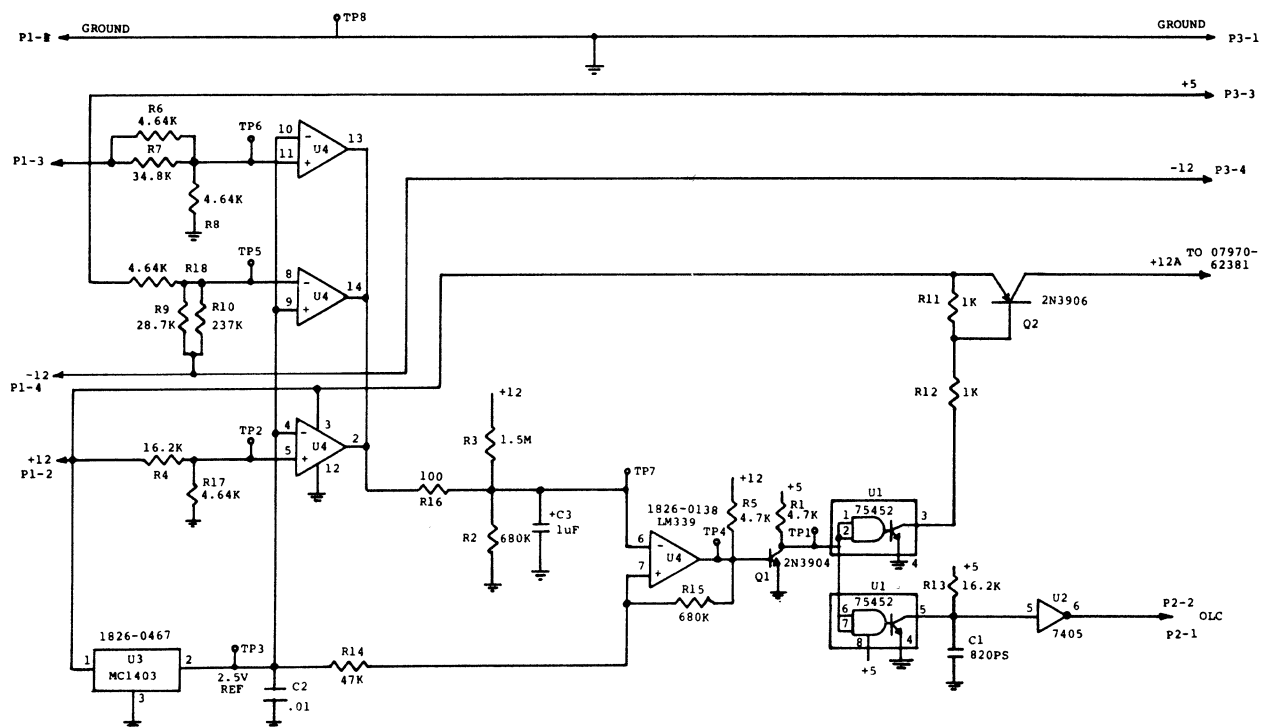


Figure B-8. Power Sequence PCA (07970-62407), Schematic

TABLE B-5. POWER SEQUENCE PCA (07970-62407), PARTS LIST

REF. DES./ INDEX NO.	DESCRIPTION	PART NO.
1	PWR SEQ PCB	07970-82407
2	SPCR:RVT #6X.250	0380-0111
4	CLIP-CMPNT1-1/8L	1400-0040
5	RVT:S .123DX.156	0361-0142
C1	C:F 820PF 5%	0160-2009
C2	C:F.01UF+80%100V	0160-2055
C3	C:F 1UF 20%35VDC	0180-2764
C4	C:F 3000UF 10%	0180-2395
J1	CONN 4-PIN MOLEX	1251-5728
J2	CONN 3-PIN MOLEX	1251-5251
J3	CONN 4-PIN MOLEX	1251-5727
Q1	XSTR:NPN 2N3904	1854-0215
Q2	XSTR:PNP 2N3906	1853-0036
R1,5	R:F 4.7K5% .25W	0683-4725
R2,15	R:F 680K 5% .25W	0683-6845
R3	R:F 1.5M 5% .25W	0683-1555
R4,13	R:F 16.2K1%.125W	0757-0447
R6,8,17,18	R:F 4.64K 1%.125	0698-3155
R7	R:F 34.8K 1%.125	0757-0123
R9	R:F28.7K 1% .125	0698-3449
R10	R:F 237K 1% .125	0698-3266
R11,12	R:F 1K5% .25W	0683-1025
R14	R:F 47K 5% .25	0683-4735
R16	R:F 100 5% .25W	0683-1015
TP1-8	TERM:SGL-TUR	0360-1682
U1	IC:SN75452BP	1820-0799
U2	IC:SN7405N INVTR	1820-0175
U3	IC:MC1403U V-REG	1826-0544
U4	IC:339 CMPTR-GP	1826-0138

SALES & SUPPORT OFFICES

Arranged Alphabetically by Country



Product Line Sales/Support Key

Key Product Line
A Analytical
CM Components
C Computer Systems
E Electronic Instruments
 and Measurement Systems
M Medical Products
P Personal Computer Products
***** Sales only for specific
 product line
****** Support only for specific
 product line

IMPORTANT: These symbols designate general product line capability. They do not insure sales or support availability for all products within a line, at all locations. Contact your local sales office for information regarding locations where HP support is available for specific products.

HEADQUARTERS OFFICES
 If there is no sales office listed for your area, contact one of these headquarters offices.

NORTH/CENTRAL AFRICA

Hewlett-Packard S.A.
 7, rue du Bois-Du-Lan
 CH-1217 MEYRIN 1,
 Switzerland
 Tel: (022) 83-12-12
 Telex: 27835 hmea
 Cable: HEWPACKSA Geneve

ASIA

Hewlett-Packard Asia Ltd.
 47/F, 26 Harbour Rd.,
 Wanchai, HONG KONG
 G.P.O. Box 863, Hong Kong
 Tel: 5-8330833
 Telex: 76793 HPA HX
 Cable: HPASIAL TD

CANADA

Hewlett-Packard (Canada) Ltd.
 6877 Goreway Drive
 MISSISSAUGA, Ontario L4V 1M8
 Tel: (416) 678-9430
 Telex: 610-492-4246

EASTERN EUROPE

Hewlett-Packard Ges.m.b.h.
 Liebigasse 1
 P.O. Box 72
 A-1222 VIENNA, Austria
 Tel: (222) 2500-0
 Telex: 13 4425 HEPA A

NORTHERN EUROPE

Hewlett-Packard S.A.
 Uilenstede 475
 P.O. Box 999
 NL-1183 AG AMSTELVEEN
 The Netherlands
 Tel: 20 437771
 Telex: 18 919 hpner nl

SOUTH EAST EUROPE

Hewlett-Packard S.A.
 World Trade Center
 110 Avenue Louis Casai
 1215 Cointrin, GENEVA, Switzerland
 Tel: (022) 98-96-51
 Telex: 27225 hpser

MEDITERRANEAN AND MIDDLE EAST

Hewlett-Packard S.A.
 Mediterranean and Middle East
 Operations
 Atrina Centre
 52 Kifissias Ave.
 Paradissos-Amarousion, ATHENS
 Greece
 Tel: 682-88-11
 Telex: 21-6588 HPAT GR
 Cable: HEWPACKSA Athens

UNITED KINGDOM

Hewlett-Packard Ltd.
 Nine Mile Ride
 Easthampstead, WOKINGHAM
 Berkshire, RG11 3LL
 Tel: 0344 773100
 Telex: 848805

EASTERN USA

Hewlett-Packard Co.
 4 Choke Cherry Road
 ROCKVILLE, MD 20850
 Tel: (301) 258-2000

MIDWESTERN USA

Hewlett-Packard Co.
 5201 Tollway Drive
 ROLLING MEADOWS, IL 60008
 Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard Co.
 2000 South Park Place
 P.O. Box 105005
 ATLANTA, GA 30348
 Tel: (404) 955-1500

WESTERN USA

Hewlett-Packard Co.
 3939 Lankershim Blvd.
 P.O. Box 3919
 LOS ANGELES, CA 91604
 Tel: (213) 506-3700

OTHER INTERNATIONAL AREAS

Hewlett-Packard Co.
 Intercontinental Headquarters
 3495 Deer Creek Road
 PALO ALTO, CA 94304
 Tel: (415) 857-1501
 Telex: 034-8300
 Cable: HEWPACK

ANGOLA

Telectra Angola LDA
 Empresa Tecnica Equipamentos
 Rua Conselheiro Julio de Vilhena, 16
 Caixa Postal 6487
 LUANDA
 Tel: 35515, 35516
 Telex: 3134
 E.C.*

ARGENTINA

Hewlett-Packard Argentina S.A.
 Montaneses 2140/50
 1428 BUENOS AIRES
 Tel: 783-4886/4836/4730
 Cable: HEWPACKARG
 A.C.C.M.E.M.P.
 Biotron S.A.C.I.e.l.
 Av. Paso Colon 221, Piso 9
 1399 BUENOS AIRES
 CM

Laboratorio Rodriguez

Corswant S.R.L.
 Misiones, 1156 - 1876
 Bernal, Oeste
 BUENOS AIRES
 Tel: 252-3958, 252-4991
 A

Argentina Esanco S.R.L.

Avasco 2328
 1416 BUENOS AIRES
 Tel: 941-58-1981, 541-59-2767
 A

AUSTRALIA

Adelaide, South Australia
 Office
 Hewlett-Packard Australia Ltd.
 153 Greenhill Road
 PARKSIDE, S.A. 5063
 Tel: 272-5911
 Telex: 82536
 Cable: HEWPAID Adelaide
 A.C.C.M.E.M.P.

Brisbane, Queensland

Office
 Hewlett-Packard Australia Ltd.
 10 Payne Rd.
 THE GAP, Queensland 4061
 Tel: 30-4133
 Telex: 42133
 Cable: HEWPAID Brisbane
 A.C.C.M.E.M.P.

Canberra, Australia

Capital Territory
 Office
 Hewlett-Packard Australia Ltd.
 121 Wollongong Street
 Fyshwick, A.C.T. 2609
 Tel: 80 4244
 Telex: 62650
 Cable: HEWPAID Canberra
 C.C.M.E.P.

Melbourne, Victoria Office

Hewlett-Packard Australia Ltd.
 31-41 Joseph Street
 BLACKBURN, Victoria 3130
 Tel: 895-2895
 Telex: 31-024
 Cable: HEWPAID Melbourne
 A.C.C.M.E.M.P.

Perth, Western Australia

Office
 Hewlett-Packard Australia Ltd.
 17-23 Talavera Road
 CLAREMONT, W.A. 6010
 Tel: 383-2188
 Telex: 93859
 Cable: HEWPAID Perth
 A.C.C.M.E.M.P.

Sydney, New South Wales

Office
 Hewlett-Packard Australia Ltd.
 17-23 Talavera Road
 P.O. Box 309
 NORTH RYDE, N.S.W. 2113
 Tel: 888-4444
 Telex: 21561
 Cable: HEWPAID Sydney
 A.C.C.M.E.M.P.

AUSTRIA

Hewlett-Packard Ges.m.b.h.
 Verkauisburo Graz
 Grottenhofstrasse 94
 A-8052 GRAZ
 Tel: (0316) 291-56-60
 Telex: 32375
 C.E.

Hewlett-Packard Ges.m.b.h.

Liebigasse 1
 P.O. Box 72
 A-1222 VIENNA
 Tel: (0222) 2500-0
 Telex: 134425 HEPA A
 A.C.C.M.E.M.P.

BAHRAIN

Green Salon
 P.O. Box 557
 Manama
 Tel: 255503-255950
 Telex: 8441
 P

Wael Pharmacy

P.O. Box 648
 MANAMA
 Tel: 256123
 Telex: 8550 WAEI BN
 E.M

Zayani Computer Systems

218 Shaik Mubarak Building
 Government Avenue
 P.O. Box 5918
 MANAMA
 Tel: 276278
 Telex: 9015
 P

BELGIUM

Hewlett-Packard Belgium S.A./N.V.
 Blvd de la Woluwe, 100
 Woluwe
 B-1200 BRUSSELS
 Tel: (02) 762-32-00
 Telex: 23-494 paloben bru
 A.C.C.M.E.M.P.

BERMUDA

Applied Computer Technologies
 Atlantic House Building
 Par-La-Ville Road
 Hamilton 5
 Tel: 295-1616
 P

BRAZIL

Hewlett-Packard do Brasil
 I.e.C. Ltda.
 Alameda Rio Negro, 750
 Alphaville
 05400 BARUERI SP
 Tel: (011) 4421-1311
 Telex: (011) 33872 HPBR -BR
 Cable: HEWPAID Sao Paulo
 A.C.C.M.E.M.P.

Hewlett-Packard do Brasil

I.e.C. Ltda.
 Praia de Botafago 228
 60 Andar-conj 614
 Edificio Argentina - Ala A
 22250 RIO DE JANEIRO
 Tel: (021) 552-6422
 Telex: 21905 HPBR -BR
 Cable: HEWPAID Rio de Janeiro
 A.C.C.M.E.M.P.*

Convex/Van Den

Rua Jose Bonifacio
 458 Todos Os Santos
 CEP 20771
 RIO DE JANEIRO, RJ
 Tel: 591-0197
 Telex: 33487 EGLB BR
 A

ANAMED I.C.E.I. Ltda.

Rua Bage, 103
 04012 SAO PAULO, SP
 Tel: (011) 572-6537
 Telex: 24720 HPBR -BR
 M

Datatronix Electronica Ltda.

Av. Pacaembu 746-C11
 SAO PAULO, SP
 Tel: (118) 260111
 CM

CAMEROON

Beriac
 B.P. 23
 DOUALA
 Tel: 420153
 Telex: 5351
 C.P

CANADA

Alberta
 Hewlett-Packard (Canada) Ltd.
 3030 3rd Avenue N.E.
 CALGARY, Alberta T2A 6T7
 Tel: (403) 235-3100
 A.C.C.M.E.M.P.*

Hewlett-Packard (Canada) Ltd.

11120-178th Street
 EDMONTON, Alberta T5S 1P2
 Tel: (403) 486-6666
 A.C.C.M.E.M.P.

British Columbia

Hewlett-Packard (Canada) Ltd.
 10691 Shellbridge Way
 RICHMOND,
 British Columbia V6X 2W7
 Tel: (604) 270-2277
 Telex: 610-922-5059
 A.C.C.M.E.M.P.*

Hewlett-Packard (Canada) Ltd.

121-3350 Douglas Street
 VICTORIA, British Columbia V8Z 3L1
 Tel: (604) 381-6616
 C

Manitoba

Hewlett-Packard (Canada) Ltd.
 1825 Inkster Blvd.
 WINNIPEG, Manitoba R2X 1R3
 Tel: (204) 694-2777
 A.C.C.M.E.M.P.*

New Brunswick

Hewlett-Packard (Canada) Ltd.
 314 Main Street
 MONCTON, New Brunswick E1C 1E6
 Tel: (506) 855-2841
 C

Nova Scotia

Hewlett-Packard (Canada) Ltd.
 Suite 111
 900 Windmill Road
 DARTMOUTH, Nova Scotia B3B 1P7
 Tel: (902) 469-7820
 C.C.M.E.M.P.*

Ontario

Hewlett-Packard (Canada) Ltd.
 3325 N. Service Rd., Unit 3
 BURLINGTON, Ontario L7N 3G2
 Tel: (416) 335-8644
 C.M.*

Hewlett-Packard (Canada) Ltd.

496 Dave Road
 KINGSTON, Ontario K7M 5R4
 Tel: (613) 384-2088
 C

SALES & SUPPORT OFFICES

Arranged Alphabetically by Country



**HEWLETT
PACKARD**

Hewlett-Packard (Canada) Ltd.
552 Newbold Street
LONDON, Ontario N6E 2S5
Tel: (519) 686-9181
A,C,CM,E*,M,P*

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
A,C,CM,E,M,P

Hewlett-Packard (Canada) Ltd.
2670 Queensview Dr.
OTTAWA, Ontario K2B 8K1
Tel: (613) 820-6483
A,C,CM,E*,M,P*

Hewlett-Packard (Canada) Ltd.
The Oaks Plaza, Unit #9
2140 Regent Street
SUDBURY, Ontario, P3E 5S8
Tel: (705) 522-0202
C

Hewlett-Packard (Canada) Ltd.
3790 Victoria Park Ave.
WILLOWDALE, Ontario M2H 3H7
Tel: (416) 499-2550
C

Quebec
Hewlett-Packard (Canada) Ltd.
17500 Trans Canada Highway
South Service Road
KIRKLAND, Quebec H9J 2X8
Tel: (514) 697-4232
A,C,CM,E,M,P*

Hewlett-Packard (Canada) Ltd.
1150 rue Claire Fontaine
QUEBEC CITY, Quebec G1R 5G4
Tel: (418) 648-0726
C

Hewlett-Packard (Canada) Ltd.
130 Robin Crescent
SASKATOON, Saskatchewan S7L 6M7
Tel: (306) 242-3702
C

CHILE
ASC Ltda.
Austria 2041
SANTIAGO
Tel: 223-5946, 223-6148
Telex: 340192 ASC CK
C,P

Isical Ltda.
Av. Italia 634 Santiago
Casilla 16475
SANTIAGO 9
Tel: 222-0222
Telex: 440283 JCYCL CZ
CM,E,M

Metrolab S.A.
Monjitas 454 of. 206
SANTIAGO
Tel: 395752, 398296
Telex: 340866 METLAB CK
A

Olympia (Chile) Ltda.
Av. Rodrigo de Araya 1045
Casilla 256-V
SANTIAGO 21
Tel: 225-5044
Telex: 340892 OLYMP
Cable: Olympiachile Santiagochile
C,P

CHINA
People's Republic of
China Hewlett-Packard, Ltd.
47/F China Resources Bldg.
26 Harbour Road
HONG KONG
Tel: 5-830833
Telex: 76793 HPA HX
Cable: HP ASIA LTD
A*,M*

China Hewlett-Packard, Ltd.
P.O. Box 9610, Beijing
4th Floor, 2nd Watch Factory
Main Bldg.
Shuang Yu Shu, Bei San Huan Rd.
Hai Dian District
BEIJING
Tel: 28-0567
Telex: 22601 CTSHP CN
Cable: 1920 Beijing
A,C,CM,E,M,P

COLOMBIA
Instrumentacion
H.A. Langebaek & Kier S.A.
Carrera 4A No. 52A-26
Apartado Aereo 6287
BOGOTA 1, D.E.
Tel: 212-1466
Telex: 44400 INST CO
Cable: AARIS Bogota
CM,E,M

Nefromedica Ltda.
Calle 123 No. 9B-31
Apartado Aereo 100-958
BOGOTA D.E., 10
Tel: 213-5267, 213-1615
Telex: 43415 HEGAS CO
A

Compumundo
Avenida 15# 107-80
BOGOTA D.E.
Tel: 214-4458
Telex: 45466 MARICO
P

Carvajal, S.A.
Calle 29 Norte No. 6A-40
Apartado Aereo 46
CALI
Tel: 368-1111
Telex: 55650
C,E,P

CONGO
Seric-Congo
B.P. 2105
BRAZZAVILLE
Tel: 815034
Telex: 5262

COSTA RICA
Cientifica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159
SAN JOSE
Tel: 24-38-20, 24-08-19
Telex: 2367 GALGUR CR
CM,E,M

CYPRUS
Telerelex Ltd.
P.O. Box 4809
14C Stassinios Avenue
NICOSIA
Tel: 62698
Telex: 2894 LEVIDO CY
E,M,P

DENMARK
Hewlett-Packard A/S
Datavej 5
DK-2460 Birkerød
Tel: (02) 81-66-40
Telex: 37409 hpas dk
A,C,CM,E,M,P

Hewlett-Packard A/S
Rølgædsvej 32
DK-8240 Risskov, Aarhus
Tel: (06) 17-60-00
Telex: 37409 hpas dk
C,E

DOMINICAN REPUBLIC
Microprog S.A.
Juan Tomas Mejia y Cotes
No. 60
Arroyo Hondo
SANTO DOMINGO
Tel: 565-6268
Telex: 4510 ARENTA DR (RCA)
P

ECUADOR
CYEDE Cia, Ltda.
Avenida Eloy Alfaro 1749
y Belgica
Casilla 6423 CCI
QUITO
Tel: 450-975, 243-052
Telex: 22548 CYEDE ED
CM,E,P

Medtronics
Valladolid 524 Madrid
P.O. 9171, QUITO
Tel: 223-8951
Telex: 2298 ECKAME ED
A

Hospitalar S.A.
Robles 625
Casilla 3590
QUITO
Tel: 545-250, 545-122
Telex: 2485 HOSPTL ED
Cable: HOSPITALAR-Quito
M

Ecuador Overseas Agencies C.A.
Calle 9 de Octubre #818
P.O. Box 1296, Guayaquil
QUITO
Tel: 306022
Telex: 3361 PBCGYE ED
M

EGYPT
Sakro Enterprises
70, Mossadak Str.
Dokki, Giza
CAIRO
Tel: 706440
Telex: 93146
C

International Engineering Associates
24 Hussein Hegazi Street
Kasr-el-Ain
CAIRO
Tel: 23829, 21641
Telex: 93830 IEA UN
Cable: INTEGASSO
E,M*

S.S.C. Medical
40 Gezerat El Arab Street
Mohandessin
CAIRO
Tel: 803844, 805998, 810263
Telex: 20503 SSC UN
M*

EL SALVADOR
IPESA de El Salvador S.A.
29 Avenida Norte 1223
SAN SALVADOR
Tel: 26-6858, 26-6868
Telex: 20539 IPESA SAL
A,C,CM,E,P

ETHIOPIA
Seric-Ethiopia
P.O. Box 2764
ADDIS ABABA
Tel: 15114
Telex: 21150
C,P

FINLAND
Hewlett-Packard Oy
Pispankalliontie 17
02200 ESPOO
Tel: 00359-0-88721
Telex: 121563 HEWPA SF
A,C,CM,E,M,P

FRANCE
Hewlett-Packard France
Z.I. Mercure B
Rue Berthelet
13763 Les Milles Cedex
AIX-EN-PROVENCE
Tel: (42) 59-41-02
Telex: 410770F
A,C,E,M,P*

Hewlett-Packard France
64, rue Marchand Saillant
61000 ALENCON
Tel: (33) 29 04 42

Hewlett-Packard France
28, rue de la République
Boite Postale 503
25026 BESANCON Cedex
Tel: (81) 83-16-22
TELEX: 361157
C,M

Hewlett-Packard France
Chemin des Mouilles
Boite Postale 162
69130 ECULLY Cedex (Lyon)
Tel: (78) 833-81-25
Telex: 310617F
A,C,E,M

Hewlett-Packard France
Parc d'activités du Bois Briard
2, avenue du Lac
91040 EVRY Cedex
Tel: 6 077-96-60
Telex: 692315F
E

Hewlett-Packard France
5, avenue Raymond Chanas
38320 EYBENS (Grenoble)
Tel: (76) 62-57-98
Telex: 990124 HP GRENBO EYBE
C

Hewlett-Packard France
Rue Fernand Forest
Z.A. Kergaradec
29239 GOUESNOU
Tel: (98) 41-87-90

Hewlett-Packard France
Centre d'affaires Paris-Nord
Batiment Ampere
Rue de la Commune de Paris
Boite Postale 300
93153 LE BLANC-MESNIL
Tel: (1) 865-44-52
Telex: 211032F
C,E,M

Hewlett-Packard France
Parc d'activités Cadere
Quartier Jean-Mermoz
Avenue du Président JF Kennedy
F-33700 MERIGNAC (Bordeaux)
Tel: (56) 34-00-84
Telex: 550105F
C,E,M

Hewlett-Packard France
Immeuble "Les 3 B"
Nouveau chemin de la Garde
ZAC de Bois Briard
44085 NANTES Cedex
Tel: (40) 50-32-22
Telex: 711085F
C**

Hewlett-Packard France
125, rue du Faubourg Bannier
45000 ORLEANS
Tel: (38) 68 01 63

Hewlett-Packard France
Zone Industrielle de Courtaboef
Avenue des Tropiques
91947 Les Ulis Cedex ORSAY
Tel: (6) 907-78-25
Telex: 600048F
A,C,CM,E,M,P

Hewlett-Packard France
Paris Porte-Maillot
15, boulevard de l'Amiral Bruix
75782 PARIS CEDEX 16
Tel: (1) 502-12-20
Telex: 613663F
C,M,P

Hewlett-Packard France
124, Boulevard Tourasse
64000 PAU
Tel: (59) 80 38 02

Hewlett-Packard France
2 Allée de la Bourgonnette
F-35100 RENNES
Tel: (99) 51-44-44
Telex: 740912F
C,CM,E,M,P*

Hewlett-Packard France
98 avenue de Bretagne
76100 ROUEN
Tel: (35) 63-57-66
Telex: 770035F
C

Hewlett-Packard France
4 rue Thomas-Mann
Boite Postale 56
67033 STRASBOURG Cedex
Tel: (88) 28-56-46
Telex: 890141F
C,E,M,P*

Hewlett-Packard France
La Peripole III
20, chemin du Pigeonnier
de la Cèpère
F-31083 TOULOUSE Cedex
Tel: (61) 40-11-12
Telex: 531639F
A,C,E,P*

Hewlett-Packard France
9, rue Baudin
26000 VALENCE
Tel: (75) 42 76 16

Hewlett-Packard France
Carolor
ZAC de Bois Briard
57640 VIGY (Metz)
Tel: (8) 771 20 22
CH

SALES & SUPPORT OFFICES

Arranged Alphabetically by Country



Hewlett-Packard France
Parc d'activite des Pres
1, rue Papin
59659 VILLENEUVE D'ASCQ Cedex
Tel: (20) 47 78 78
Telex: 160124F
C,E,M,P*

GABON
Sho Gabon
P.O.Box 89
LIBREVILLE
Tel: 721 484
Telex: 5230

**GERMAN FEDERAL
REPUBLIC**
Hewlett-Packard GmbH
Geschäftsstelle
Keithstrasse 2-4
D-1000 BERLIN 30
Tel: (030) 21 99 04-0
Telex: 018 3405 hpbld
A,C,E,M,P

Hewlett-Packard GmbH
Vertriebszentrum Südwest
Schickardstrasse 2
D-7030 BOBLINGEN
Tel: (07031) 645-0
Telex: 7265 743 hep
A,C,M,E,M,P

Hewlett-Packard GmbH
Vertriebszentrum West
Berliner Strasse III
D-4030 RATINGEN 3
Tel: (02102) 494-0
Telex: 589 070 hprad
A,C,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle
Schleefstr. 28a
D-4600 DORTMUND-4 1
Tel: (0231) 45001
Telex: 822838 hepda
A,C,E

Hewlett-Packard GmbH
Vertriebszentrum Mitte
Hewlett-Packard-Strasse
D-6380 BAD HOMBURG
Tel: (06172) 400-0
Telex: 410 844 hpbhg
A,C,E,M,P

Hewlett-Packard GmbH
Vertriebszentrum Nord
Kagstadtring 5
D-2000 HAMBURG 60
Tel: (040) 63804-1
Telex: 021 63 032 hphh d
A,C,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle
Heidering 27 89
D-3000 HANNOVER 61
Tel: (0511) 5706-0
Telex: 092 3259
A,C,M,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle
Rosslauer Weg 2-4
D-6800 MANNHEIM
Tel: (0621) 70 05-0
Telex: 0462105
A,C,E

Hewlett-Packard GmbH
Geschäftsstelle
Messerschmittstrasse 7
D-7910 NEULM
Tel: (0731) 70 73-0
Telex: 0712816 HP ULM-D
A,C,E*

Hewlett-Packard GmbH
Geschäftsstelle
Emmericher Strasse 13
D-8500 NURNBERG 10
Tel: (0911) 5205-0
Telex: 0623 860 hpnbg
C,M,E,M,P

Hewlett-Packard GmbH
Vertriebszentrum Süd
Eschenstrasse 3
D-8028 TAUFKIRCHEN
Tel: (089) 61 20 7-0
Telex: 0324985
A,C,M,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle
Ermisallee
7517 WALDRONN 2
Tel: (07243) 602-0
Telex: 782 838 hep
A,C,E

GREAT BRITAIN
(See United Kingdom)

GREECE
Hewlett-Packard A.E.
178, Kifissias Avenue
6th Floor
HALANDRI-ATHENS
Greece
Tel: 6471543, 6471673, 6472971
Telex: 221 236 HPHLGR
A,C,M,P*,E,M,P

Kostas Karayannis S.A.
8, Omirou Street
ATHENS 133
Tel: 32 30 303, 32 37 371
Telex: 215962 RKAR GR
A,C*,M,E

Impexin
Intelect Div.
209 Mesogion
11525 ATHENS
Tel: 6474481/2
Telex: 216286
P

Haril Company
38, Mihalakopoulou
ATHENS 612
Tel: 7236071
Telex: 218767
M*

Hellamco
P.O.Box 87528
18507 PIRAEUS
Tel: 4827049
Telex: 241441
A

GUATEMALA
IPESA
Avenida Reforma 3-48, Zona 9
GUATEMALA CITY
Tel: 316627, 314786
Telex: 3055765 IPESA GU
A,C,M,E,M,P

HONG KONG
Hewlett-Packard Hong Kong Ltd.
P.O. Box 795
5th Floor, Sun Hung Kai Centre
30 Harbour Road
HONG KONG
Tel: 5-8323211
Telex: 66678 HEWPA HX
Cable: HEWPAK HONG KONG
E,C,P

CET Ltd.
10th Floor, Hua Asia
Bldg.
64-66 Gloucester Road
HONG KONG
Tel: (5) 200922
Telex: 85148 CET HX
CM

Schmidt & Co. (Hong Kong) Ltd.
18th Floor, Great Eagle Centre
23 Harbour Road
HONG KONG
Tel: 5-8330222
Telex: 74766 SCHMC HX
A,M

ICELAND
Hewlett-Packard Iceland
Hoefdabakka 9
110 Reykjavik
Tel: (1) 7 1000
A,C,M,E,M,P

INDIA
Computer products are sold
through Blue Star Ltd. All
computer repairs and
maintenance service is
done through Computer
Maintenance Corp.

Blue Star Ltd.
Sabri Complex 2nd Floor
24 Residency Rd.
BANGALORE 560 025
Tel: 55660, 578881
Telex: 0845-430
Cable: BLUESTAR
A,C*,CM,E

Blue Star Ltd.
Band Box House
Prabhadevi
BOMBAY 400 025
Tel: 4933101, 4933222
Telex: 011-71051
Cable: BLUESTAR
A,M

Blue Star Ltd.
Sahas
414/2 Vir Savarkar Marg
Prabhadevi
BOMBAY 400 025
Tel: 422-6155, 422-6556
Telex: 011-71193 BSSS IN
Cable: FROSTBLUE
A,C*,CM,E,M

Blue Star Ltd.
Kalyan, 15 Vishwas Colony
Alkapuri, BORODA, 390 005
DUBLIN 5
Tel: 65235, 65236
Cable: BLUE STAR
A

Blue Star Ltd.
7 Hare Street
CALCUTTA 700 001
Tel: 230131, 230132
Telex: 021-7655
Cable: BLUESTAR
A,M

Blue Star Ltd.
133 Kodambakkam High Road
MADRAS 600 034
Tel: 472056, 470238
Telex: 041-379
Cable: BLUESTAR
A,M

Blue Star Ltd.
13 Community Center
New Friends Colony
NEW DELHI 110 065
Tel: 633773, 634473
Telex: 031-61120
Cable: BLUEFROST
A,C*,CM,E,M

Blue Star Ltd.
15/16 C Wellesley Rd.
PUNE 411 011
Tel: 22775
Cable: BLUE STAR
A

Blue Star Ltd.
2-2-47/1108 Bolarum Rd.
SECUNDERABAD 500 003
Tel: 72057, 72058
Telex: 0155645
Cable: BLUEFROST
A,E

Blue Star Ltd.
T.C. 7/603 Poornima
Maruthunkuzhi
TRIVANDRUM 695 013
Tel: 65799, 65820
Telex: 0884-259
Cable: BLUESTAR
E

**Computer Maintenance
Corporation, Ltd.**
115, Sarojini Devi Rd.
Ankara Bldg., 12th Floor
Tel: 310-184, 345-774
Telex: 031-2960
C**

INDONESIA
BERCA Indonesia P.T.
P.O. Box 496/Jkt.
Jl. Abdul Muis 62
JAKARTA
Tel: 21-373009
Telex: 46748 BERSAL IA
Cable: BERSAL JAKARTA
P

BERCA Indonesia P.T.
P.O. Box 2497/Jkt
Ankara Bldg., 12th Floor
Jl. Medan Merdeka Selatan 17
JAKARTA - PUSAT
Tel: 21-340417, 341445
Telex: 46748 BERSAL IA
A,C,E,M

BERCA Indonesia P.T.
Jalan Kutai 24
SURABAYA
Tel: 67119
Telex: 31146 BERSAL SB
Cable: BERSAL-SURABAYA
A*,E,M,P

IRAQ
Hewlett-Packard Trading S.A.
Service Operation
Al Mansoor City 9B/3/7
BAGHDAD
Tel: 551-49-73
Telex: 212-455 HEPAIRAQ IK
C

IRELAND
Hewlett-Packard Ireland Ltd.
32/33 Lower Leeson St.
DUBLIN 2
Tel: 0001 608800
Telex: 30439
A,C,M,E,M,P

Cardiac Services Ltd.
Kilmore Road
Artane
DUBLIN 5
Tel: (01) 351820
Telex: 30439
M

ISRAEL
Eldan Electronic Instrument Ltd.
P.O. Box 1270
JERUSALEM 91000
16, Ohaliav St.
JERUSALEM 94467
Tel: 533 221, 553 242
Telex: 25231 AB/PAKRD IL
A,M

**Computation and Measurement
Systems (CMS) Ltd.**
11 Masad Street
67060
TEL-AVIV
Tel: 388 388
Telex: 33569 Motil IL
C,M,E,P

ITALY
Hewlett-Packard Italiana S.p.A.
Traversa 99C
Via Giulio Petroni, 19
I-70124 BARI
Tel: (080) 41-07-44
C,M

Hewlett-Packard Italiana S.p.A.
Via Emilia, 51/C
I-40011 BOLOGNA Anzola Dell'Emilia
Tel: (051) 731061
Telex: 511630
C,E,M

Hewlett-Packard Italiana S.p.A.
Via Principe Nicola 43G/C
I-95126 CATANIA
Tel: (095) 37-10-87
Telex: 970291
C

Hewlett-Packard Italiana S.p.A.
Via G. Di Vittorio 9
I-20063 CERNUSCO SUL NAVIGLIO
(Milano)
Tel: (02) 4459041
Telex: 834632
A,C,M,E,M,P

Hewlett-Packard Italiana S.p.A.
Via C. Cuccinelli 62/A
I-20090 TREZZANO SUL NAVIGLIO
(Milano)
Tel: (02) 4459041
Telex: 322116
C

Hewlett-Packard Italiana S.p.A.
Via Nuova San Rocco a
Capodimonte, 62/A
I-80131 NAPOLI
Tel: (081) 7413544
Telex: 710698
A*,C,E,M

Hewlett-Packard Italiana S.p.A.
Viale G. Modugno 33
I-16156 GENOVA PEGLI
Tel: (010) 68-37-07
Telex: 215238
C,E

SALES & SUPPORT OFFICES

Arranged Alphabetically by Country



**HEWLETT
PACKARD**

Hewlett-Packard Italiana S.p.A.
Via Pelizzo 15
I-35128 PADOVA
Tel: (049) 664888
Telex: 430315
A,C,E,M

Hewlett-Packard Italiana S.p.A.
Viale C. Pavese 340
I-00144 ROMA EUR
Tel: (06) 54831
Telex: 610514
A,C,E,M,P

Hewlett-Packard Italiana S.p.A.
Via di Casellina 57/C
I-50018 SCANDICCI-FIRENZE
Tel: (055) 753865
C,E,M

Hewlett-Packard Italiana S.p.A.
Corso Svizzera 185
I-10144 TORINO
Tel: (011) 74 4044
Telex: 221079
A,C,E

IVORY COAST

S.I.T.E.L.
Société Ivoirienne de
Telecommunications
Bd. Giscard d'Estaing
Carrefour Marcori
Zone 4.A.
Boite postale 2580
ABIDJAN 01
Tel: 353600
Telex: 43175
E

S.I.T.I.
Immeuble "Le General"
A.V. du General de Gaulle
01 BP 161
ABIDJAN 01
Tel: 321227
C,P

JAPAN

Yokogawa-Hewlett-Packard Ltd.
152-1, ONNA
ATSUGI Kanagawa 243
Tel: (0462) 25-0031
C,C,M,E

Yokogawa-Hewlett-Packard Ltd.
Meiji-Seimei Bldg. 6F
3-1 Hon Chiba-cho
CHIBA, 220
Tel: 472 25 7701
C,E

Yokogawa-Hewlett-Packard Ltd.
Yasuda-Seimei Hiroshima Bldg.
6-11, Hon-dori, Naka-ku
HIROSHIMA, 730
Tel: 82-241-0611

Yokogawa-Hewlett-Packard Ltd.
Towa Building
2-3, Kaigan-dori, 2 Chome, Chuo-ku
KOBE, 650
Tel: (078) 392-4791
C,E

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi 82 Bldg
3-4 Tsukuba
KUMAGAYA, Saitama 360
Tel: (0485) 24-6563
C,C,M,E

Yokogawa-Hewlett-Packard Ltd.
Asahi Shinbun Daiichi Seimei Bldg.
4-7 Hanabata-cho
KUMAMOTO, 860
Tel: (096) 354-7311
C,E

Yokogawa-Hewlett-Packard Ltd.
Shin-Kyoto Center Building
614, Higashi-Shiohji-cho
Karasuma-Nishiiru
Shiohji-dori
Shimogyo-ku, KYOTO, 600
Tel: 075-343-0921
C,E

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Building
4-73 Sanno-maru, 1 Chome
MITO, Ibaraki 310
Tel: (0292) 25-7470
C,C,M,E

Yokogawa-Hewlett-Packard Ltd.
Meiji-Seimei Kokubun Bldg. 7-8
Kokubun, 1 Chome, Sendai
MIYAGI, 980
Tel: (0222) 25-1011
C,E

Yokogawa-Hewlett-Packard Ltd.
Nagoya Kokusai Center Bldg.
47-1, Nagano, 1 Chome
Nakamura-ku
NAGOYA, 450
Tel: (052) 571-5171
C,C,M,E,M

Yokogawa-Hewlett-Packard Ltd.
Saikyoen Building
1-2 Dote-machi, OHMIYA
Saitama 330
Tel: (0486) 45-8031

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg.
4-20 Nishinakajima, 5 Chome
Yodogawa-ku
OSAKA, 532
Tel: (06) 304-6021
Telex: YHPOSA 523-3624
A,C,C,M,E,M,P

Yokogawa-Hewlett-Packard Ltd.
27-15, Yabe, 1 Chome
SAGAMIHARA Kanagawa, 229
Tel: 0427 59-1311

Yokogawa-Hewlett-Packard Ltd.
Daiichi Seimei Bldg
7-1 Nishi Shinjuku, 2 Chome
Shinjuku-ku TOKYO 160
Tel: 03 348-4611
C,E

Yokogawa-Hewlett-Packard Ltd.
29-21 Takaido-Higashi, 3 Chome
Suginami-ku TOKYO 168
Tel: (03) 331-6111
Telex: 232-2024 YHPTOK
A,C,C,M,E,M,P

Yokogawa-Hokushin Electric Corp.
9-32 Nokacho 2 Chome
Chome Munashino-shi
TOKYO, 180
Tel: (0422) 54-1111
Telex: 02822-421 YEW MTK J
A

Yokogawa-Hewlett-Packard Ltd.
Meiji-Seimei
Utsunomiya Odori Bldg.
1-5 Odori, 2 Chome
UTSUNOMIYA, Tochigi 320
Tel: (0286) 33-1153
C,E

Yokogawa-Hewlett-Packard Ltd.
Yasuda Seimei Yokohama
Nishiguchi Bldg.
30-4 Tsuruya-cho, 3 Chome
YOKOHAMA, 221
Tel: (045) 312-1252
C,E

JORDAN
Scientific and Medical
Supplies Co.
P.O. Box 1387
AMMAN
Tel: 2490739907
Telex: 21456 SABCO JO
C,E,M,P

KENYA
ADCOM Ltd., Inc., Kenya
P.O. Box 30070
NAIROBI
Tel: 331955
Telex: 22639
E,M

KOREA
Samsung Hewlett-Packard Co.,
Ltd.
Dongbang Yeoouido Bldg.
12-1 16th Floors
36-1 Yeoouido-dong
Yongdeungpo-ku
SEOUL
Tel: 784-2666, 784-4666
Telex: 25166 SAMSAN K
A,C,C,M,E,M,P

Young in Scientific Co., Ltd.
Youngwha Building
547 Shinsa Dong, Kangnam-ku
SEOUL 135
Tel: 5467771
Telex: K23457 GINSCO
A

KUWAIT
Al-Khaldiya Trading & Contracting
P.O. Box 830
SAFAT
Tel: 424910, 411726
Telex: 22481 AREEG KT
Cable: VISCOUNT
E,M,A

Gulf Computing Systems
P.O. Box 25125
SAFAT
Tel: 435969
Telex: 23648
P

Photo & Cine Equipment
P.O. Box 270
SAFAT
Tel: 2445111
Telex: 22247 MATIN KT
Cable: MATIN KUWAIT
P

W. J. Towell Computer Services
P.O. Box 5897
SAFAT
Tel: 2462640
Telex: 30336 TOWELL KT
C

LEBANON
Computer Information Systems S.R.L.
Chammass Building
P.O. Box 11-6274 Dora
BEIRUT
Tel: 89 40 73
Telex: 42309
C,E,M,P

LIBERIA
Unichemicals Inc.
P.O. Box 4509
MONROVIA
Tel: 224282
Telex: 4509
E

MADAGASCAR
Technique et Precision
12, rue de Nice
P.O. Box 1227
101 ANATANANARIVO
Tel: 22090
Telex: 22255
P

LUXEMBOURG
Hewlett-Packard Belgium S.A./N.V.
Bldv de la Woluwe, 100
Woluwedel
B-1200 BRUSSELS
Tel: (02) 762-32-00
Telex: 23-494 paloben bru
A,C,C,M,E,M,P

MALAYSIA
Hewlett-Packard Sales (Malaysia)
Sdn.Bhd.
9th Floor, Chung Khai Bank Bldg.
46, Jalan Raja Laut
KUALA LUMPUR
Tel: 03-986555
Telex: 31011 HPSM MA
A,C,E,M,P

Protel Engineering
P.O. Box 1917
Lot 6624, Section 64
23/4 Pending Road
Kuching, SARAWAK
Tel: 36299
Telex: 70904 PROMAL MA
Cable: PROTELENG
A,E,M

MALTA
Philip Toledo Ltd.
Birkirkara P.O.Box 11
Notabile Rd.
MRIEHEL
Tel: 447 47, 455 66
Telex: 1649
E,M,P

MAURITIUS
Blanche Birger Co. Ltd.
18, Jules Koenig Street
PORT LOUIS
Tel: 20828
Telex: 4296
P

MEXICO
Hewlett-Packard de Mexico, S.A.
Francisco J. Allan #30
Colonia Nueva
Los Angeles 27140
COAHUILA, Torreon
Tel: 37220
P

Hewlett-Packard de Mexico, S.A.
Monti Morelos 299
Fraccionamiento Loma Bonita 45060
GUADALAJARA, Jalisco
Tel: 316630/314600
Telex: 0684 186 ECOMEX
P

Microcomputadoras Hewlett-Packard, S.A.
Monti Pelvoux 115
LOS LOMAS, Mexico, D.F.
Tel: 520-9127
P

Hewlett-Packard Mexicana, S.A.
de C.V.
Av. Periferico Sur No. 6501
Tepepan, Xochimilco
16020 MEXICO D.F.
Tel: 6-76-46-00
Telex: 17-74-507 HEWPACK MEX
A,C,C,M,E,M,P

Hewlett-Packard De Mexico (Polanco)
Avenida Ejercito Nacional #579
3day 3er piso
Colonia Granada 11560
MEXICO D.F.
Tel: 254-4433
P

Hewlett-Packard De Mexico, S.A.
de C.V.
Czda. del Valle
409 Ote. 4th Piso
Colonia del Valle
Municipio de Garza Garcia
66220 MONTERREY, Nuevo Leon
Tel: 78 42 41
Telex: 038 410
P

MOROCCO
Etablissement Hubert Doibeau & Fils
81 rue Karatchi
B.P. 11133
CASABLANCA
Tel: 3041-32, 3068-38
Telex: 23051, 22822
E

Gerep
2 rue Agadir
Boite Postale 156
CASABLANCA 01
Tel: 272059, 272095
Telex: 23 739
P

Sema-Maroc
Dept. Seric
6, rue Lapebie
CASABLANCA
Tel: 260980
Telex: 21641
C,P

NETHERLANDS
Hewlett-Packard Nederland B.V.
Startbaan 16
1181 XR AMSTELVEEN
P.O. Box 667
NL 1180 AR AMSTELVEEN
Tel: (020) 547-6911
Telex: 13 216 HEPAC NL
A,C,C,M,E,M,P

Hewlett-Packard Nederland B.V.
Bongerd 2
NL 2906VK CAPELLE, A/D IJSSEL
P.O. Box 41
NL 2900AA CAPELLE A/D IJSSEL
Tel: (10) 51-64-44
Telex: 21261 HEPAC NL
A, CSE

Hewlett-Packard Nederland B.V.
Bongerd 2
NL 2906VK CAPELLE A/D IJSSEL
P.O. Box 41
NL 2900AA CAPELLE A/D IJSSEL
Tel: (10) 51-64-44
Telex: 21261 HEPAC NL
C,E

SALES & SUPPORT OFFICES

Arranged Alphabetically by Country



Hewlett-Packard Nederland B.V.
Pastoor Petersstraat 134-136
NL 5612 LV EINDHOVEN
P.O. Box 2342
NL 5600 CH EINDHOVEN
Tel: (040) 326911
Telex: 51484 hepae nl
A,C,E,M,P

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
5 Owens Road
P.O. Box 26-189
Epsom, AUCKLAND
Tel: 877-159
Cable: HEWPACK Auckland
C,CM,E,M,P

Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, WELLINGTON 3
P.O. Box 9443
Courtenay Place, WELLINGTON 3
Tel: 877-199
Cable: HEWPACK Wellington
C,CM,E,M,P

Northrup Instruments & Systems Ltd.
369 Khyber Pass Road
P.O. Box 8602
AUCKLAND
Tel: 794-091
Telex: 60605
A,M

Northrup Instruments & Systems Ltd.
110 Mandeville St.
P.O. Box 8388
CHRISTCHURCH
Tel: 488-873
Telex: 4203
A,M

Northrup Instruments & Systems Ltd.
Sturdee House
85-87 Ghuznee Street
P.O. Box 2406
WELLINGTON
Tel: 850-091
Telex: NZ 3380
A,M

NIGERIA
Elmeo Nigeria Ltd.
46, Calcutta Crescent Apapa
P.O. Box 244and
LAGOS
E

NORTHERN IRELAND
(See United Kingdom)

NORWAY
Hewlett-Packard Norge A/S
Folke Bernadottes vei 50
P.O. Box 3558
N-5033 FYLLINGSDALEN (Bergen)
Tel: 0047/516 55 40
Telex: 76621 hpnas n
C,E,M

Hewlett-Packard Norge A/S
Osterdalen 16-18
P.O. Box 34
N-1345 OSTERAS
Tel: 0047/217 11 80
Telex: 76621 hpnas n
A,C,CM,E,M,P

OMAN
Khimji Ramdas
P.O. Box 19
MUSCAT/SULTANATE OF OMAN
Tel: 745601
Telex: 5289 BROKER MB MUSCAT
P

Suhail & Saud Bahwan
P.O. Box 169
MUSCAT/SULTANATE OF OMAN
Tel: 734201
Telex: 5274 BAHWAN MB
E

Imtac LLC
P.O. Box 8676
MUTRAH/SULTANATE OF OMAN
Tel: 601695
Telex: 5741 Tawoos On
A,C,M

PAKISTAN
Mushko & Company Ltd.
House No. 16, Street No. 16
Sector E-6/3
ISLAMABAD
Tel: 824545
Cable: FEMUS Islamabad
A,E,M,P

Mushko & Company Ltd.
Qosman Chambers
Abdullah Haroon Road
KARACHI 0302
Tel: 524131, 524132
Telex: 2894 MUSKO PK
Cable: COOPERATOR Karachi
A,E,M,P

PANAMA
Electronico Balboa, S.A.
Calle Samuel Lewis, Ed. Alfa
Apartado 4929
PANAMA 5
Tel: 64-2700
Telex: 3483 ELECTRON PG
A,CM,E,M,P

PERU
Cia Electro Medica S.A.
Los Flamencos 145, Ofc. 301/2
San Isidro
Casilla 1030
LIMA 1
Tel: 41-4325, 41-3705
Telex: Pub. Booth 25306 PEC PISIDR
C,M,E,M,P

SAMS
Arenda Republica de Panama 3534
San Isidro, LIMA
Tel: 419928/417108
Telex: 20450 PE LIBERTAD
A,C,P

PHILIPPINES
The Online Advanced Systems
Corporation
2nd Floor, Electra House
115-117 Esteban Street
Legaspi Village, Makati
P.O. Box 1510
Metro MANILA
Tel: 815-38-10 (UP TO 16)
Telex: 63274 ONLINE PN
A,C,E,M,P

PORTUGAL
Mundinter Intercambio
Mundial de Comercio S.A.R.L.
Av. Antonio Augusto Aguiar 138
Apartado 2761
LISBON
Tel: (19) 53-21-31, 53-21-37
Telex: 16691 munter p
M

Soquimica
Av. da Liberdade, 220-2
1298 LISBOA Codex
Tel: 56 21 82
Telex: 13316 SABASA
A

Telectra-Empresa Tecnica de
Equipamentos Electricos S.A.R.L.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
LISBON 1
Tel: (19) 68-60-72
Telex: 12598
C,M,E

C.P.C.S.I.
Rua de Costa Cabral 575
4200 PORTO
Tel: 499174/495173
Telex: 26054
C,P

PUERTO RICO
Hewlett-Packard Puerto Rico
101 Munoz Rivera Av.
Esu. Calle Ochoa
HATO REY, Puerto Rico 00918
Tel: (809) 754-7800
A,C,CM,M,E,P

QATAR
Computer Arabia
P.O. Box 2750
DOHA
Tel: 428555
Telex: 4806 CHPARB
P

Nasser Trading & Contracting
P.O. Box 1563
DOHA
Tel: 422170
Telex: 4439 NASSER DH
M

SAUDI ARABIA
Modern Electronics Establishment
Hewlett-Packard Division
P.O. Box 281
Thouqbah
AL-KHOBAR 31952
Tel: 895-1760, 895-1764
Telex: 671 106 HPMEEK SJ
Cable: ELECTA AL-KHOBAR
C,E,M

Modern Electronics Establishment
Hewlett-Packard Division
P.O. Box 1228
JEDDAH
Tel: 644 96 28
Telex: 4027 12 FARNAS SJ
Cable: ELECTA JEDDAH
A,C,CM,E,M,P

Modern Electronics Establishment
Hewlett-Packard Division
P.O. Box 22015
RIYADH 11495
Tel: 476-3030
Telex: 202049 MEERYD SJ
A,C,CM,E,M,P

Abdul Ghani El Ajou Corp.
P.O. Box 78
RIYADH
Tel: 40 41 717
Telex: 200 931 EL AJOU
P

SCOTLAND
(See United Kingdom)

SENEGAL
Societe Hussein Ayad & Cie.
75, Avenue Georges Pompidou
B.F. 305
DAKAR
Tel: 32339
Cable: AYAD-Dakar
E

Moneger Distribution S.A.
1, Rue Parent
B.F. 148
DAKAR
Tel: 215 671
Telex: 587
P

Systeme Service Conseil (SSC)
14, Avenue de Parachois
DAKAR ETOILE
Tel: 219976
Telex: 577
C,P

SINGAPORE
Hewlett-Packard Singapore
(Sales) Pte. Ltd.
#08-00 Inchope House
450-2 Alexandra Road
Alexandra P.O. Box 58
SINGAPORE, 9115
Tel: 4731788
Telex: 34209 HPSGSO RS
Cable: HEWPACK, Singapore
A,C,E,M,P

Dynamar International Ltd.
Unit 05-11 Block 6
Kolam Ayer Industrial Estate
SINGAPORE 1334
Tel: 747-6188
Telex: 26283 RS
CM

SOUTH AFRICA
Hewlett-Packard So Africa (Pty.) Ltd.
P.O. Box 120
Howard Place CAPE PROVINCE 7450
Pine Park Center, Forest Drive,
Pinelands
CAPE PROVINCE 7405
Tel: (021) 53 7954
Telex: 57-20006
A,C,CM,E,M,P

Hewlett-Packard So Africa (Pty.) Ltd.
2nd Floor Juniper House
92 Overport Drive
DURBAN 4067
Tel: (031) 28-4178
Telex: 6-22954
C

Hewlett-Packard So Africa (Pty.) Ltd.
6 Linton Arcade
511 Cape Road
Linton Grange
PORT ELIZABETH 6001
Tel: 041-301201
Telex: 24-2916
C

Hewlett-Packard So Africa (Pty.) Ltd.
Fountain Center
Kalkden Str.
Monument Park Ext 2
PRETORIA 0105
Tel: (012) 45 57258
Telex: 3-21063
C,E

Hewlett-Packard So Africa (Pty.) Ltd.
Private Bag Wendywood
SANDTON 2144
Tel: 802-5111, 802-5125
Telex: 4-20877 SA
Cable: HEWPACK Johannesburg
A,C,CM,E,M,P

SPAIN
Hewlett-Packard Espanola S.A.
Calle Entenza, 321
08029 BARCELONA
Tel: 3/322 24 51, 321 73 54
Telex: 52603 hpbce
A,C,E,M,P

Hewlett-Packard Espanola S.A.
Calle San Vicente S/N
Edificio Albia II-7B
48001 BILBAO
Tel: 4/423 83 06
A,C,E,M

Hewlett-Packard Espanola S.A.
Ctra. de la Corona, Km 16,400
Las Rozas
E-MADRID
Tel: (1) 637.00.11
Telex: 23515 HPE
C,M

Hewlett-Packard Espanola S.A.
Avda. S. Francisco Javier S/N
Planta 10, Edificio Sevilla 2
41005 SEVILLA
Tel: 54/64 44 54
Telex: 72933
A,C,M,P

Hewlett-Packard Espanola S.A.
Isabel La Catolica, 8
46004 VALENCIA
Tel: 0034/6/351 59 44
C,P

SWEDEN
Hewlett-Packard Sverige AB
Ostra Tuligatan 3
S-21128 MALMO
Tel: (040) 70270
Telex: (854) 17886 (via Spanga
office)
C,P

Hewlett-Packard Sverige AB
Skalholtsgatan 9, Kista
Box 19
S-16393 SPANGA
Tel: (08) 750-2000
Telex: (854) 17886
Telefax: (08) 7527781
A,C,CM,E,M,P

Hewlett-Packard Sverige AB
Frotalsgatan 30
S-42132 VASTRA-FROLUNDA
(Gothenburg)
Tel: (031) 49-09-50
Telex: (854) 17886 (via SPANGA
office)
A,C,CM,E,M,P

SUDAN
Mediterranean Engineering & Trading
Co. Ltd.
P.O. Box 1025
KHARTOUM
Tel: 41184
Telex: 24052
C,P

SALES & SUPPORT OFFICES

Arranged Alphabetically by Country



**HEWLETT
PACKARD**

SWITZERLAND

Hewlett-Packard (Schweiz) AG
Clarastrasse 12
CH-4058 BASEL
Tel: (61) 33-59-20
A

Hewlett-Packard (Schweiz) AG
7, rue du Bois-du-Lan
Case Postale 365
CH-1217 MEYRIN 1
Tel: (0041) 22-83-11-11
Telex: 27333 HPAG CH
C,CM

Hewlett-Packard (Schweiz) AG
Alimend 2
CH-8967 WIDEN
Tel: (0041) 57 31 21 11
Telex: 53933 hpag ch
Cable: HPAG CH
A,C,CM,E,M,P

SYRIA

General Electronic Inc.
Nuri Basha Ahnaf Ebn Kays Street
P.O. Box 5781
DAMASCUS
Tel: 33-24-87
Telex: 411 215
Cable: ELECTROBOR DAMASCUS
E

Middle East Electronics
P.O. Box 2308
Abu Rumaneh
DAMASCUS
Tel: 33 45 92
Telex: 411 771
M

TAIWAN

Hewlett-Packard Taiwan
Kaohsiung Office
11/F 456, Chung Hsiao 1st Road
KAOHSIUNG
Tel: (07) 2412318
C,E

Hewlett-Packard Taiwan
8th Floor Hewlett-Packard Building
387 Fu Hsing North Road
TAIPEI
Tel: (02) 712-0404
Telex: 24439 HEWPACK
Cable: HEWPACK Taipei
A,C,CM,E,M,P

Ing Lin Trading Co.
3rd Floor, 7 Jen-Ai Road, Sec. 2
TAIPEI 100
Tel: (02) 3948191
Cable: INGLIH TAIPEI
A

THAILAND

Unimesa Co. Ltd.
30 Patpong Ave., Suriwong
BANGKOK 5
Tel: 235-5727
Telex: 84439 Simonco TH
Cable: UNIMESA Bangkok
A,C,E,M

Bangkok Business Equipment Ltd.
5/5-6 Dejo Road
BANGKOK
Tel: 234-8670, 234-8671
Telex: 87669-BEQUIPT TH
Cable: BUSIQUIPT Bangkok
P

TOGO

Societe Africaine De Promotion
Immeuble Sagap
22, Rue d'Atakpame
B.P. 4150
LOME
Tel: 21-62-88
Telex: 5304
P

TRINIDAD & TOBAGO

Caribbean Telecoms Ltd.
Corner McAlister Street &
Eastern Main Road, Laventille
P.O. Box 732
PORT-OF-SPAIN
Tel: 624-4213
Telex: 22561 CARTEL WG
Cable: CARTEL, PORT OF SPAIN
CM,E,M,P

Computer and Controls Ltd.

P.O. Box 51
66 Independence Square
PORT-OF-SPAIN
Tel: 62-279-85
Telex: 3000 POSTLX WG, ACCT
L0090 AGENCY 1264
A,P

Feral Assoc.
3 Fitzgerald Lane
PORT-OF-SPAIN
Tel: 62-36864, 62-39255
Telex: 22432 FERALCO
Cable: FERALCO
M

TUNISIA

Precision Electronique S.A.R.L.
31 Avenue de la Liberte
TUNIS
Tel: 893937
Telex: 13238
P

Tunisie Electronique S.A.R.L.
94, Av. Jugurtha, Mutuelleville
1002 TUNIS-BELVEDERE
Tel: 280144
Telex: 13238
C,E,P

Corema S.A.
23, bis Rue de Marseille
TUNIS
Tel: 253-821
Telex: 14812 CABAM TN
M

TURKEY

E.M.A.
Mediha Eldem Sokak No.41/6
Yenisehir
ANKARA
Tel: 319175
Telex: 46912 KTX TR
Cable: EMATRADE ANKARA
M

Teknim Company Ltd.
Iran Caddesi No. 7
Kavaklidere
ANKARA
Tel: 275800
Telex: 42155 TKNM TR
E,CM

Saniva Bilgisayar Sistemleri A.S.
Buyukdere Caddesi 103/6
Gayrettepe
ISTANBUL
Tel: 1727030
Telex: 26345 SANI TR
C,P

Best Inc.
Esentepe, Gazeteciler Sitesi
Keskın Kalemı
ISTANBUL
Tel: 1721328
Telex: 42490
A

UNITED ARAB EMIRATES

Emirat Ltd.
P.O. Box 1641
SHARJAH
Tel: 591181
Telex: 68136 EMITAC EM
Cable: EMITAC SHARJAH
E,C,M,P,A

Emirat Ltd.
P.O. Box 2711
ABU DHABI
Tel: 820419-20
Cable: EMITACH ABUDHABI

Emirat Ltd.
P.O. Box 8391
DUBAI
Tel: 377591

Emirat Ltd.
P.O. Box 473
RAS AL KHAIMAH
Tel: 28133, 21270

UNITED KINGDOM

GREAT BRITAIN
Hewlett-Packard Ltd.
Trafalgar House
Navigation Road
ALTRINCHAM
Cheshire WA14 1NU
Tel: 061 928 6422
Telex: 668068
A,C,E,M,P

Hewlett-Packard Ltd.
Miller House
The Ring, BRACKNELL
Berks RG12 1XN
Tel: 0344 424898
Telex: 848733
E

Hewlett-Packard Ltd.
Elstree House, Elstree Way
BOREHAMWOOD, Herts WD6 1SG
Tel: 01 207 5000
Telex: 8952716
C,E

Hewlett-Packard Ltd.
Oakfield House, Oakfield Grove
Clifton
BRISTOL Avon BS8 2BN
Tel: 0272 736806
Telex: 444302
C,E,P

Hewlett-Packard Ltd.
Bridewell House
9 Bridewell Place
LONDON EC4V 6BS
Tel: 01 583 6565
Telex: 298163
C,P

Hewlett-Packard Ltd.
Pontefract Road
NORMANTON, West Yorkshire WF6 1RN
Tel: 0924 895566
Telex: 557355
C,P

Hewlett-Packard Ltd.
The Quadrangle
106-118 Station Road
REDHILL, Surrey RH1 1PS
Tel: 0737 68655
Telex: 947234
C,E,P

Hewlett-Packard Ltd.
Avon House
435 Stratford Road
Shirley, SOLIHULL
West Midlands B90 4BL
Tel: 021 745 8800
Telex: 339105
C,E,P

Hewlett-Packard Ltd.
West End House
41 High Street, West End
SOUTHAMPTON
Hampshire SO3 3DQ
Tel: 0703 476767
Telex: 477138
C,P

Hewlett-Packard Ltd.
Harmon House
No. 1 George Street
UXBRIDGE, Middlesex UX8 1YH
Tel: 895 720 20
Telex: 893134/5
C,CM,E,M,P

Hewlett-Packard Ltd.
King Street Lane
Winnersh, WOKINGHAM
Berkshire RG11 5AR
Tel: 0734 784774
Telex: 847178
A,C,E,M,P

IRELAND

NORTHERN IRELAND
Hewlett-Packard (Ireland) Ltd.
Carrickfergus Industrial Centre
75 Belfast Road, Carrickfergus
BELFAST BT38 8PH
Tel: 09603 67333
Telex: 747626
C,E

SCOTLAND

Hewlett-Packard Ltd.
8 Woodside Place
GLASGOW G3 7QF
Tel: 041 332 6232
Telex: 779615
C,E

Hewlett-Packard Ltd.
SOUTH QUEENSFERRY
West Lothian, EH30 9TG
Tel: 031 331 1188
Telex: 72682
C,CM,E,M,P

UNITED STATES

Alabama
Hewlett-Packard Co.
700 Century Park South, Suite 128
BIRMINGHAM, AL 35226
Tel: (205) 822-6802
A,C,M,P*

Hewlett-Packard Co.
420 Wynn Drive
HUNTSVILLE, AL 35805
Tel: (205) 830-2000
C,CM,E,M*

Alaska
Hewlett-Packard Co.
3601 C St., Suite 1416
ANCHORAGE, AK 99503
TEL: (907) 563-8855
C,E

Arizona
Hewlett-Packard Co.
3080 Pointe Parkway West
PHOENIX, AZ 85044
Tel: (602) 273-8000
A,C,CM,E,M,P

Hewlett-Packard Co.
3400 East Britannia Dr.
Bldg. C, Suite 124
TUCSON, AZ 85706
Tel: (602) 573-7400
C,E,M**

California
Hewlett-Packard Co.
25 South Hill Dr.
BRISBANE, CA 94005
Tel: (415) 330-2500
C

Hewlett-Packard Co.
5060 E. Clinton Avenue Suite 102
FRESNO, CA 93727
Tel: (209) 252-9652
C,M

Hewlett-Packard Co.
1421 S. Manhattan Ave.
FULLERTON, CA 92631
Tel: (714) 999-6700
C,CM,E,M

Hewlett-Packard Co.
7408 Hollister Ave., #A
GOLETA, CA 93117
Tel: (805) 685-6100
C,E

Hewlett-Packard Co.
3400 W. Rosecrans Boulevard
LAWDALE, CA 90260
Tel: (213) 643-7500
Telex: 910-325-6608
C,M

Hewlett-Packard Co.
2525 Grand Avenue
Long Beach, CA 90815
Tel: (213) 498-1111
C

Hewlett-Packard Co.
3155 Porter Drive
PALO ALTO, CA 94304
Tel: (415) 857-8000
C,E

Hewlett-Packard Co.
4244 So. Market Court, Suite A
SACRAMENTO, CA 95834
Tel: (916) 929-7222
A*,C,E,M

SALES & SUPPORT OFFICES

Arranged Alphabetically by Country



Hewlett-Packard Co.
9606 Aero Drive
P.O. Box 23333
SAN DIEGO, CA 92123
Tel: (619) 279-3200
C,C,M,E,M

Hewlett-Packard Co.
5725 W. Las Positas Blvd.
PLEASANTON, CA 94566
Tel: (415) 460-0282
C

Hewlett-Packard Co.
3003 Scott Boulevard
SANTA CLARA, CA 95054
Tel: (408) 958-7000
Telex: 910-338-0586
A,C,M,E

Hewlett-Packard Co.
2150 W. Hillcrest Dr.
THOUSAND OAKS, CA 91320
Tel: (805) 373-7000
C,M,E

Colorado
Hewlett-Packard Co.
2945 Center Green Court South
Suite A
BOULDER, CO 80301
Tel: (303) 938-3005
A,C,E

Hewlett-Packard Co.
24 Inverness Place, East
ENGLEWOOD, CO 80112
Tel: (303) 49-3000
A,C,M,E,M

Connecticut
Hewlett-Packard Co.
500 Sylvan Av.
BRIDGEPORT, CT 06606
Tel: (203) 371-6454
C,E

Hewlett-Packard Co.
47 Barnes Industrial Road South
WALLINGFORD, CT 06492
Tel: (203) 265-7801
A,C,M,E,M

Florida
Hewlett-Packard Co.
2901 N.W. 62nd Street
FORT LAUDERDALE, FL 33309
Tel: (305) 973-2600
C,E,M,P*

Hewlett-Packard Co.
6800 South Point Parkway
Suite 301
JACKSONVILLE, FL 32216
Tel: (904) 398-0663
C*,M**

Hewlett-Packard Co.
8177 Lake Ellenor Drive
ORLANDO, FL 32809
Tel: (305) 953-2900
A,C,M,E,P*

Hewlett-Packard Co.
4700 Bayou Blvd.
Building 5
PENSACOLA, FL 32503
Tel: (904) 476-8422
A,C,M

Hewlett-Packard Co.
5530 Idelwild, 150
TAMPA, FL 33614
Tel: (813) 864-3282
C,E,M,P

Georgia
Hewlett-Packard Co.
2000 South Park Place
ATLANTA, GA 30339
Tel: (404) 953-1500
Telex: 810-766-4890
A,C,M,E,M,P*

Hewlett-Packard Co.
3607 Parkway Lane
Suite 300
NORCROSS, GA 30092
Tel: (404) 448-1894
C,E,P

Hawaii
Hewlett-Packard Co.
Kawaiahao Plaza, Suite 190
567 South King Street
HONOLULU, HI 96813
Tel: (808) 526-1555
A,C,E,M

Idaho
Hewlett-Packard Co.
11309 Chinden Blvd.
BOISE, ID 83707
Tel: (208) 323-2700
C

Illinois
Hewlett-Packard Co.
304 Eldorado Rd.
P.O. Box 1607
BLOOMINGTON, IL 61701
Tel: (309) 662-9411
C,M**

Hewlett-Packard Co.
525 W. Monroe, 1308
CHICAGO, IL 60606
Tel: (312) 930-0010
C

Hewlett-Packard Co.
1200 East Diehl Road
NAPERVILLE, IL 60566
Tel: (312) 357-8800
C

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800
Telex: 910-687-1066
A,C,M,E,M

Indiana
Hewlett-Packard Co.
11911 N. Meridian St.
CARMEL, IN 46032
Tel: (317) 844-4100
A,C,M,E,M

Hewlett-Packard Co.
3702 Rupp Drive
FT. WAYNE, IN 46815
Tel: (219) 482-4283
C,E

Iowa
Hewlett-Packard Co.
4070 22nd Av. SW
CEDAR RAPIDS, IA 52404
Tel: (319) 390-4250
C,E,M

Hewlett-Packard Co.
4201 Corporate Dr.
WEST DES MOINES, IA 50265
Tel: (515) 224-1435
A**,C,M**

Kansas
Hewlett-Packard Co.
7804 East Funston Rd. 203
WICHITA, KS 67207
Tel: (316) 684-8491
C,E

Kentucky
Hewlett-Packard Co.
10300 Linn Station Rd. 100
LOUISVILLE, KY 40223
Tel: (502) 426-0100
A,C,M

Louisiana
Hewlett-Packard Co.
160 James Drive East
ST. ROSE, LA 70087
P.O. Box 1449
KENNER, LA 70063
Tel: (504) 467-4100
A,C,E,M,P

Maryland
Hewlett-Packard Co.
3701 Koppers St.
BALTIMORE, MD 21227
Tel: (301) 644-5800
Telex: 710-862-1943
A,C,M,E,M

Hewlett-Packard Co.
2 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 948-6370
A,C,M,E,M

Massachusetts
Hewlett-Packard Co.
1775 Minuteman Road
ANDOVER, MA 01810
Tel: (617) 682-1500
A,C,M,E,M,P*

Hewlett-Packard Co.
32 Hartwell Avenue
LEXINGTON, MA 02173
Tel: (617) 861-8960
C,E

Michigan
Hewlett-Packard Co.
4326 Cascade Road S.E.
GRAND RAPIDS, MI 49506
Tel: (616) 957-1970
C,M

Hewlett-Packard Co.
39550 Orchard Hill Place Dr
NOVI, MI 48020
Tel: (313) 349-9200
A,C,E,M

Hewlett-Packard Co.
1771 W. Big Beaver Road
TROY, MI 48064
Tel: (313) 643-6474
C

Minnesota
Hewlett-Packard Co.
2025 W. Larpenteur Ave.
ST. PAUL, MN 55113
Tel: (612) 444-1100
A,C,M,E,M

Missouri
Hewlett-Packard Co.
1001 E. 101st Terrace Suite 120
KANSAS CITY, MO 64131-3368
Tel: (816) 941-0411
A,C,M,E,M

Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON, MO 63044
Tel: (314) 344-5100
A,C,E,M

Nebraska
Hewlett-Packard Co.
10824 Old Mill Rd.
Suite 3
OMAHA, NE 68154
Tel: (402) 334-1813
C,E,M

New Jersey
Hewlett-Packard Co.
120 W. Century Road
PARAMUS, NJ 07653
Tel: (201) 265-5000
A,C,M,E,M

Hewlett-Packard Co.
20 New England Av. West
PISCATAWAY, NJ 08854
Tel: (201) 562-6100
A,C,M,E

New Mexico
Hewlett-Packard Co.
7801 Jefferson N.E.
ALBUQUERQUE, NM 87109
Tel: (505) 292-1330
C,E,M

New York
Hewlett-Packard Co.
5 Computer Drive South
ALBANY, NY 12205
Tel: (518) 458-1550
A,C,E,M

Hewlett-Packard Co.
9600 Main Street
CLARENCE, NY 14031
Tel: (716) 759-8621
C,E

Hewlett-Packard Co.
200 Cross Keys Office Park
FAIRPORT, NY 14450
Tel: (716) 223-9950
A,C,M,E,M

Hewlett-Packard Co.
7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820
A,C,M,E,M

Hewlett-Packard Co.
No. 1 Pennsylvania Plaza
5th Floor
34th Street & 8th Avenue
MANHATTAN, NY 10119
Tel: (212) 971-0800
C,M*

Hewlett-Packard Co.
15 Myers Corner Rd.
Hollowbrook Park, Suite 20
WAPPINGER FALLS, NY 12590
C,M,E

Hewlett-Packard Co.
250 Westchester Avenue
WHITE PLAINS, NY 10604
Tel: (914) 684-6100
C,M,E

Hewlett-Packard Co.
3 Crossways Park West
WOODBURY, NJ 07097
Tel: (609) 852-7800
A,C,M,E,M

North Carolina
Hewlett-Packard Co.
305 Grogan Dr.
CARY, NC 27511
Tel: (919) 467-6600
C,M,E,M,P*

Hewlett-Packard Co.
9600-H Southern Pine Blvd.
CHARLOTTE, NC 28210
Tel: (704) 527-8780
C*

Hewlett-Packard Co.
5605 Roanne Way
GREENSBORO, NC 27420
Tel: (919) 852-1800
A,C,M,E,M,P*

Ohio
Hewlett-Packard Co.
2717 S. Arlington Road
AKRON, OH 44312
Tel: (216) 644-2270
C,E

Hewlett-Packard Co.
23200 Chagrin Blvd. #100
BEACHWOOD, OH 44122
Tel: (216) 292-4677
C,P

Hewlett-Packard Co.
9920 Carver Road
CINCINNATI, OH 45242
Tel: (513) 891-9870
C,M

Hewlett-Packard Co.
16500 Sprague Road
CLEVELAND, OH 44130
Tel: (216) 243-7300
A,C,M,E,M

Hewlett-Packard Co.
9080 Springboro Pike
MIAMISBURG, OH 45342
Tel: (513) 433-2223
A,C,M,E,M

Hewlett-Packard Co.
One Maritime Plaza, 5th Floor
720 Water Street
TOLEDO, OH 43604
Tel: (419) 242-2200
C

Hewlett-Packard Co.
675 Brookside Blvd.
WESTERVILLE, OH 43081
Tel: (614) 891-3344
C,M,E*

Oklahoma
Hewlett-Packard Co.
3525 N.W. 56th St.
Suite C-100
OKLAHOMA CITY, OK 73112
Tel: (405) 946-9499
C,E*,M

SALES & SUPPORT OFFICES

Arranged Alphabetically by Country



**HEWLETT
PACKARD**

Hewlett-Packard Co.
3840 S. 103rd E. Avenue #100
TULSA, OK 74146
Tel: (918) 665-3300
A,C,E,M,P*

Oregon
Hewlett-Packard Co.
9255 S.W. Pioneer Court
WILSONVILLE, OR 97070
Tel: (503) 682-8000
A,C,E*,M

Pennsylvania
Hewlett-Packard Co.
50 Dorchester Rd.
HARRISBURG, PA 17112
Tel: (717) 657-5900
C

Hewlett-Packard Co.
111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
A,C,E,M

Hewlett-Packard Co.
2750 Monroe Boulevard
VALLEY FORGE, PA 19482
Tel: (215) 666-9000
A,C,CM,E,M

South Carolina
Hewlett-Packard Co.
Brookside Park, Suite 122
1 Harbison Way
COLUMBIA, SC 29210
Tel: (803) 732-0400
C,M

Hewlett-Packard Co.
555 N. Pleasantburg Dr.
Suite 107
GREENVILLE, SC 29607
Tel: (803) 232-8002
C

Tennessee
Hewlett-Packard Co.
One Energy Centr. 200
Pelissippi Pkwy.
P.O. Box 22490
KNOXVILLE, TN 37932
Tel: (615) 966-4747
A,C,M

Hewlett-Packard Co.
3070 Directors Row
Directors Square
MEMPHIS, TN 38131
Tel: (901) 346-8370
A,C,M

Hewlett-Packard Co.
220 Great Circle Road, Suite 116
NASHVILLE, TN 37228
Tel: (615) 255-1271
C,M,P*

Texas
Hewlett-Packard Co.
1826-P Kramer Lane
AUSTIN, TX 78758
Tel: (512) 835-6771
C,E,P*

Hewlett-Packard Co.
3700 Cromo Dr.
EL PASO, TX 79912
Tel: (915) 833-4400
C,E*,M**

Hewlett-Packard Co.
3952 Sandshell Drive
FORT WORTH, TX 76137
Tel: (817) 232-9500
C

Hewlett-Packard Co.
10535 Harwin Drive
HOUSTON, TX 77036
Tel: (713) 776-6400
A,C,E,M,P*

Hewlett-Packard Co.
511 E. John W. Carpenter Fwy.
Royal Tech. Center 100
IRVINE, TX 75062
Tel: (214) 556-1950
C,E

Hewlett-Packard Co.
109 E. Toronto, Suite 100
McALLEN, TX 78503
Tel: (512) 630-3030
C

Hewlett-Packard Co.
930 E. Campbell Rd.
RICHARDSON, TX 75081
Tel: (214) 231-6101
A,C,CM,E,M,P*

Hewlett-Packard Co.
1020 Central Parkway South
SAN ANTONIO, TX 78216
Tel: (512) 494-9336
A,C,E,M,P*

Utah
Hewlett-Packard Co.
3530 W. 2100 South
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700
A,C,E,M

Virginia
Hewlett-Packard Co.
4305 Cox Rd.
GLEN ALLEN, VA 23060
Tel: (804) 747-7750
A,C,E,M,P*

Hewlett-Packard Co.
Tanglewood West Bldg.
Suite 240
3959 Electric Road
ROANOKE, VA 24018
Tel: (703) 774-3444
C,E,P

Washington
Hewlett-Packard Co.
15815 S.E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4000
A,C,CM,E,M

Hewlett-Packard Co.
708 North Argonne Road
SPOKANE, WA 99212-2793
Tel: (509) 922-7000
C

West Virginia
Hewlett-Packard Co.
501 56th
CHARLESTON, WV 25304
Tel: (304) 925-0492
A,C,M

Wisconsin
Hewlett-Packard Co.
275 N. Corporate Dr.
BROOKFIELD, WI 53005
Tel: (414) 784-8800
A,C,E*,M

URUGUAY
Pablo Ferrando S.A.C. el.
Avenida Italia 2877
Casilla de Correo 370
MONTEVIDEO
Tel: 80-2586
Telex: 802586
A,C,M,E,M

Olympia de Uruguay S.A.
Marquines de Oficina
Avda. del Libertador 1997
Casilla de Correos 6644
MONTEVIDEO
Tel: 91-1809, 98-3807
Telex: 6342 OROU UY
P

VENEZUELA
Hewlett-Packard de Venezuela C.A.
3A Transversal Los Ruices Norte
Edificio Segre 2 & 3
Apartado 30933
CARACAS 1071
Tel: 239-4133
Telex: 251046 HEWPACK
A,C,CM,E,M,P

Hewlett-Packard de Venezuela, C.A.
Centro Ciudad Comercial Tamanaco
Nivel C-2 (Nueva Etapa)
Local 53H05
Chuao, CARACAS
Tel: 928291
P

Albis Venezolana S.R.L.
Av. Las Marias, Ota. Alix,
El Pedregal
Apartado 81025
CARACAS 1080A
Tel: 747984, 742146
Telex: 24009 ALBIS VC
A

Tecnologica Medica del Caribe, C.A.
Multicentro Empresarial del Este
Ave. Libertador
Edif. Libertador
Nucleo "C" - Oficina 51-52
CARACAS
Tel: 339867/333780
M

Hewlett-Packard de Venezuela C.A.
Residencias Tia Betty Local 1
Avenida 3 y con calle 75
MARACAIBO, Estado Zulia
Apartado 2646
Tel: (061) 75801-75805-75806-80304
Telex: 62464 HPMAR
C,E*

Hewlett-Packard de Venezuela C.A.
Urb. Lomas de Este
Torre Trebol - Piso 11
VALENCIA, Estado Carabobo
Apartado 3347
Tel: (041) 222992/223024
C,P

YUGOSLAVIA
Do Hermes
General Zdanova 4
YU-11000 BEOGRAD
Tel: 340 327, 342 641
Telex: 11433
A,C,E,P

Hermes
Titova 50
YU-61000 LJUBLJANA
Tel: 324 856, 324 858
Telex: 31583
C,E,M,P

Elektrotehna
Titova 51
YU-61000 LJUBLJANA
CM

ZAIRE
Computer & Industrial Engineering
25, Avenue de la Justice
B.P. 12797
KINSHASA, Gombe
Tel: 32063
Telex: 21552
C,P

ZAMBIA
R.J. Tilbury (Zambia) Ltd.
P.O. Box 32792
LUSAKA
Tel: 215590
Telex: 40128
E

ZIMBABWE
Field Technical Sales
(Private) Limited
45, Kelvin Road North
P.O. Box 3458
HARARE
Tel: 705 231
Telex: 4-122 RH
E,P

